

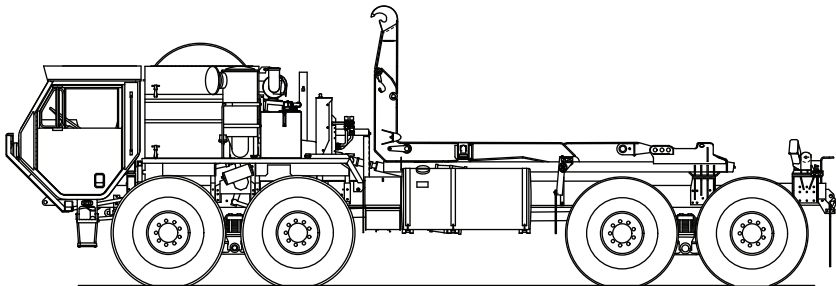
***TM 9-2320-434-10**

**TECHNICAL MANUAL
OPERATOR'S MANUAL
FOR**

**TRUCK, LOAD HANDLING SYSTEM (LHS),
W/O WINCH, 8X8**

M1120

NSN 2320-01-471-1326 (EIC B5E)



* SUPERSEDURE NOTICE - TM 9-2320-428-10, TM 9-2320-429-10, TM 9-2320-430-10, TM 9-2320-432-10, TM 9-2320-433-10, TM 9-2320-434-10, TM 9-2320-435-10, dated 15 Jun 09; supersedes TM 9-2320-279-10-1, dated 21 Nov 86 Including all changes.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
15 JUNE 2009**

WARNING SUMMARY

GENERAL SAFETY CAUTION/WARNING SUMMARY

- This list summarizes critical warnings. They are repeated here to let you know how important they are.
- Study these warnings carefully.
- They can save your life and the lives of personnel you work with.
- If there is any doubt about handling tools, materials, equipment, and procedures, see TB 43-0216, Safety and Hazard Warnings for Operation and Maintenance of TACOM Equipment.

Table 1. Warning Icons Used In This Manual.





| WARNING ICON | DESCRIPTION |
|---|---|
|  | <p><u>AIR PRESSURE</u> - human hand blocking air gun shows the need to reduce air pressure before use, or debris may injure user and/or damage equipment.</p> |
|  | <p><u>BIOLOGICAL</u> - abstract symbol bug shows that a material may contain bacteria or viruses that present a danger to life or health.</p> |
|  | <p><u>CHEMICAL</u> - drops of liquid on hand show that the material will cause burns or irritation to human skin or tissue.</p> |
|  | <p><u>CRYOGENIC</u> - hand in block of ice shows that the material is extremely cold and can injure human skin and tissue.</p> |

Table 1. Warning Icons Used In This Manual. - Continued




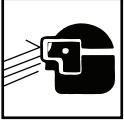

| WARNING ICON | DESCRIPTION |
|---|--|
|  | <p><u>ELECTRICAL</u> - electrical wire to arm with electricity symbol running through human body shows that shock hazard is present.</p> |
|  | <p><u>EXPLOSION</u> - rapidly expanding symbol shows that the material may explode if subjected to high temperatures, sources of ignition, or high pressure.</p> |
|  | <p><u>EXTREMELY COLD SURFACE</u> - hand touching object with ice formed on both shows that surface is extremely cold and can damage human tissue.</p> |
|  | <p><u>EYE PROTECTION</u> - person with goggles shows that the material will injure the eyes.</p> |
|  | <p><u>FIRE</u> - flame shows that material may ignite and cause burns.</p> |

Table 1. Warning Icons Used In This Manual. - Continued






| WARNING ICON | DESCRIPTION |
|---|--|
|  | <p><u>FIRE EXTINGUISHER</u> - fire extinguisher shows that material may ignite and a fire extinguisher should be within easy reach.</p> |
|  | <p><u>HEAVY OBJECT</u> - human figure stooping over heavy object shows physical injury potential for improper lifting technique, and/or aid of assistant(s) and/or lifting device (as required).</p> |
|  | <p><u>HEAVY PARTS</u> - hand with heavy object on top shows that heavy parts can crush and harm.</p> |
|  | <p><u>HEAVY PARTS</u> - foot with heavy object on top shows that heavy parts can crush and harm.</p> |
|  | <p><u>HEAVY PARTS</u> - moving heavy object pinning human figure against stationary object shows that heavy, moving parts/objects present a danger to life or limb.</p> |

Table 1. Warning Icons Used In This Manual.






| WARNING ICON | DESCRIPTION |
|---|--|
|  | <p><u>HEAVY PARTS</u> - heavy object on human figure shows that heavy parts present a danger to life or limb.</p> |
|  | <p><u>HOT AREA</u> - hand over object radiating heats shows that part is hot and can burn.</p> |
|  | <p><u>MOVING PARTS</u> - hand with fingers caught between gears shows that the moving parts of the equipment present a danger to life or limb.</p> |
|  | <p><u>PRESSURE/TENSION HAZARD</u> - human body being impacted by rotating projectile shows that equipment is under pressure or tension presenting a danger to life or limb if pressure or tension is not carefully released.</p> |
|  | <p><u>PROJECTILE HAZARD</u> - human body with object passing through it shows that a projectile hazard exists.</p> |

Table 1. Warning Icons Used In This Manual.






| WARNING ICON | DESCRIPTION |
|---|---|
|  | <p><u>RADIATION</u> - three circular wedges show that the material emits radioactive energy and can injure human tissue.</p> |
|  | <p><u>ROLLOVER HAZARD</u> - vehicle indicating direction of human figure shows that vehicle may roll over if conditions are not avoided, presenting a danger to life or limb.</p> |
|  | <p><u>RUN OVER HAZARD</u> - vehicle running over human body shows hazard.</p> |
|  | <p><u>SHARP OBJECT</u> - pointed object in hand shows that a sharp object presents a danger to life or limb.</p> |
|  | <p><u>SKIN IRRITATION</u> - hand radiating shows that material can cause skin irritation.</p> |

Table 1. Warning Icons Used In This Manual.








| WARNING ICON | DESCRIPTION |
|---|--|
|  | <p><u>SLICK FLOOR</u> - wavy line on floor with legs prone shows that slick floor presents a danger of falling.</p> |
|  | <p><u>STEAM HAZARD</u> - human engulfed in steam cloud shows steam hazard exists that could injure/burn human tissue.</p> |
|  | <p><u>TIRE BLOWOUT</u> - tire with hole shows that an over or under inflated tire may rupture, presenting a danger to life or limb.</p> |
|  | <p><u>VAPOR</u> - human figure in a cloud shows that material vapors present a danger to life or health.</p> |
|  | <p><u>WARNING/CAUTION</u> - triangle with exclamation point within shows that a WARNING or CAUTION is present that indicates a potential hazard, which may cause injury or death to personnel (warning), or damage to equipment (caution).</p> |

Table 1. Warning Icons Used In This Manual.

| WARNING ICON | DESCRIPTION |
|---|--|
|  | <p><u>WIRE CABLE/ROPE</u> - human hand with frayed wire cable/rope running across shows injury to unprotected (bare) hands may result.</p> |
|  | <p><u>EAR PROTECTION</u> - headphones over ears show that noise level will harm ears.</p> |

FOR INFORMATION ON FIRST AID:

Reference FM 4-25.11. (WP 0173)

WARNING



MODIFICATION HAZARD

- Unauthorized modifications to, alterations to, or installations on this equipment are prohibited and are in violation of AR 750-10.
- Failure to comply may result in injury or death to personnel or damage to equipment.

WARNING



HIGH-PRESSURE HYDRAULIC SYSTEM

- Hydraulic systems can cause serious injuries if high-pressure lines or equipment fails.
- Never work on hydraulic systems or equipment unless there is another person nearby who is familiar with the operation and hazards of the equipment and can give first aid.
- Never disconnect any hydraulic hose or part while the engine is running. Allow several minutes to elapse after shutting off engine, to allow pressure to relieve itself, before attempting to remove hoses. Failure to comply may result in injury to personnel.
- The HEMTT vehicles contain hydraulic systems operating at oil pressures up to 3,000 psi (20 685 kPa) and 3,200 psi (22 064 kPa). Never disconnect any hydraulic line or fitting without first dropping the pressure to zero. Failure to comply may result in serious injury or death to personnel.

WARNING



ELECTRICAL SYSTEM

- Remove all jewelry, such as rings, ID tags, bracelets, etc. If jewelry or tools contact electrical circuits, a direct short may result. Failure to comply may result in serious injury or death to personnel.
- Do not smoke, use open flame, make sparks or other ignition sources around batteries. A battery giving off gas could explode. Failure to comply may result in serious injury or death to personnel.
- Be careful when working on or with electrical equipment. Do not be misled by the term "low voltage". Voltages as low as 50 volts can cause death. For artificial respiration, refer to FM 4-25.11.
- When working inside the vehicle with power off, be sure to ground every capacitor likely to hold a dangerous voltage potential.

- Never work on electronic equipment unless there is another person nearby who is familiar with the operation and hazards of the equipment.

WARNING



SOLVENT CLEANING COMPOUND

- Solvent cleaning compound MIL-PRF-680 Type II and III may be irritating to the eyes and skin. Use protective gloves and goggles. Use in a well-ventilated area. Use respirator as needed. Accidental ingestion can cause irritation of digestive tract and respiratory tract, may cause lung and central nervous system damage. Can be fatal if swallowed. Inhalation of high/massive concentrations can cause coma or be fatal. First aid for ingestion: do not induce vomiting. Seek immediate medical attention. First aid of skin contact: remove contaminated clothing. Wash skin thoroughly with soap and water. If symptoms persist, seek medical attention. First aid for eye contact: flush with water for 15 minutes or until irritation subsides. If symptoms persist, seek medical attention. First aid for inhalation: move to fresh air. If not breathing, provide artificial respiration. If symptoms persist, seek medical attention. Keep away from open flames and other sources of ignition. Failure to follow this warning may result in injury or death to personnel.
- The flashpoint for Type II solvent cleaning compound is 141 to 198°F (61 to 92°C), and Type III is 200 to 241°F (93 to 116°C).
- Improper cleaning methods and use of unauthorized cleaning solvents may injure personnel and damage equipment.
- Fire extinguishers should be placed nearby when using solvent cleaning compound. Failure to follow this warning may result in injury or death.
- Cloths or rags saturated with solvent cleaning compound must be disposed of IAW authorized facilities' procedures. Failure to follow this warning may result in injury.
- Eye shields must be worn when cleaning with a wire brush. Flying rust and metal particles may cause injury.

WARNING**POLYURETHANE COATING (CARC)**

- Eye and hearing protection must be worn at all times when using power tools for grinding, cutting, sawing, and drilling. Failure to do so may result in injury to personnel. Chemical Agent Resistant Coating (CARC) paint contains isocyanate which is highly irritating to skin and respiratory system. High concentrations of isocyanate can produce symptoms of itching and reddening of skin, a burning sensation in the throat and nose, and watering of the eyes. In extreme concentrations, isocyanate can cause cough, shortness of breath, pain during respiration, increased sputum production, and chest tightness. First aid for ingestion: do not induce vomiting. Seek immediate medical attention. First aid for skin contact: remove contaminated clothing. Wash skin thoroughly with soap and water. If symptoms persist, seek medical attention. First aid for eye contact: flush with water for 15 minutes or until irritation subsides. If symptoms persist, seek medical attention. First aid for inhalation: move to fresh air. If not breathing, provide artificial respiration. If symptoms persist, seek medical attention.
- The following precautions must be taken whenever using CARC paint:
- Protective equipment (gloves, goggles, ventilation mask) must be worn when using CARC paint.
- NEVER cut CARC-coated materials without high-efficiency, air-purifying respirators in use.
- DO NOT grind or sand painted equipment without high-efficiency, air-purifying respirators in use.
- BE AWARE of CARC paint exposure symptoms; symptoms can occur a few days after initial exposure. Seek medical help immediately if symptoms are detected.
- Use only in well-ventilated area. Check with local environmental office for methods and locations approved for painting in accordance with local and state environmental regulations.
- Always use air line respirators when using CARC paint unless air sampling shows exposure to be below standards. Use chemical cartridge respirator if air sampling is below standards.

WARNING



ADHESIVE

- Adhesive, solvents and sealing compounds can burn easily and are harmful causing immediate bonding on contact with eyes, skin, or clothing and gives off harmful vapors.
- If adhesive, solvent, or sealing compound gets on skin or clothing, wash immediately with soap and water.
- If adhesive gets in your eyes, try to keep them open; flush them with water for 15 minutes and get immediate medical attention.
- Wear protective goggles and use in a well-ventilated area.
- Keep away from open fire and use in well-ventilated area to avoid injury or death.

WARNING



FLAMMABLE LIQUID AND COMBUSTIBLE VAPOR

- Gasoline, fuel oil, lubricating oil, grease, paint, paint thinner, cleaning solvents, and other combustible liquids present a serious fire hazard.
- Combustible liquids must ALWAYS be stored in their approved containers and designated compartments or deck storage locations.
- Ensure exhaust and ventilation fans are operating while using cleaning solvents or paint products.
- Never store or charge batteries in a confined space without ventilation or near electrical equipment.
- Fuel is very flammable and can explode easily.
- To avoid serious injury or death, keep fuel away from open fire and keep fire extinguisher within easy reach when working with fuel.
- Do not work on fuel system when engine is hot. Fuel can be ignited by hot engine.

- When working with fuel, post signs that read NO SMOKING WITHIN 50 FEET OF VEHICLE.
- Starting fluid is toxic and flammable. Do not store in cab and do not breathe fumes. Do not puncture or burn containers. Dispose of container following manufacturer's recommendations on the container.

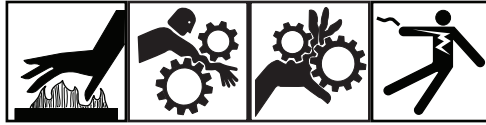
WARNING



LIFTING OPERATIONS This section is applicable to all lifting operations regardless of lifting equipment (crane, LHS, etc.) used.

- All personnel must stand clear during lifting operations. A swinging or shifting load may cause injury or death to personnel.
- Never crawl under equipment when performing maintenance unless equipment is securely blocked. Failure to comply may cause injury or death to personnel.
- Keep clear of equipment when it is being raised or lowered. Failure to comply may cause injury or death to personnel.
- Do not work on any item supported only by lift jacks or hoist. Always use blocks or proper stands to support the item prior to any work. Failure to comply may result in injury or death to personnel.
- Do not lift a load greater than the rated load capacity of the crane or materiel handling equipment. Failure to comply may result in injury or death to personnel or damage to equipment.
- Do not allow heavy components to swing while hanging by lifting device. Failure to comply may cause injury or death to personnel.
- Any part or component that weighs between 50 lbs (23 kg) and 75 lbs (34 kg) must be removed with the aid of an assistant. Any part or component that weighs over 75 lbs (34 kg) must be removed with the aid of an assistant and a lifting device. Failure to comply may cause injury or death to personnel.
- Ensure all chains, hooks, and slings are in good condition and are of correct capacity. Ensure hooks are positioned correctly. Failure to comply may result in injury or death to personnel.

WARNING



MOVING MACHINERY

- Use extreme care when operating or working near moving machinery including running engine, rotating shafts, and other moving parts. Failure to comply may result in injury or death to personnel.
- Use extreme care when measuring voltage while engine is running. Avoid contact with rotating fan blade and hot engine parts. Failure to comply may result in injury or death to personnel.

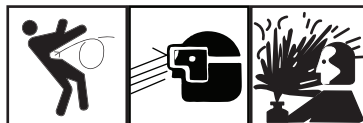
WARNING



LHS and CBT OPERATION

- Check for overhead power lines, ground condition for firmness, and other obstructions before attempting LHS operation.
- LHS hook maximum lifting height is 17 ft. 2 in. (5.23 m). Failure to comply can result in injury or death to personnel.

WARNING



PARTS UNDER PRESSURE

- Wear safety goggles and use caution when removing or installing springs, snap rings, retaining rings, and other parts under spring tension. These parts can act as projectiles. Failure to comply may result in injury or death to personnel.
- The radiator is very hot and pressurized during vehicle operation. Let radiator cool before removing cap. Failure to do so can result in serious burns.

- During pressure tests, ensure air pressure is drained to 0 psi (0 kPa) before taking off any components. If pressure is not released, plates or line could blow off and harm personnel. Do not drain air from tank with any part of body in air spray path. Skin embolisms and/or debris in eyes can occur from released pressure.
- High air pressure may be released from valve stem when valve core is removed. Stay clear of valve stem after core is removed. Ensure all personnel wear suitable eye protection. Failure to comply may result in injury to personnel.
- Stand clear of trajectory area during deflation or personal injury or death may result.
- Lock-ring is under tension. If lock-ring breaks loose it could cause injury to personnel. Keep hands and fingers away from lock-ring when removing.
- Never adjust relief valve so that personnel must stand on strongback to operate latch.
- If there is any residual pressure in tank when relief valve is open, personnel may lose their balance and fall. Failure to comply may result in injury or death to personnel.
- Use extreme care when removing or installing spring retainers. Spring retainers are under tension and can act as projectiles when released suddenly. Ensure proper eye protection is worn to prevent injury to personnel.
- Use extreme care when removing or installing springs. Springs are under tension and can act as projectiles when released. Ensure proper eye protection is worn to prevent injury to personnel. Eye protection is required during all grinding operations. Failure to comply may result in serious injury to personnel.
- Failure to relieve tank pressure may result in sudden, unexpected loss of pressure. Failure to comply may result in personal injury or death.
- Do not remove the radiator cap when the engine is hot, as steam and hot coolant can escape. Failure to comply may result in personal injury or death.

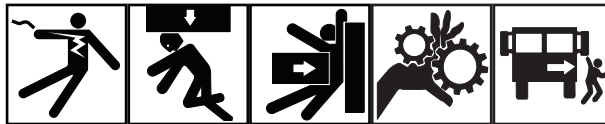
WARNING



HEAVY PARTS

Any part or component that weigh over 50 lbs (23 kg) must be removed with the aid of an assistant and a lifting device. Failure to comply may result in personal injury or death.

WARNING



CRANE SYSTEM

- Always refer to the range diagram BEFORE making any lift. It is extremely important that the crane is properly leveled to prevent overstressing.
- Do not operate crane unless outriggers are set up. Always chock front wheels when using outriggers. Failure to comply may result in injury or death to personnel.
- When using crane on any vehicle, park vehicle clear of all overhead powerlines. If operating crane under power lines, do not allow vehicle to contact high-voltage connections. Failure to comply will result in death to personnel.
- Do not stand under crane. Failure to comply may result in injury or death to personnel.
- Refuse to work with worn, frayed, or damaged wire rope. Always wear heavy gloves when handling winch cables; never let cable run through hands. Frayed cables can cut. Never operate winch with less than five wraps of cable on winch drum. Failure to comply may result in injury or death to personnel.
- When using crane on any vehicle, park vehicle clear of all overhead power lines. Do not operate crane near overhead power lines. Failure to comply may result in injury or death to personnel.
- Boom has a 370 degree rotation and is mechanically stopped at five degrees on either side of the left outrigger beam. Swing operations must be slowed no later than 15 degrees prior to contacting the stop.

- Keep boom clear of electrical powerlines and other obstacles. Do not operate crane near overhead powerlines. Failure to comply will result in death to personnel.
- Avoid quick, jerking, winch operation. Keep other personnel well away from vehicles involved in winching operations. A snapped cable or shifting load can cause serious injury or death.
- If possible, keep one hand away from equipment to reduce the hazard of current flowing through vital organs of the body.
- Keep fingers clear of top of lift-hook. Failure to comply could result in personnel injury.

WARNING



CARBON MONOXIDE (EXHAUST GAS) CAN CAUSE DEATH

- Carbon monoxide does not have color or smell and can cause death.
- Breathing air with carbon monoxide produces symptoms of headache, dizziness, loss of muscular control, a sleepy feeling and coma. Brain damage or death can result from heavy exposure.
- Carbon monoxide is in exhaust fumes of fuel-burning heaters and internal combustion engines.
- Carbon monoxide can become dangerously concentrated under conditions of no ventilation.
- Precautions must be followed to ensure crew safety when the personnel heater or engine of any vehicle is operated for any purpose. Failure to comply may result in injury or death to personnel.
- DO NOT operate vehicle engine in a closed place unless the place has proper ventilation. Failure to comply may result in injury or death to personnel.
- DO NOT drive any vehicle with inspection plates, cover plates, or engine compartment covers removed unless necessary for maintenance purposes. Failure to comply may result in injury or death to personnel.
- BE ALERT at all times during vehicle operation for exhaust odors and exposure symptoms. If either odor or exposure symptoms are present, IMMEDIATELY VENTILATE personnel compartments. If symptoms continue, remove affected crew to fresh air and keep

warm. DO NOT PERMIT PHYSICAL EXERCISE. If necessary, give artificial respiration and get immediate medical attention. For artificial respiration, refer to FM 4-25.11 . Failure to comply may result in injury or death to personnel.

- BE AWARE that the gas particulate filter unit or the field protection mask for nuclear-biological-chemical protection WILL NOT offer safety from carbon monoxide poisoning.

WARNING



EXTREME HEAT

If required to remain inside the vehicle during extreme heat, occupants should follow the water intake, work/rest cycle, and other heat stress preventive medicine measures contained in FM 21-10, Field Hygiene and Sanitation.

WARNING



CABLES

- Always wear heavy gloves when handling winch cables; never let cable run through hands. Frayed cables can cut. Failure to comply may result in injury or death to personnel.
- Never operate winch with less than five wraps of cable on winch drum. Frayed cables can cut. Failure to comply may result in injury or death to personnel.

WARNING



LEAD-ACID BATTERIES

- Wear proper eye protection when working around batteries. Failure to comply may result in injury or death to personnel.
- Use extreme care not to short out battery terminals. Remove all jewelry such as rings, ID tags, bracelets, etc. prior to working on or around vehicle. Jewelry and tools can catch on equipment, contact positive electrical circuits, and cause a direct short, severe burns, or electrical shock. Failure to comply may result in injury or death to personnel.
- Batteries produce explosive gases. Do not smoke or use open flame near batteries. Do not allow hot, sparking, or glowing objects near batteries. If batteries are giving off gases, presence of a heat, flame, or spark may cause fire and/or explosion. Failure to comply may result in injury or death to personnel.
- Battery electrolyte is harmful to skin, and eyes. Avoid battery electrolyte contact with skin, eyes, or clothing. If battery electrolyte spills, take immediate action to stop burning effects:

WARNING



NBC

- NBC-contaminated air filters must be handled and disposed of only by authorized and trained personnel.
- The unit commander or senior officer in charge of maintenance personnel must ensure that prescribed protective clothing (FM

3-11.4) is used, and prescribed safety measures and decontamination procedures (FM 3-11.5) are followed.

- The local unit SOP is responsible for final disposal of contaminated air filters. Failure to comply may cause severe injury or death to personnel.

WARNING



TIRE OPERATION

- Operating a vehicle with a tire in an overinflated or underinflated condition, or with a questionable defect, may lead to premature tire failure. Ensure tire has proper tire pressure. Failure to comply may result in injury or death to personnel.
- When inflating tires mounted on the vehicle, all personnel must remain out of trajectory of the side ring and lock-ring as shown by the areas indicated. Failure to follow proper procedures may result in serious injury or death to personnel.
- Cracked, broken, bent or otherwise damaged rim components shall not be reworked, welded, brazed, or otherwise heated or damage or personal injury or death may result.
- No heat shall be applied to a multi-piece wheel or wheel component or damage or injury or death may result.
- Failure to place wheel/tire assembly in safety cage prior to initial inflation could result in serious injury or death to personnel.
- When a wheel/tire is in a restraining device, do not rest or lean any part of body or equipment on or against the restraining device, or injury or death could result.
- While changing tires or while performing tire maintenance, stay out of the trajectory path. Failure to comply may result in injury or death to personnel.
- Always use an inflation hose with an in-line gauge and a clip-on chuck when inflating tires. The gauge and valve must be mounted a minimum of 10 feet (3.10 m) away from air chuck.
- High air pressure may be released from valve stem when valve core is removed. Stay clear of valve stem after core is removed. Ensure

all personnel wear suitable eye protection. Failure to comply may result in injury to personnel.

- Tire is heavy. Brace tire to ensure tire will not fall over on you or on others.

WARNING



VEHICLE OPERATION

- Speed limits posted on curves reflect speeds that are considered safe for automobiles. Heavy trucks with a high center of gravity can roll over at these speed limits. Use caution and reduce your speed below the posted limit before entering a curve. Failure to comply may result in vehicle crash and injury to personnel.
- Use caution and reduce your speed below the posted limit before entering a curve. Failure to comply may result in vehicle crash and injury to personnel.
- Always use seatbelts when operating vehicle. Failure to use seatbelt can result in serious injury or death in case of accident.
- Operation at speeds over 15 mph (24 kph) on paved roads can be achieved when the operator determines that the vehicle being towed and the terrain allow safe operation.
- Under no condition can speeds over 35 mph (55 kph) on paved road and 15 mph (24 kph) off-road be allowed. Loss of control can cause serious injury or death. Excessive speed can cause damage to vehicle being towed.

WARNING



BRAKES

- Ensure all personnel are clear from front of truck before performing brake stall check. Be ready to apply service brake. Operator must remain in cab while performing this check. Failure to comply could result in personnel injury.

- Never use parking brake for normal braking or wheels will lock up causing severe skid. Skidding vehicle may result in serious personal injury or death.
- Engine must be shut OFF and parking brake set before performing PMCS walkaround. Failure to comply may result in injury or death to personnel.

WARNING



BURNS

The exhaust pipe and muffler can become very hot during vehicle operation. Be careful not to touch these parts with bare hands, or allow body to come in contact with exhaust pipe or muffler. Exhaust system parts can become hot enough to cause serious burns.

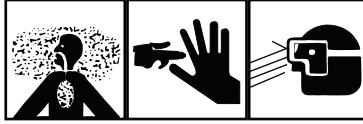
WARNING



HEARING PROTECTION

- Excessive noise levels are present any time the heavy-duty winch or crane is operating.
- Wear single hearing protection (earplugs or equivalent) while working around equipment while it is running. Failure to do so could result in damage to your hearing.
- Seek medical aid should you suspect a hearing problem.

WARNING



COMPRESSED AIR

- Brake shoes may be coated with dust. Breathing this dust may be harmful to your health.
- Do not use compressed air to clean brake shoes. Wear a filter mask approved for use against brake dust. Failure to comply may result in injury or death to personnel.
- Compressed air used for cleaning purposes will not exceed 30 psi (207 kPa).
- Use only with effective chip guarding and personal protective equipment, goggles, shield, and gloves.

LIST OF EFFECTIVE PAGES/WORK PACKAGES

NOTE:

TM 9-2320-434-10 dated 15 June 2009 supersedes TM 9-2320-279-10-1, including all changes. Zero in the "Change No." column indicates an original page or work package.

Date of issue for the original manual is:

Original 15 June 2009

**TOTAL NUMBER OF PAGES FOR FRONT AND REAR
MATTER IS 87 AND TOTAL NUMBER OF WORK PACKAGES
IS 176, CONSISTING OF THE FOLLOWING:**

| Page/WP No. | Change No. | Page/WP No. | Change No. |
|--|------------|-------------------|------------|
| Front Cover | 0 | WP 0022 (6 pages) | 0 |
| Warning Summary | 0 | WP 0023 (2 pages) | 0 |
| i-iii | 0 | WP 0024 (4 pages) | 0 |
| Chp 1 - General Information, Equipment Description and Theory of Operation | 0 | WP 0025 (2 pages) | 0 |
| WP 0001 (10 pages) | 0 | WP 0026 (4 pages) | 0 |
| WP 0002 (8 pages) | 0 | WP 0027 (2 pages) | 0 |
| WP 0003 (2 pages) | 0 | WP 0028 (4 pages) | 0 |
| WP 0004 (4 pages) | 0 | WP 0029 (2 pages) | 0 |
| WP 0005 (2 pages) | 0 | WP 0030 (4 pages) | 0 |
| WP 0006 (10 pages) | 0 | WP 0031 (2 pages) | 0 |
| WP 0007 (2 pages) | 0 | WP 0032 (4 pages) | 0 |
| WP 0008 (4 pages) | 0 | WP 0033 (4 pages) | 0 |
| WP 0009 (4 pages) | 0 | WP 0034 (4 pages) | 0 |
| WP 0010 (2 pages) | 0 | WP 0035 (4 pages) | 0 |
| WP 0011 (2 pages) | 0 | WP 0036 (4 pages) | 0 |
| WP 0012 (4 pages) | 0 | WP 0037 (2 pages) | 0 |
| WP 0013 (4 pages) | 0 | WP 0038 (8 pages) | 0 |
| WP 0014 (2 pages) | 0 | WP 0039 (2 pages) | 0 |
| WP 0015 (2 pages) | 0 | WP 0040 (2 pages) | 0 |
| WP 0016 (4 pages) | 0 | WP 0041 (2 pages) | 0 |
| Chp 2 - Operator Instructions | 0 | WP 0042 (4 pages) | 0 |
| WP 0017 (2 pages) | 0 | WP 0043 (2 pages) | 0 |
| WP 0018 (4 pages) | 0 | WP 0044 (2 pages) | 0 |
| WP 0019 (2 pages) | 0 | WP 0045 (4 pages) | 0 |
| WP 0020 (6 pages) | 0 | WP 0046 (4 pages) | 0 |
| WP 0021 (6 pages) | 0 | WP 0047 (2 pages) | 0 |
| | | WP 0048 (2 pages) | 0 |
| | | WP 0049 (4 pages) | 0 |

| Page/WP No. | Change No. | Page/WP No. | Change No. |
|--------------------|------------|-------------------------|------------|
| WP 0050 (2 pages) | 0 | WP 0094 (4 pages) | 0 |
| WP 0051 (2 pages) | 0 | WP 0095 (2 pages) | 0 |
| WP 0052 (18 pages) | 0 | WP 0096 (8 pages) | 0 |
| WP 0053 (40 pages) | 0 | WP 0097 (4 pages) | 0 |
| WP 0054 (42 pages) | 0 | WP 0098 (2 pages) | 0 |
| WP 0055 (42 pages) | 0 | WP 0099 (38 pages) | 0 |
| WP 0056 (40 pages) | 0 | WP 0100 (2 pages) | 0 |
| WP 0057 (6 pages) | 0 | WP 0101 (4 pages) | 0 |
| WP 0058 (12 pages) | 0 | WP 0102 (2 pages) | 0 |
| WP 0059 (4 pages) | 0 | WP 0103 (18 pages) | 0 |
| WP 0060 (16 pages) | 0 | WP 0104 (4 pages) | 0 |
| WP 0061 (10 pages) | 0 | WP 0105 (2 pages) | 0 |
| WP 0062 (14 pages) | 0 | WP 0106 (4 pages) | 0 |
| WP 0063 (4 pages) | 0 | WP 0107 (2 pages) | 0 |
| WP 0064 (18 pages) | 0 | WP 0108 (6 pages) | 0 |
| WP 0065 (24 pages) | 0 | WP 0109 (4 pages) | 0 |
| WP 0066 (14 pages) | 0 | WP 0110 (2 pages) | 0 |
| WP 0067 (10 pages) | 0 | WP 0111 (2 pages) | 0 |
| WP 0068 (16 pages) | 0 | WP 0112 (6 pages) | 0 |
| WP 0069 (10 pages) | 0 | WP 0113 (4 pages) | 0 |
| WP 0070 (12 pages) | 0 | WP 0114 (16 pages) | 0 |
| WP 0071 (4 pages) | 0 | WP 0115 (8 pages) | 0 |
| WP 0072 (8 pages) | 0 | WP 0116 (4 pages) | 0 |
| WP 0073 (4 pages) | 0 | WP 0117 (2 pages) | 0 |
| WP 0074 (2 pages) | 0 | WP 0118 (18 pages) | 0 |
| WP 0075 (2 pages) | 0 | WP 0119 (6 pages) | 0 |
| WP 0076 (2 pages) | 0 | WP 0120 (6 pages) | 0 |
| WP 0077 (2 pages) | 0 | WP 0121 (4 pages) | 0 |
| WP 0078 (4 pages) | 0 | WP 0122 (8 pages) | 0 |
| WP 0079 (2 pages) | 0 | WP 0123 (8 pages) | 0 |
| WP 0080 (4 pages) | 0 | Chp 3 - Troubleshooting | |
| WP 0081 (4 pages) | 0 | Procedures | 0 |
| WP 0082 (4 pages) | 0 | WP 0124 (8 pages) | 0 |
| WP 0083 (2 pages) | 0 | WP 0125 (8 pages) | 0 |
| WP 0084 (2 pages) | 0 | WP 0126 (6 pages) | 0 |
| WP 0085 (2 pages) | 0 | WP 0127 (4 pages) | 0 |
| WP 0086 (2 pages) | 0 | WP 0128 (6 pages) | 0 |
| WP 0087 (6 pages) | 0 | WP 0129 (6 pages) | 0 |
| WP 0088 (4 pages) | 0 | WP 0130 (4 pages) | 0 |
| WP 0089 (4 pages) | 0 | WP 0131 (4 pages) | 0 |
| WP 0090 (2 pages) | 0 | WP 0132 (6 pages) | 0 |
| WP 0091 (2 pages) | 0 | WP 0133 (6 pages) | 0 |
| WP 0092 (4 pages) | 0 | WP 0134 (6 pages) | 0 |
| WP 0093 (2 pages) | 0 | WP 0135 (4 pages) | 0 |

| Page/WP No. | Change No. | Page/WP No. | Change No. |
|--------------------------------|-------------------|--------------------------------|-------------------|
| WP 0136 (4 pages) | 0 | WP 0158 (4 pages) | 0 |
| WP 0137 (4 pages) | 0 | WP 0159 (32 pages) | 0 |
| WP 0138 (8 pages) | 0 | WP 0160 (30 pages) | 0 |
| WP 0139 (4 pages) | 0 | WP 0161 (40 pages) | 0 |
| WP 0140 (2 pages) | 0 | WP 0162 (14 pages) | 0 |
| WP 0141 (2 pages) | 0 | Chp 5 - Maintenance | |
| WP 0142 (6 pages) | 0 | Instructions | 0 |
| WP 0143 (4 pages) | 0 | WP 0163 (12 pages) | 0 |
| WP 0144 (4 pages) | 0 | WP 0164 (4 pages) | 0 |
| WP 0145 (2 pages) | 0 | WP 0165 (6 pages) | 0 |
| WP 0146 (4 pages) | 0 | WP 0166 (2 pages) | 0 |
| WP 0147 (2 pages) | 0 | WP 0167 (20 pages) | 0 |
| WP 0148 (4 pages) | 0 | WP 0168 (2 pages) | 0 |
| WP 0149 (6 pages) | 0 | WP 0169 (6 pages) | 0 |
| WP 0150 (2 pages) | 0 | WP 0170 (8 pages) | 0 |
| WP 0151 (2 pages) | 0 | WP 0171 (6 pages) | 0 |
| WP 0152 (6 pages) | 0 | WP 0172 (4 pages) | 0 |
| WP 0153 (4 pages) | 0 | Chp 6 - Supporting Information | 0 |
| WP 0154 (4 pages) | 0 | WP 0173 (8 pages) | 0 |
| WP 0155 (2 pages) | 0 | WP 0174 (16 pages) | 0 |
| Chp 4 - Preventive Maintenance | | WP 0175 (6 pages) | 0 |
| Checks and Services (PMCS) | 0 | WP 0176 (10 pages) | 0 |
| WP 0156 (4 pages) | 0 | | |
| WP 0157 (40 pages) | 0 | | |

**HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 15 JUNE 2009**

TECHNICAL MANUAL

**OPERATOR'S MANUAL
TRUCK, LOAD HANDLING SYSTEM (LHS), W/O WINCH, 8X8
M1120 (NSN 2320-01-471-1326)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any errors, or if you would like to recommend any improvements to the procedures in this publication, please let us know. The preferred method is to submit your DA Form 2028 (Recommended Changes to Publications and Blank Forms) through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <https://aeprs.ria.army.mil>. The DA Form 2028 is located under the Public Applications section in the AEPS Public Home Page. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, e-mail, or fax your comments or DA Form 2028 directly to the U.S. Army TACOM Life Cycle Management Command. The postal mail address is U.S. Army TACOM Life Cycle Management Command, ATTN: AMSTA-LC-LMPP / TECH PUBS, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The e-mail address is tacomlcmc.daform2028@us.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

*SUPERSEDURE NOTICE - TM 9-2320-428-10, TM 9-2320-429-10, TM 9-2320-430-10, TM 9-2320-432-10, TM 9-2320-433-10, TM 9-2320-434-10, TM 9-2320-435-10, dated 15 Jun 09; supersedes TM 9-2320-279-10-1, dated 21 Nov 86 Including all changes.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited. *

TABLE OF CONTENTS

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Warning Summary | |
| How to Use this Manual | |
| Chapter 1 - General Information, Equipment Description and Theory of Operation | |
| INTRODUCTION..... | WP 0001 |
| Table 1. Overview..... | 0001-1 |
| Figure 1. | 0001-1 |
| Table 2. Common Nomenclature..... | 0001-3 |
| Table 3. Common Abbreviations..... | 0001-4 |
| Table 4. Significant Hazard And Safety Recommendations..... | 0001-10 |
| WARRANTY PROGRAM..... | WP 0002 |
| Table 1. Vehicle Information..... | 0002-3 |
| EQUIPMENT CHARACTERISTICS, CAPABILITIES, AND FEATURES..... | WP 0003 |
| LOCATION AND DESCRIPTION OF MAJOR COMPONENTS..... | WP 0004 |
| Table 1. HEMTT Series Vehicle Common Component Location..... | 0004-1 |
| Figure 1. | 0004-1 |
| Table 2. M1120 LHS Vehicle Component Location..... | 0004-3 |
| Figure 2. | 0004-3 |
| DIFFERENCES BETWEEN MODELS..... | WP 0005 |
| Table 1. Differences Between HEMTT BASE Models..... | 0005-1 |
| Table 2. Notes..... | 0005-2 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|--|------------------------|
| | <u>Page No.</u> |
| EQUIPMENT DATA..... | WP 0006 |
| Table 1. Vehicle Operation..... | 0006-1 |
| Table 2. M1120 LHS Cargo Vehicle Dimensions..... | 0006-1 |
| Table 3. M1120 LHS Cargo Vehicle Weight..... | 0006-1 |
| Table 4. M1120 LHS Cargo Vehicle Weight Distribution..... | 0006-2 |
| Table 5. Vehicle Performance..... | 0006-2 |
| Table 6. Fluid Capacities..... | 0006-3 |
| Table 7. Engine..... | 0006-3 |
| Table 8. Fuel System..... | 0006-4 |
| Table 9. Electrical System..... | 0006-4 |
| Table 10. Cooling System..... | 0006-5 |
| Table 11. Transmission..... | 0006-5 |
| Table 12. Transfer Case..... | 0006-5 |
| Table 13. Front Tandem Axles..... | 0006-5 |
| Table 14. Rear Tandem Axles..... | 0006-6 |
| Table 15. Brake System..... | 0006-6 |
| Table 16. Wheels..... | 0006-6 |
| Table 17. Tires..... | 0006-6 |
| Table 18. Steering System..... | 0006-7 |
| Table 19. Towing Eyes..... | 0006-7 |
| Table 20. Pintle Hook..... | 0006-7 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|--|------------------------|
| | <u>Page No.</u> |
| Table 21. Pintle Hook With Self-Guiding Coupler..... | 0006-7 |
| Table 22. Cab..... | 0006-7 |
| Table 23. Self-Recovery Winch..... | 0006-7 |
| Table 24. Load Handling System..... | 0006-8 |
| Table 25. Auxiliary Equipment..... | 0006-8 |
| Table 26. Load Classification..... | 0006-9 |
| Table 27. Tire Pressures..... | 0006-9 |
| Table 28. Operating Speeds..... | 0006-10 |
| SELF-RECOVERY WINCH..... | WP 0007 |
| Figure 1. | 0007-1 |
| ELECTRICAL SYSTEM..... | WP 0008 |
| Figure 1. | 0008-2 |
| Figure 2. | 0008-3 |
| AIR SYSTEM..... | WP 0009 |
| Figure 1. | 0009-2 |
| MAIN HYDRAULIC SYSTEM..... | WP 0010 |
| Figure 1. | 0010-1 |
| Figure 2. | 0010-2 |
| STEERING SYSTEM..... | WP 0011 |
| Figure 1. | 0011-1 |
| POWER TRAIN..... | WP 0012 |
| Figure 1. | 0012-1 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--|-----------------|------------------------|
| Figure 2. | 0012-2 | |
| Figure 3. | 0012-3 | |
| Figure 4. | 0012-3 | |
| Figure 5. | 0012-4 | |
| ENGINE SYSTEMS..... | | WP 0013 |
| Figure 1. | 0013-1 | |
| Figure 2. | 0013-2 | |
| Figure 3. | 0013-3 | |
| Figure 4. | 0013-4 | |
| CAB..... | | WP 0014 |
| Figure 1. | 0014-1 | |
| WHEELS AND TIRES..... | | WP 0015 |
| Figure 1. | 0015-1 | |
| LOAD HANDLING SYSTEM (LHS) AND CONTAINER HANDLING UNIT (CHU)..... | | WP 0016 |
| Figure 1. | 0016-1 | |
| Figure 2. | 0016-3 | |
| Chapter 2 - Operator Instructions | | |
| CAB-MOUNTED FOOT CONTROLS..... | | WP 0017 |
| Table 1. Cab-Mounted Foot Controls..... | 0017-2 | |
| Figure 1. | 0017-2 | |
| CAB-MOUNTED HAND CONTROLS..... | | WP 0018 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Table 1. Cab-Mounted Hand Controls..... | 0018-2 |
| Figure 1. | 0018-2 |
| STEERING COLUMN MOUNTED CONTROLS..... | WP 0019 |
| Table 1. Steering Column Mounted Controls..... | 0019-1 |
| Figure 1. | 0019-1 |
| TUNNEL PANEL CONTROLS AND INDICATORS..... | WP 0020 |
| Table 1. Tunnel panel controls and indicators..... | 0020-2 |
| Figure 1. | 0020-2 |
| INSTRUMENT PANEL CONTROLS AND INDICATORS..... | WP 0021 |
| Table 1. Instrument Panel Controls and Indicators..... | 0021-1 |
| Figure 1. | 0021-1 |
| Figure 2. | 0021-3 |
| Figure 3. | 0021-4 |
| HEATER COMPARTMENT CONTROLS AND INDICATORS..... | WP 0022 |
| Table 1. Heater Compartment Controls and Indicators..... | 0022-1 |
| Figure 1. | 0022-1 |
| Figure 2. | 0022-4 |
| Figure 3. | 0022-5 |
| OPERATOR AND CREW FOUR-POINT SEATBELT/AIR-RIDE SEAT ADJUSTMENT CONTROLS..... | WP 0023 |
| Table 1. Operator and Crew Four-Point Seatbelt/ Air-Ride Seat Adjustment Controls..... | 0023-1 |
| Figure 1. | 0023-1 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| OPERATOR AND CREW THREE-POINT SEATBELT/SEAT ADJUSTMENT CONTROLS..... | WP 0024 |
| Table 1. Operator And Crew Three-Point Seatbelt/ Seat Adjustment Controls..... | 0024-2 |
| Figure 1. | 0024-2 |
| HYDRAULIC SELECTOR VALVE CONTROL..... | WP 0025 |
| Table 1. Hydraulic Selector Valve Control..... | 0025-1 |
| Figure 1. | 0025-1 |
| RIFLE STOWAGE MOUNT..... | WP 0026 |
| Table 1. Rifle Stowage Mount..... | 0026-2 |
| Figure 1. | 0026-2 |
| ARCTIC ENGINE HEATER CONTROLS AND INDICATORS..... | WP 0027 |
| Table 1. Arctic Engine Heater Controls And Indicators..... | 0027-1 |
| Figure 1. | 0027-1 |
| GAS PARTICULATE FILTER UNIT (GPFU) CONTROLS AND INDICATORS | WP 0028 |
| Table 1. Gas Particulate Filter Unit (GPFU) Controls And Indicators..... | 0028-2 |
| Figure 1. | 0028-2 |
| MACHINE GUN MOUNT..... | WP 0029 |
| Table 1. Machine Gun Mount..... | 0029-2 |
| Figure 1. | 0029-2 |
| M-8 CHEMICAL ALARM CONTROLS AND INDICATORS..... | WP 0030 |
| Table 1. M-8 Chemical Alarm Controls And Indicators..... | 0030-2 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> | |
|---|------------------------|---------|
| | <u>Page No.</u> | |
| Figure 1. | 0030-2 | |
| M-13 DECONTAMINATION KIT..... | | WP 0031 |
| Table 1. M-13 Decontamination Kit..... | 0031-2 | |
| Figure 1. | 0031-2 | |
| RADIO INSTALLATION HARDWARE..... | | WP 0032 |
| Table 1. Radio Installation Hardware..... | 0032-2 | |
| Figure 1. | 0032-2 | |
| OPERATE WINDSHIELD WIPERS/WASHER..... | | WP 0033 |
| Figure 1. | 0033-1 | |
| Figure 2. | 0033-2 | |
| OPERATE CAB TEMPERATURE CONTROLS..... | | WP 0034 |
| Figure 1. | 0034-2 | |
| Figure 2. | 0034-3 | |
| OPERATE FIRE EXTINGUISHER..... | | WP 0035 |
| Figure 1. | 0035-2 | |
| Figure 2. | 0035-3 | |
| Figure 3. | 0035-4 | |
| OPERATE ACCESS LADDER..... | | WP 0036 |
| Figure 1. | 0036-1 | |
| Figure 2. | 0036-2 | |
| Figure 3. | 0036-3 | |
| OPERATE DRAIN PLUG..... | | WP 0037 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|---|-----------------|------------------------|
| Figure 1. | 0037-1 | |
| Figure 2. | 0037-2 | |
| START ENGINE..... | | WP 0038 |
| Figure 1. | 0038-2 | |
| Figure 2. | 0038-3 | |
| Figure 3. | 0038-5 | |
| Figure 4. | 0038-6 | |
| Figure 5. | 0038-7 | |
| Figure 6. | 0038-8 | |
| OPERATE PARKING BRAKES..... | | WP 0039 |
| Figure 1. | 0039-1 | |
| OPERATE SERVICE BRAKES..... | | WP 0040 |
| Figure 1. | 0040-1 | |
| OPERATE TRAILER BRAKES..... | | WP 0041 |
| Figure 1. | 0041-1 | |
| OPERATE TRANSMISSION AND TRANSFER CASE..... | | WP 0042 |
| Figure 1. | 0042-1 | |
| Figure 2. | 0042-2 | |
| OPERATE ENGINE BRAKE..... | | WP 0043 |
| Figure 1. | 0043-2 | |
| DRIVE VEHICLE FORWARD..... | | WP 0044 |
| Figure 1. | 0044-2 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| DRIVE VEHICLE IN REVERSE..... | WP 0045 |
| Figure 1. | 0045-2 |
| DRIVE VEHICLE IN CITY TRAFFIC AND ON HIGHWAY..... | WP 0046 |
| Figure 1. | 0046-2 |
| Figure 2. | 0046-3 |
| DRIVE VEHICLE IN OFF-ROAD CONDITIONS..... | WP 0047 |
| Figure 1. | 0047-1 |
| DRIVE VEHICLE UP/DOWN STEEP GRADE..... | WP 0048 |
| Figure 1. | 0048-1 |
| Figure 2. | 0048-2 |
| DRIVE VEHICLE IN SLIPPERY CONDITIONS..... | WP 0049 |
| Figure 1. | 0049-2 |
| PARK VEHICLE..... | WP 0050 |
| Figure 1. | 0050-1 |
| SHUT OFF ENGINE..... | WP 0051 |
| Figure 1. | 0051-1 |
| CONTAINER HANDLING UNIT (CHU) OPERATION..... | WP 0052 |
| Figure 1. | 0052-1 |
| Figure 2. | 0052-2 |
| Figure 3. | 0052-2 |
| Figure 4. | 0052-3 |
| Figure 5. | 0052-4 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Figure 6. | 0052-5 |
| Figure 7. | 0052-5 |
| Figure 8. | 0052-6 |
| Figure 9. | 0052-7 |
| Figure 10. | 0052-7 |
| Figure 11. | 0052-8 |
| Figure 12. | 0052-9 |
| Figure 13. | 0052-10 |
| Figure 14. | 0052-11 |
| Figure 15. | 0052-11 |
| Figure 16. | 0052-12 |
| Figure 17. | 0052-13 |
| Figure 18. | 0052-14 |
| Figure 19. | 0052-15 |
| Figure 20. | 0052-15 |
| Figure 21. | 0052-16 |
| LOADING AND UNLOADING CONTAINER (82 INCHES [208 CM] OR TALLER) TO VEHICLE USING FRONT LIFT ADAPTER (FLA)..... | WP 0053 |
| Figure 1. | 0053-2 |
| Figure 2. | 0053-2 |
| Figure 3. | 0053-5 |
| Figure 4. | 0053-6 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|-----------------|------------------------|
| | <u>Page No.</u> |
| Figure 5. | 0053-7 |
| Figure 6. | 0053-8 |
| Figure 7. | 0053-9 |
| Figure 8. | 0053-10 |
| Figure 9. | 0053-11 |
| Figure 10. | 0053-13 |
| Figure 11. | 0053-15 |
| Figure 12. | 0053-16 |
| Figure 13. | 0053-17 |
| Figure 14. | 0053-18 |
| Figure 15. | 0053-21 |
| Figure 16. | 0053-23 |
| Figure 17. | 0053-24 |
| Figure 18. | 0053-28 |
| Figure 19. | 0053-29 |
| Figure 20. | 0053-31 |
| Figure 21. | 0053-32 |
| Figure 22. | 0053-33 |
| Figure 23. | 0053-35 |
| Figure 24. | 0053-36 |
| Figure 25. | 0053-38 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| LOADING AND UNLOADING CONTAINER (72 INCHES [183 CM] OR TALLER) TO VEHICLE USING FRONT LIFT ADAPTER (FLA)..... | WP 0054 |
| Figure 1. | 0054-2 |
| Figure 2. | 0054-2 |
| Figure 3. | 0054-5 |
| Figure 4. | 0054-7 |
| Figure 5. | 0054-8 |
| Figure 6. | 0054-9 |
| Figure 7. | 0054-10 |
| Figure 8. | 0054-11 |
| Figure 9. | 0054-12 |
| Figure 10. | 0054-13 |
| Figure 11. | 0054-15 |
| Figure 12. | 0054-16 |
| Figure 13. | 0054-17 |
| Figure 14. | 0054-18 |
| Figure 15. | 0054-21 |
| Figure 16. | 0054-23 |
| Figure 17. | 0054-24 |
| Figure 18. | 0054-28 |
| Figure 19. | 0054-29 |
| Figure 20. | 0054-31 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|---|-----------------|------------------------|
| Figure 21. | 0054-32 | |
| Figure 22. | 0054-33 | |
| Figure 23. | 0054-35 | |
| Figure 24. | 0054-36 | |
| Figure 25. | 0054-38 | |
| Figure 26. | 0054-39 | |
| Figure 27. | 0054-41 | |
| LOADING AND UNLOADING CONTAINER (51 INCHES [130 CM] OR TALLER) TO VEHICLE USING FRONT LIFT ADAPTER (FLA)..... | | WP 0055 |
| Figure 1. | 0055-2 | |
| Figure 2. | 0055-2 | |
| Figure 3. | 0055-5 | |
| Figure 4. | 0055-7 | |
| Figure 5. | 0055-8 | |
| Figure 6. | 0055-9 | |
| Figure 7. | 0055-10 | |
| Figure 8. | 0055-11 | |
| Figure 9. | 0055-12 | |
| Figure 10. | 0055-13 | |
| Figure 11. | 0055-15 | |
| Figure 12. | 0055-17 | |
| Figure 13. | 0055-18 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Figure 14. | 0055-21 |
| Figure 15. | 0055-23 |
| Figure 16. | 0055-24 |
| Figure 17. | 0055-28 |
| Figure 18. | 0055-29 |
| Figure 19. | 0055-31 |
| Figure 20. | 0055-32 |
| Figure 21. | 0055-33 |
| Figure 22. | 0055-34 |
| Figure 23. | 0055-36 |
| Figure 24. | 0055-37 |
| Figure 25. | 0055-38 |
| Figure 26. | 0055-39 |
| Figure 27. | 0055-41 |
| LOADING AND UNLOADING CONTAINER (48 INCHES [122 CM] OR TALLER) TO VEHICLE USING FRONT LIFT ADAPTER (FLA)..... | WP 0056 |
| Figure 1. | 0056-2 |
| Figure 2. | 0056-2 |
| Figure 3. | 0056-5 |
| Figure 4. | 0056-7 |
| Figure 5. | 0056-8 |
| Figure 6. | 0056-9 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Figure 7. | 0056-10 |
| Figure 8. | 0056-11 |
| Figure 9. | 0056-12 |
| Figure 10. | 0056-13 |
| Figure 11. | 0056-15 |
| Figure 12. | 0056-17 |
| Figure 13. | 0056-18 |
| Figure 14. | 0056-21 |
| Figure 15. | 0056-23 |
| Figure 16. | 0056-23 |
| Figure 17. | 0056-24 |
| Figure 18. | 0056-28 |
| Figure 19. | 0056-29 |
| Figure 20. | 0056-31 |
| Figure 21. | 0056-32 |
| Figure 22. | 0056-33 |
| Figure 23. | 0056-34 |
| Figure 24. | 0056-36 |
| Figure 25. | 0056-37 |
| Figure 26. | 0056-38 |
| Figure 27. | 0056-39 |
| TRANSPORT FRONT LIFT ADAPTER (FLA) WITHOUT CONTAINER..... | WP 0057 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--|-----------------|------------------------|
| Figure 1. | 0057-2 | |
| Figure 2. | 0057-3 | |
| Figure 3. | 0057-4 | |
| Figure 4. | 0057-6 | |
| RECOVER CONTAINER SUNK IN MUD USING LIFT HOOKS..... | | WP 0058 |
| Figure 1. | 0058-3 | |
| Figure 2. | 0058-5 | |
| Figure 3. | 0058-6 | |
| Figure 4. | 0058-7 | |
| Figure 5. | 0058-8 | |
| Figure 6. | 0058-10 | |
| LOADING/UNLOADING STACKED M3 CROP TO/FROM TRAILER..... | | WP 0059 |
| Figure 1. | 0059-2 | |
| Figure 2. | 0059-2 | |
| LOADING/UNLOADING ISO CONTAINER WITH M3 CROP..... | | WP 0060 |
| Figure 1. | 0060-2 | |
| Figure 2. | 0060-3 | |
| Figure 3. | 0060-4 | |
| Figure 4. | 0060-5 | |
| Figure 5. | 0060-6 | |
| Figure 6. | 0060-7 | |
| Figure 7. | 0060-8 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Figure 8. | 0060-8 |
| Figure 9. | 0060-9 |
| Figure 10. | 0060-9 |
| Figure 11. | 0060-10 |
| Figure 12. | 0060-11 |
| Figure 13. | 0060-11 |
| Figure 14. | 0060-12 |
| Figure 15. | 0060-12 |
| Figure 16. | 0060-13 |
| Figure 17. | 0060-14 |
| Figure 18. | 0060-14 |
| Figure 19. | 0060-15 |
| INSTALLATION/REMOVAL OF RAIL TRANSPORT STRUT..... | WP 0061 |
| Figure 1. | 0061-2 |
| Figure 2. | 0061-2 |
| Figure 3. | 0061-3 |
| Figure 4. | 0061-4 |
| Figure 5. | 0061-5 |
| Figure 6. | 0061-6 |
| Figure 7. | 0061-7 |
| Figure 8. | 0061-8 |
| Figure 9. | 0061-8 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Figure 10. | 0061-9 |
| INSTALLATION/REMOVAL OF FRONT LIFT ADAPTER (FLA)..... | WP 0062 |
| Figure 1. | 0062-2 |
| Figure 2. | 0062-3 |
| Figure 3. | 0062-4 |
| Figure 4. | 0062-5 |
| Figure 5. | 0062-6 |
| Figure 6. | 0062-8 |
| Figure 7. | 0062-9 |
| Figure 8. | 0062-10 |
| Figure 9. | 0062-11 |
| Figure 10. | 0062-12 |
| Figure 11. | 0062-13 |
| SIMPLIFIED CONTAINER HANDLING UNIT (CHU) OPERATION..... | WP 0063 |
| Figure 1. | 0063-2 |
| LOADING/UNLOADING FLATRACK IN AUTO MODE..... | WP 0064 |
| Figure 1. | 0064-2 |
| Figure 2. | 0064-5 |
| Figure 3. | 0064-7 |
| Figure 4. | 0064-10 |
| Figure 5. | 0064-12 |
| Figure 6. | 0064-15 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Figure 7. | 0064-16 |
| LOADING/UNLOADING FLATRACK IN MANUAL MODE..... | WP 0065 |
| Figure 1. | 0065-2 |
| Figure 2. | 0065-4 |
| Figure 3. | 0065-6 |
| Figure 4. | 0065-8 |
| Figure 5. | 0065-11 |
| Figure 6. | 0065-13 |
| Figure 7. | 0065-14 |
| Figure 8. | 0065-15 |
| Figure 9. | 0065-17 |
| Figure 10. | 0065-21 |
| Figure 11. | 0065-22 |
| NORMAL TRANSFER OF FLATRACK FROM VEHICLE TO TRAILER | WP 0066 |
| Figure 1. | 0066-2 |
| Figure 2. | 0066-2 |
| Figure 3. | 0066-4 |
| Figure 4. | 0066-4 |
| Figure 5. | 0066-6 |
| Figure 6. | 0066-8 |
| Figure 7. | 0066-9 |
| Figure 8. | 0066-10 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|--|------------------------|
| | <u>Page No.</u> |
| Figure 9. | 0066-11 |
| Figure 10. | 0066-12 |
| Figure 11. | 0066-13 |
| Figure 12. | 0066-13 |
| NORMAL TRANSFER OF FLATRACK FROM TRAILER TO VEHICLE..... | WP 0067 |
| Figure 1. | 0067-2 |
| Figure 2. | 0067-3 |
| Figure 3. | 0067-5 |
| Figure 4. | 0067-7 |
| Figure 5. | 0067-8 |
| TRANSFER FLATRACK FROM VEHICLE TO TRAILER IN MANUAL MODE..... | WP 0068 |
| Figure 1. | 0068-2 |
| Figure 2. | 0068-3 |
| Figure 3. | 0068-6 |
| Figure 4. | 0068-7 |
| Figure 5. | 0068-9 |
| Figure 6. | 0068-10 |
| Figure 7. | 0068-11 |
| Figure 8. | 0068-12 |
| Figure 9. | 0068-12 |
| Figure 10. | 0068-13 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> | |
|---|------------------------|---------|
| | <u>Page No.</u> | |
| Figure 11. | 0068-15 | |
| TRANSFER FLATRACK FROM TRAILER TO VEHICLE IN MANUAL MODE..... | | WP 0069 |
| Figure 1. | 0069-1 | |
| Figure 2. | 0069-2 | |
| Figure 3. | 0069-4 | |
| Figure 4. | 0069-5 | |
| Figure 5. | 0069-6 | |
| Figure 6. | 0069-7 | |
| Figure 7. | 0069-9 | |
| LOADING/UNLOADING FLATRACK (WITH OR WITHOUT ROLLERS) FROM/TO DOCK AREA OR BAY (NOT EXCEEDING VEHICLE CHASSIS HEIGHT)..... | | WP 0070 |
| Figure 1. | 0070-2 | |
| Figure 2. | 0070-4 | |
| Figure 3. | 0070-6 | |
| Figure 4. | 0070-7 | |
| Figure 5. | 0070-9 | |
| Figure 6. | 0070-11 | |
| OPERATE ARCTIC ENGINE HEATER..... | | WP 0071 |
| Figure 1. | 0071-3 | |
| OPERATE GAS PARTICULATE FILTER UNIT (GPFU)..... | | WP 0072 |
| Figure 1. | 0072-2 | |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|---------------------------------------|-----------------|------------------------|
| Figure 2. | 0072-3 | |
| Figure 3. | 0072-3 | |
| Figure 4. | 0072-4 | |
| Figure 5. | 0072-5 | |
| Figure 6. | 0072-5 | |
| Figure 7. | 0072-6 | |
| Figure 8. | 0072-7 | |
| Figure 9. | 0072-7 | |
| Figure 10. | 0072-8 | |
| Figure 11. | 0072-8 | |
| OPERATE RIFLE STOWAGE MOUNT..... | | WP 0073 |
| Figure 1. | 0073-2 | |
| Figure 2. | 0073-3 | |
| OPERATE MACHINE GUN MOUNT..... | | WP 0074 |
| OPERATE M-8 CHEMICAL ALARM..... | | WP 0075 |
| OPERATE M-13 DECONTAMINATION KIT..... | | WP 0076 |
| OPERATE RADIO..... | | WP 0077 |
| PORTABLE WORK LAMP OPERATION..... | | WP 0078 |
| Figure 1. | 0078-1 | |
| Figure 2. | 0078-2 | |
| Figure 3. | 0078-3 | |
| OPERATE DOME LIGHT..... | | WP 0079 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--------------------------------------|-----------------|------------------------|
| Figure 1. | 0079-1 | |
| OPERATE PANEL LIGHTS..... | | WP 0080 |
| Figure 1. | 0080-2 | |
| OPERATE PARKING LIGHTS..... | | WP 0081 |
| Figure 1. | 0081-2 | |
| OPERATE SERVICE DRIVE LIGHTS..... | | WP 0082 |
| Figure 1. | 0082-1 | |
| Figure 2. | 0082-2 | |
| Figure 3. | 0082-3 | |
| OPERATE STOPLIGHTS..... | | WP 0083 |
| Figure 1. | 0083-2 | |
| OPERATE CLEARANCE LIGHTS..... | | WP 0084 |
| Figure 1. | 0084-1 | |
| OPERATE BLACKOUT DRIVE LIGHT..... | | WP 0085 |
| Figure 1. | 0085-1 | |
| OPERATE BLACKOUT MARKERS..... | | WP 0086 |
| Figure 1. | 0086-2 | |
| PORTABLE BEACON LIGHT OPERATION..... | | WP 0087 |
| Figure 1. | 0087-1 | |
| Figure 2. | 0087-2 | |
| Figure 3. | 0087-3 | |
| Figure 4. | 0087-4 | |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--------------------------------------|-----------------|------------------------|
| Figure 5. | 0087-5 | |
| OPERATE TURN SIGNALS..... | | WP 0088 |
| Figure 1. | 0088-2 | |
| OPERATE EMERGENCY FLASHERS..... | | WP 0089 |
| Figure 1. | 0089-2 | |
| INSTALL/REMOVE WHEEL CHOCKS..... | | WP 0090 |
| Figure 1. | 0090-1 | |
| Figure 2. | 0090-2 | |
| CHANGE VEHICLE WEIGHT INDICATOR..... | | WP 0091 |
| Figure 1. | 0091-1 | |
| ADJUST SEAT..... | | WP 0092 |
| Figure 1. | 0092-1 | |
| Figure 2. | 0092-2 | |
| Figure 3. | 0092-3 | |
| OPERATE THREE-POINT SEATBELT..... | | WP 0093 |
| Figure 1. | 0093-1 | |
| ADJUST AIR-RIDE SEAT..... | | WP 0094 |
| Figure 1. | 0094-2 | |
| OPERATE FOUR-POINT SEATBELT..... | | WP 0095 |
| Figure 1. | 0095-1 | |
| INSTALL/REMOVE TIRE CHAINS..... | | WP 0096 |
| Figure 1. | 0096-2 | |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--|-----------------|------------------------|
| Figure 2. | 0096-2 | |
| Figure 3. | 0096-3 | |
| Figure 4. | 0096-4 | |
| Figure 5. | 0096-5 | |
| Figure 6. | 0096-5 | |
| Figure 7. | 0096-6 | |
| Figure 8. | 0096-6 | |
| FORD WATER OBSTACLE..... | | WP 0097 |
| Figure 1. | 0097-2 | |
| INTERIM NUCLEAR, BIOLOGICAL, AND CHEMICAL (NBC) DECONTAMINATION PROCEDURES..... | | WP 0098 |
| SELF-RECOVER VEHICLE USING SELF-RECOVERY WINCH..... | | WP 0099 |
| Figure 1. | 0099-1 | |
| Figure 2. | 0099-2 | |
| Figure 3. | 0099-3 | |
| Figure 4. | 0099-4 | |
| Figure 5. | 0099-4 | |
| Figure 6. | 0099-5 | |
| Figure 7. | 0099-6 | |
| Figure 8. | 0099-7 | |
| Figure 9. | 0099-8 | |
| Figure 10. | 0099-9 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Table 1. Self-Recovery Winch Pull Capacity..... | 0099-10 |
| Figure 11. | 0099-12 |
| Figure 12. | 0099-14 |
| Figure 13. | 0099-16 |
| Figure 14. | 0099-17 |
| Figure 15. | 0099-18 |
| Figure 16. | 0099-19 |
| Figure 17. | 0099-20 |
| Figure 18. | 0099-21 |
| Figure 19. | 0099-22 |
| Figure 20. | 0099-22 |
| Figure 21. | 0099-23 |
| Figure 22. | 0099-24 |
| Figure 23. | 0099-25 |
| Figure 24. | 0099-25 |
| Figure 25. | 0099-26 |
| Figure 26. | 0099-28 |
| Figure 27. | 0099-29 |
| Table 2. Self-Recovery Winch Pull Capacity..... | 0099-30 |
| Figure 28. | 0099-31 |
| Figure 29. | 0099-32 |
| Figure 30. | 0099-35 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Figure 31. | 0099-35 |
| Figure 32. | 0099-36 |
| Figure 33. | 0099-38 |
| Figure 34. | 0099-38 |
| SNATCH BLOCK INSTALLATION/REMOVAL..... | WP 0100 |
| Figure 1. | 0100-1 |
| Figure 2. | 0100-2 |
| CONNECT/DISCONNECT SELF-RECOVERY WINCH CABLE TO ANOTHER VEHICLE..... | WP 0101 |
| Figure 1. | 0101-1 |
| Figure 2. | 0101-2 |
| Figure 3. | 0101-3 |
| Figure 4. | 0101-4 |
| TOW DISABLED VEHICLE..... | WP 0102 |
| Figure 1. | 0102-2 |
| CONNECT/DISCONNECT TOW BAR..... | WP 0103 |
| Figure 1. | 0103-2 |
| Figure 2. | 0103-3 |
| Figure 3. | 0103-3 |
| Figure 4. | 0103-5 |
| Figure 5. | 0103-7 |
| Figure 6. | 0103-8 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|---|-----------------|------------------------|
| Figure 7. | 0103-9 | |
| Figure 8. | 0103-10 | |
| Figure 9. | 0103-11 | |
| Figure 10. | 0103-12 | |
| Figure 11. | 0103-13 | |
| Figure 12. | 0103-14 | |
| Figure 13. | 0103-15 | |
| Figure 14. | 0103-16 | |
| OPERATE VEHICLE IN EXTREME HEAT..... | | WP 0104 |
| Figure 1. | 0104-2 | |
| OPERATION IN EXTREME DUST..... | | WP 0105 |
| Figure 1. | 0105-1 | |
| Figure 2. | 0105-2 | |
| OPERATE VEHICLE IN SAND OR MUD..... | | WP 0106 |
| Figure 1. | 0106-2 | |
| OPERATE VEHICLE IN DESERT ENVIRONMENT..... | | WP 0107 |
| OPERATE VEHICLE IN COLD ENVIRONMENT (32°F [0°C] to -25°F [-32°C])..... | | WP 0108 |
| Figure 1. | 0108-2 | |
| OPERATION IN EXTREME COLD ENVIRONMENT..... | | WP 0109 |
| Figure 1. | 0109-3 | |
| OPERATE VEHICLE IN FOREST OR ROCKY TERRAIN..... | | WP 0110 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| OPERATE VEHICLE IN SALTWATER AREAS..... | WP 0111 |
| SET UP/SECURE HIGHWAY EMERGENCY MARKER KIT..... | WP 0112 |
| Figure 1. | 0112-1 |
| Figure 2. | 0112-2 |
| Figure 3. | 0112-2 |
| Figure 4. | 0112-2 |
| Figure 5. | 0112-3 |
| Figure 6. | 0112-3 |
| Figure 7. | 0112-4 |
| Figure 8. | 0112-4 |
| Figure 9. | 0112-5 |
| Figure 10. | 0112-5 |
| Figure 11. | 0112-6 |
| MANUALLY RELEASE SPRING BRAKES..... | WP 0113 |
| Figure 1. | 0113-1 |
| Figure 2. | 0113-2 |
| Figure 3. | 0113-3 |
| Figure 4. | 0113-3 |
| LIMP HOME/FLAT TIRE WITH NO SPARE..... | WP 0114 |
| Figure 1. | 0114-2 |
| Figure 2. | 0114-2 |
| Figure 3. | 0114-3 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|--------------------------|------------------------|
| | <u>Page No.</u> |
| Figure 4. | 0114-3 |
| Figure 5. | 0114-4 |
| Figure 6. | 0114-5 |
| Figure 7. | 0114-5 |
| Figure 8. | 0114-6 |
| Figure 9. | 0114-6 |
| Figure 10. | 0114-7 |
| Figure 11. | 0114-8 |
| Figure 12. | 0114-9 |
| Figure 13. | 0114-10 |
| Figure 14. | 0114-10 |
| Figure 15. | 0114-11 |
| Figure 16. | 0114-12 |
| Figure 17. | 0114-13 |
| Figure 18. | 0114-13 |
| Figure 19. | 0114-14 |
| Figure 20. | 0114-14 |
| Figure 21. | 0114-15 |
| SLAVE START VEHICLE..... | WP 0115 |
| Figure 1. | 0115-2 |
| Figure 2. | 0115-3 |
| Figure 3. | 0115-3 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|---|-----------------|------------------------|
| Figure 4. | 0115-4 | |
| Figure 5. | 0115-5 | |
| Figure 6. | 0115-5 | |
| Figure 7. | 0115-7 | |
| Figure 8. | 0115-7 | |
| Figure 9. | 0115-8 | |
| PERFORM IMMEDIATE ACTION FOR LOSS OF AIR SUPPLY SYSTEM PRESSURE..... | | WP 0116 |
| Figure 1. | 0116-1 | |
| PERFORM IMMEDIATE ACTION FOR LOSS OF HYDRAULIC SYSTEM..... | | WP 0117 |
| LOAD HANDLING SYSTEM (LHS) SLAVE HYDRAULIC OPERATION..... | | WP 0118 |
| Figure 1. | 0118-2 | |
| Figure 2. | 0118-2 | |
| Figure 3. | 0118-3 | |
| Figure 4. | 0118-3 | |
| Figure 5. | 0118-4 | |
| Figure 6. | 0118-5 | |
| Figure 7. | 0118-6 | |
| Figure 8. | 0118-7 | |
| Figure 9. | 0118-8 | |
| Figure 10. | 0118-8 | |
| Figure 11. | 0118-9 | |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--|-----------------|------------------------|
| Figure 12. | 0118-9 | |
| Figure 13. | 0118-11 | |
| Figure 14. | 0118-12 | |
| Figure 15. | 0118-13 | |
| Figure 16. | 0118-14 | |
| Figure 17. | 0118-15 | |
| Figure 18. | 0118-15 | |
| Figure 19. | 0118-16 | |
| Figure 20. | 0118-16 | |
| Figure 21. | 0118-17 | |
| LOAD HANDLING SYSTEM (LHS) MANUAL HYDRAULIC OPERATION | | WP 0119 |
| Figure 1. | 0119-2 | |
| Figure 2. | 0119-3 | |
| Figure 3. | 0119-3 | |
| Figure 4. | 0119-4 | |
| Figure 5. | 0119-5 | |
| LOWERING FLATRACK DURING COMPLETE HYDRAULIC FAILURE (HYDRAULIC RELEASE) | | WP 0120 |
| Figure 1. | 0120-2 | |
| Figure 2. | 0120-2 | |
| Figure 3. | 0120-3 | |
| Figure 4. | 0120-4 | |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|---|-----------------|------------------------|
| Figure 5. | 0120-5 | |
| Figure 6. | 0120-5 | |
| MANUAL REMOVAL OF FLATRACK..... | | WP 0121 |
| Figure 1. | 0121-2 | |
| Figure 2. | 0121-3 | |
| MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK..... | | WP 0122 |
| Figure 1. | 0122-2 | |
| Figure 2. | 0122-3 | |
| Figure 3. | 0122-5 | |
| Figure 4. | 0122-6 | |
| Figure 5. | 0122-7 | |
| STOWAGE AND SIGN GUIDE..... | | WP 0123 |
| Table 1. Inside Driver Side Door..... | 0123-1 | |
| Table 2. Front Exterior..... | 0123-3 | |
| Table 3. M1120 LHS Cabin..... | 0123-4 | |
| Table 4. M1120 LHS Driver Side Exterior..... | 0123-5 | |
| Table 5. M1120 LHS Passenger Side Exterior..... | 0123-6 | |
| Table 6. M1120 LHS Rear Exterior..... | 0123-7 | |
| Table 7. Miscellaneous Decals/Placards/Plates/ Stencils..... | 0123-7 | |

Chapter 3 - Troubleshooting Procedures

| | | |
|---|--|---------|
| BUZZER SOUNDS AND AIR INDICATOR IS LIT..... | | WP 0124 |
|---|--|---------|

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--|-----------------|------------------------|
| Figure 1. | 0124-1 | |
| Figure 2. | 0124-2 | |
| Figure 3. | 0124-3 | |
| Figure 4. | 0124-5 | |
| Figure 5. | 0124-6 | |
| Figure 6. | 0124-7 | |
| WINDSHIELD WASHER WILL NOT OPERATE..... | | WP 0125 |
| Figure 1. | 0125-2 | |
| Figure 2. | 0125-4 | |
| Figure 3. | 0125-5 | |
| Figure 4. | 0125-6 | |
| Figure 5. | 0125-7 | |
| Figure 6. | 0125-8 | |
| AIR SYSTEM LOSES PRESSURE DURING OPERATION..... | | WP 0126 |
| Figure 1. | 0126-2 | |
| Figure 2. | 0126-3 | |
| Figure 3. | 0126-4 | |
| Figure 4. | 0126-5 | |
| TRAILER BRAKE DOES NOT APPLY WHEN SERVICE BRAKE TREADLE OR PARKING BRAKE IS USED..... | | WP 0127 |
| Figure 1. | 0127-2 | |
| Figure 2. | 0127-3 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|--|------------------------|
| | <u>Page No.</u> |
| AIR HORN WILL NOT OPERATE..... | WP 0128 |
| Figure 1. | 0128-2 |
| Figure 2. | 0128-3 |
| Figure 3. | 0128-4 |
| ARCTIC ENGINE HEATER FAILS TO OPERATE..... | WP 0129 |
| Figure 1. | 0129-2 |
| Figure 2. | 0129-3 |
| Figure 3. | 0129-5 |
| ONE OR MORE LIGHTING CIRCUITS NOT OPERATING..... | WP 0130 |
| Figure 1. | 0130-1 |
| Figure 2. | 0130-3 |
| FAILS TO CRANK WHEN ENGINE START SWITCH IS TURNED TO START POSITION..... | WP 0131 |
| Figure 1. | 0131-1 |
| Figure 2. | 0131-2 |
| CRANKS BUT FAILS TO START..... | WP 0132 |
| Figure 1. | 0132-2 |
| Figure 2. | 0132-3 |
| Figure 3. | 0132-4 |
| Figure 4. | 0132-5 |
| STARTS OR RUNS ROUGHLY AFTER PROPER WARM-UP, DOES NOT MAKE FULL POWER, OR MAKES EXCESSIVE EXHAUST SMOKE..... | WP 0133 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--|-----------------|------------------------|
| Figure 1. | 0133-2 | |
| Figure 2. | 0133-4 | |
| Figure 3. | 0133-5 | |
| ENGINE OVERHEATS..... | | WP 0134 |
| Figure 1. | 0134-2 | |
| Figure 2. | 0134-4 | |
| LOW OIL PRESSURE GAUGE INDICATION..... | | WP 0135 |
| Figure 1. | 0135-2 | |
| EXCESSIVE OIL CONSUMPTION..... | | WP 0136 |
| Figure 1. | 0136-2 | |
| HYDRAULIC SYSTEM OPERATES TOO SLOW, TOO FAST, WITH JERKY MOVEMENTS; OR ONE OR MORE HYDRAULICS CIRCUITS WILL NOT OPERATE..... | | WP 0137 |
| Figure 1. | 0137-2 | |
| Figure 2. | 0137-3 | |
| LOAD HANDLING SYSTEM WILL NOT OPERATE..... | | WP 0138 |
| Figure 1. | 0138-2 | |
| Figure 2. | 0138-3 | |
| Figure 3. | 0138-4 | |
| Figure 4. | 0138-4 | |
| Figure 5. | 0138-5 | |
| Figure 6. | 0138-6 | |
| Figure 7. | 0138-7 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|--|------------------------|
| | <u>Page No.</u> |
| LHS MAIN FRAME CYLINDERS MOVE SLOWLY DURING UNLOAD OPERATION..... | WP 0139 |
| Figure 1. | 0139-1 |
| Figure 2. | 0139-2 |
| Figure 3. | 0139-2 |
| LHS MOVES SLOWLY IN ALL MODES..... | WP 0140 |
| Figure 1. | 0140-1 |
| FLATRACK DISENGAGES FROM LHS HOOK WHILE ATTEMPTING TO UNLOAD..... | WP 0141 |
| Figure 1. | 0141-1 |
| FRONT LIFT ADAPTER LOWER CONTAINER LOCKS WILL NOT ENGAGE INTO CONTAINER LOWER CASTING..... | WP 0142 |
| Figure 1. | 0142-2 |
| Figure 2. | 0142-3 |
| Figure 3. | 0142-4 |
| Figure 4. | 0142-5 |
| ONE OR BOTH REAR CONTAINER LOCKS CANNOT BE PINNED OR APPEAR TO BE EXTREMELY LOOSE..... | WP 0143 |
| Figure 1. | 0143-1 |
| Figure 2. | 0143-2 |
| Figure 3. | 0143-3 |
| ONE OF BOTH REAR CONTAINER LOCKS CANNOT BE FREED FROM CONTAINER..... | WP 0144 |
| Figure 1. | 0144-1 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--|-----------------|------------------------|
| Figure 2. | 0144-2 | |
| Figure 3. | 0144-3 | |
| CONTAINER JERKS WHILE IN CONTACT WITH SLIDERS DURING LOADING OR UNLOADING SEQUENCE..... | | WP 0145 |
| Figure 1. | 0145-1 | |
| Figure 2. | 0145-2 | |
| SELF-RECOVERY WINCH DOES NOT WORK..... | | WP 0146 |
| Figure 1. | 0146-2 | |
| Figure 2. | 0146-3 | |
| UNUSUALLY NOISY WHEN OPERATING..... | | WP 0147 |
| Figure 1. | 0147-1 | |
| Figure 2. | 0147-2 | |
| VEHICLE IS HARD TO STEER, SHIMMIES, WANDERS, OR PULLS TO ONE SIDE..... | | WP 0148 |
| Figure 1. | 0148-2 | |
| Figure 2. | 0148-3 | |
| VEHICLE STEERING SLOW TO RESPOND OR INTERMITTENT..... | | WP 0149 |
| Figure 1. | 0149-2 | |
| Figure 2. | 0149-4 | |
| UNUSUALLY NOISY WHEN OPERATING..... | | WP 0150 |
| Figure 1. | 0150-1 | |
| SLOW OR DIFFICULT ENGAGEMENT..... | | WP 0151 |
| Figure 1. | 0151-1 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|--|------------------------|
| | <u>Page No.</u> |
| TRANSFER CASE SHIFT LEVER WILL NOT SHIFT..... | WP 0152 |
| Figure 1. | 0152-2 |
| Figure 2. | 0152-3 |
| Figure 3. | 0152-4 |
| Figure 4. | 0152-5 |
| TRANS TEMP GAUGE INDICATES OVERHEATING DURING NORMAL OPERATION..... | WP 0153 |
| Figure 1. | 0153-2 |
| Figure 2. | 0153-3 |
| WHEEL WOBBLER..... | WP 0154 |
| Figure 1. | 0154-2 |
| Figure 2. | 0154-3 |
| TIRES WORN UNEVENLY OR EXCESSIVELY..... | WP 0155 |
| Figure 1. | 0155-2 |
| Chapter 4 - Preventive Maintenance Checks and Services (PMCS) | |
| INTRODUCTION - PREVENTIVE MAINTENANCE | WP 0156 |
| Figure 1. | 0156-3 |
| BEFORE - PREVENTIVE MAINTENANCE..... | WP 0157 |
| Table 1. PMCS - BEFORE..... | 0157-1 |
| Figure 1. | 0157-5 |
| Figure 2. | 0157-7 |
| Figure 3. | 0157-9 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--------------------------------------|-----------------|------------------------|
| Figure 4. | 0157-13 | |
| Figure 5. | 0157-16 | |
| Figure 6. | 0157-19 | |
| Figure 7. | 0157-21 | |
| Figure 8. | 0157-22 | |
| Figure 9. | 0157-24 | |
| Figure 10. | 0157-27 | |
| Figure 11. | 0157-30 | |
| Figure 12. | 0157-32 | |
| Figure 13. | 0157-34 | |
| Figure 14. | 0157-35 | |
| Figure 15. | 0157-38 | |
| Figure 16. | 0157-39 | |
| DURING - PREVENTIVE MAINTENANCE..... | | WP 0158 |
| Table 1. PMCS - DURING..... | 0158-1 | |
| Figure 1. | 0158-2 | |
| AFTER - PREVENTIVE MAINTENANCE | | WP 0159 |
| Table 1. PMCS - AFTER..... | 0159-1 | |
| Figure 1. | 0159-5 | |
| Figure 2. | 0159-8 | |
| Figure 3. | 0159-10 | |
| Figure 4. | 0159-12 | |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--------------------------------------|-----------------|------------------------|
| Figure 5. | 0159-13 | |
| Figure 6. | 0159-14 | |
| Figure 7. | 0159-15 | |
| Figure 8. | 0159-17 | |
| Figure 9. | 0159-18 | |
| Figure 10. | 0159-20 | |
| Figure 11. | 0159-21 | |
| Figure 12. | 0159-23 | |
| Figure 13. | 0159-24 | |
| Figure 14. | 0159-25 | |
| Figure 15. | 0159-26 | |
| Figure 16. | 0159-27 | |
| Figure 17. | 0159-28 | |
| Figure 18. | 0159-28 | |
| Figure 19. | 0159-29 | |
| Figure 20. | 0159-30 | |
| Figure 21. | 0159-32 | |
| WEEKLY - PREVENTIVE MAINTENANCE..... | | WP 0160 |
| Table 1. PMCS - WEEKLY..... | 0160-1 | |
| Figure 1. | 0160-4 | |
| Figure 2. | 0160-6 | |
| Figure 3. | 0160-7 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|--|------------------------|
| | <u>Page No.</u> |
| Figure 4. | 0160-9 |
| Figure 5. | 0160-10 |
| Figure 6. | 0160-12 |
| Figure 7. | 0160-13 |
| Figure 8. | 0160-14 |
| Figure 9. | 0160-16 |
| Figure 10. | 0160-17 |
| Figure 11. | 0160-19 |
| Figure 12. | 0160-21 |
| Figure 13. | 0160-22 |
| Figure 14. | 0160-23 |
| Figure 15. | 0160-25 |
| Figure 16. | 0160-26 |
| Figure 17. | 0160-27 |
| Figure 18. | 0160-28 |
| Figure 19. | 0160-30 |
| SEMIANNUAL - PREVENTIVE MAINTENANCE..... | WP 0161 |
| Table 1. PMCS- SEMIANNUAL..... | 0161-1 |
| Figure 1. | 0161-3 |
| Figure 2. | 0161-6 |
| Figure 3. | 0161-8 |
| Figure 4. | 0161-10 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> <u>Page No.</u> |
|-----------------|---|
| Figure 5. | 0161-11 |
| Figure 6. | 0161-13 |
| Figure 7. | 0161-14 |
| Figure 8. | 0161-15 |
| Figure 9. | 0161-16 |
| Figure 10. | 0161-17 |
| Figure 11. | 0161-18 |
| Figure 12. | 0161-19 |
| Figure 13. | 0161-20 |
| Figure 14. | 0161-21 |
| Figure 15. | 0161-22 |
| Figure 16. | 0161-23 |
| Figure 17. | 0161-24 |
| Figure 18. | 0161-25 |
| Figure 19. | 0161-26 |
| Figure 20. | 0161-27 |
| Figure 21. | 0161-28 |
| Figure 22. | 0161-29 |
| Figure 23. | 0161-30 |
| Figure 24. | 0161-31 |
| Figure 25. | 0161-32 |
| Figure 26. | 0161-32 |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|--|------------------------|
| | <u>Page No.</u> |
| Figure 27. | 0161-33 |
| Figure 28. | 0161-34 |
| Figure 29. | 0161-35 |
| Figure 30. | 0161-36 |
| Figure 31. | 0161-37 |
| Figure 32. | 0161-38 |
| MONTHLY - PREVENTIVE MAINTENANCE..... | WP 0162 |
| Table 1. PMCS - MONTHLY..... | 0162-1 |
| Figure 1. | 0162-4 |
| Figure 2. | 0162-5 |
| Figure 3. | 0162-6 |
| Figure 4. | 0162-7 |
| Figure 5. | 0162-8 |
| Figure 6. | 0162-10 |
| Figure 7. | 0162-12 |
| Figure 8. | 0162-13 |
| Chapter 5 - Maintenance Instructions | |
| LUBRICATION INSTRUCTIONS..... | WP 0163 |
| Table 1. Engine Lubrication..... | 0163-2 |
| Table 2. Transmission and Transfer Case Lubrication..... | 0163-3 |
| Table 3. Axle Lubrication..... | 0163-4 |
| Table 4. Hydraulic Reservoir Servicing..... | 0163-6 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|--|-----------------|------------------------|
| Table 5. Radiator Servicing..... | 0163-7 | |
| Table 6. Self-Recovery Winch Lubrication..... | 0163-9 | |
| Table 7. Oil Can Point Lubrication..... | 0163-10 | |
| Table 8. Miscellaneous Lubrication Points..... | 0163-11 | |
| Table 9. Vehicle Cleaning..... | 0163-12 | |
| CLOSE/OPEN HEATER VALVES..... | | WP 0164 |
| Figure 1. | 0164-2 | |
| Figure 2. | 0164-3 | |
| PRE/POST TOWING PROCEDURE (FRONT LIFT ONLY)..... | | WP 0165 |
| Figure 1. | 0165-2 | |
| Figure 2. | 0165-3 | |
| Figure 3. | 0165-4 | |
| Figure 4. | 0165-5 | |
| CLEAN VEHICLE..... | | WP 0166 |
| Figure 1. | 0166-1 | |
| Figure 2. | 0166-2 | |
| CHANGE WHEEL AND TIRE ASSEMBLY..... | | WP 0167 |
| Figure 1. | 0167-2 | |
| Figure 2. | 0167-3 | |
| Figure 3. | 0167-4 | |
| Figure 4. | 0167-4 | |
| Figure 5. | 0167-5 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|----------------------------------|------------------------|
| | <u>Page No.</u> |
| Figure 6. | 0167-5 |
| Figure 7. | 0167-6 |
| Figure 8. | 0167-7 |
| Figure 9. | 0167-8 |
| Figure 10. | 0167-8 |
| Figure 11. | 0167-9 |
| Figure 12. | 0167-10 |
| Figure 13. | 0167-11 |
| Figure 14. | 0167-12 |
| Figure 15. | 0167-13 |
| Figure 16. | 0167-13 |
| Figure 17. | 0167-14 |
| Figure 18. | 0167-15 |
| Figure 19. | 0167-16 |
| Figure 20. | 0167-17 |
| Figure 21. | 0167-18 |
| Figure 22. | 0167-19 |
| CLEAN FUEL TANK STRAINER..... | WP 0168 |
| Figure 1. | 0168-1 |
| Figure 2. | 0168-2 |
| SERVICE AIR CLEANER ELEMENT..... | WP 0169 |
| Figure 1. | 0169-1 |

TABLE OF CONTENTS - Continued

| | <u>Page No.</u> | <u>WP Sequence No.</u> |
|---|-----------------|------------------------|
| Figure 2. | 0169-2 | |
| Figure 3. | 0169-3 | |
| Figure 4. | 0169-4 | |
| Figure 5. | 0169-5 | |
| Figure 6. | 0169-5 | |
| Figure 7. | 0169-6 | |
| SERVICE TIRES..... | | WP 0170 |
| Figure 1. | 0170-2 | |
| Figure 2. | 0170-3 | |
| Figure 3. | 0170-4 | |
| Figure 4. | 0170-5 | |
| Figure 5. | 0170-7 | |
| OPEN/CLOSE BATTERY BOX..... | | WP 0171 |
| Figure 1. | 0171-3 | |
| Figure 2. | 0171-5 | |
| OPEN/CLOSE ENGINE COVERS AND ENGINE SIDE PANEL REMOVAL/INSTALLATION..... | | WP 0172 |
| Figure 1. | 0172-1 | |
| Figure 2. | 0172-2 | |
| Figure 3. | 0172-3 | |
| Figure 4. | 0172-3 | |

TABLE OF CONTENTS - Continued

| | <u>WP Sequence No.</u> |
|---|------------------------|
| | <u>Page No.</u> |
| Chapter 6 - Supporting Information | |
| REFERENCES..... | WP 0173 |
| COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS..... | WP 0174 |
| Table 1. List of Usable On Codes..... | 0174-2 |
| Table 2. Components of End Item..... | 0174-2 |
| Table 3. Basic Issue Items..... | 0174-2 |
| ADDITIONAL AUTHORIZATION LIST (AAL)..... | WP 0175 |
| Table 1. List of Usable On Codes..... | 0175-1 |
| Table 2. Additional Authorization List..... | 0175-2 |
| EXPENDABLE AND DURABLE ITEMS LIST..... | WP 0176 |
| Table 1. Expendable and Durable Items List..... | 0176-1 |

HOW TO USE THIS MANUAL

USABLE ON CODE (UOC) INFORMATION

Usable On Code (UOC) - the user should be aware that the BASE model M1120 LHS HEMTT series vehicle (with or without self-recovery winch installed) UOC is "LHS". Dependent on the format used for printing this manual, the user may or may not see instructions printed in this manual stating what information is applicable to which model HEMTT series vehicle by UOC.

WARNINGS, CAUTIONS, AND NOTES

Read all WARNINGS, CAUTIONS, AND NOTES before performing any procedure.

Warnings, cautions, notes, subject headings, and other essential information are printed in **BOLD** type, making them easier for the user to see.

GENERAL INFORMATION

This manual is designed to help operate and maintain the Heavy Expanded Mobility Tactical Truck (HEMTT). Listed below are some features included in this manual to help locate and use the required information:

- Chapter 1 of this manual includes HEMTT series vehicle general information, theory of operation, differences between models, etc.
- Chapter 2 of this manual provides operating procedures and operator Preventive Maintenance Checks and Services (PMCS) for both the HEMTT series vehicle, and its accompanying operating systems.
- Chapter 3 of this manual provides operator troubleshooting procedures for both the HEMTT series vehicle, and its accompanying operating systems.

In addition to text, there are illustrations showing:

1. Components, controls, and indicators.
2. How to take a component off, and put it back on.
3. Cleaning and inspection criteria are also listed when necessary.

CHAPTER 1

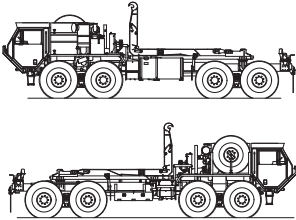
GENERAL
INFORMATION,
EQUIPMENT
DESCRIPTION AND
THEORY OF
OPERATION

OPERATOR MAINTENANCE INTRODUCTION

SCOPE

This manual is used for operation and operator-performed maintenance of HEMTT series vehicles which consist of a number of different models all built on similar chassis, but specially equipped to perform different missions.

Table 1. Overview.

| M1120 LHS CARGO | DESCRIPTION |
|---|--|
|  <p style="text-align: center;"><i>Figure 1.</i></p> | <p>Tactical wheeled vehicle with 66,000 lbs (29 937 kg) GVWR and 100,000 lbs (45 400 kg) equipped with a Load Handling System (LHS) capable of self-loading and unloading.</p> |

MAINTENANCE FORMS AND RECORDS

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 750-8 The Army Maintenance Management System (TAMMS) Users Manual. (WP 0173)

EQUIPMENT IMPROVEMENT REPORT AND MAINTENANCE DIGEST (EIR MD) AND QUALITY DEFICIENCY REPORTING (QDR).

The quarterly TB 43-0001-62 (series) Equipment Improvement Report and Maintenance Digest (WP 0173) contains valuable field information on equipment covered in this manual. Information in the TB 43-0001-62 (series) Equipment Improvement Report and Maintenance Digest (WP 0173) is compiled from some of the Equipment Improvement Reports (EIR) that have been prepared on vehicles covered in this manual. Many of these articles result from comments, suggestions, and improvement recommendations that were submitted to the EIR program. TB 43-0001-62 (series) Equipment Improvement Report and Maintenance Digest (WP 0173) contains information on equipment improvements, minor alterations, proposed Modification Work Orders (MWOs), warranties (if applicable), actions

EQUIPMENT IMPROVEMENT REPORT AND MAINTENANCE DIGEST (EIR MD) AND QUALITY DEFICIENCY REPORTING (QDR). - Continued

taken on some of the DA Form 2028's (WP 0173) (Recommended Changes to Publications), and advance information on proposed changes that may affect this manual. Refer to the TB 43-0001-62 (series) Equipment Improvement Report and Maintenance Digest (WP 0173) periodically for the most current and authoritative information on the equipment. The information will help to do a better job and will advise of the latest changes to this manual. Also refer to DA PAM 25-30, (WP 0173) Consolidated Index of Army Publications and Blank Forms at <http://www.army.mil/usapa/2530.html>, and reference section (WP 0173) of this manual. If you have a change recommendation to this manual, submit a DA Form 2028's (WP 0173) (Recommended Changes to Publications) via e-mail to: ROCK-TACOM-TECH-PUBS@conus.army.mil.

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (WP 0173) (Recommended Changes to Equipment Technical Publications) through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <https://aeps.ria.army.mil>. The DA Form 2028 (WP 0173) is located under the Public Applications section in the AEPS Public Home Page. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or e-mail your letter or DA Form 2028 (WP 0173) direct to: TACOM Life Cycle Management Command, ATTN: AMSTA-LC-LMPP / TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The e-mail address is ROCK-TACOM-TECH-PUBS@conus.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

HAND RECEIPT (HR) INFORMATION

The is a companion document to this manual which consists of preprinted hand receipts (DA Form 2062) (WP 0173) that list end item related equipment (COEI, BII, (WP 0174) and AAL (WP 0175)) which must be accounted for. As an aid to property accountability, additional Hand Receipt (-HR) Manuals may be requisitioned from the following source in accordance with procedures in DA PAM 25-30, (WP 0173) Consolidated Index of Army Publications and Blank Forms; Commander US Army Distribution Operation Facility, 1655 Woodson Road, St Louis, MO 63114-6181.

CORROSION PREVENTION AND CONTROL

Corrosion prevention and control (CPC) of Army material is a continuing concern. It is important that any corrosion problems be reported so they can be corrected and improvements can be made to prevent problems in the future. While corrosion is typically associated with the rusting of metals, it can also include deterioration of other materials, such as rubber and plastic. Unusual cracking, softening, swelling, or breaking of these materials may be a corrosion problem.

CORROSION PREVENTION AND CONTROL - Continued

If a corrosion problem is identified, it can be reported using SF 368 (WP 0173). The use of key words, such as "corrosion", "rust", "deterioration", and "cracking" will ensure that the information is identified as a CPC problem.

DESTRUCTION OF ARMY MATERIAL TO PREVENT ENEMY USE

Procedures for the destruction of Army materiel to prevent enemy use are contained in TM 750-244-6 (WP 0173).

PREPARATION FOR STORAGE OR SHIPMENT

See information on preparing the HEMTT series vehicle for storage or shipment.

WARRANTY INFORMATION

The HEMTT series vehicles are warranted by Oshkosh Truck Corporation for 12 months or 12,000 miles (19 308 km), whichever comes first. The warranty starts on the date found in block 23 of DA Form 2408-9 (WP 0173) in the vehicle logbook. Report all defects in material or workmanship to the supervisor, who will take appropriate action through the field level maintenance shop.

NOMENCLATURE CROSS-REFERENCE LIST

Table 2. Common Nomenclature.

| COMMON NAME | OFFICIAL NOMENCLATURE |
|---------------------------|-------------------------------------|
| Brake Pedal | Service Brake Pedal |
| Cable/Hoist Cable | Wire Rope |
| Cold Start System | Ether Quick-Start System |
| Electrical Control Box | Junction Box |
| Engine Coolant | Antifreeze, Ethylene Glycol Mixture |
| Glad Hand | Quick Disconnect Coupling |
| High Idle Switch | Engine Speed Control Switch |
| Jake Brake, Jacobs® Brake | Engine Retarder, Engine Brake |

NOMENCLATURE CROSS-REFERENCE LIST - Continued**Table 2. Common Nomenclature. - Continued**

| COMMON NAME | OFFICIAL NOMENCLATURE |
|--------------------|------------------------------|
| Manual Controls | Directional Control Valves |
| O-Ring | Preformed Packing |
| Snap Ring | Retaining Ring |

LIST OF ABBREVIATIONS**Table 3. Common Abbreviations.**

| ABBREVIATION | OFFICIAL NOMENCLATURE |
|---------------------|---------------------------------------|
| AAL | Additional Authorization List |
| AMDF | Army Master Data File |
| amp | Ampere |
| BAP | Bridge Adapter Pallet |
| bar | Barometric Pressure |
| BII | Basic Issue Items |
| BL | Bottom Load |
| BOI | Basis of Issue |
| C | Celsius |
| CAGEC | Commercial And Government Entity/Code |
| CARC | Chemical Agent Resistant Coating |
| CBR | Chemical, Biological, Radiological |
| CBT | Common Bridge Transporter |

LIST OF ABBREVIATIONS - Continued

Table 3. Common Abbreviations. - Continued

| ABBREVIATION | OFFICIAL NOMENCLATURE |
|---------------------|---------------------------------------|
| CCA | Cold Cranking Amperes |
| CHU | Container Handling Unit |
| CID | Cubic Inch Displacement |
| CKT | Circuit |
| cm | Centimeter |
| COEI | Components of End Item |
| CPC | Corrosion Prevention Control |
| CROP | Container Roll-In/Out Platform |
| CTA | Common Table of Allowance |
| DA | Department of the Army |
| dia. | Diameter |
| DS | Direct Support |
| EIR | Equipment Improvement Recommendations |
| F | Fahrenheit |
| FHTV | Family of Heavy Tactical Vehicles |
| FLA | Front Lift Adapter |
| fl. oz. | Fluid Ounce |
| FR | Flatrack |
| FRS | Forward Repair System |
| ft. | Foot |

LIST OF ABBREVIATIONS - Continued

Table 3. Common Abbreviations. - Continued

| ABBREVIATION | OFFICIAL NOMENCLATURE |
|---------------------|--|
| GAA | Grease, Automotive, and Artillery |
| gal | Gallon |
| GCWR | Gross Combination Weight Rating |
| GMT | Guided Missile Transport |
| GPFU | Gas Particulate Filter Unit |
| gpm | Gallons Per Minute |
| GS | General Support |
| GVWR | Gross Vehicle Weight Rating |
| HDI | Hexamethylene Diisocyanate |
| HEMTT | Heavy Expanded Mobility Tactical Truck |
| hp | Horsepower |
| HVAC | Heating, Ventilation, and Air Conditioning |
| IBC | Improved Boat Cradle |
| I.D. | Inside Diameter |
| in. | Inch |
| ISO | International Standards Organization |
| JTA | Joint Table of Allowances |
| kg | Kilogram |
| km | Kilometer |
| Kmh or km/h | Kilometer per Hour |

LIST OF ABBREVIATIONS - Continued

Table 3. Common Abbreviations. - Continued

| ABBREVIATION | OFFICIAL NOMENCLATURE |
|---------------------|---|
| kPa | Kilopascals |
| kw | Kilowatt |
| L | Liter |
| lbs | Pound |
| lb-ft | Pound-Foot |
| lb-in | Pound-Inch |
| LCD | Liquid Crystal Display |
| LED | Light Emitting Diode |
| LH | Left-Hand |
| LHS | Load Handling System |
| M | Meter |
| MAC | Maintenance Allocation Chart |
| mi | Mile |
| ml | Milliliter |
| MLC | Military Load Class |
| mm | Millimeter |
| Mph | Miles Per Hour |
| MTOE | Modified Tables of Organization and Equipment |
| NBC | Nuclear, Biological, Chemical |
| NIIN | National Item Identification Number |

LIST OF ABBREVIATIONS - Continued

Table 3. Common Abbreviations. - Continued

| ABBREVIATION | OFFICIAL NOMENCLATURE |
|---------------------|--|
| Nm | Newton Meter |
| NOC | Not Usable-On Code |
| NSN | National Stock Number |
| O.D. | Outside Diameter |
| OEA | Oil, Engine, Arctic |
| OE/HDO | Oil, Engine/Hydraulic Oil |
| O/R | Outrigger |
| OTC | Oshkosh Truck Corporation |
| Oz | Ounce |
| PLS | Palletized Load System |
| PMCS | Preventive Maintenance Checks and Services |
| psi | Pounds per Square Inch |
| pt. | Pint |
| PTO | Power Take-Off |
| qt. | Quart |
| Qty. Recm. | Quantity Recommended |
| Qty. Rqr. | Quantity Required |
| RCU | Remote Control Unit |
| RFI | Radio-Frequency Interference |
| RH | Right-Hand |

LIST OF ABBREVIATIONS - Continued**Table 3. Common Abbreviations. - Continued**

| ABBREVIATION | OFFICIAL NOMENCLATURE |
|---------------------|---|
| rpm | Revolutions Per Minute |
| RPSTL | Repair Parts and Special Tools List |
| SAE | Society of Automotive Engineers |
| SMR | Source, Maintenance, and Recoverability |
| SRA | Specialized Repair Activity |
| SRW | Self-Recovery Winch |
| TAMMS | The Army Maintenance Management System |
| TDA | Tables of Distribution and Allowance |
| TM | Technical Manual |
| TMDE | Test, Measuring, and Diagnostic Equipment |
| TOE | Tables of Organization and Equipment |
| u/m | Unit of Measure |
| UOC | Usable-On Code |
| Vdc | Volts Direct Current |
| XHD | Extra Heavy-Duty |

SAFETY, CARE, AND HANDLING

Significant hazards and safety recommendations are listed in the table below.

SAFETY, CARE, AND HANDLING - Continued**Table 4. Significant Hazard And Safety Recommendations.**

| HAZARD | SAFETY RECOMMENDATION OR PRECAUTION | OPERATING CONDITION |
|--|--|----------------------------|
| Low air pressure for brakes. | Do not drive vehicle while low air pressure warning buzzer is sounding or red light is on. | Abnormal |
| Connecting towing devices. | Do not go between vehicles until vehicles are stopped and brakes are set. | Normal |
| Refueling vehicle. | Shut off engine and no smoking when filling tank. | Normal |
| <p>NOTE</p> <p>Category of hazards as to whether or not they may be expected under normal or abnormal operating conditions.</p> | | |

METRIC SYSTEM

The equipment described herein contains metric components and requires metric, common, and special tools. Therefore, metric units and English units will be used throughout this publication. An English-to-metric conversion table is included as the last page of this manual inside the back cover.

END OF WORK PACKAGE

OPERATOR MAINTENANCE WARRANTY PROGRAM

General

This work package provides implementation instructions for the warranty on the HEMTT. It contains instructions for obtaining services and/or supplies covered under warranty. This work package also describes methods of processing warranty claims. For additional warranty information on the HEMTT or any U.S. Army Tank-Automotive and Armaments Command (TACOM) equipment, contact your local Warranty Control Office/Officer (WARCO) or TACOM Logistics Assistance Representative (LAR). If your WARCO or TACOM LAR is not available, or if additional information is required, contact TACOM.

Explanation of Terms

Abuse

The improper use, maintenance, repair or handling of warranted items that may cause the warranty of those items to become void (for example, not following service intervals, using the vehicle for other than what is intended).

Acceptance

The execution of the acceptance block and signing of DD Form 250 (WP 0173), by the authorized Government representative, unless end items are placed in storage in which case acceptance shall mean date of shipment from storage facility as reflected on DD Form 1149 (WP 0173) or DD Form 1348-1. (WP 0173)

Acceptance Date

The date an item of equipment is accepted into the Army's inventory by the execution of the acceptance block and signing of a DD Form 250 (WP 0173) or approved acceptance document, by an authorized representative of the Government.

Contractor

The supplier of equipment who enters into an agreement directly with the Government to furnish supplies.

Correction

The elimination of a defect.

Explanation of Terms - Continued

Defect

Any condition or characteristic in any supplies furnished by the contractor that does not otherwise function, or threatens not to function, as intended.

Failure

A part, component, or end item that fails to perform its intended use.

Manufacturer's Recall

Safety Recall An item is recalled to repair or replace a defective part or assembly which may affect safety.

Service Recall An item is recalled to repair or replace a defective part(s) or assembly which does not affect the safe use of this item.

Owning Unit

The Army Unit authorized to operate, maintain, and use the equipment.

Reimbursement

A written provision in this warranty in which the Using/Support Unit may make the necessary repairs, with or without prior approval from the contractor, and the Government will be reimbursed for the repair parts and labor costs.

Repair

A maintenance action required to restore an item to serviceable condition without affecting the warranty.

Supplies

The end item and all assemblies/parts furnished by the contractor.

Supporting Repair Facility

The repair activity authorized to accomplish warrantable repairs at the appropriate level of maintenance identified in the Maintenance Allocation Chart.

WARCO

Serves as the intermediary between the troops owning the equipment and the local dealer, contractor, or manufacturer. All warranty claim actions will be processed through the WARCO.

Explanation of Terms - Continued

Warranty

A written agreement between a contractor and the Government which outlines the rights and obligations of both parties for defective supplies.

Warranty Claim

Action started by the equipment user for authorized warranty repair reimbursement.

Warranty Expiration Date

The date the warranty is no longer valid. This date will be 13 months from the contractor shipment date. This warranty period covers the basic 12 months plus on additional month for shipping time.

Warranty Period

Time during which the warranty is in effect; normally measured as the maximum number of years, months, days, miles, or hours used.

Warranty Start Date

The day shipment is put into effect (Contractor Shipment Date).

Coverage-Specific

This work package applies to:

Table 1. Vehicle Information

| Noun | Model | NSN | Cage |
|-------------|----------------------------------|------------------|-------|
| Truck (LHS) | M1120 (with or without winch) | 2320-01-471-1326 | 45152 |

NOTE

The item is manufactured by Oshkosh Truck Corporation (OTC), under contract #W56HZV-07-C-0248. Inquiries to OTC can be made by calling (920) 235-9151.

The contractor warrants the supplies are free from defects in design, material, and workmanship for a period of thirteen (13) months from warranty start date.

Coverage-Specific - Continued

If a Safety recall defect occurs during the vehicle warranty period, the contractor agrees to extend the terms of the warranty to the time required to make necessary safety defect corrections. Also, if the contractor or his supplier(s) provide a greater warranty for the supplies furnished, the contractor will provide the greater warranty to the Government.

If a defect/failure is caused by or falls within any of the following categories, it is not considered warrantable and a claim should not be initiated:

1. Misuse or negligence
2. Accidents
3. Improper operation
4. Improper storage
5. Improper transport
6. Improper or insufficient maintenance
7. Improper alterations or repairs
8. Defect/failure discovered or occurring after warranty expiration date.
9. Fair wear and tear items (brake shoes, pads, armatures, brushes, etc.).

In addition to the 13 month warranty, the vehicles will be warranted for a total service life of 10 years including extended periods in a corrosion hazard military environment. During this 10 year service life, there will be no damage caused by corrosion requiring repair or replacement of parts. No actions beyond normal washing or replacement of accident-damaged paint shall be necessary to maintain the corrosive protection in place.

This 13 month warranty is extended up to nine (9) months from date of acceptance if the vehicle is put into government storage before use. In this case, the warranty starts when the vehicle is either taken out of storage or until nine (9) months from the warranty start date shown on the warranty data plate, whichever occurs first. Refer to preparation for storage.

Contractor Responsibilities

When the owning unit has directed the contractor to correct the supplies, the contractor will furnish all material required to correct the defective supplies. Repairs and parts shall be initiated/provided within ten (10) working days after receipt of written claim notification. Furthermore, the contractor will provide a copy of the work order to owning unit upon completion of repair.

When the contractor receives written notification requiring contractor repair, they will have the option:

1. Correct the supplies in the field.
2. Return the vehicle or parts to the contractor's designated facility for correction.

When the contractor corrects the supplies, all labor involved shall be borne by the contractor. Additionally, the contractor shall arrange and bear all transportation costs of the supplies to its facility and return to user.

Contractor Responsibilities - Continued

The contractor, within five (5) working days of receiving such notice, shall notify the warranty claimant by telephone as to the method of correction, date(s) work is to be performed and by whom.

Government Responsibilities

The Major Subordinate Command for the HEMTT is the U.S. Army Tank-Automotive and Armaments Command (TACOM), Warren, MI 48397-5000. TACOM is responsible for managing and implementing the warranty.

TACOM will:

Insure the contractor performs in accordance to the terms of the contract.

Equipment owning unit will:

1. Identify defects/failures and verify the defects/failures are warrantable.
2. Submit warranty claims, using DA Form 2407 (WP 0173) or DA Form 2407-1 (WP 0173) to your local Warranty Coordinator.
3. Tag and retain (IAW DA PAM 750-8 and this work package) (WP 0173) parts, pieces of parts and/or assemblies removed at the owning unit level and as a result of a warrantable defect/failure and/or correction.

Supporting repair facility will:

1. Identify defects/failures as warrantable (if owning unit has not already identified them). Verify defects/failures are warrantable.
2. Review, process, and submit valid warranty claims to the local WARCO if the DA Form 2407 (WP 0173) is complete and correctly filled out.
3. Reject invalid warranty claims or request additional information for incomplete and incorrect claims.
4. Coordinate with the owning unit and decide which option for repair is desired to correct the warrantable defect/failure.
5. Depending on which repair option was chosen (Government or contract repair) provide labor/parts required to accomplish the warrantable repairs.
6. Tag and retain (IAW DA PAM 750-8 and this work package) (WP 0173) all parts, pieces, or parts and/or assemblies removed as a result of warrantable defect/failure and/or correction.

Local WARCO will:

1. Verify, review, process, and if valid and complete, submit claims (reimbursable and/or disputes) to the contractor.
2. Reject claims that are not valid, and send them back to the local Unit with a short explanation of why the claim is rejected.
3. Request additional information for incomplete claims.

Government Responsibilities - Continued

4. Provide warranty claim acknowledgment closeout and/or parts/assemblies disposition instructions to the local Unit.
5. Insure the contractor performs in accordance to the terms of the contract.
6. Verify, administer and process warranty claims.
7. Act as a liaison between owning unit, the contractor, supporting repair facility and TACOM.
8. Notify the owning units of all warranty claim acknowledgments/close-outs, information and/or instructions received from TACOM or the contractor.
9. Act as a liaison between local dealers and the Army.
10. Enter all open and closed WCAs into the Army Electronics Product Support (AEPS), Electronic Deficiency Reporting System.
11. The information/data provided on the DA Form 2407 (WP 0173) are placed into the AEPS Deficiency Reporting System (DRS) at the installation WARCO office to facilitate MSC management and tracking of warranties.

Alterations/Modifications

Alterations/modifications shall not be applied unless authorized by TACOM.

Warranty Data Plate

All vehicles will have a warranty data plate. The contractor is required to mount his data plate within clear view of the operator.

When the vehicle is received, the owning unit should locate the warranty data plate and check the warranty start date with date shown on the applicable DD Form 250 (WP 0173) or DD Form 1149. (WP 0173) If these dates differ, disregard the data plate. The date shown on the DD Form 250 (WP 0173) or DD Form 1149. (WP 0173) is the date to be used as a warranty start date.

Claim Procedures

The procedures for reporting warranty claims are found in DA PAM 750-8 (WP 0173) and this work package. Responsibilities of the MACOM are found in AR 700-139. (WP 0173) All Warranty Claim Actions are processed on DA Form 2407 (WP 0173) and DA Form 2407-1. (WP 0173) It is very important to fill in the blocks on the forms as accurately as possible.

The contractor shall be notified in writing within 30 days, utilizing DA Form 2407 (WP 0173) by the local Warranty Control Office/Officer (WARCO) following the discovery of a defect in supplies which requires contractor repair and/or replacement parts. This shall constitute formal notification of a warranty claim, and initiate the time period for contractor responsibilities and action under the warranty. This notification shall include, but not be limited to furnishing of the equipment serial number, operating hours, part number or NSN of the defective part and circumstances surrounding the defect(s). At this time, the contractor will further be informed whether the owning unit has elected:

Claim Procedures - Continued

1. To correct the defect themselves.
2. To direct the contractor to correct the defect.

Upon completion of contractor repair, forward completed warranty claims (Information Only) electronically to AEPS (Army Electronic Product Support) <http://aeps.ria.army.mil>.

The contractor shall reimburse the government for the cost of labor and/or replacement parts involved in the government correction of the defect. The government's Maintenance Allocation Chart (MAC) determines the times. Additionally, the cost of replacement parts obtained through the Government's supply channels will be determined by the amount identified in the contractor's current commercial dealer net price or Army Master Data File (AMDF) price, whichever is less. Furthermore, the owning unit may direct the contractor to provide the replacement parts that prove to be defective within the warranty period, without costs to the government, directly to their location or F.O.B., U.S. Port of Embarkation for OCONUS. The contractor shall furnish replacement parts within 10 working days after receipt of written claim notification. DO NOT submit warranty claims for reimbursement where repair labor costs and replacement parts costs combined do not exceed \$150.00 for any one failure.

Identification Of Failed Items. Failed warranty items shall be tagged/identified to prevent improper repair or use. Documents that describe the use of DA Form 2402 Maintenance Tag (WP 0173) and DA Form 2407 Maintenance Request (WP 0173) shall be referenced. Items requiring special handling, storage, or shipment during the processing of claims shall be identified.

Disposition. The repair activity shall retain defective supplies for thirty (30) days following receipt of acknowledgment of warranty claim from WARCO or contractor. If receipt of acknowledgment is not received, inquiries should be made to your local WARCO. If receipt of acknowledgment is received but no instructions are forthcoming within thirty (30) days of receipt, supplies may be disposed.

Invalid Warranty Claims. When supplies are inspected by the contractor and found to be non-warrantable due to abuse or improper maintenance, or the supplies are found to be serviceable, the repair activity submitting the claim will be required to make reimbursement for contractor services. All failed items returned for warranty claim action will be monitored by the WARCO. Additionally, regarding contractor repair, the local WARCO must stipulate at the time of request for services that either no non-warranty work be done or be prepared to pay for such work.

Reimbursement for Army Repair

In the event that the repair activity should receive any reimbursement from the contractor, the monies must be forwarded to the following address: Defense Accounting Office, DAOTACOM, ATTN: DFAS-IN/EM-BED, TACOM, Warren, Michigan 48397-5000.

Claim Denial/Disputes

All denials or disputes will be handled by TACOM.

Reporting

Reporting or recording action on a failed item shall be specified in DA PAM 750-8. (WP 0173) Contractor or repair activity unique forms shall not be used.

Storage/Shipment/Handling**Storage**

See coverage-specific data above (last paragraph) and preparation for storage for further information.

Shipment

See contractor responsibilities data above (second paragraph), claim procedures (third paragraph), and preparation of equipment for transportation/shipment for further information.

Handling

See contractor responsibilities data above (second paragraph), claim procedures (third paragraph), and safety, care, and handling for further information.

END OF WORK PACKAGE

OPERATOR MAINTENANCE EQUIPMENT CHARACTERISTICS, CAPABILITIES, AND FEATURES

EQUIPMENT CHARACTERISTICS

The M1120 LHS is a tactical wheeled vehicle with integral self-load/unload capability.

EQUIPMENT CAPABILITIES

NOTE

Trailer/semitrailer may affect maximum fording depth. Refer to applicable trailer/semitrailer operator manual for further information on fording depth restrictions.

1. All models are capable of operating in temperatures from -25 to 120°F (-32 to 49°C) and to -50 to 120°F (-46 to 49°C) with arctic kit installed.
2. All models can ford water up to 48 in. (1 219 mm) deep for 5 minutes without damage or without requiring maintenance before operation can continue.
3. Normal operating range of all models is 300 miles (483 km), based upon 154 gallons (583 L) of fuel and 100,000 lbs (45 400 kg) GCWR, traveling over mixed terrain. Varying loads, prolonged idle, use of power takeoff (PTO), off-road driving, and climatic conditions affect operating range.
4. All models are provided with sufficient tie down points located so vehicles can be restrained in all directions during air transport in C-130, C-5A, and C-17 type aircraft.
5. All models are also capable of being transported by highway, rail, and sea.

EQUIPMENT FEATURES

1. Detroit Diesel eight-cylinder, V-Type, 2-cycle, fuel injected, turbocharged diesel engine.
2. Automatic transmission with one reverse speed and four forward speeds.
3. Operator controlled 4-wheel/8-wheel drive and high and low range transfer case for positive traction in areas of unimproved road surfaces.
4. Power steering system consists of basic manual steering system with hydraulic boost. Mechanical linkage also provides operator control in event of hydraulic oil pressure loss.
5. Fuel system includes one fuel tank, fuel lines, fuel/water separator, fuel pump, secondary filter, fuel pipes, and fuel injectors.
6. Two front and two rear towing eyes.
7. Manual-release-type rear pintle hook which will allow towing of a trailer.
8. Radio frequency interference suppression to permit voice radio communications during all phases of operation.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
LOCATION AND DESCRIPTION OF MAJOR COMPONENTS**

VEHICLE COMPONENT LOCATION

Table 1. HEMTT Series Vehicle Common Component Location.

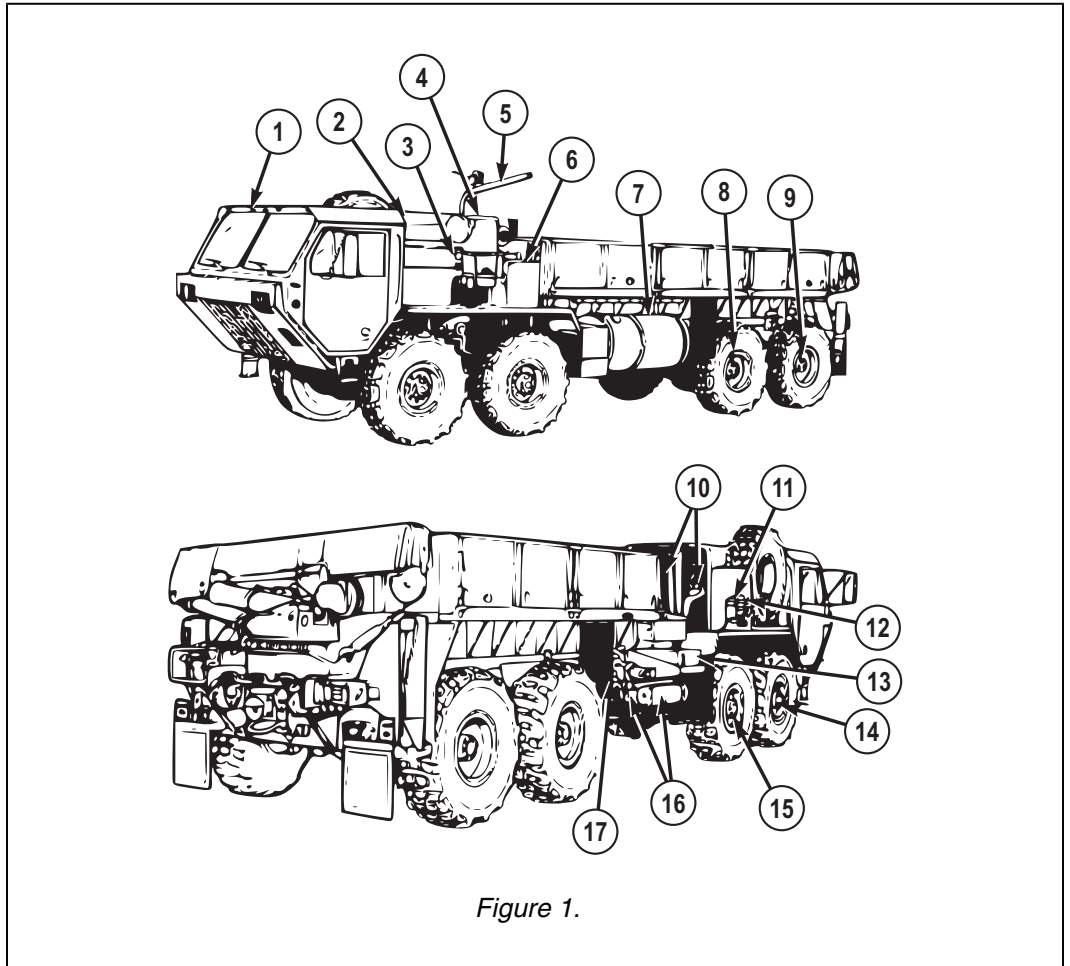


Figure 1.

| | |
|---|---|
| 1 | Personnel Cab. Provides protection from weather for crew and vehicle controls, gauges, and indicators. |
|---|---|

VEHICLE COMPONENT LOCATION - Continued

Table 1. HEMTT Series Vehicle Common Component Location. - Continued

| | |
|----|---|
| 2 | Engine Compartment. Engine supplies power to move vehicle and operate equipment and accessories. |
| 3 | Ether Canister. Contains ether for use as cold weather starting aid. |
| 4 | Air Cleaner. Filters out dust and debris from air entering air induction system. |
| 5 | Tire Davit (shown assembled). Used to raise and lower spare tire. |
| 6 | Hydraulic Reservoir. Stores, cools, and filters oil used in hydraulic and power steering systems. |
| 7 | Fuel Tank. Stores fuel used to operate engine. Receives excess fuel not used by engine fuel injection system. |
| 8 | No. 3 Driving Axle. Supports weight of vehicle, and transmits power to hubs to turn rear wheels. |
| 9 | No. 4 Driving Axle. Supports weight of vehicle, and transmits power to hubs to turn rear wheels. |
| 10 | Tire Davit (shown in stowed position). Used to raise and lower spare tire. |
| 11 | Air Dryer. Used to remove dirt and moisture from compressed air before air enters air reservoirs. |
| 12 | Fuel/Water Separator. Acts as primary fuel filter and removes any water from fuel before entering engine. |
| 13 | Battery Box. Houses and protects four storage batteries. |
| 14 | No. 1 Driving Axle. Controls direction of vehicle when in motion. When needed, transmits power to hubs to turn wheels. |
| 15 | No. 2 Driving Axle. Controls direction of vehicle when in motion. When needed, transmits power to hubs to turn wheels. |
| 16 | Air Reservoirs. Used to store air system air. |
| 17 | Self-Recovery Winch (not used on all vehicles). Used to help vehicle pull itself free of obstructions. |

VEHICLE COMPONENT LOCATION - Continued

Table 2. M1120 LHS Vehicle Component Location.

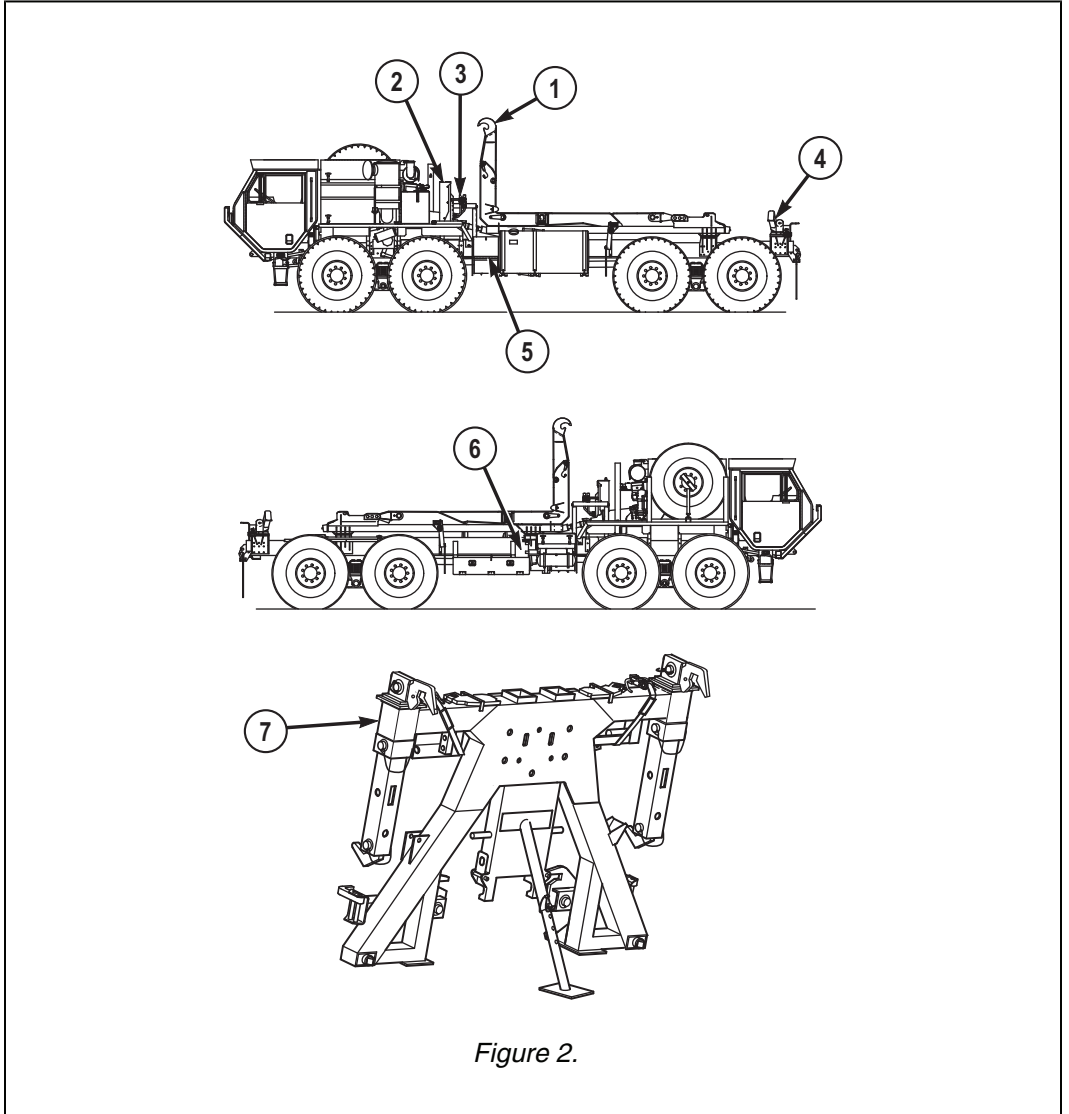


Figure 2.

| | |
|---|--|
| 1 | Load Handling System (LHS) and Hook. Used to load/unload NATO flatrack and Forward Repair System (FRS). |
| 2 | Control Box. Houses LHS controls. |

VEHICLE COMPONENT LOCATION - Continued**Table 2. M1120 LHS Vehicle Component Location. - Continued**

| | |
|---|--|
| 3 | Hydraulic Connections. Supplies hydraulic power to LHS. |
| 4 | Rollers. Help guide flatrack/FRS on/off vehicle. |
| 5 | Stowage Box. Used to stow COEI, BII, (WP 0174)AAL, (WP 0175) and other mission essential items. |
| 6 | Wheel Chock Stowage Box. Used to stow two wooden wheel chocks. |
| 7 | Container Handling Unit (CHU). Used to load/unload ISO containers and shelters. |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
DIFFERENCES BETWEEN MODELS**

Table 1. Differences Between HEMTT BASE Models.

| Equipment | Model | | | | | | | |
|-----------------------------------|------------------|------------------|------------------|------------------|------------------|------------------------|--------------------------|--------------------------|
| | M977 (Note 1) | M978 (Note 1) | M983 (Note 2) | M984 (Note 2) | M985 (Note 1) | M985 E1 (Note 2) | M1120 LHS (Note 1) | M1977 CBT (Note 1) |
| 10 ft. (3.05 m) Equipment Body | | | | • | | | | |
| 18 ft. (5.49 m) Cargo Body | • | | | | • | • | | |
| Cargo Cover Kit | • | | | | • | • | | |
| Heavy-Duty Winch | | | | • | | | | |
| Rear Beacon Lights (Note 4) | | | | • | | | | |
| Work Lights (Note 5) | | | • | • | | | | • |
| MHC977 Grove Crane | • | | | | | | | |
| MHC985 Grove Crane | | | | | • | | | |
| MHC984 | | | | • | | | | |

Table 1. Differences Between HEMTT BASE Models. - Continued

| Equipment | Model | | | | | | | |
|--------------------------------------|------------------|------------------|------------------|------------------|------------------|------------------------|--------------------------|--------------------------|
| | M977 (Note 1) | M978 (Note 1) | M983 (Note 2) | M984 (Note 2) | M985 (Note 1) | M985 E1 (Note 2) | M1120 LHS (Note 1) | M1977 CBT (Note 1) |
| Grove Crane | | | | | | | | |
| 8108/-2 HIAB Crane (Note 6) | | | | | | • | | |
| Fifth Wheel | | | • | | | | | |
| 3.5 inch (89 mm) Kingpin | | | • | | | | | |
| Semitrailer Spare Tire Carrier | | | • | | | | | |
| Load Handling System | | | | | | | • | • |

Table 2. Notes.

Note:

1. Vehicle can be equipped in either of two configurations: with or without optional self-recovery winch.
2. Vehicle equipped with self-recovery winch.
3. Self-recovery winch not available for this model.
4. All HEMTT series vehicles are authorized to carry portable beacon light as an optional accessory.
5. All HEMTT series vehicles are authorized to carry portable work lamp as an optional accessory.
6. See data plate on base of crane loader body unit to determine model number.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
EQUIPMENT DATA**

EQUIPMENT DATA

Table 1. Vehicle Operation.

| |
|---|
| Operating Mode: On- and off-road |
| Operating Temperature w/o Arctic Kit: -25 to 120°F (-32 to 49°C) |
| Operating Temperature w/Arctic Kit: -50 to 120°F (-46 to 49°C) |

Table 2. M1120 LHS Cargo Vehicle Dimensions.

| |
|--|
| Width (overall): 96 in. (2 438 mm) |
| Height (overall): 148 in. (3 759 mm) vehicle only, 171 in. (4 343 mm) with Container Handling Unit (CHU) installed |
| Height (reduced for shipping): 102 in. (2 591 mm) |
| Length (overall): 393 in. (9 982 mm) vehicle only, 424 in. (10 770 mm) with Container Handling Unit (CHU) installed |
| Wheelbase: 210 in. (5 334 mm) |
| Turn Circle (curb to curb): 100 ft. (30.5 m) |
| Ground Clearance: 24 in. (610 mm) |
| Center of Gravity: See shipping data plate on outside of driver side rear of cab or inside of driver side door. |

Table 3. M1120 LHS Cargo Vehicle Weight.

| |
|---|
| Curb Weight: With Self-Recovery Winch: 36,500 lbs (16 571 kg) vehicle only, 40,300 lbs (18 296 kg) with Container Handling Unit (CHU) installed |
|---|

EQUIPMENT DATA - Continued**Table 3. M1120 LHS Cargo Vehicle Weight. - Continued**

Without Self-Recovery Winch: 35,600 lbs (16 162 kg) vehicle only, 39,400 lbs (17 888 kg) with Container Handling Unit (CHU) installed

Gross Vehicle Weight Rating (GVWR): 66,000 lbs (29 964 kg)

Gross Combination Weight Rating (GCWR): 100,000 lbs (45 400 kg)

Table 4. M1120 LHS Cargo Vehicle Weight Distribution.**Front Tandem Axles-Curb:**

With Self-Recovery Winch: 23,600 lbs (10 714 kg)

Without Self-Recovery Winch: 23,200 lbs (10 533 kg)

Front Tandem Axles-Loaded: 30,000 lbs (13 620 kg)

Rear Tandem Axles-Curb:

With Self-Recovery Winch: 13,300 lbs (6 038 kg)

Without Self-Recovery Winch: 12,800 lbs (5 811 kg)

Rear Tandem Axles-Loaded (maximum): 36,000 lbs (16 344 kg)

Table 5. Vehicle Performance.

Cruising Range at GCWR: 300 mi. (483 km)

Maximum Sustained Forward Speed (at 2100 rpm) - 3rd Gear: 41 mph (66 km/h)

Maximum Sustained Forward Speed (at 2100 rpm) - 2nd Gear: 28 mph (45 km/h)

Maximum Sustained Forward Speed (at 2100 rpm) - 1st Gear: 15 mph (24 km/h)

Speed on 3% Grade at GCWR: 25 mph (40 km/h)

Speed on 3% Grade at GVWR: 40 mph (64 km/h)

Speed on 30% Grade at GCWR: 3 mph (5 km/h)

Speed on 30% Grade at GVWR: 5 mph (8 km/h)

Maximum Grade at GCWR: 30 percent

EQUIPMENT DATA - Continued

Table 5. Vehicle Performance. - Continued

| |
|---|
| Maximum Grade at GVWR: 60 percent |
| Maximum Side Slope w/Adequate Traction Surface: 30 percent |
| Maximum Towed Speed (refer to FM 4-30.31): 15 mph (24 km/h) |
| Maximum Ford Depth: 48 in. (1 219 mm) |
| Approach Angle: 41 degrees |
| Departure Angle: 45 degrees |
| Limp Home Speed: 10 mph (16 km/h) for up to 30 miles (48 km) |

Table 6. Fluid Capacities.

Refer to lubrication instructions in operator's PMCS (WP 0163) for vehicle fluid capacities.

Table 7. Engine.

| |
|---|
| Make: Detroit Diesel Corporation |
| Model: 8V92TA |
| Type: 2-Stroke, V-Type Diesel |
| Cylinders: 8 |
| Bore: 4.84 in. (123 mm) |
| Stroke: 5 in. (127 mm) |
| Displacement: 736 cid (12 L) |
| Torque: |
| Model No. 8087-7899: 1250 lb-ft (1695 Nm) at 1300 rpm |
| Model No. 8083-7493: 1330 lb-ft (1803 Nm) at 1200 rpm |

EQUIPMENT DATA - Continued

Table 7. Engine. - Continued

| |
|---|
| Maximum Brake Horsepower (at 2100 rpm): |
| Model No. 8087-7899: 445 BHP (332 kW) |
| Model No. 8083-7493: 450 BHP (336 kW) |
| Maximum Governed Engine Speed - Loaded: 2050 - 2150 rpm |
| Maximum Governed Engine Speed - No Load: 2225 - 2275 rpm |
| Oil Filter Type: Full flow, replaceable element |
| Oil Filter Quantity: 1 |

Table 8. Fuel System.

| |
|---|
| Type: Diesel Injection |
| Tank Quantity: 1 |
| Air Cleaner Type: Dry element |
| Element Quantity: (1 primary, 1 secondary) |

Table 9. Electrical System.

| |
|--|
| Voltage: 24 |
| Alternator (amps): 65 |
| RFI Suppression Ability: Yes |
| Number of Batteries: 4 |
| Battery Voltage (each): 12 volts |
| Battery Connection: Series - parallel |
| Battery Capacity (at 20 hour rate): 900 amp |

EQUIPMENT DATA - Continued**Table 9. Electrical System. - Continued**

| |
|---|
| Battery Reserve Capacity (each, at 80°F/27°C): 180 minutes |
| Battery Cold Cranking Amps (each, at 80°F/27°C): 575 CCA |
| Battery Amp Hours (each, at 20 hour rate): 100 amp |

Table 10. Cooling System.

| |
|--|
| Radiator Working Pressure: 7 psi (48 kPa) |
|--|

Table 11. Transmission.

| |
|------------------------------------|
| Make: Allison |
| Model: HT740D |
| Type: Automatic |
| Number of Forward Speeds: 4 |
| Number of Reverse Speeds: 1 |

Table 12. Transfer Case.

| |
|---|
| Make: Oshkosh |
| Model: 55000 |
| Type: Air-operated front tandem disconnect |
| Ratios: 0.98:1 and 2.66:1 |

Table 13. Front Tandem Axles.

| |
|--|
| Front Tandem |
| Make: Oshkosh/Dana Heavy Axle |
| Differential Carrier Model Nos.: No. 1 axle: RS480, No. 2 axle: DS480-P |

EQUIPMENT DATA - Continued

Table 13. Front Tandem Axles. - Continued

| |
|---|
| Maximum Steering Angle: 32 degrees |
|---|

Table 14. Rear Tandem Axles.

| |
|------------------------------|
| Make: Dana Heavy Axle |
|------------------------------|

| |
|--|
| Differential Carrier Model Nos.: No. 3 axle: DS480-P, No. 4 axle: RS480 |
|--|

Table 15. Brake System.

| |
|-----------------------|
| Actuation: Air |
|-----------------------|

| |
|------------------------------------|
| Number of Brake Chambers: 8 |
|------------------------------------|

| |
|---|
| Pressure Range: 60 - 120 psi (414 - 827 kPa) |
|---|

Table 16. Wheels.

| |
|--|
| Type: Two-piece bolt together wheel |
|--|

| |
|--------------------|
| Quantity: 8 |
|--------------------|

| |
|--------------------------|
| Spare Quantity: 1 |
|--------------------------|

| |
|--------------------------|
| Rim Size: 20 x 10 |
|--------------------------|

| |
|------------------------------------|
| Stud Quantity Per Wheel: 10 |
|------------------------------------|

Table 17. Tires.

| |
|----------------------------------|
| Type: Radial without tube |
|----------------------------------|

| |
|--------------------|
| Quantity: 8 |
|--------------------|

| |
|--------------------------|
| Spare Quantity: 1 |
|--------------------------|

| |
|---|
| Tread Type: Radial traction, non-directional |
|---|

| |
|------------------------------|
| Size: 16.00R x 20 in. |
|------------------------------|

EQUIPMENT DATA - Continued

Table 17. Tires. - Continued

| |
|----------------------|
| Load Range: M |
|----------------------|

Table 18. Steering System.

| |
|---|
| Type: Dual gear with integrated hydraulic power assist |
|---|

Table 19. Towing Eyes.

| |
|--------------------------------------|
| Quantity: 4 (2 front, 2 rear) |
|--------------------------------------|

| |
|---|
| Maximum Load Capacity Each: 60,000 lbs (27 240 kg) |
|---|

Table 20. Pintle Hook.

| |
|-----------------------------|
| Type: Manual Release |
|-----------------------------|

| |
|--|
| Maximum Load Capacity - Pulling: 30,000 lbs (13 620 kg) in off-road application |
|--|

| |
|---|
| Maximum Load Capacity - Vertical: 1,700 lbs (771 kg) |
|---|

Table 21. Pintle Hook With Self-Guiding Coupler.

| |
|--|
| Type: Self-guiding, automatically locking |
|--|

| |
|--|
| Maximum Gross Trailer Weight: 100,000 lbs (45 400 kg) |
|--|

| |
|--|
| Maximum Load Capacity - Vertical: 20,000 lbs (9 080 kg) |
|--|

Table 22. Cab.

| |
|--|
| Windshield: Tinted, two-piece, safety glass |
|--|

| |
|------------------------------|
| Personnel Capacity: 2 |
|------------------------------|

Table 23. Self-Recovery Winch.

| |
|-------------------------------|
| Make: DP Manufacturing |
|-------------------------------|

EQUIPMENT DATA - Continued

Table 23. Self-Recovery Winch. - Continued

| |
|--|
| Model: 20K-HEMTT |
| Wire Rope Diameter: 9/16 in. (14.3 mm) |
| Wire Rope Length: 200 ft. (61 m) |
| Line Pull - 1st Layer (Five Wraps Minimum): 20,000 lbs (9 080 kg) |
| Line Pull - 2nd Layer: 18,173 lbs (8 251 kg) |
| Line Pull - 3rd Layer: 16,663 lbs (7 565 kg) |
| Line Pull - 4th Layer: 15,361 lbs (6 974 kg) |
| Line Pull - 5th Layer: 14,254 lbs (6 471 kg) |

Table 24. Load Handling System.

| |
|--|
| Maximum Lifting Load for Container Handling Unit (CHU) W/Front Lift Adapter (FLA): 24,000 lbs (10 896 kg) |
| Electrical Power: 24V dc |

Table 25. Auxiliary Equipment.

| |
|-----------------------------|
| Arctic Engine Heater Kit |
| Chemical Alarm |
| Decontamination Unit |
| Gas Particulate Filter Unit |
| Machine Gun Ring |
| Radio Installation Kit |
| Rifle Mounting Kit |

EQUIPMENT DATA - Continued

Table 25. Auxiliary Equipment. - Continued

Note: Vehicle may or may not be equipped with any of these items depending on mission, climate, or other factors.

Table 26. Load Classification.

| MODEL | UNLOADED (TONS) | FULL LOAD (TONS) | WITH TRAILER LOADED (TONS) |
|-----------|-----------------|------------------|----------------------------|
| M977 | 16 | 28 | |
| M978 | 15 | 25 | |
| M983 | 14 | | C-29 (w/Patriot) |
| M984A1 | 19 | | C-48 (towing loaded M985) |
| M985 | 17 | 28 | C-38 (towing HEMAT M989) |
| M985 E1 | 17 | 28 | |
| M1120 LHS | 18 | 28 | |

TIRE PRESSURES

Table 27. Tire Pressures.

| TIRE | HIGHWAY | CROSS-COUNTRY (DRY) | CROSS-COUNTRY (WET) | SANDY TERRAIN |
|----------------------------|------------------|---------------------|---------------------|------------------|
| Front Tire Pressure | | | | |
| STANDARD (XZL) TIRE | 60 psi (414 kPa) | 35 psi (241 kPa) | 20 psi (138 kPa) | 30 psi (207 kPa) |
| SAND TIRE | 60 psi (414 kPa) | NA | NA | 25 psi (172 kPa) |
| Rear Tire Pressure | | | | |

TIRE PRESSURES - Continued**Table 27. Tire Pressures. - Continued**

| TIRE | HIGHWAY | CROSS-COUNTRY (DRY) | CROSS-COUNTRY (WET) | SANDY TERRAIN |
|---|-------------------|----------------------------|----------------------------|----------------------|
| STANDARD (XZL) TIRE | 83 psi (572 kPa) | 47 psi (325 kPa) | 37 psi (255 kPa) | 37 psi (255 kPa) |
| Spare Tire Pressure (All models) | | | | |
| STANDARD (XZL) TIRE | 100 psi (690 kPa) | 100 psi (690 kPa) | 100 psi (690 kPa) | 100 psi (690 kPa) |
| SAND TIRE | 100 psi (690 kPa) | NA | NA | 100 psi (690 kPa) |

OPERATING SPEEDS**Table 28. Operating Speeds.**

| | HIGHWAY | CROSS-COUNTRY (DRY) | CROSS-COUNTRY (WET) | SANDY TERRAIN |
|----------------------------|------------------|----------------------------|----------------------------|----------------------|
| Maximum Speed | | | | |
| STANDARD (XZL) TIRE | 55 mph (88 km/h) | 40 mph (64 km/h) | 20 mph (32 km/h) | 20 mph (32 km/h) |
| SAND TIRE | 55 mph (88 km/h) | NA | NA | 20 mph (32 km/h) |

END OF WORK PACKAGE

OPERATOR MAINTENANCE SELF-RECOVERY WINCH

SELF-RECOVERY WINCH

The self-recovery winch, when used, is mounted on the passenger side chassis frame rail between the second and third axles.

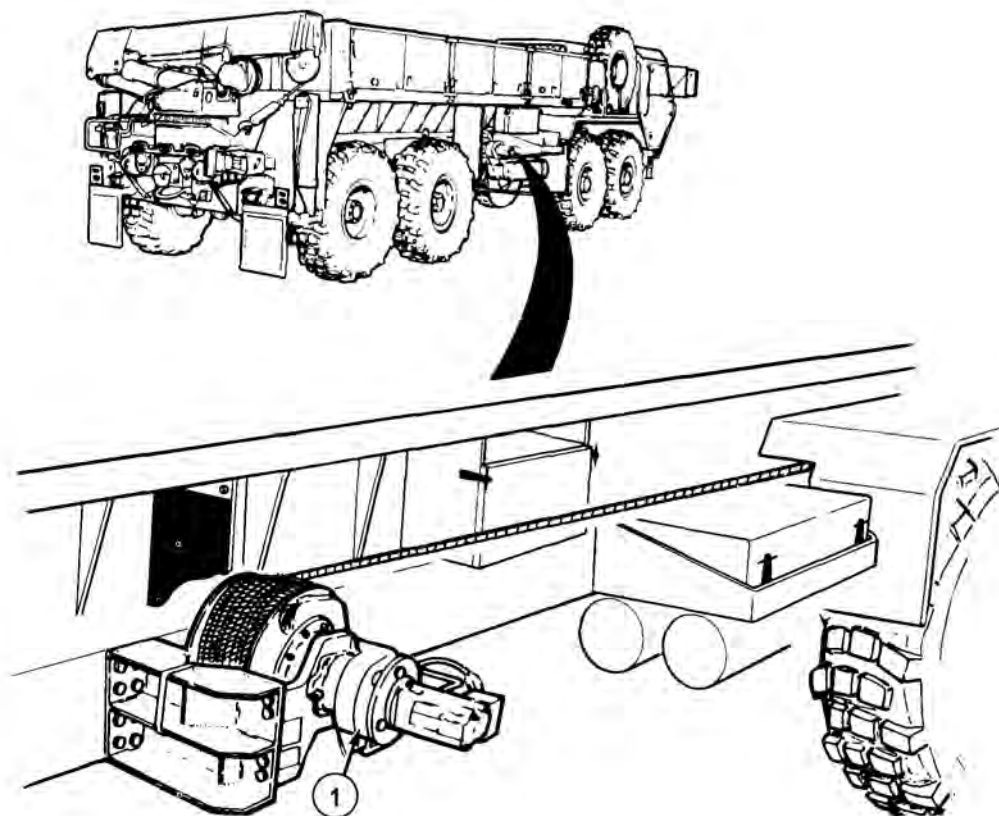


Figure 1.

The winch is powered by a reversible hydraulic motor which drives the winch drum through a planetary gearbox.

It is equipped with an automatic brake that is applied whenever the cab control lever is in the center position.

SELF-RECOVERY WINCH - Continued**NOTE**

The M984A wrecker equipped with a self-recovery winch does not employ an operator controlled, two-position hydraulic selector valve to activate the reversible winch motor.

All vehicles (except the M984A wrecker) equipped with a self-recovery winch (1) have an operator controlled, two-position hydraulic selector valve (WP 0025) to activate the reversible winch motor.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
ELECTRICAL SYSTEM**

NOTE

- Wiring harnesses are used to carry current to operate equipment and accessories.
- The electrical system is a 24 VDC system.

Four 12 VDC storage batteries (1) are connected in series-parallel with the negative terminal grounded.

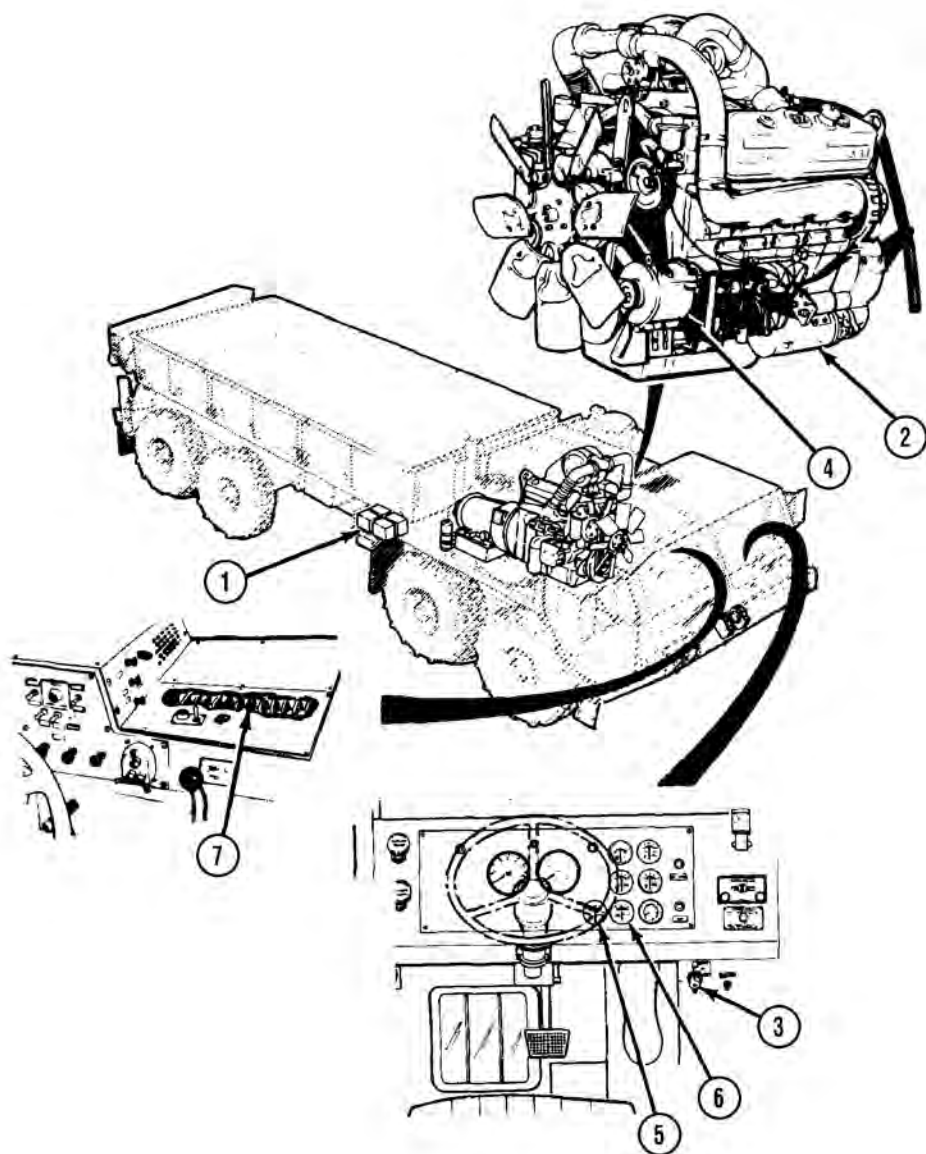


Figure 1.

The starting motor (2) operates directly from the 24 VDC source through the engine start switch (3).

A belt-driven 24 VDC alternator (4) having a capacity of 65 amps (M983 - 100 amps) or 130 amps maintains the charge on the batteries.

The AMPERES gauge (5) shows the alternator output.

The BATTERY gauge (6) shows the state of charge of the batteries and alternator voltage output.

The vehicle electrical circuits are protected against overloads by automatic reset circuit breakers (7) located below the heater compartment panel.

MAJOR ELECTRICAL SYSTEM COMPONENT LOCATION

The voltage and the current for the electrical system are indicated by a battery gauge (1) and an ammeter (2) located on the dash panel inside the driver's compartment.

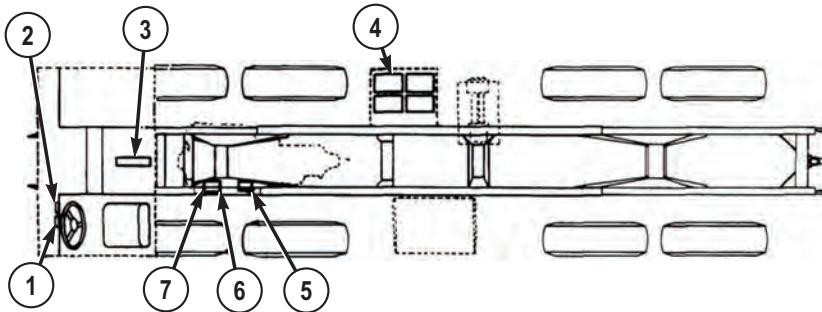


Figure 2.

Circuit breakers (3) located in the cab protect the main circuits.

Electrical power is provided by four 12-volt series-parallel connected batteries (4).

NOTE

Power is distributed throughout the vehicle by wiring harnesses. The harnesses are interconnected by pin connectors. Connectors are provided at the rear of the vehicle to supply power for towed loads.

A heavy-duty starting motor (5) is mounted on the engine flywheel housing and provides the cranking power necessary for starting the engine.

The voltage regulator (6) is mounted on the belt driven alternator (7) and maintains a 24-volt level for battery charging.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
AIR SYSTEM**

AIR SYSTEM

The air system consists of an engine-driven air compressor (1) and four air reservoirs (2, 3, 4, and 5). Reservoir (4) is used on all vehicles except the M983 tractor, which has a reservoir (6) instead.

AIR SYSTEM - Continued

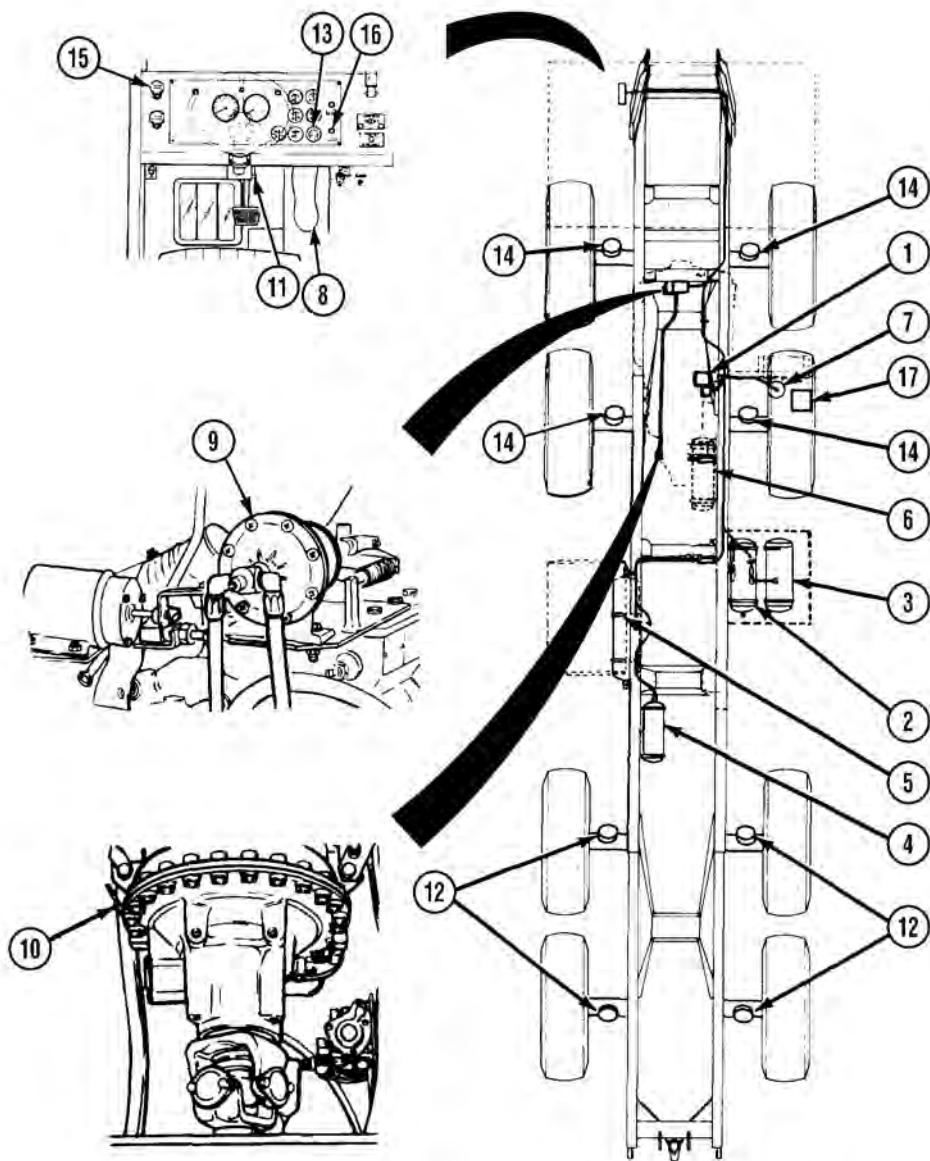


Figure 1.

AIR SYSTEM - Continued**NOTE**

The air system includes the necessary valves and air lines to control the vehicle's air-operated parts.

Pressurized air from the air compressor (1) is passed through the air dryer (7) to the quick buildup reservoir (2).

The air dryer (7) removes dirt and moisture from the pressurized air. Air from reservoir (2) goes to the throttle treadle (8).

Depending on how far the throttle treadle is depressed, 0 to 60 psi (0 to 414 kPa) is supplied to the engine throttle air cylinder (9) and to the transmission modulator (10). This air pressure control the vehicle speed.

Once air pressure in reservoir (2) rises above 75 psi (517 kPa), a valve opens and allows reservoirs (3, 4, or 6, and 5) to be pressurized up to 120 psi (827 kPa).

Air from reservoir (4 or 6) goes to the brake treadle valve (11). This air controls the rear axle service parking brakes (12).

Air pressure in this system is shown by the red needle on the AIR PRESS gauge (13).

Air from reservoir (3) goes to the brake treadle valve.

This air controls the front axle service brakes (14).

Air pressure in this system is shown by the green needle on the AIR PRESS gauge.

The PARKING BRAKE valve (15) controls air from reservoirs (3 and 5) and applies or releases the rear axle service (parking) brakes.

Reservoirs (3, 4, or 6, and 5) are interconnected so that if one reservoir fails, air is supplied to release the rear axle service (parking) brakes from whichever reservoir is functioning. If air pressure falls below 60 to 75 psi (414 kPa to 517 kPa), a buzzer will sound and the AIR indicator (16) will illuminate.

Specific to the M984A1, the front brake actuator valve (17) is used to apply the front axle service brakes when using heavy-duty winch.

END OF WORK PACKAGE

OPERATOR MAINTENANCE MAIN HYDRAULIC SYSTEM

MAIN HYDRAULIC SYSTEM

The main hydraulic system consists of a power take-off (PTO) driven hydraulic pump (1) and a fluid reservoir (2) shared with the power steering hydraulic system.

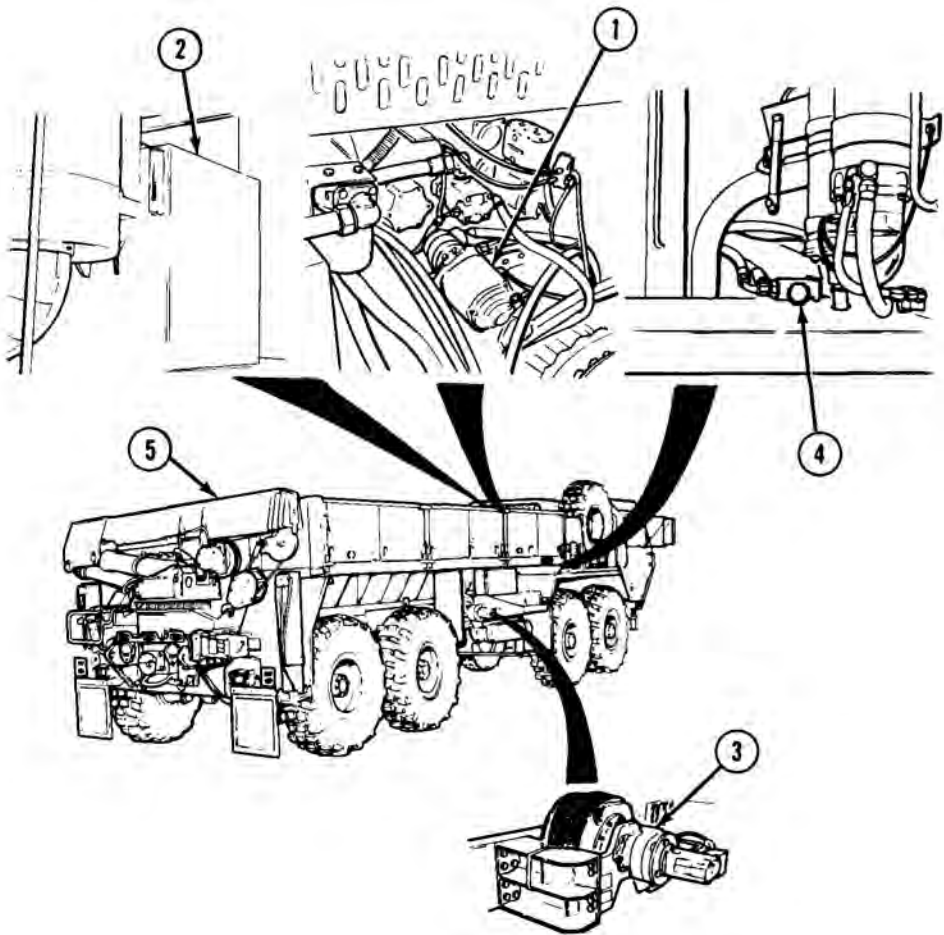


Figure 1.

Any vehicle may also be equipped with a self-recovery winch (3) and a selector valve (4).

MAIN HYDRAULIC SYSTEM - Continued

The main hydraulic system includes the material handling crane (5) on the HEMTT series vehicle.

The fuel pump on the M978 tanker is part of the main hydraulic system.

FLUID SYSTEM

Pump (1) mounted on the rear of engine provides the fluid power to operate the power steering (2) only.

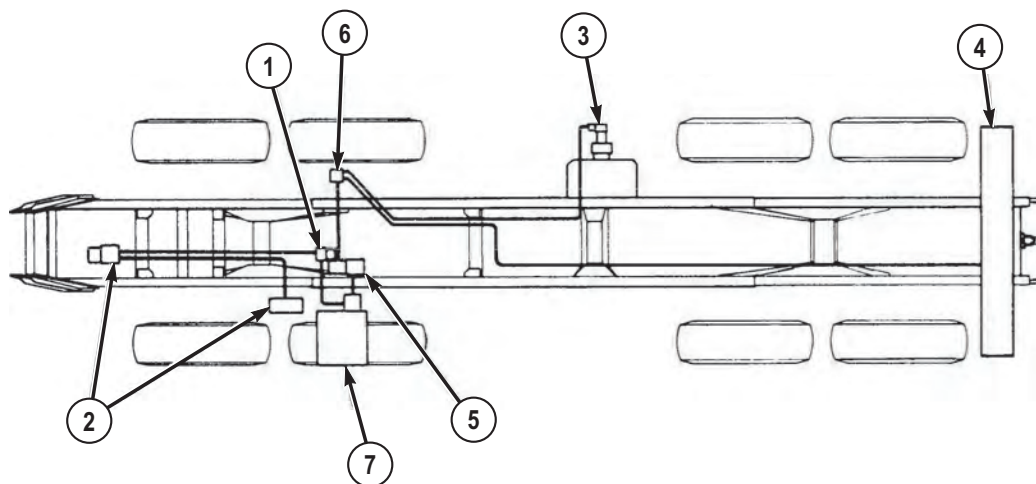


Figure 2.

Fluid power for the self-recovery winch (3), crane (4), and fuel tanker dispensing components (M978 only) is provided by a hydraulic pump (5) driven by the power take-off (PTO) mounted on the transmission.

A manually-operated selector valve (6) is used to activate either the self-recovery winch (3), crane (4), fuel tanker dispensing components (M978 only), or load handling system (LHS) on M1120 LHS and M1977 CBT.

Both pumps (1) and (5) share the same reservoir (7).

END OF WORK PACKAGE

OPERATOR MAINTENANCE STEERING SYSTEM

POWER STEERING HYDRAULIC SYSTEM

Power is supplied to the main steering gear (1) by an engine-driven pump (2).

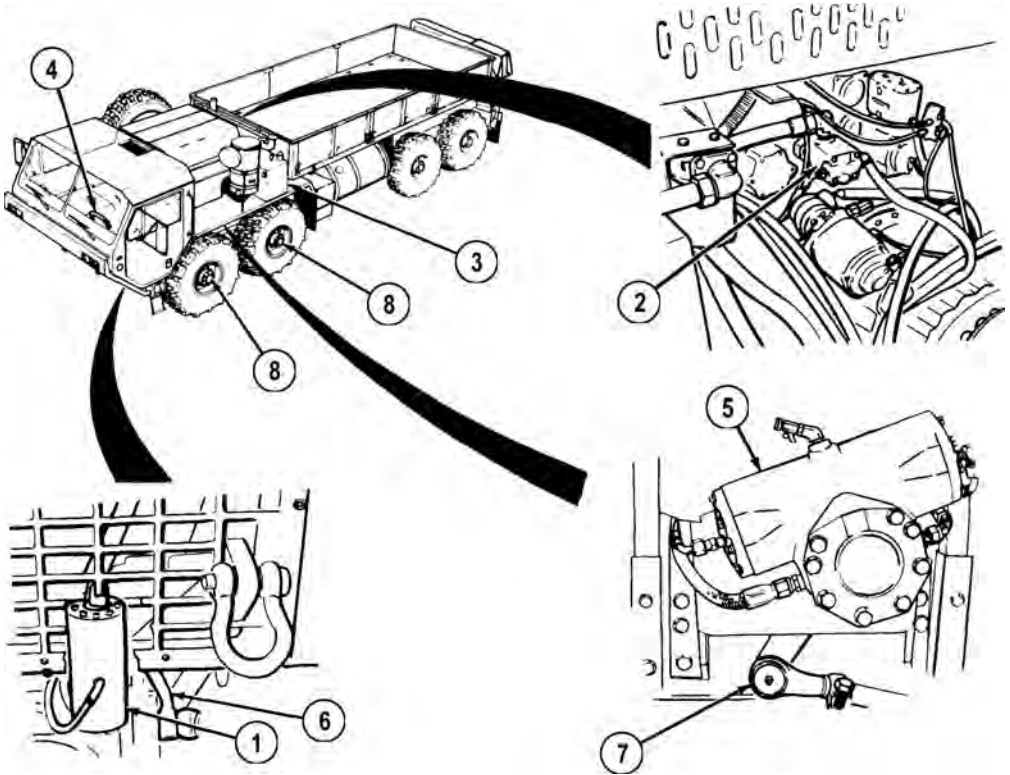


Figure 1.

The fluid reservoir (3) is shared with the main hydraulic system.

The steering wheel (4), which is mechanically linked to the main steering gear (1), rotates a gear that positions a spool in the main steering gear.

This motion is hydraulically transmitted to a piston in the slave gear (5) causing it to follow the rotation of the main gear.

The main gear pitman arm (6) is mechanically connected to the slave gear pitman arm (7).

POWER STEERING HYDRAULIC SYSTEM - Continued

These pitman arms move the steering mechanism on the front axles (8) left or right causing the vehicle to steer left or right.

END OF WORK PACKAGE

OPERATOR MAINTENANCE POWER TRAIN

POWER TRAIN

The drivetrain control system consists of the engine and transmission systems.

Power for the vehicle is provided by a diesel engine (1), which is coupled directly to an automatic transmission (2).

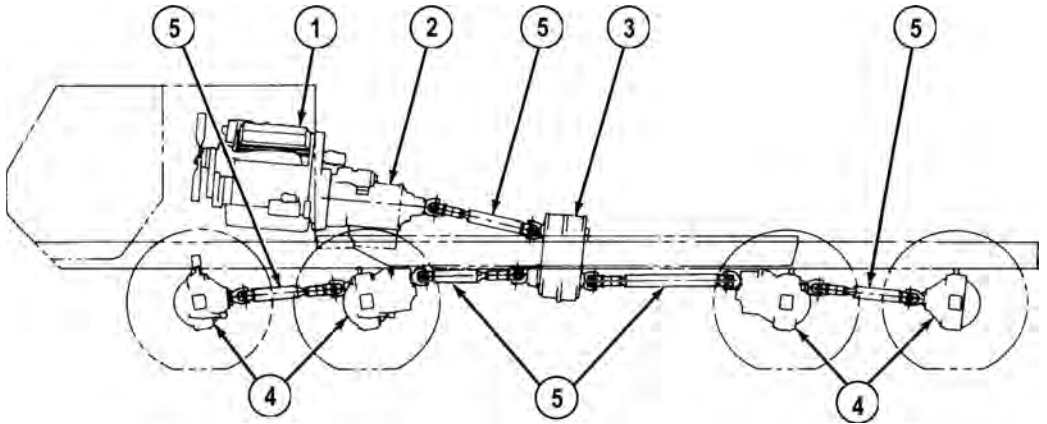
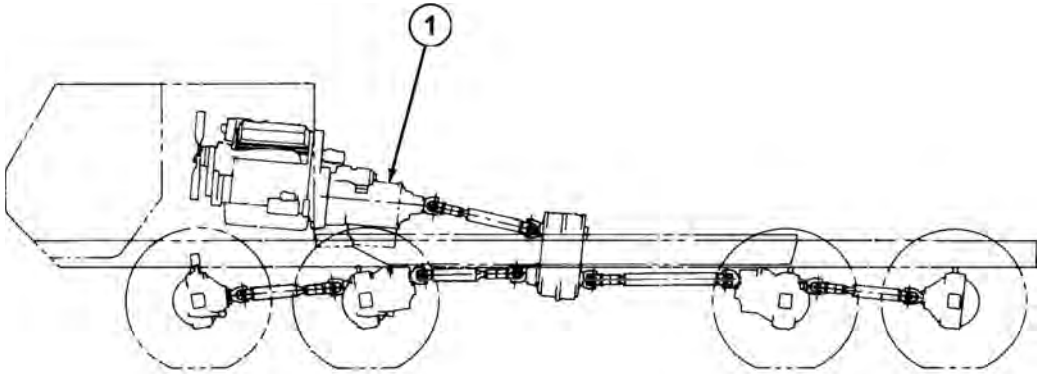


Figure 1.

Power from the transmission is transferred to the transfer case (3) and on to front and rear tandem axles (4) through a series of drive shafts and universal joints (5).

AUTOMATIC TRANSMISSION

The automatic transmission (1) provides four speeds forward and one reverse.

AUTOMATIC TRANSMISSION - Continued*Figure 2.*

Drive (D) is used for all normal driving conditions.

The vehicle will start moving in 1st gear, and as the accelerator is depressed, transmission will upshift to 2nd gear, 3rd gear, and 4th gear automatically.

As the vehicle slows down, the transmission will downshift to the correct gear automatically.

Placing the range selector lever in the 3 or 2 position will prevent the transmission from upshifting past the 3rd or 2nd gear, respectively.

This is useful if road or load conditions require low gear operation.

When conditions improve, the range selector lever can be returned to the normal (D) driving position.

Drive vehicle (Operations under usual conditions) (WP 0044) provides full operating instructions for the transmission.

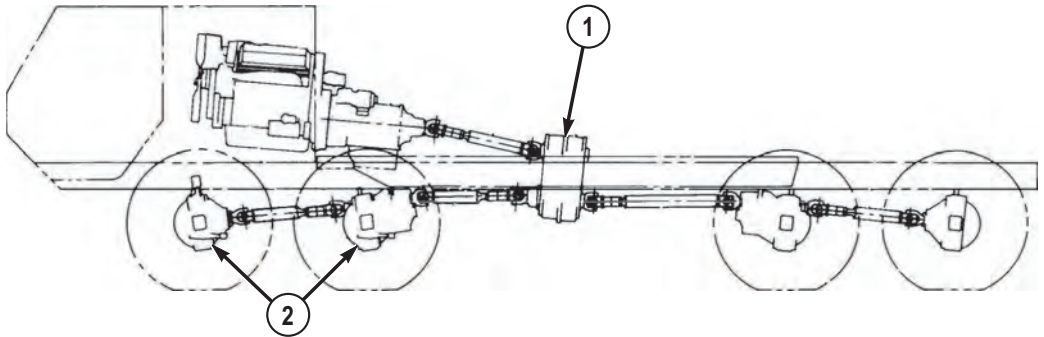
The transmission includes an electrically controlled power takeoff (PTO).

The PTO provides power to a hydraulic pump, which powers the vehicle's hydraulic system.

The hydraulic system operates the self-recovery winch, the material handling crane, the heavy-duty recovery winch, and the pumping equipment, depending on how the vehicle is equipped.

TRANSFER CASE

The transfer case (1) connects the drivetrain to the No.1 and No. 2 axles (2) when 8-wheel drive is needed.

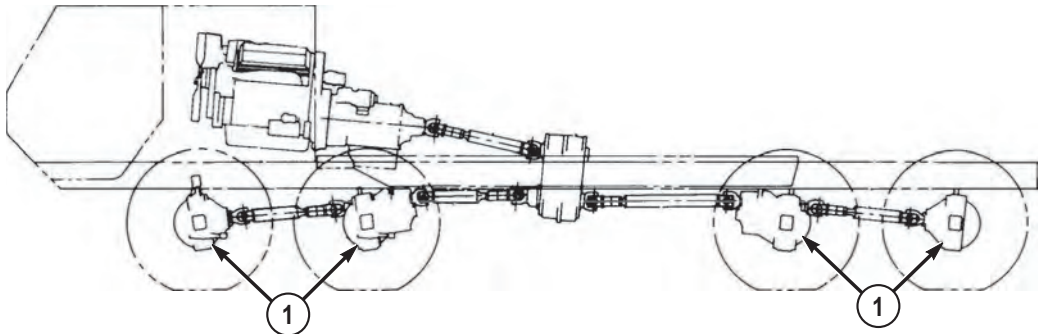
TRANSFER CASE - Continued*Figure 3.*

The transfer case has two gear ratios (high and low) and neutral. The vehicle must be stopped before the transfer case can be shifted between ranges because the gears are not synchronized.

Engagement of the transfer case in low range will automatically engage the drivetrain to the front axles.

TANDEM AXLES AND SUSPENSION

Front and rear tandem axles (1) are single reduction, full floating axle shaft type.

*Figure 4.*

The front tandem provides steering

The rear tandem is non-steering.

Both front and rear tandems are equipped with wheel differentials and inter-axle differentials.

TANDEM AXLES AND SUSPENSION - Continued

The inter-axle differentials have driver-controlled lockouts for positive drive to all axles in low range.

The rear tandem is equipped with permanently engaged controller traction differentials.

The front and rear suspensions are tandem axle type with leaf springs and equalizing beams.

PROPELLER SHAFTS AND UNIVERSAL JOINTS

The propeller shafts and universal joints (1) transmit engine power to the axles.

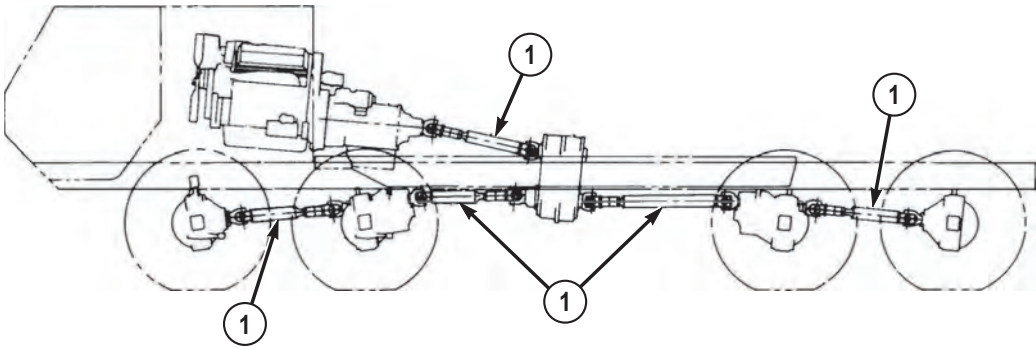


Figure 5.

END OF WORK PACKAGE

OPERATOR MAINTENANCE ENGINE SYSTEMS

ENGINE

The vehicle is equipped with a Detroit Diesel Corporation (DDC) Model 8V92TA engine.

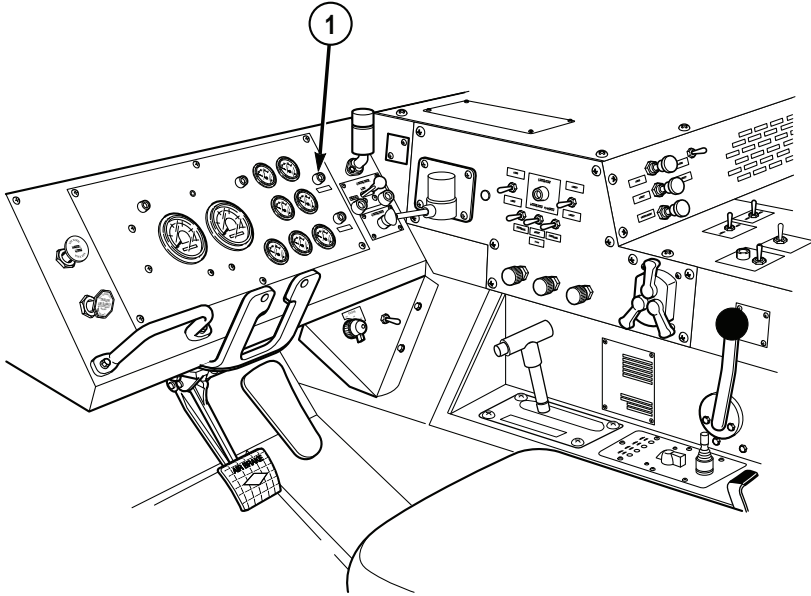


Figure 1.

An oil/water light (1) will light up when a critical fault occurs. Immediately shut vehicle off.

AIR INTAKE SYSTEM

The air intake system consists of a dry type air cleaner (1), turbocharger (2), engine blower (3), and an aftercooler (4).

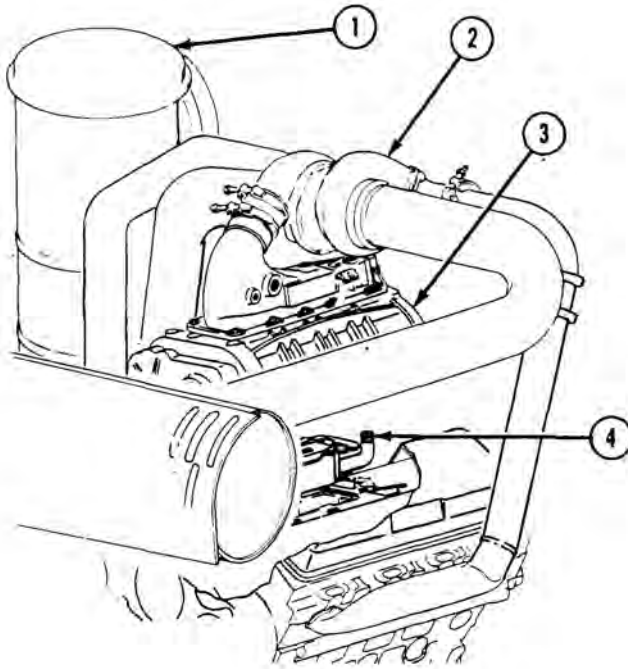
AIR INTAKE SYSTEM - Continued

Figure 2.

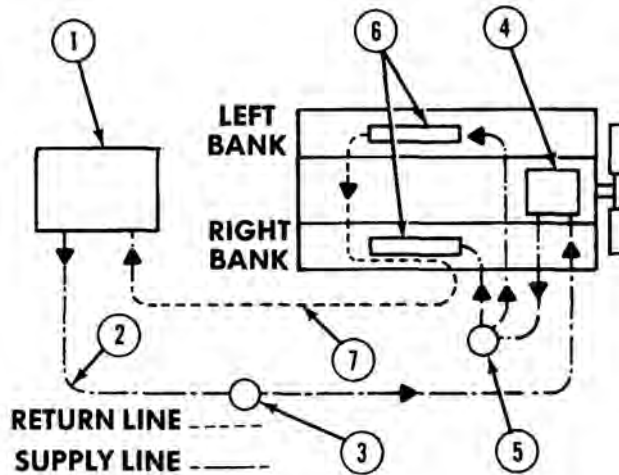
Engine exhaust gases flow through the turbocharger (2) driving a turbine wheel.

A compressor wheel on the opposite end of the turbine wheel shaft rotates and draws in fresh air through the air cleaner (1), compresses the air, and delivers it to the engine blower (3).

Air from the engine blower (3) flows through the aftercooler (4) which cools the air before it is delivered to the engine cylinders.

FUEL SYSTEM

Fuel drawn from the fuel tank (1) passes through the supply line (2) to a fuel/water separator (3), fuel pump (4), and secondary filter (5) to the engine fuel injectors (6).

FUEL SYSTEM - Continued*Figure 3.*

Surplus fuel from injectors is returned to the fuel tank (1) through the return line (7).

NOTE

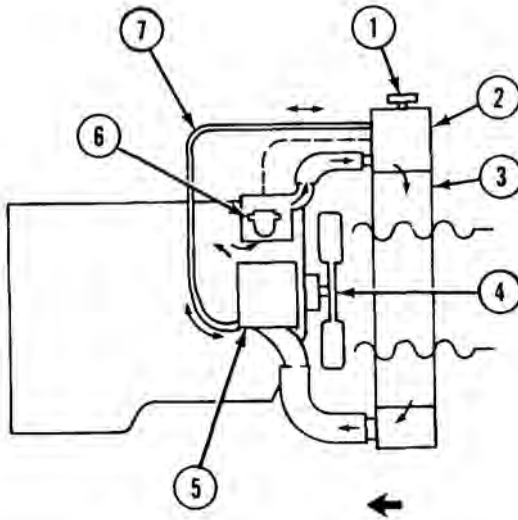
The fuel/water separator removes water and large solid particles from the fuel.

The finer particles are removed by the secondary filter (5) before they can enter the fuel injectors.

COOLING SYSTEM**NOTE**

The pressure type cooling system protects the engine by removing heat generated during the combustion process.

Pressure within the cooling system is regulated by a pressure release in the radiator filler cap (1).

COOLING SYSTEM - Continued*Figure 4.*

The hot coolant flows from the engine to top of radiator tank (2) and through radiator core (3) where a stream of air removes heat.

This stream of air is drawn through the core by an air-activated fan (4).

A water pump (5) draws the coolant from the bottom of the radiator and pushes it through the engine repeating the cooling process.

Thermostats (6), mounted in each coolant outlet elbow, remain closed until the coolant approaches a predetermined temperature at which time they open.

NOTE

When the coolant temperature drops below the thermostatic rating, the thermostats close.

An air vent line (7) between the radiator (2) and the water pump (5) inlet removes air trapped in the engine when the cooling system is being filled.

END OF WORK PACKAGE

OPERATOR MAINTENANCE CAB

CAB

The cab (1) contains all of the driving controls and gauges, operating controls for some of the mounted equipment, and adjustable seats for a crew of two. For explanation of cab controls, refer to vehicle controls and indicators.

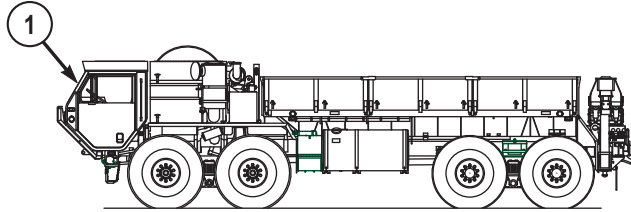


Figure 1.

END OF WORK PACKAGE

OPERATOR MAINTENANCE WHEELS AND TIRES

WHEELS AND TIRES

There are four front and four rear steel disc, 20.00 x 10.00 wheels (1) with 16.00 R20, tubeless, radial traction, non-directional tires.

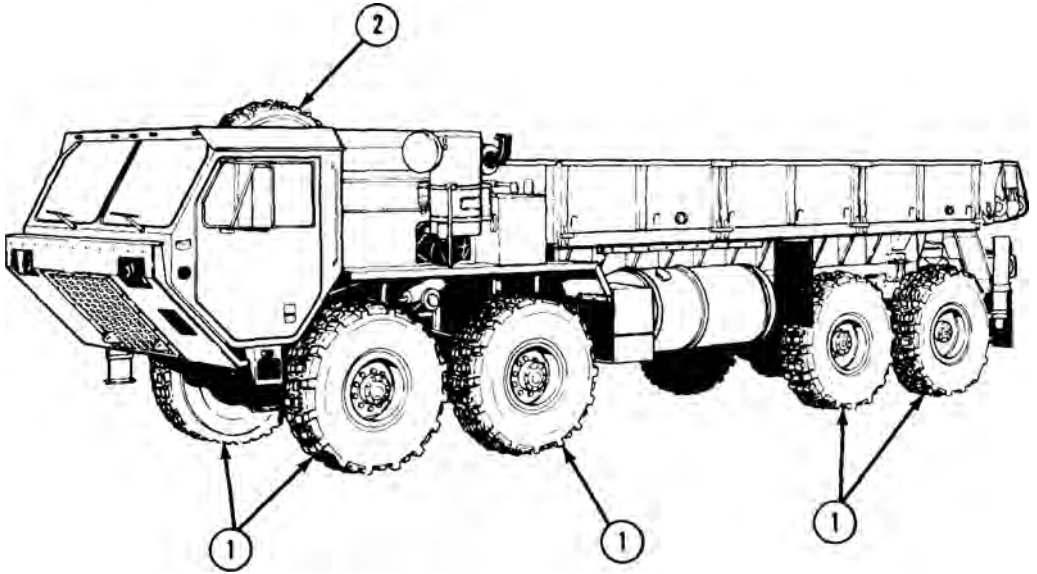


Figure 1.

One spare tire (2) is mounted to the passenger side of vehicle.

END OF WORK PACKAGE

OPERATOR MAINTENANCE LOAD HANDLING SYSTEM (LHS) AND CONTAINER HANDLING UNIT (CHU)

OPERATION

Fluid power for the LHS is provided by a hydraulic pump driven by the power take-off (PTO) mounted on the transmission.

The PTO switch, located in the cab, is used to engage and disengage the PTO.

Hydraulic fluid is drawn from and returns to the hydraulic reservoir by hydraulic hoses.

LOAD HANDLING SYSTEM (LHS)

The LHS (1) is fully hydraulic, powered by the vehicle hydraulic system, and is operated by a hydraulic selector switch (2) and a joystick (3), located to the driver's right in the vehicle cab.

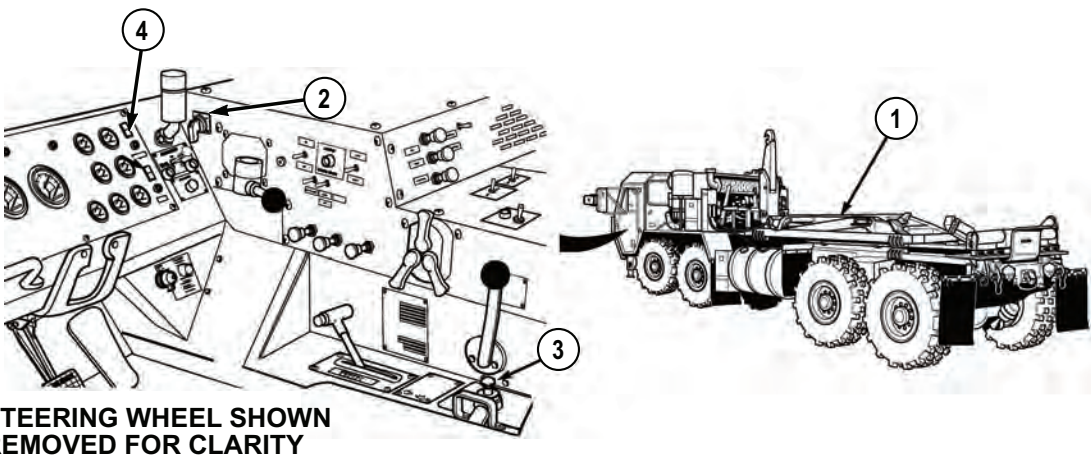


Figure 1.

The LHS control system is electrically-powered from the vehicle electrical system.

The LHS is capable of the following, with a flatrack (FR) loaded with a 11 ton (9 988 kg) nominal payload:

Loading/unloading the FR from the vehicle to 12 in. (30 cm) below ground level and any intermediate level.

Loading/unloading from uneven ground slopes of 5 degrees from the vehicles lateral and horizontal axis.

LOAD HANDLING SYSTEM (LHS) - Continued

Loading/unloading to/from trailers or ramps in which the height is equal to or less than the height from the ground to the bottom of the FR (while on the vehicle).

LHS (1) with CHU kit is capable of the following with a flatrack (FR) or container totaling 24,000 lbs (10 896 kg):

Loading/unloading the FR from the vehicle to 12 in. (30 cm) below ground level and any intermediate level.

Loading/unloading from uneven ground slopes of 5 degrees from the vehicles lateral and horizontal axis.

LHS (1) is capable of the following, with a forward repair system (FRS):

Loading/unloading the FRS from the vehicle to 1 ft. (30 cm) below ground level and any intermediate level.

Loading/unloading from uneven ground slopes of 5 degrees from the vehicle's lateral and horizontal axis.

Flatrack Locking. LHS (1) is designed with automatic locking features that secure the FR for all modes of transportation. LHS (1) can automatically guide, center, and secure a FR to the vehicle so that even during rough trail operations, the FR remain safely secured.

LHS Overload. LHS (1) will not function when the payload exceeds 11 tons (9 988 kg) maximum. A warning indicator (4), located in the cab in plain view of the driver, activates when a FR with a payload of 11 tons (9 988 kg) is being loaded by the LHS while under the worst conditions.

Hydraulic System. Hydraulic filters are located to provide direct access and to allow removal without damage to the vehicle. Bypasses are furnished where necessary to protect filters during cold temperature operation. All cylinder rods exposed during operation have a hard chromium plating.

Slave Hydraulics. Self-sealing, quick disconnect hydraulic couplings and a hose with appropriate connectors are provided so that one M1120 LHS vehicle can readily hydraulically power the LHS (1) of another M1120 LHS vehicle.

CONTAINER HANDLING UNIT (CHU)

The CHU utilizes the LHS (1) to load/unload ISO containers and shelters onto the vehicle.

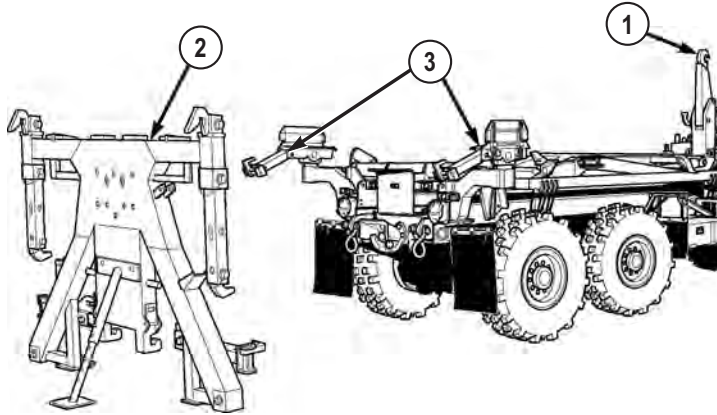
CONTAINER HANDLING UNIT (CHU) - Continued

Figure 2.

The CHU consists of an FLA (2) which is hooked by the LHS and is attached to an ISO container.

The rear slider assembly (3) guides the container onto the vehicle.

END OF WORK PACKAGE

CHAPTER 2
OPERATOR
INSTRUCTIONS

OPERATOR MAINTENANCE CAB-MOUNTED FOOT CONTROLS

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of cab-mounted foot controls which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about cab-mounted foot controls.

Table 1. Cab-Mounted Foot Controls.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

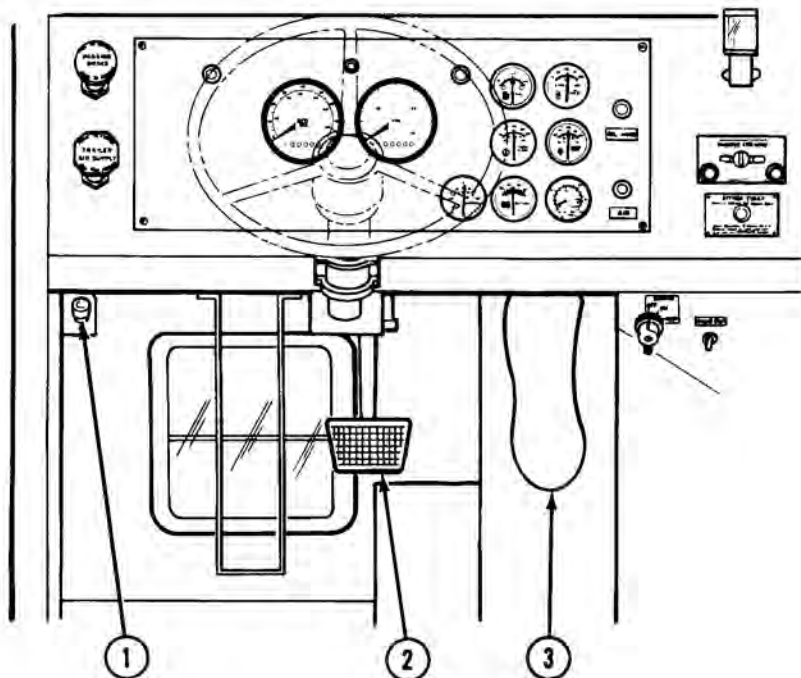


Figure 1.

| | | |
|---|----------------------------|--|
| 1 | Headlight Dimmer Switch | Press switch to raise or lower headlight beams. High beam indicator will illuminate (red) when high beams are on (WP 0021). |
| 2 | Service Brake Pedal | Applies service brakes. If vehicle is properly coupled to a trailer, trailer brakes will also operate when vehicle service brakes are applied. |
| 3 | Throttle Pedal | Controls vehicle speed. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE CAB-MOUNTED HAND CONTROLS

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of cab-mounted hand controls which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about cab-mounted hand controls.

Table 1. Cab-Mounted Hand Controls.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

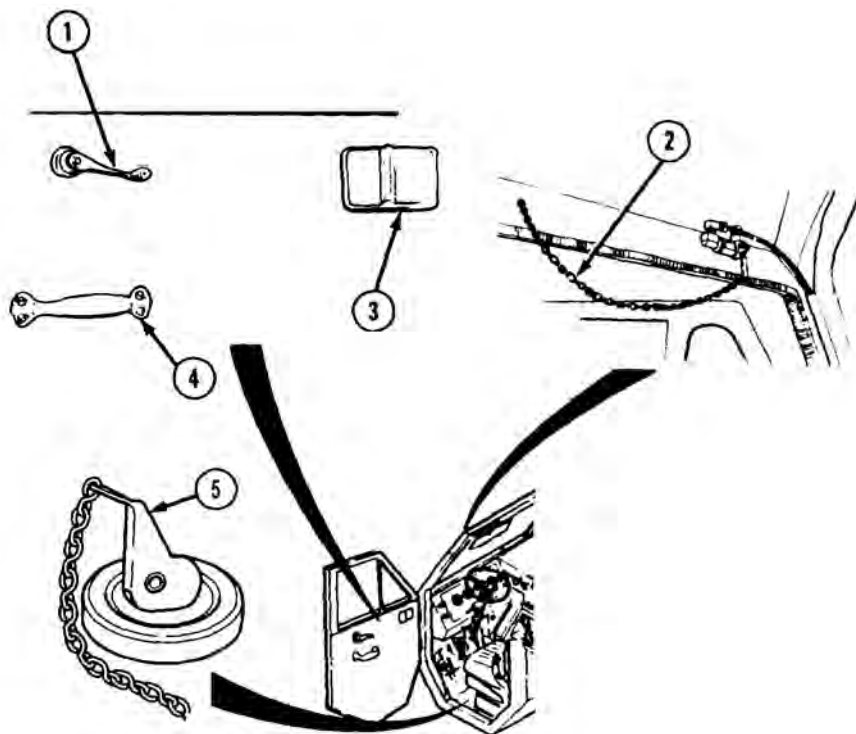


Figure 1.

| | | |
|---|--|--|
| 1 | Cab Door Window Glass Regulator (one on each door) | Rotate driver side regulator counterclockwise to lower left window glass, clockwise to raise left window glass. Rotate passenger side regulator clockwise to lower right window glass, counterclockwise to raise right window glass. |
| 2 | Air Horn Chain | Pull chain to sound air horn. Release chain to silence air horn. |
| 3 | Cab Door Inside Handle | Pull to open cab door from inside of cab. |

Table 1. Cab-Mounted Hand Controls. - Continued

| Key | Control/ Indicator | Function |
|------------|---|---|
| | (one on each door) | |
| 4 | Cab Door Handle (one on each door) | Pull to close cab door from inside of cab. |
| 5 | Drain Plug (one under both operator seat and crew seat) | Pull up on lever to remove drain plug and drain liquid from floor of cab. |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
STEERING COLUMN MOUNTED CONTROLS**

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of steering column mounted controls which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about steering column mounted controls.

Table 1. Steering Column Mounted Controls.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

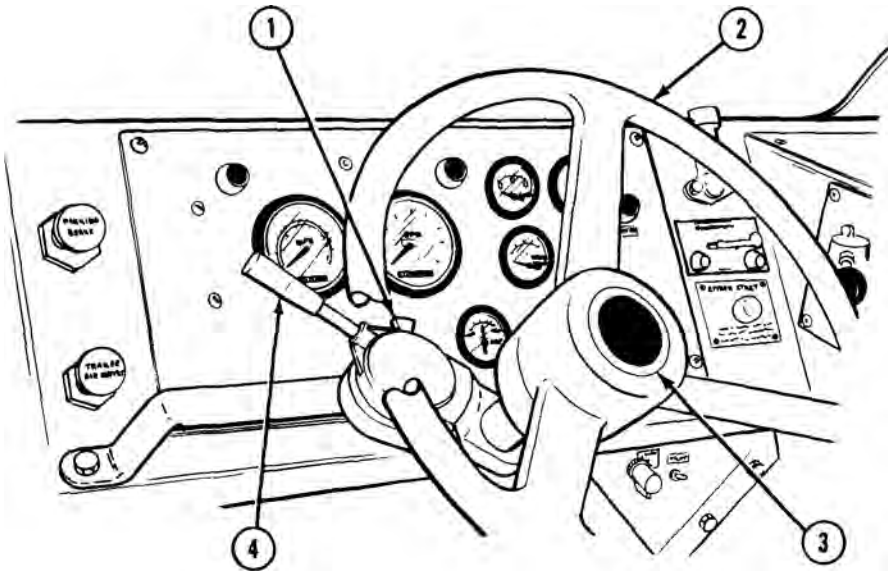


Figure 1.

| | | |
|---|---------------------------|---|
| 1 | Emergency Flasher Control | To turn on emergency flashers, light control must be in STOP LIGHT or SER DRIVE (WP 0022). Simultaneously press emergency flasher control (1) down and push turn signal lever |
|---|---------------------------|---|

Table 1. Steering Column Mounted Controls. - Continued

| Key | Control/ Indicator | Function |
|------------|-------------------------------|---|
| | | (4) up past the right turn position as far as it will go. To turn emergency flashers off, push turn signal lever (4) down to center position. |
| 2 | Steering Wheel | Controls direction of vehicle. |
| 3 | Horn Button | Sounds electric horn when pressed. Release to silence horn. |
| 4 | Turn Signal Lever | Push up to signal right turn. Pull down to signal left turn. When turn is complete, return lever to center position. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE TUNNEL PANEL CONTROLS AND INDICATORS

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of tunnel panel controls and indicators which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about tunnel panel controls and indicators.

Table 1. Tunnel panel controls and indicators.

| Key | Control/Indicator | Function |
|-----|-------------------|----------|
|-----|-------------------|----------|

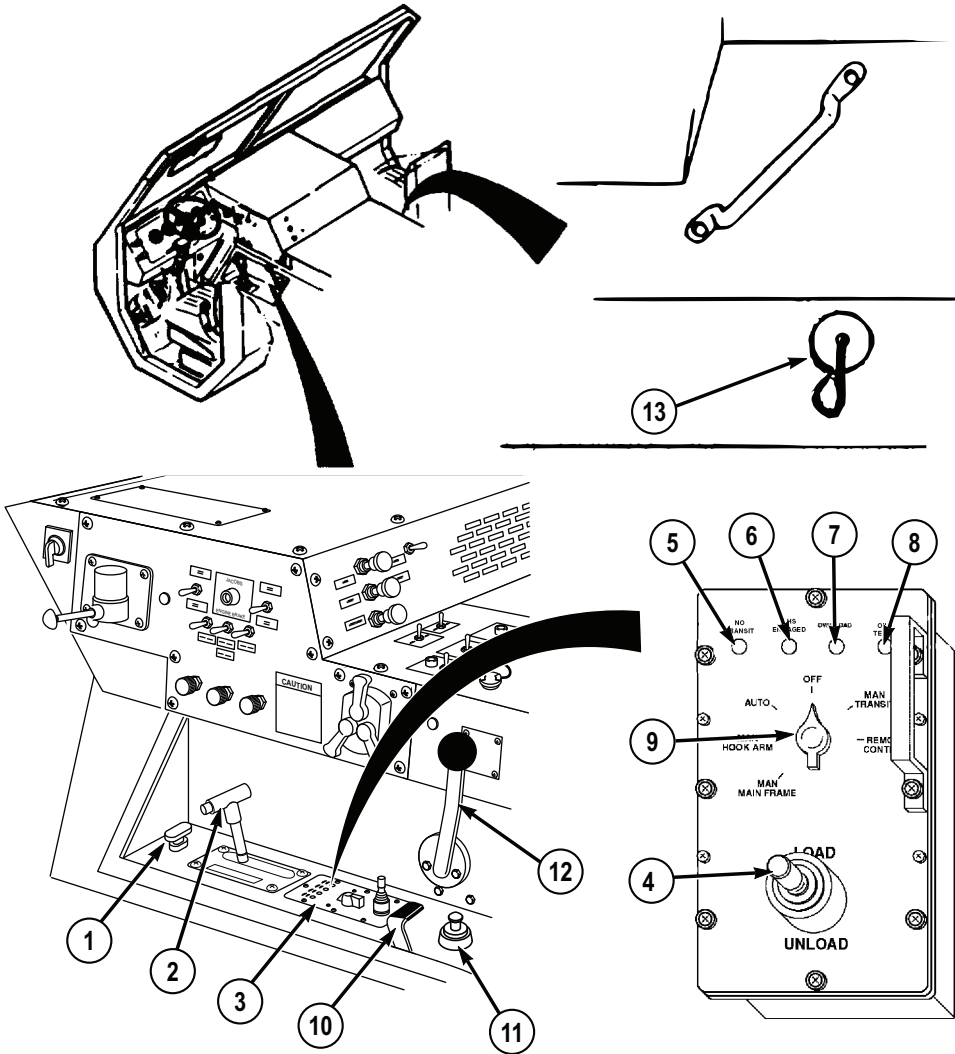


Figure 1.

Table 1. Tunnel panel controls and indicators. - Continued

| Key | Control/ Indicator | Function |
|------------|-----------------------------------|--|
| 1 | Shut Down Handle | Used to shutdown engine in emergencies. Not included in later base models. |
| 2 | Transmission Range Selector | <p>R (reverse) - Used to back up vehicle.</p> <p>N (neutral) - Used when starting vehicle, parking vehicle, or if vehicle controls are left unattended while engine is running.</p> <p>D (drive) - Used for all normal driving conditions. When vehicle is in motion, transmission will upshift/downshift automatically.</p> <p>3 - Low gear range. 2 - Lower gear range. 1 - Lowest gear range.</p> |
| 3 | CBT Control Panel (M1977 only) | Used to control CBT load handling system (LHS) operations. |
| 4 | Joystick (M1977 only) | Used to operate the LHS from the cab. The function being controlled is determined by the LHS MODE SELECT switch. |
| 5 | NO TRANSIT Indicator (M1977 only) | Illuminates when the hook arm assembly is not in the completely stowed position. The CBT is not to be driven except in the immediate loading and unloading area as long as NO TRANSIT indicator is illuminated. |
| 6 | LHS ENGAGED | Illuminates when hydraulic pressure is supplied to the LHS. |

Table 1. Tunnel panel controls and indicators. - Continued

| Key | Control/ Indicator | Function |
|-----|---|--|
| | Indicator (M1977 only) | |
| 7 | OVERLOAD Indicator (M1977 only) | Illuminates whenever main hydraulic relief valve is opened during loading or unloading. Indicates LHS has reached an overload condition or that hydraulic system is lifting very near maximum capacity. If the LHS is overloaded, the light illuminates and the LHS is automatically locked out. |
| 8 | OIL TEMP Indicator (M1977 only) | Illuminates when LHS oil temperature exceeds limits. |
| 9 | LHS MODE Select Switch (M1977 only) | OFF - The LHS is not operational. This setting is used for transport. |
| | | AUTO - Provides automatic operation of the LHS during NATO flatrack retrieval. |
| | | MAN HOOK ARM - Places the LHS in manual mode for moving the hook arm when the AUTO mode electric circuit is malfunctioning. |
| | | MAN MAIN FRAME - Places the LHS in manual mode for moving the main frame when the AUTO mode electric circuit is malfunctioning. |
| | | REMOTE CONTROL - Energizes the LHS remote-control unit. |

Table 1. Tunnel panel controls and indicators. - Continued

| Key | Control/ Indicator | Function |
|------------|---------------------------------|--|
| | | TRANSPORT - Provides for safe travel when the AUTO mode electric circuit has failed and the MAN HOOK ARM and/or MAN MAIN FRAME modes have been used. |
| 10 | Self-Recovery Winch (SRW) Lever | Used to pay out (push lever forward) and take up (pull lever aft) winch cable. Lever will return to neutral (center) position when released. Lever not included in vehicles without SRW. |
| 11 | LHS Joystick (M1120 only) | Controls loading (LOAD) and unloading (UNLOAD) operations of vehicle LHS. |
| 12 | TRANSFER CASE Shift Lever | Used to select high (HI) or low (LO) range. Center position is neutral (NEUT). |
| 13 | STE/ICE Receptacle | Receptacle for connecting simplified test equipment/internal combustion engine (STE/ICE). |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
INSTRUMENT PANEL CONTROLS AND INDICATORS**

CONTROLS AND INDICATORS INTRODUCTION

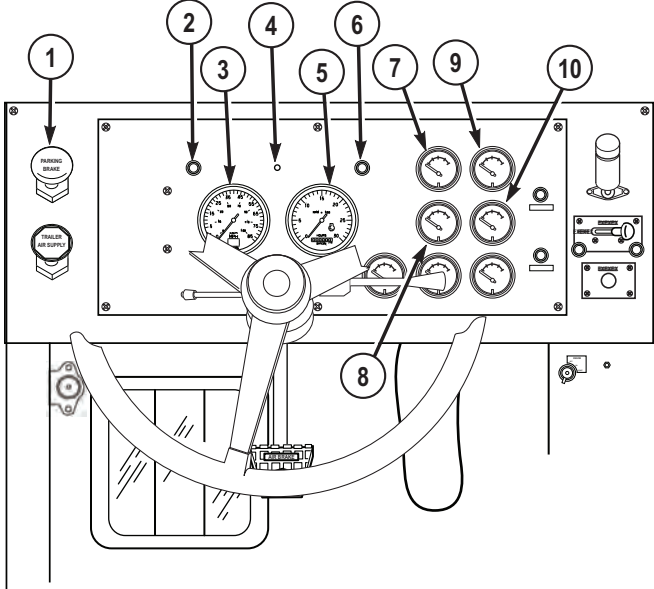
This section displays the location and describes the use of instrument panel controls and indicators which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about instrument panel controls and indicators.

Table 1. Instrument Panel Controls and Indicators.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
| 1 | PARKING BRAKE | |
| 2 | | |
| 3 | | |
| 4 | | |
| 5 | | |
| 6 | | |
| 7 | | |
| 8 | | |
| 9 | | |
| 10 | | |



The diagram shows a detailed view of an instrument panel. On the left side, there are two indicator lights labeled 'PARKING BRAKE' and 'PARKING AIR SUPPLY'. The main panel contains several gauges: a large central gauge (key 3), a gauge to its right (key 4), and a cluster of six smaller gauges (keys 5, 6, 7, 8, 9, 10). A steering wheel is partially visible at the bottom of the panel. Key 1 points to the parking brake indicator, key 2 points to a small indicator light, key 3 points to the large central gauge, key 4 points to the gauge to its right, key 5 points to the top-left gauge in the cluster, key 6 points to the top-middle gauge, key 7 points to the top-right gauge, key 8 points to the bottom-middle gauge, key 9 points to the bottom-right gauge, and key 10 points to the bottom-left gauge.

Figure 1.

Table 1. Instrument Panel Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|------------|-------------------------------|--|
| 1 | PARKING BRAKE Control | Applies and releases vehicle parking brakes. |
| 2 | Left Turn Indicator | Flashes (green) when left turn signal is on. |
| 3 | Speedometer/ Odometer | Shows vehicle traveling speed (in MPH and Km/h) and total miles traveled. |
| 4 | High Beam Indicator | Illuminates (red) when vehicle headlights are on high beam. |
| 5 | Tachometer/ Hourmeter | Displays engine operating speed (RPM x 100) and total operating time (HOURS). |
| 6 | Right Turn Indicator | Flashes (green) when right turn signal is on. |
| 7 | FUEL Gauge | Displays amount of fuel in fuel tank. |
| 8 | TRANS TEMP Gauge | Displays transmission fluid temperature in degrees Fahrenheit (°F) and Celsius (°C). |
| 9 | OIL PRESS Gauge | Displays engine oil pressure (psi and kPa). |

Table 1. Instrument Panel Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

| | | |
|----|------------------|--|
| 10 | WATER TEMP Gauge | Displays engine coolant temperature in degrees Fahrenheit (°F) and Celsius (°C). |
|----|------------------|--|

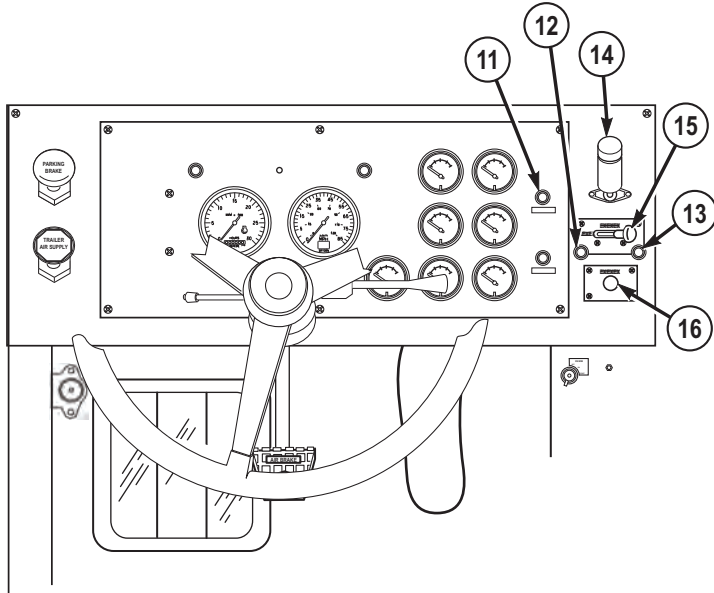


Figure 2.

| | | |
|----|---------------------------------|--|
| 11 | OIL-WATER Indicator | Illuminates (red) when engine oil pressure is too low or when engine coolant temperature too high. Buzzer sounds at the same time. |
| 12 | INTER-AXLE DIFF. LOCK Indicator | Indicator illuminates (orange) when TRACTION CONTROL is in INTER-AXLE DIFF. LOCK position. |
| 13 | 8x8 DRIVE Indicator | Illuminates (orange) when TRACTION CONTROL is in 8x8 DRIVE position or when TRANSFER CASE is in LO. |

Table 1. Instrument Panel Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|-----|----------------------------------|---|
| 14 | Air Filter Restriction Indicator | Displays condition of air cleaner filter. Indicator window will show red when filter becomes clogged. VACUUM INCHES H ² O window displays degree of restriction. Push button on top of gauge to reset. |
| 15 | TRACTION CONTROL Lever | Lever in left position (INTER-AXLE DIFF. LOCK) locks inter-axle differentials in front and rear tandems. Lever in right position (8x8 DRIVE) engages transfer case drive to front axles. |
| 16 | ETHER START Control | Injects ether into engine intake manifold for cold weather starting. |

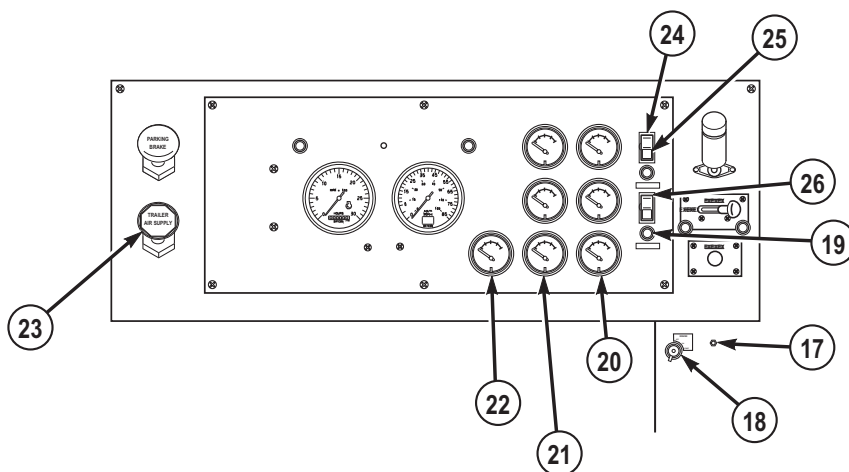


Figure 3.

| | | |
|----|--------------------------------|---|
| 17 | ENGINE STOP Switch (Momentary) | Push down and hold to stop engine. Release when engine stops. Switch returns to run position when released. |
|----|--------------------------------|---|

Table 1. Instrument Panel Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|------------|---------------------------------------|---|
| 18 | ENGINE Switch (Three-Position) | Straight up is OFF position. ON position operates electrical system. Hold switch in START position to operate engine cranking circuit. When switch is released after engine starts, switch will return to ON position. |
| 19 | AIR Indicator | Illuminates (red) and remains lit until airbrake air pressure in each section of dual system is between 60 psi (414 kPa) to 75 psi (517 kPa). Buzzer will sound anytime indicator is lit. |
| 20 | AIR PRESS Gauge | Displays air pressure (in psi and kPa) in both sections of airbrake system. Green needle shows front section air pressure. Red needle shows rear section air pressure. |
| 21 | BATTERY Gauge | Displays state of charge of batteries and alternator voltage output. |
| 22 | AMPERES Gauge | Displays alternator output in Amperes. |
| 23 | TRAILER AIR SUPPLY Control | Supplies air to (push in) and shuts off (pull out) air to trailer brake system. When TRAILER AIR SUPPLY control is applied (pushed in), vehicle PARKING BRAKE control activates/deactivates the trailer parking brakes in concert with the vehicle. |
| 24 | LHS NO TRANSIT Indicator (M1120 only) | Illuminates (red) when LHS system is not properly stowed in transport position. |

Table 1. Instrument Panel Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|-----|--|---|
| 25 | LHS OVER LOAD Indicator (M1120 only) | Illuminates (yellow) whenever main hydraulic relief valve is opened during loading or unloading. When light illuminates, driver will be warned that LHS has reached an overload condition or that hydraulic system is lifting very near maximum capacity. OVER LOAD indicator will come on any time main relief valve is cracked open, therefore, load or unload operation may not come to a complete stop, but light will come on momentarily. This situation would indicate that system is lifting near maximum capacity. If the LHS is overloaded, the light illuminates and the system is automatically blocked out. Off-load/on-load flatrack, and attempt second operation. If, during this second attempt, the LHS shuts down, stop operation and redistribute weight or reduce payload before attempting load or unload. When attempting to load/unload Forward Repair System (FRS), manual procedures must be followed or LHS overload system will shut down the LHS system. |
| 26 | LHS Indicator (M1120 only) | Illuminates (green) when Hydraulic Selector Switch is in AUTO, MAN H.A., or MAN M.F. positions. |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
HEATER COMPARTMENT CONTROLS AND INDICATORS**

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of heater compartment controls and indicators which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about heater compartment controls and indicators.

Table 1. Heater Compartment Controls and Indicators.

| Key | Control/ Indicator | Function |
|-----|-----------------------|--|
| 1 | Hydraulic Selector | OFF position: The LHS is not operational. This mode is used for transport. |

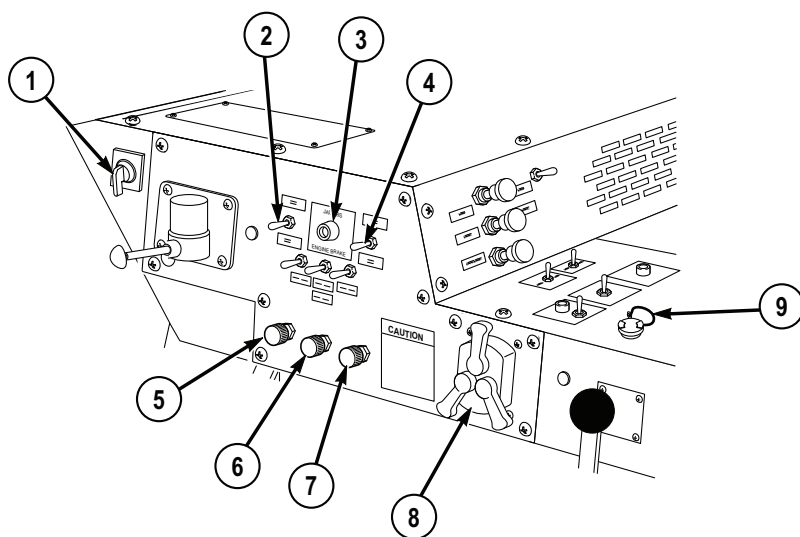


Figure 1.

Table 1. Heater Compartment Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|-----|-------------------------------------|--|
| | Switch (M1120 only) | <p>AUTO position: For normal loading/unloading operations.</p> <p>MAN H.A. (Manual Hook Arm): Places the LHS in manual mode for moving the hook arm when the AUTO mode electronic circuits fail. Also used during loading/unloading operations to/from trailer or docks.</p> <p>MAN M.F. (Manual Main Frame) position: Places the LHS in manual mode for moving the main frame when the AUTO mode electronic circuits fail. Also used during loading/unloading operations to/from trailer or docks.</p> <p>MAN TRANS (Manual Transit) position: This position must be selected if vehicle is to travel after the LHS AUTO mode electronic circuit has failed and the MAN H.A. and/or MAN M.F. modes have been used.</p> <p>CRANE/SRW position: Not used on this vehicle.</p> |
| 2 | JACOBS ® ENGINE BRAKE ON/OFF Switch | Supplies or shuts off electrical power to JACOBS ® ENGINE BRAKE. |
| 3 | JACOBS ® ENGINE BRAKE Indicator | Illuminates (green) when JACOBS ® ENGINE BRAKE ON-OFF switch is in ON position. |

Table 1. Heater Compartment Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|------------|---|---|
| 4 | JACOBS ® ENGINE BRAKE HIGH/ LOW Switch | Selects number of engine cylinders used for engine braking action. HIGH position provides maximum braking. LOW position provides less engine braking. |
| 5 | Wiper Control (Driver Side) | Controls operation of driver side windshield wiper. |
| 6 | Wiper Control (Passenger Side) | Controls operation of passenger side windshield wiper. |
| 7 | WASHER Control | Controls spray of cleaning fluid on windshield. |
| 8 | Light Control | Controls all electrical power to all parts of lighting system. |

Table 1. Heater Compartment Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|-----|-----------------------|--|
| 9 | Utility Outlet | Supplies electrical power to operate portable beacon light (WP 0087) and portable work lamp. (WP 0078) |

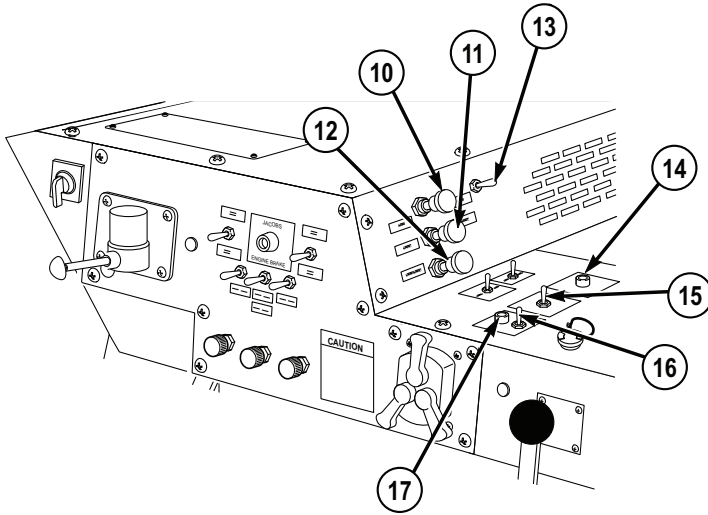


Figure 2.

| | | |
|----|--------------------------------|---|
| 10 | AIR Control | Controls amount of outside air entering cab through fresh air vent. |
| 11 | HEAT Control | Controls amount of hot air entering cab. |
| 12 | DEFROST Control | Controls amount of hot air blown on windshield. |
| 13 | FAN Control | Controls speed of heater fan. |
| 14 | CRANE OUTRIGGER EXTENDED | Illuminates (red) when HIAB crane outriggers are extended. |

Table 1. Heater Compartment Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|-----|-------------------------------------|---|
| | Indicator (M985E1 only) | |
| 15 | High Idle Switch (M1977 only) | When set to ON position, increases engine speed (RPM) from low to high for operating CBT/LHS equipment. |
| 16 | PTO ENGAGE Control | Turns electrical power to power take-off (PTO) ON/OFF. |
| 17 | PTO ENGAGE Indicator | Illuminates (red) when PTO ENGAGE control is set to ON position. |

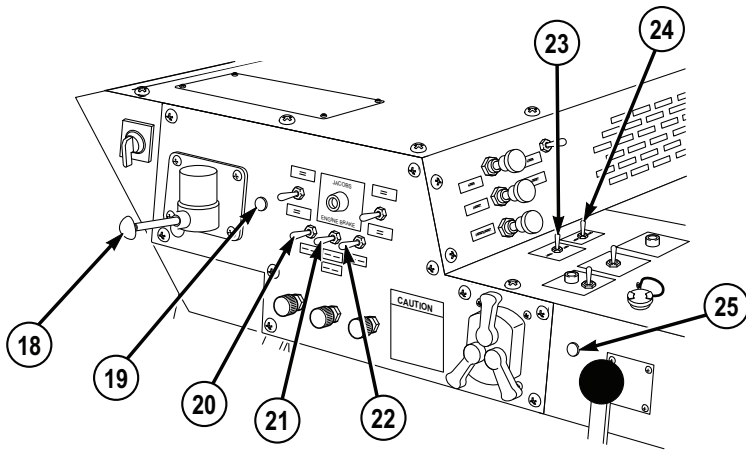


Figure 3.

| | | |
|----|---------------------------------|--|
| 18 | Trailer Handbrake Control | Used to test the trailer brakes. Pull control lever back to apply, push forward to release trailer brakes. |
|----|---------------------------------|--|

Table 1. Heater Compartment Controls and Indicators. - Continued

| Key | Control/ Indicator | Function |
|------------|---|---|
| 19 | LHS System Circuit Breaker (M1120 only) | Protects LHS System from electrical overload. |
| 20 | CL LPS Switch | Light control (8) must be in STOP LIGHT or SER DRIVE position for CL LPS switch to work. Up position turns clearance lights on. Down position turns clearance lights off. |
| 21 | DOME Light Switch | Light control (8) must be in STOP LIGHT or SER DRIVE position for CL LPS switch to work. Up position turns cab dome light on. Down position turns cab dome light off. |
| 22 | WORK LIGHT Switch (M983, M984A1, and M1977 only) | Light control (8) must be in STOP LIGHT or SER DRIVE position for CL LPS switch to work. Up position turns on work lights. Down position turns work lights off. |
| 23 | GAS ALARM Switch | Turns M-8 chemical alarm ON/OFF. |
| 24 | GPFU Switch | Turns gas particulate filter unit (GPFU) ON/OFF. |
| 25 | Auxiliary Equipment Circuit Breaker | Protects auxiliary equipment from electrical overload. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPERATOR AND CREW FOUR-POINT SEATBELT/AIR-RIDE SEAT ADJUSTMENT CONTROLS

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of operator and crew four-point seatbelt/air-ride seat adjustment controls which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about operator and crew four-point seatbelt/air-ride seat adjustment controls.

Table 1. Operator and Crew Four-Point Seatbelt/Air-Ride Seat Adjustment Controls.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

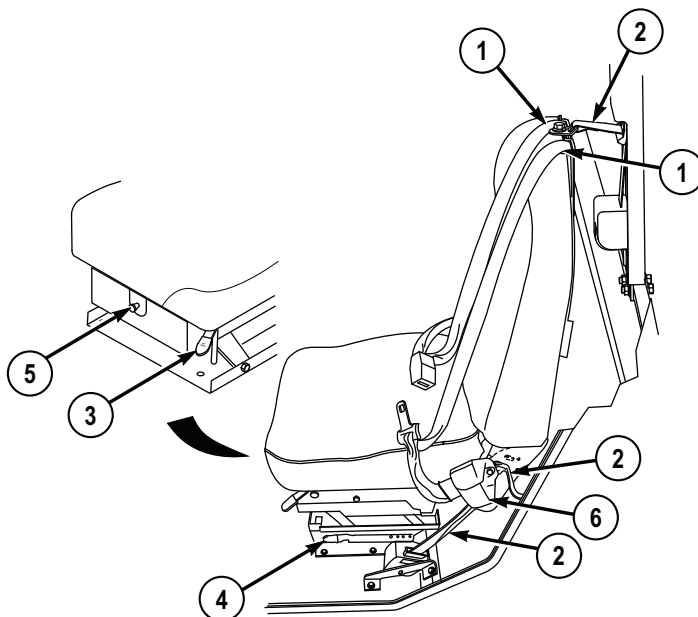


Figure 1.

Table 1. Operator and Crew Four-Point Seatbelt/Air-Ride Seat Adjustment Controls. - Continued

| Key | Control/ Indicator | Function |
|------------|---|--|
| 1 | Seatbelt | Secures personnel to seat. |
| 2 | Seat Connector Straps | Secures seat to cab frame. |
| 3 | Height Adjustment Control | Used to adjust seat height. |
| 4 | Forward/ Backward Adjustment Control | Used to move seat forward or backward on slides. |
| 5 | Ride Adjustment Control | Used to adjust seat tension and ride firmness. |
| 6 | Retractor | Locks seatbelt in event of accident, stows belt when not in use. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE
OPERATOR AND CREW THREE-POINT SEATBELT/SEAT ADJUSTMENT CONTROLS

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of operator and crew three-point seatbelt/seat adjustment controls which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about operator and crew three-point seatbelt/seat adjustment controls.

Table 1. Operator And Crew Three-Point Seatbelt/Seat Adjustment Controls.

| Key | Control/ Indicator | Function |
|-----|--------------------|----------|
|-----|--------------------|----------|

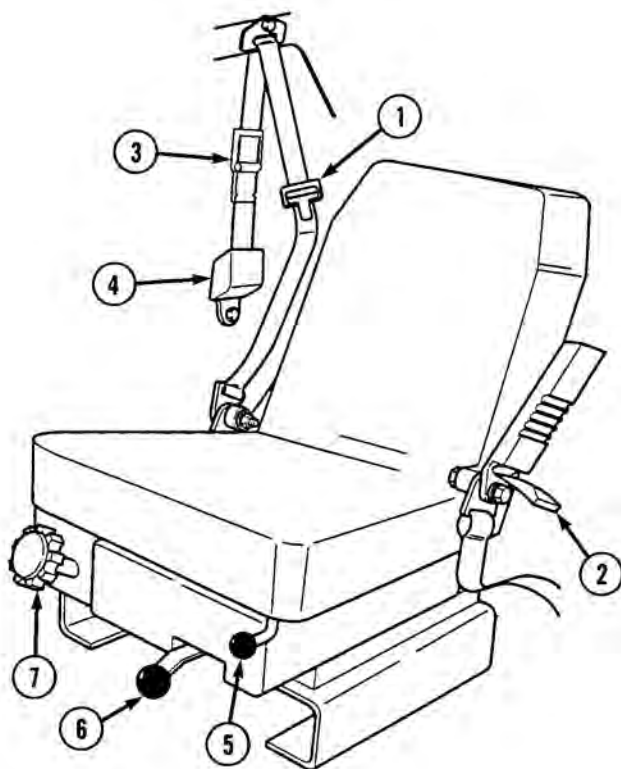


Figure 1.

| | | |
|---|----------------------|---------------------------------|
| 1 | Seatbelt | Secures personnel to seat. |
| 2 | Seat Connector Strap | Secures seat to cab frame. |
| 3 | Comfort Latch Buckle | Adjusts shoulder belt pressure. |

**Table 1. Operator And Crew Three-Point Seatbelt/Seat Adjustment Controls. -
Continued**

| Key | Control/ Indicator | Function |
|------------|---|--|
| 4 | Retractor | Locks seatbelt in event of accident, stows belt when not in use. |
| 5 | Height Adjustment Control | Used to adjust seat height. |
| 6 | Forward/ Backward Adjustment Control | Used to move seat forward or backward on slides. |
| 7 | Ride Adjustment Control | Used to adjust seat tension and ride firmness. |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
HYDRAULIC SELECTOR VALVE CONTROL**

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of Hydraulic Selector Valve Control which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about Hydraulic Selector Valve Control.

Table 1. Hydraulic Selector Valve Control.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

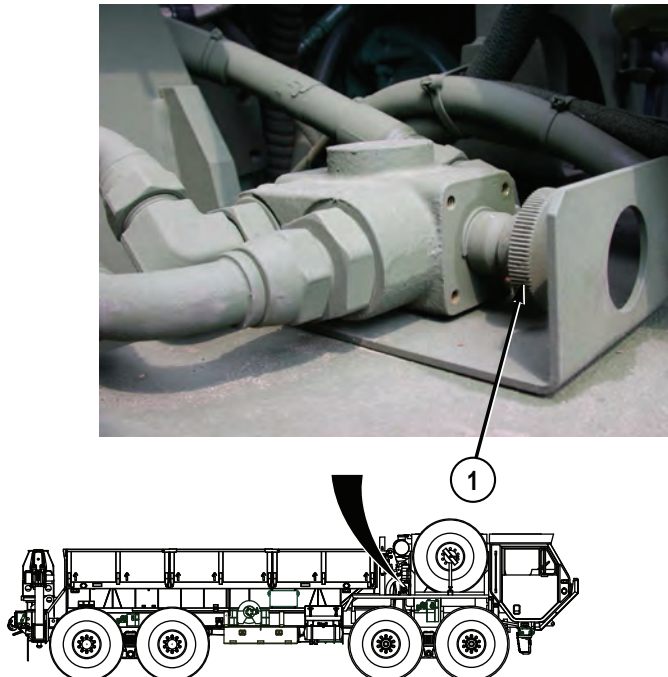


Figure 1.

Table 1. Hydraulic Selector Valve Control. - Continued

| Key | Control/ Indicator | Function |
|-----|--|---|
| 1 | Hydraulic Selector Valve Control | Diverts main hydraulic power to/from Self-Recovery Winch: Self-Recovery Winch operation - PULL OUT. All other operations - PUSH IN (shown). |

END OF WORK PACKAGE

OPERATOR MAINTENANCE RIFLE STOWAGE MOUNT

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of Rifle Stowage Mounts which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about Rifle Stowage Mount.

Table 1. Rifle Stowage Mount.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

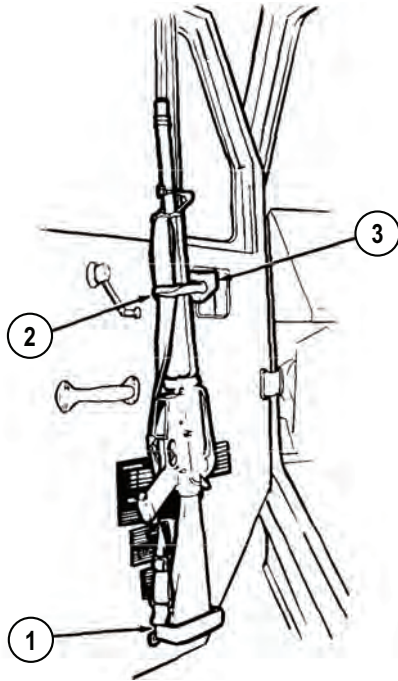
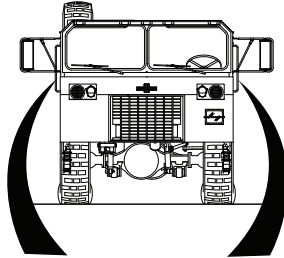


Figure 1.

| | | |
|---|-------------------|----------------------|
| 1 | Lower Rifle Mount | Holds butt of rifle. |
|---|-------------------|----------------------|

Table 1. Rifle Stowage Mount. - Continued

| Key | Control/ Indicator | Function |
|------------|-------------------------------|--|
| 2 | Rifle Mount Handle | Secures heat guard of rifle against top rifle mount. |
| 3 | Top Rifle Mount | Holds heat guard of rifle. |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
ARCTIC ENGINE HEATER CONTROLS AND INDICATORS**

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of Arctic Engine Heater controls and indicators (optional accessory) which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about Arctic Engine Heater controls and indicators (optional accessory).

Table 1. Arctic Engine Heater Controls And Indicators.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
| | | |

Figure 1.

Table 1. Arctic Engine Heater Controls And Indicators. - Continued

| Key | Control/ Indicator | Function |
|------------|--|---|
| 1 | ON/OFF Switch | Two position switch starts operation of arctic engine heater. |
| 2 | Arctic Engine Heater Light Indicator | Light illuminates when arctic engine heater switch is placed in ON position. If light does not illuminate or if light flashes intermittently, arctic engine heater is malfunctioning. |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
GAS PARTICULATE FILTER UNIT (GPFU) CONTROLS AND INDICATORS**

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of Gas Particulate Filter Unit (GPFU) controls and indicators which is used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about Gas Particulate Filter Unit (GPFU) controls and indicators.

Table 1. Gas Particulate Filter Unit (GPFU) Controls And Indicators.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

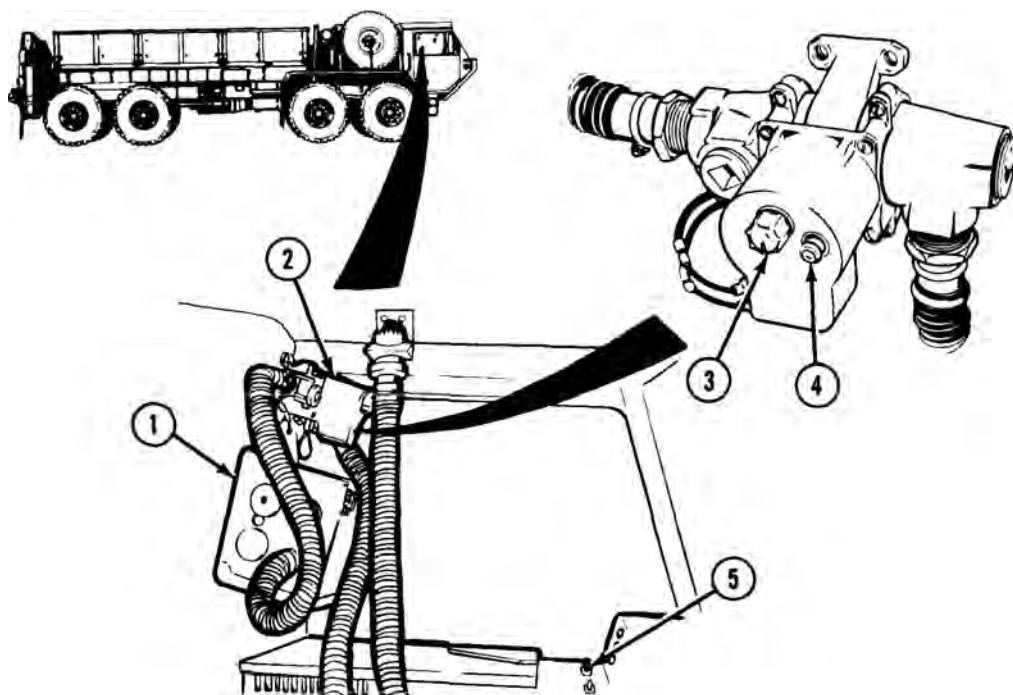


Figure 1.

| | | |
|---|----------------------------|--|
| 1 | Gas Particulate Filter | Filters nuclear, biological, and chemical (NBC) contaminants from air. |
| 2 | M-3 Heater | Warms air entering protective mask. |
| 3 | M-3 Heater Control Knob | Turn clockwise (CW) for warmer air turn counterclockwise (CCW) for cooler air. Turn to OFF to shut off heater. |
| 4 | M-3 Heater Indicator Light | Illuminates when heater is operating. |

Table 1. Gas Particulate Filter Unit (GPFU) Controls And Indicators. - Continued

| Key | Control/ Indicator | Function |
|------------|--|--------------------|
| 5 | GAS PARTICULAT E FILTER UNIT Switch | Turns GPFU ON/OFF. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE MACHINE GUN MOUNT

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of Machine Gun Mount (Optional Accessory) which is used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about Machine Gun Mount (Optional Accessory).

Table 1. Machine Gun Mount.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

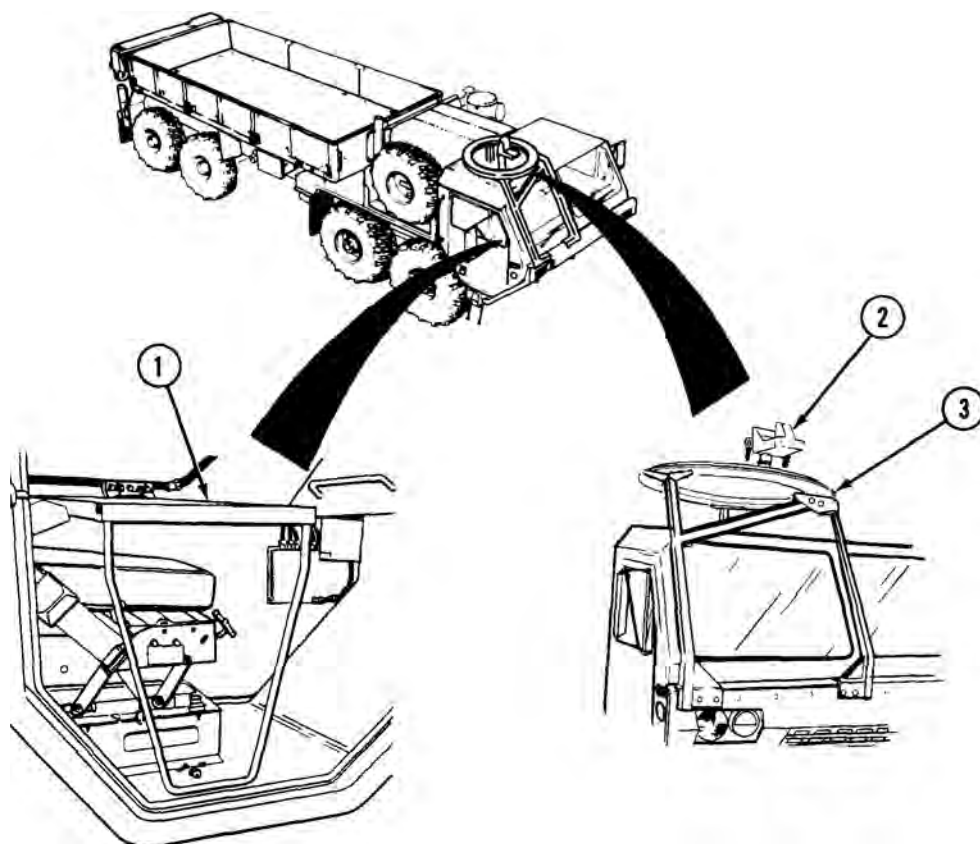


Figure 1.

| | | |
|---|-------------------|--|
| 1 | Machine Gun Mount | Secures machine gun to machine gun ring. |
| 2 | Machine Gun Ring | Allows machine gun to turn 360 degrees. |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
M-8 CHEMICAL ALARM CONTROLS AND INDICATORS**

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of M-8 Chemical Alarm controls and indicators which are used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about M-8 Chemical Alarm controls and indicators.

Table 1. M-8 Chemical Alarm Controls And Indicators.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

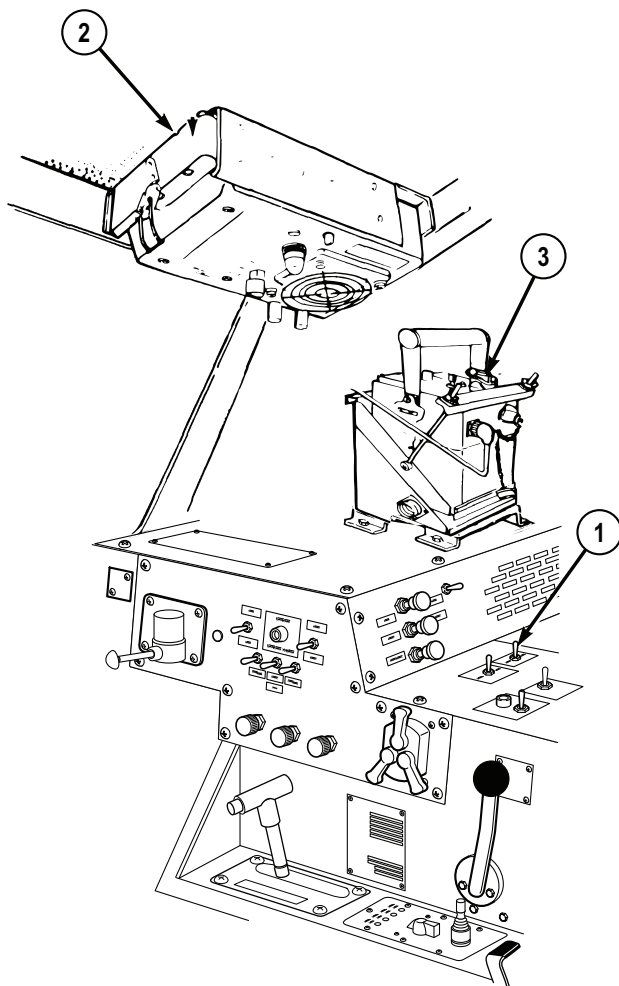


Figure 1.

| | | |
|---|---------------------------|-----------------|
| 1 | M-8 Chemical Alarm Switch | Operates alarm. |
|---|---------------------------|-----------------|

Table 1. M-8 Chemical Alarm Controls And Indicators. - Continued

| Key | Control/ Indicator | Function |
|------------|-------------------------------|---|
| 2 | M-8 Chemical Alarm | Sounds alarm when chemicals are detected. |
| 3 | Chemical Detector | Detects presence of chemical in the air. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE M-13 DECONTAMINATION KIT

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of M-13 Decontamination Kit which is used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about M-13 Decontamination Kit.

Table 1. M-13 Decontamination Kit.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

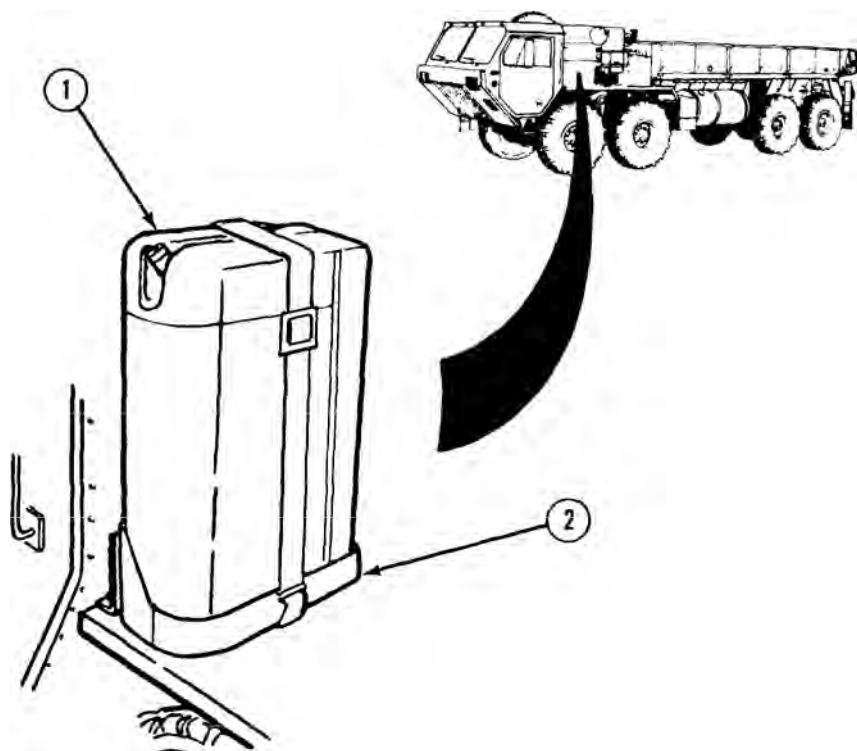


Figure 1.

| | | |
|---|---------------------------------|------------------------------------|
| 1 | M-13 Decontamination Unit | Holds and dispenses decontaminant. |
| 2 | Decontamination Unit Mount | Holds decontamination unit. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE RADIO INSTALLATION HARDWARE

CONTROLS AND INDICATORS INTRODUCTION

This section displays the location and describes the use of radio installation hardware which is used in the operation of HEMTT series vehicles. Controls and indicators described in this section are the same for all vehicles, except where otherwise indicated.

LOCATION AND USE OF CONTROLS AND INDICATORS

Know the location and proper use of every control and indicator before operating HEMTT series vehicles. Separate illustrations with keys are provided for learning about radio installation hardware.

Table 1. Radio Installation Hardware.

| Key | Control/ Indicator | Function |
|-----|-----------------------|----------|
|-----|-----------------------|----------|

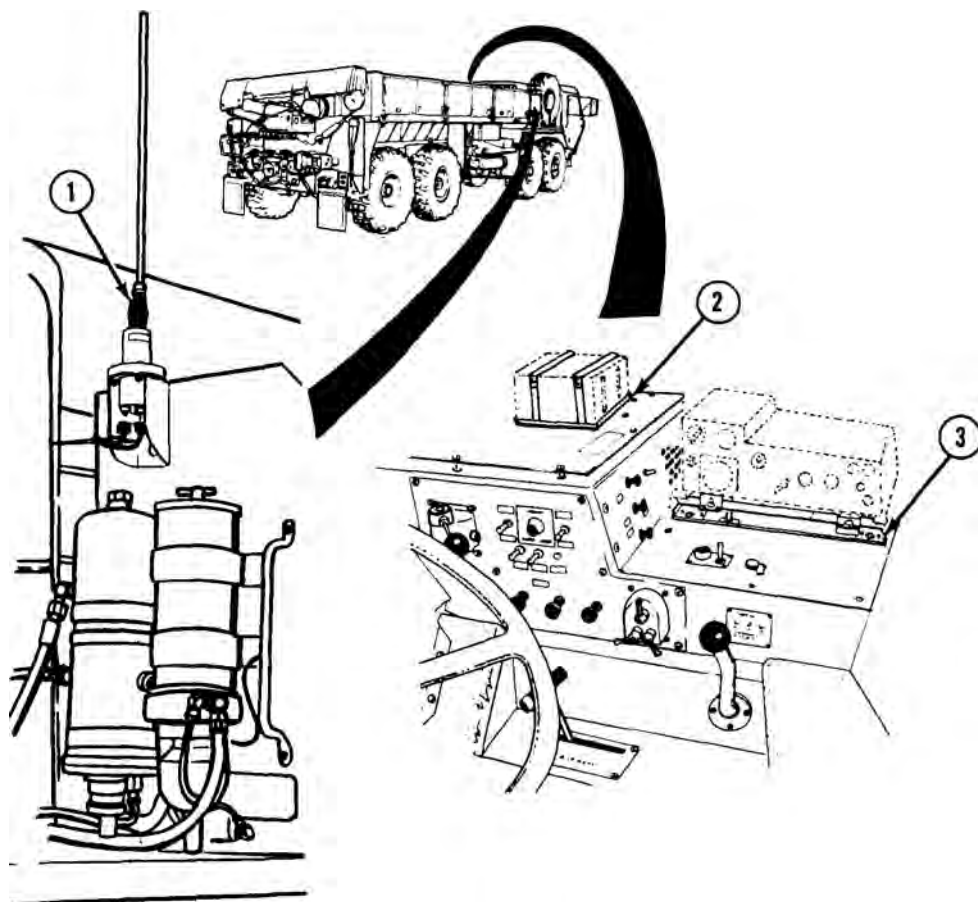


Figure 1.

| | | |
|---|--------------------------|----------------------|
| 1 | Antenna Matching Unit | Holds antenna. |
| 2 | Security Unit Mount | Holds security unit. |

Table 1. Radio Installation Hardware. - Continued

| Key | Control/ Indicator | Function |
|------------|-----------------------------------|-----------------------------|
| 3 | Receiver/ Transmitter Mount | Holds receiver/transmitter. |

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPERATE WINDSHIELD WIPERS/WASHER

INITIAL SETUP:

Not Applicable

OPERATE WINDSHIELD WIPERS

NOTE

- Some earlier vehicles are equipped with pull and turn control controls.
- ENGINE switch must be positioned to ON for windshield wipers to operate.

1. Turn WIPER control (1) clockwise to start and control speed of driver side windshield wiper.

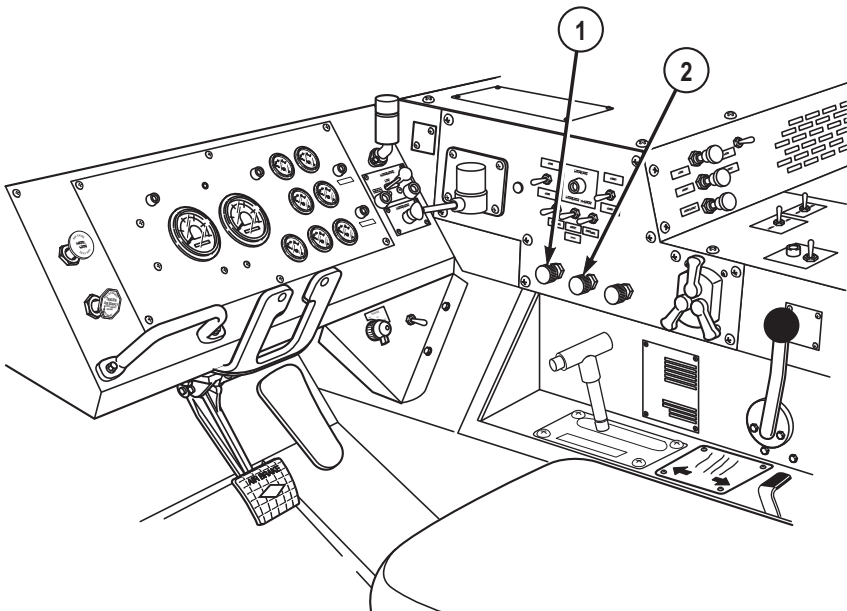


Figure 1.

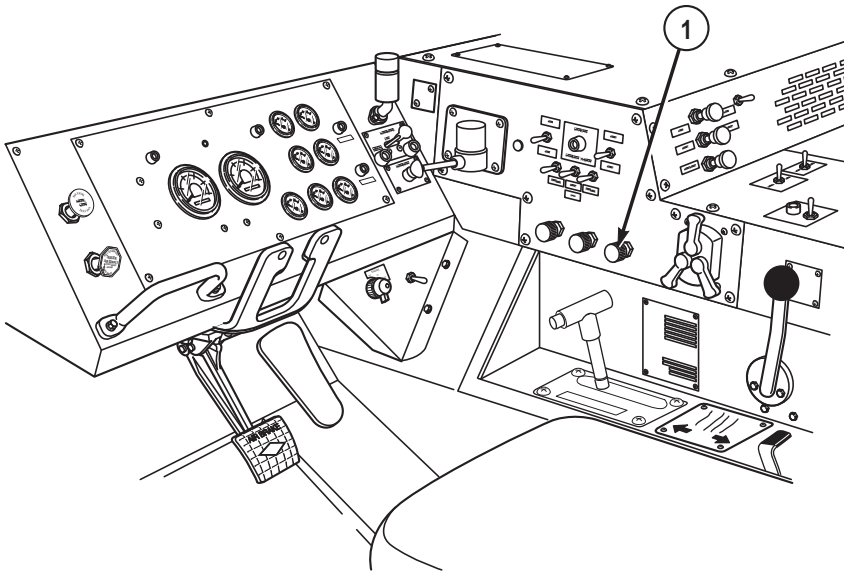
OPERATE WINDSHIELD WIPERS - Continued

2. Turn WIPER control (2) clockwise to start and control speed of passenger side windshield wiper.
3. Turn WIPER control (1) counterclockwise to stop driver side windshield wiper.
4. Turn WIPER control (2) counterclockwise to stop passenger side windshield wiper.
5. If wiper stops in middle of windshield:
 - a. Turn appropriate WIPER control (1 or 2) clockwise until wiper is at bottom of windshield.
 - b. Turn appropriate WIPER control (1 or 2) counterclockwise to stop wiper.

OPERATE WINDSHIELD WASHER**NOTE**

- Some earlier vehicles are equipped with pull and turn control controls.
- ENGINE switch must be positioned to ON for windshield washer to operate.

1. Push in and hold WASH control (1) to spray cleaning fluid on windshield.

*Figure 2.*

OPERATE WINDSHIELD WASHER - Continued

2. Release WASH control (1) to stop washer spray.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE CAB TEMPERATURE CONTROLS**

INITIAL SETUP:

Not Applicable

OPERATE PERSONNEL HEATER**NOTE**

- If heater does not blow hot air, ensure heater valves are open.
 - Air temperature is controlled by position of HEAT control.
 - Pull HEAT control out to increase temperature.
 - Push HEAT control in to decrease temperature.
1. Pull out HEAT control (1) to desired position.
 2. Set FAN switch (2) to LO or HI airflow.

OPERATE PERSONNEL HEATER - Continued

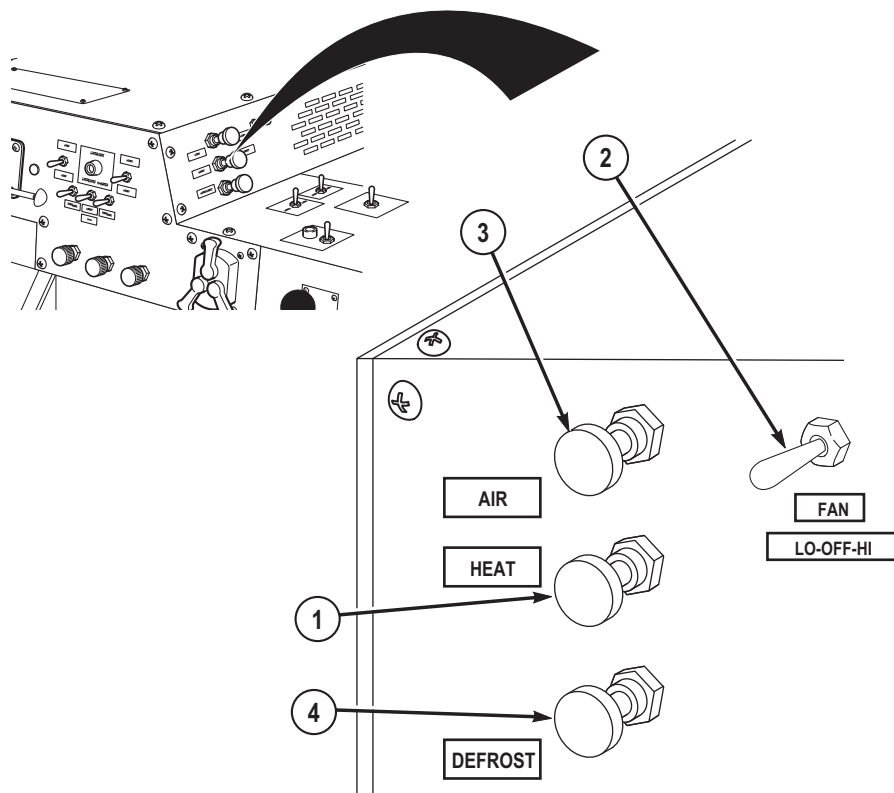


Figure 1.

NOTE

On later model vehicles, the AIR control has a "TURN TO LOCK" function which holds the vent open at the desired level when the control is rotated clockwise. Rotate control CCW until it stops to unlock the vent.

3. Adjust AIR control (3) as desired to control outside airflow for cab ventilation. Unlock, and push AIR control (3) all the way in to shut outside air ventilation off.
4. When personnel heater is no longer required:
 - a. Push in HEAT control (1) to turn heater off.
 - b. Set FAN switch (2) to OFF.

OPERATE WINDSHIELD DEFROST**NOTE**

If windshield defrost does not blow hot air, ensure heater valves are open.

1. Pull out DEFROST control (4) to turn on.

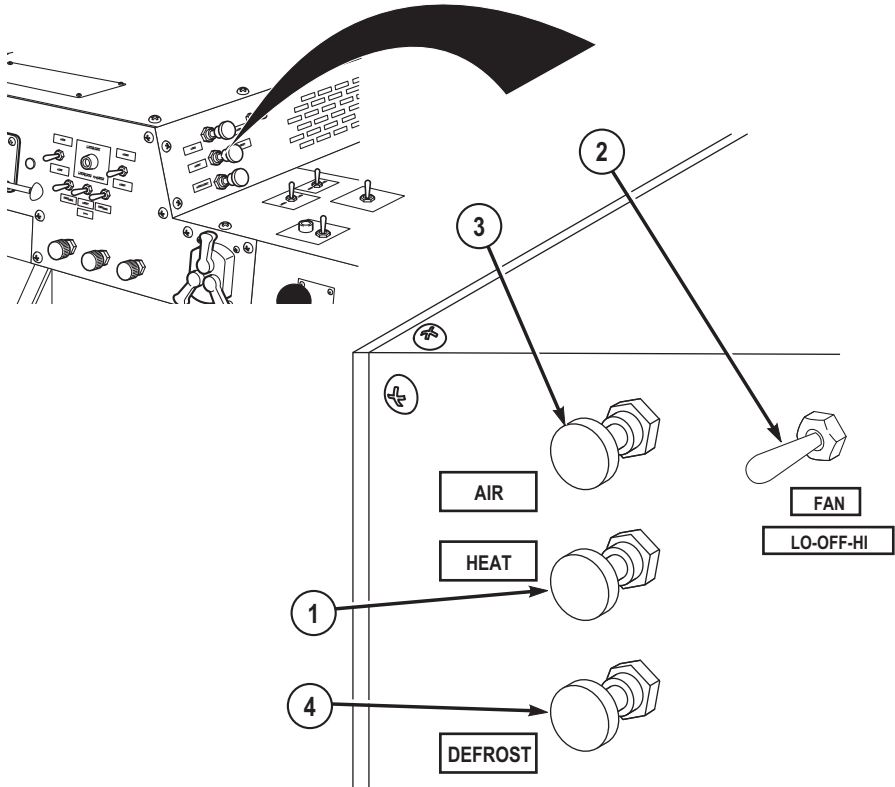


Figure 2.

2. Pull out HEAT control (1) to desired position.
3. Set FAN switch (2) to desired position.
4. When defrost is no longer required:
 - a. Push in DEFROST control (4) to turn off.
 - b. Push in HEAT control (1) to turn heater off.

OPERATE WINDSHIELD DEFROST - Continued

- c. Set FAN switch (2) to OFF.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE FIRE EXTINGUISHER**

INITIAL SETUP:

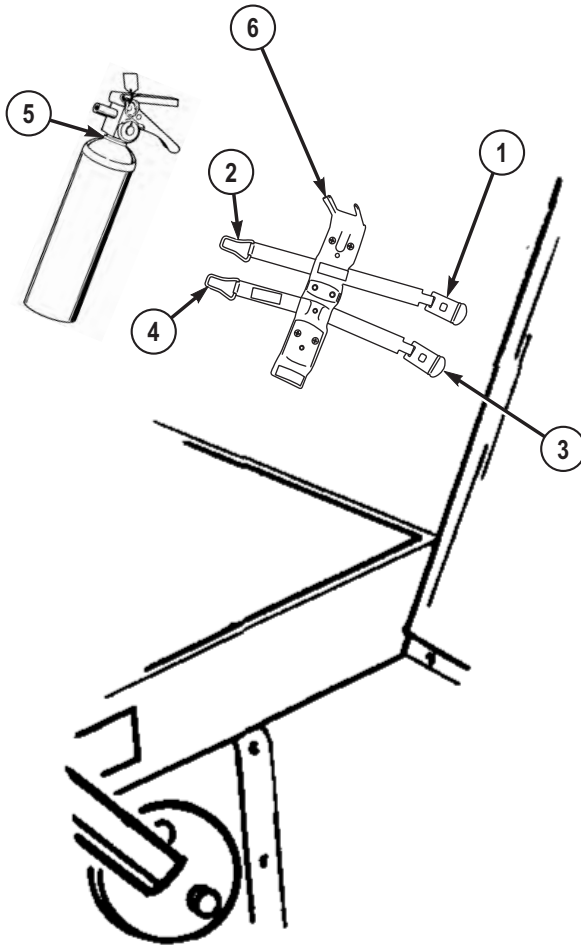
Not Applicable

REMOVE FIRE EXTINGUISHER FROM CAB

NOTE

Fire extinguisher is located on rear bulkhead on inside of cab, just inboard of driver's seat.

1. Pull up top clamp (1) and disengage from top hook (2).

REMOVE FIRE EXTINGUISHER FROM CAB - Continued*Figure 1.*

2. Pull up bottom clamp (3) and disengage from bottom hook (4).
3. Remove fire extinguisher (5) from bracket (6).

EXTINGUISH FIRE**NOTE**

- Fire extinguisher is a dry chemical type. Refer to MSDS for specific extinguisher warnings and cautions for use.
- Remember the word "PASS" to operate fire extinguisher:

EXTINGUISH FIRE - Continued

1. Hold fire extinguisher (1) upright and pull safety pin (2) to break plastic tie (3).

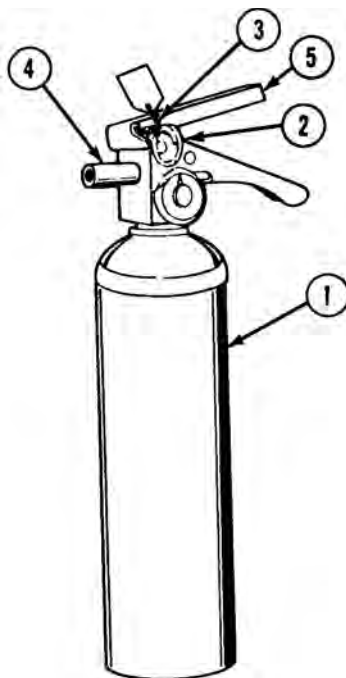
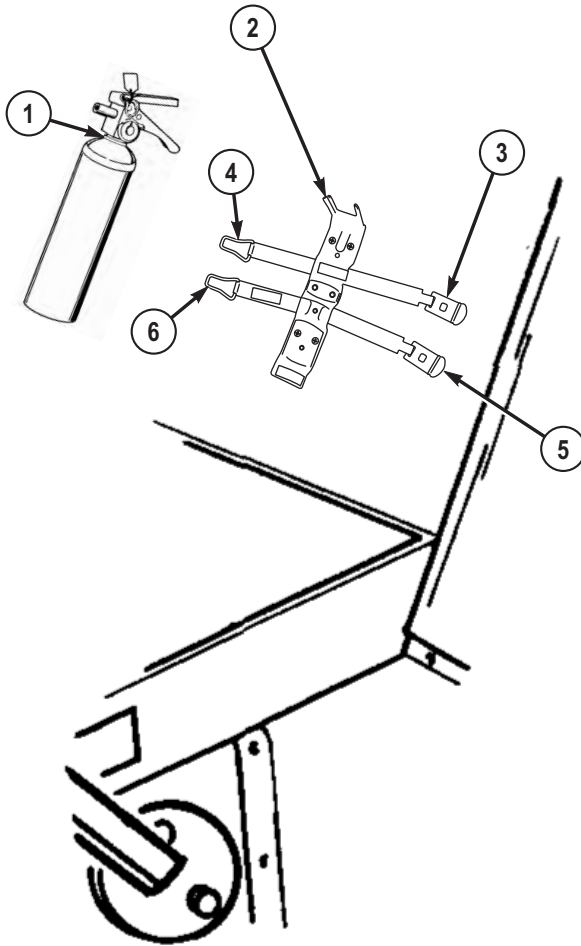


Figure 2.

2. Point nozzle (4) at base of fire.
3. Press down on stop lever (5) and spray discharge in a side-to-side motion at base of fire.
4. Let go of stop lever (5) when fire is out.
5. Notify field level maintenance to replace fire extinguisher.

INSTALL FIRE EXTINGUISHER IN CAB

1. Put neck of fire extinguisher (1) on bracket (2).

INSTALL FIRE EXTINGUISHER IN CAB - Continued*Figure 3.*

2. Hook top clamp (3) on top hook (4) and push top clamp (3) down, tightening strap.
3. Hook bottom clamp (5) on bottom hook (6) and push bottom clamp (5) down, tightening strap.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
OPERATE ACCESS LADDER**

INITIAL SETUP:

Not Applicable

INSTALL ACCESS LADDER**NOTE**

M1120 LHS and M1977 CBT stow access ladder in same location. M1120 LHS shown.

1. Pull rubber handle (1) out and up.

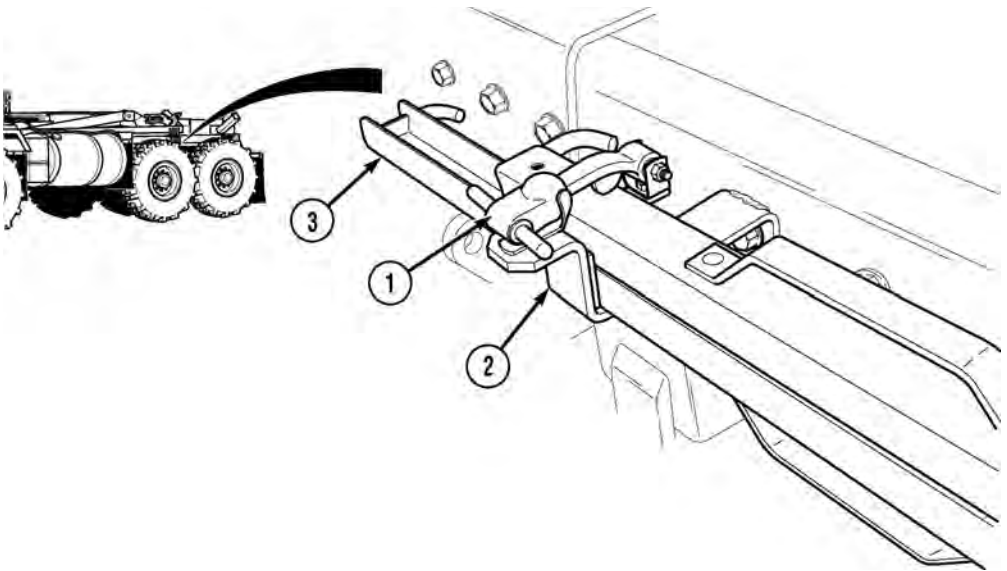


Figure 1.

2. Remove access ladder (3) from ladder brackets (2).
3. Open ladder (3).

INSTALL ACCESS LADDER - Continued**CAUTION**

Do not hit fuel/water separator when installing access ladder on passenger side front fender. If access ladder hooks hit fuel/water separator, glass may break.

4. Install access ladder hooks (5) in front skid plate holes (6), driver side front fender holes (7), or passenger side front fender holes (8), as required. Keep access ladder (3) clear of fuel/water separator (9).

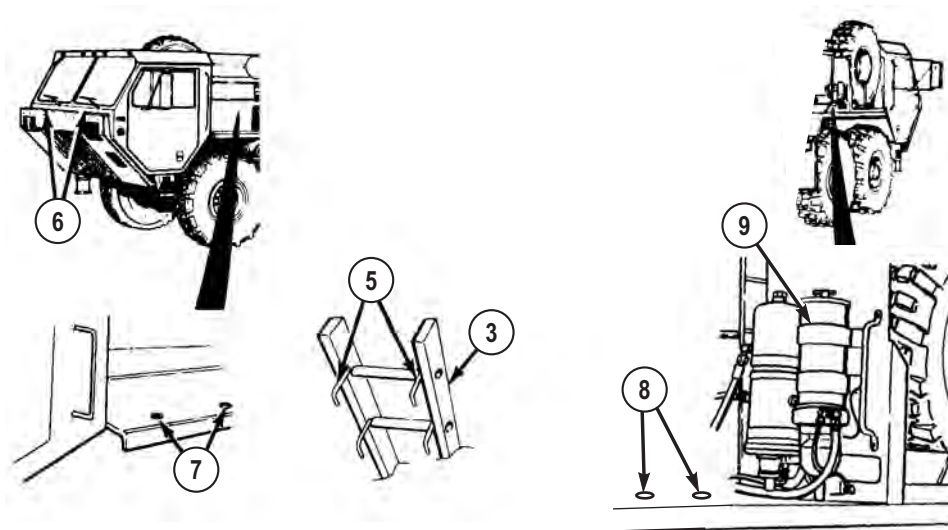
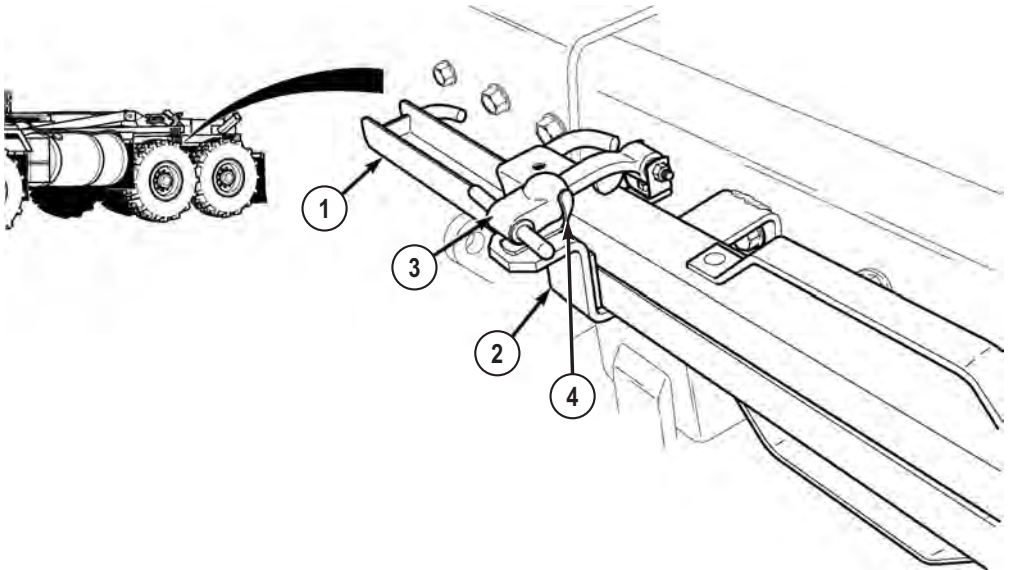


Figure 2.

STOW ACCESS LADDER**NOTE**

M1120 LHS and M1977 CBT stow access ladder in same location. M1120 LHS shown.

1. Close ladder (1).

STOW ACCESS LADDER - Continued*Figure 3.*

2. Install ladder (1) in brackets (2).
3. Pull out on rubber handles (3) and place into hooks (4).

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
OPERATE DRAIN PLUG**

INITIAL SETUP:

Not Applicable

REMOVE DRAIN PLUG**NOTE**

There are two drain plugs. One located on each side of cab floor, just below operator/crew seats.

1. Pull up on lever (1).

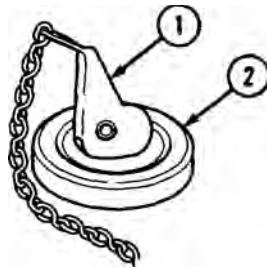


Figure 1.

2. Remove drain plug (2) to drain any liquid from floor of cab.

INSTALL DRAIN PLUG

1. Push drain plug (2) in opening on cab floor.

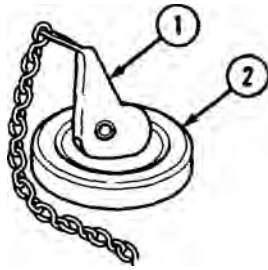
INSTALL DRAIN PLUG - Continued

Figure 2.

2. Press down on lever (1) to secure drain plug (2).

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE START ENGINE

INITIAL SETUP:

Not Applicable

START COLD ENGINE

WARNING



Do not start, crank engine, or move vehicle when anyone is near, working on, or working under vehicle. Failure to comply may result in injury or death to personnel.

WARNING



Keep away from moving engine parts, alternator belts, and pulleys while engine is running. Failure to comply may result in injury or death to personnel.

1. Pull out PARKING BRAKE control (1).

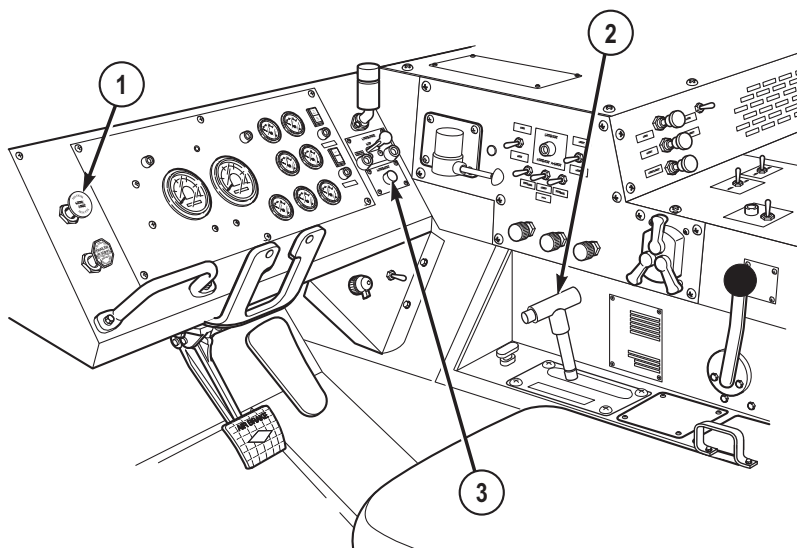
START COLD ENGINE - Continued

Figure 1.

2. Set transmission range selector (2) to N (neutral).

CAUTION

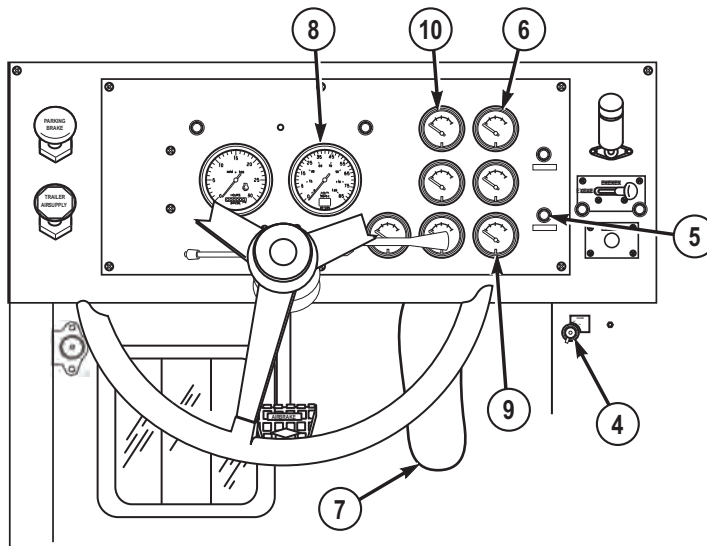
- Do not press ETHER START button more than three times in a single starting attempt. Failure to comply may result in damage to equipment.
 - Do not turn ENGINE switch to START position while engine is still running. Failure to comply may result in damage to equipment.
 - If engine fails to start, wait 15 seconds before next start attempt to allow starter motor to cool. Failure to comply may result in damage to equipment.
3. If outside temperature is above 45°F (7°C), go to Step (5). If outside temperature is below 45°F (7°C), go to Step (4).

NOTE

- Do Step (4):
 - One time for temperatures between 45°F and 10°F (7°C and -12°C).
 - Two times for temperatures between 10°F and -10°F (-12°C and -23°C).

START COLD ENGINE - Continued

- Three times for temperatures between -10°F and -25°F (-23°C and -32°C).
 - Repeat Steps (4) and (5) up to four times. If engine fails to start after four starting attempts, notify field level maintenance.
 - Under extreme cold temperatures, it may be necessary to press the ETHER START button two or three times in a single starting attempt. Wait approximately three seconds between each press.
4. Press and hold ETHER START button (3) for three seconds, release, and wait three seconds.
 5. Turn ENGINE switch (4) to START for no more than 15 seconds, or until engine starts.

*Figure 2.***NOTE**

- ENGINE switch will spring back to ON position when released.
 - AIR indicator may illuminate and buzzer may sound upon engine start.
6. Release ENGINE switch (4). Air indicator (5) may light and buzzer may sound.

START COLD ENGINE - Continued**CAUTION**

- Do not turn ENGINE switch to START position while engine is still running. Failure to comply may result in damage to equipment.
 - If OIL PRESS gauge does not show engine oil pressure within 10 to 15 seconds after starting engine, immediately shut off engine (WP 0051) and notify field level maintenance. Failure to comply may result in damage to equipment.
 - If engine fails to start, repeat Step (3) up to seven times. If engine doesn't start after eight starting attempts, notify field level maintenance.
7. Check that OIL PRESS gauge (6) reads 5 to 10 psi (34 to 69 kPa) at idle.
 8. Press throttle pedal (7) until tachometer (8) reads 800-1000 rpm.
 9. Run engine at 800-1000 rpm for about 5 minutes.

CAUTION

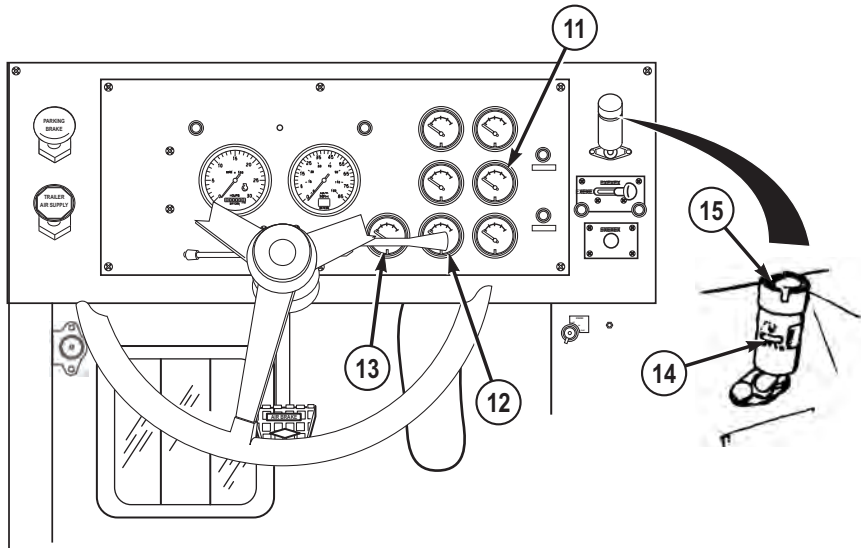
If red and green needles on AIR PRESS gauge do not read 60 to 120 psi (414 to 827 kPa) after warm-up, shut off engine (WP 0051) and notify field level maintenance. Failure to comply may result in damage to equipment.

10. Check that AIR PRESS gauge (9) reads 60 to 120 psi (414 to 827 kPa). AIR indicator (5) will light and buzzer will sound until both needles reach 60 to 75 psi (414 to 517 kPa).
11. Check that FUEL gauge (10) shows enough fuel to complete mission.

NOTE

WATER TEMP gauge may not show reading at engine idle.

12. Check that WATER TEMP gauge (11) does not read over 230°F (110°C).

START COLD ENGINE - Continued*Figure 3.*

13. Check that BATTERY gauge (12) reads between 24 and 30 volts.
14. Check that AMPERES gauge (13) shows positive reading.
15. Check that air filter restriction indicator (14) shows yellow.
16. If air filter restriction indicator (14) shows red, press button (15).
17. If air filter restriction indicator (14) still shows red and/or VACUUM INCHES H₂O window shows 18, shut off engine (WP 0051) and clean air filter elements. (WP 0169)

START WARM ENGINE**WARNING**

Do not start, crank engine, or move vehicle when anyone is near, working on, or working under vehicle. Failure to comply may result in injury or death to personnel.

START WARM ENGINE - Continued**WARNING**

Keep away from moving engine parts, alternator belts, and pulleys while engine is running. Failure to comply may result in injury or death to personnel.

1. Pull out PARKING BRAKE control (1).

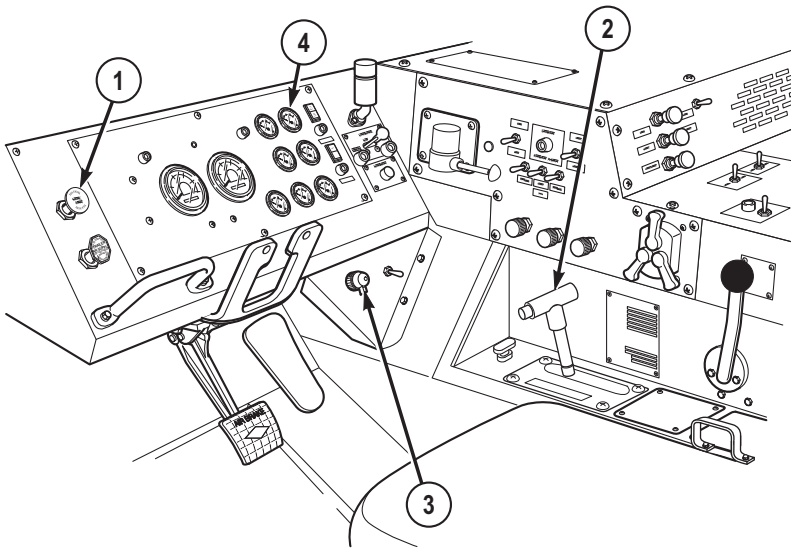


Figure 4.

2. Set transmission range selector (2) to N (neutral).
3. Turn ENGINE switch (3) to START for no longer than 10 seconds, or until engine starts.

NOTE

ENGINE switch will spring back to ON position when released.

4. Release ENGINE switch (3).

START WARM ENGINE - Continued**CAUTION**

If OIL PRESS gauge does not show engine oil pressure within 10 to 15 seconds after starting engine, shut off engine (WP 0051) immediately and notify field level maintenance. Failure to comply may result in damage to equipment.

NOTE

- Minimum engine oil pressure for safe operation (vehicle moving) is 30 psi (207 kPa).
 - At idle, engine oil pressure can drop as low as 5 psi (34 kPa), this is a normal condition.
5. Check that engine OIL PRESS gauge (4) indicates normal operating range of 40 to 70 psi (276 to 483 kPa) at 1800 to 2100 rpm.
 6. AIR PRESS gauge (5) reads 60 to 120 psi (414 to 827 kPa). AIR indicator (6) will light and buzzer will sound until both needles reach 60 to 75 psi (414 to 517 kPa).

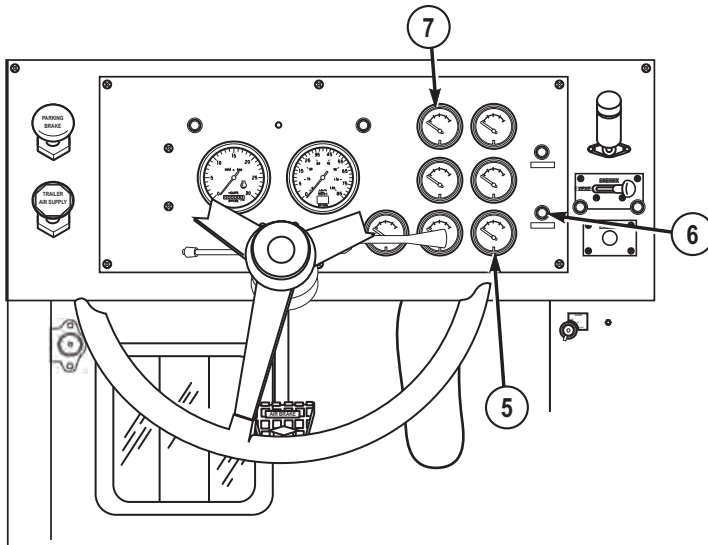


Figure 5.

7. Check that FUEL gauge (7) shows enough fuel to complete mission.

NOTE

WATER TEMP gauge may not show reading at engine idle.

START WARM ENGINE - Continued

8. Check that WATER TEMP gauge (8) does not read over 230°F (110°C).

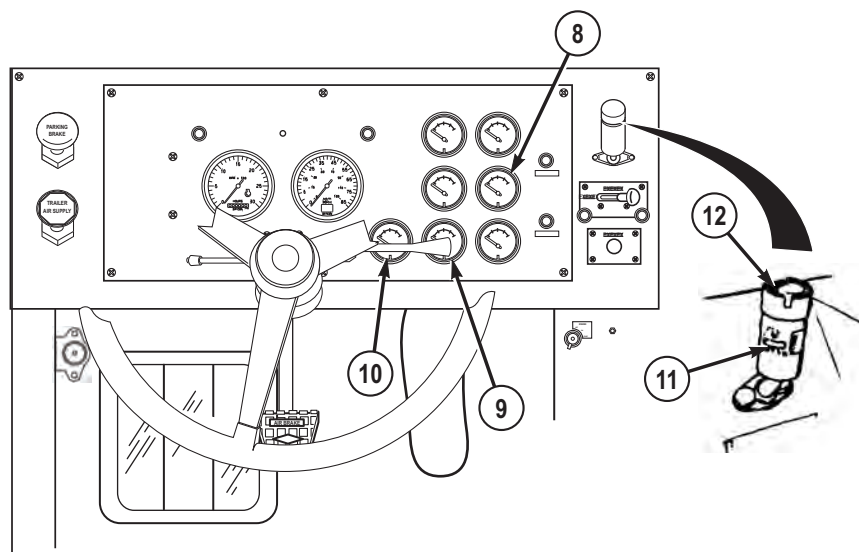


Figure 6.

9. Check that BATTERY gauge (9) reads between 24 and 30 volts.
10. Check that AMPERES gauge (10) shows positive reading.
11. Check that air filter restriction indicator (11) shows yellow.
12. If air filter restriction indicator (11) shows red, press button (12).
13. If air filter restriction indicator (11) still shows red and/or VACUUM INCHES H₂O window shows 18, shut off engine (WP 0051) and clean air filter elements. (WP 0169)

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPERATE PARKING BRAKES

INITIAL SETUP:

Not Applicable

OPERATE PARKING BRAKES

NOTE

- Vehicle may be equipped with manual parking brake valve (round/black knob) or automatic parking brake valve (square/yellow knob).
- Manual parking brake valve shown.

1. Pull out PARKING BRAKE control (1) to apply.

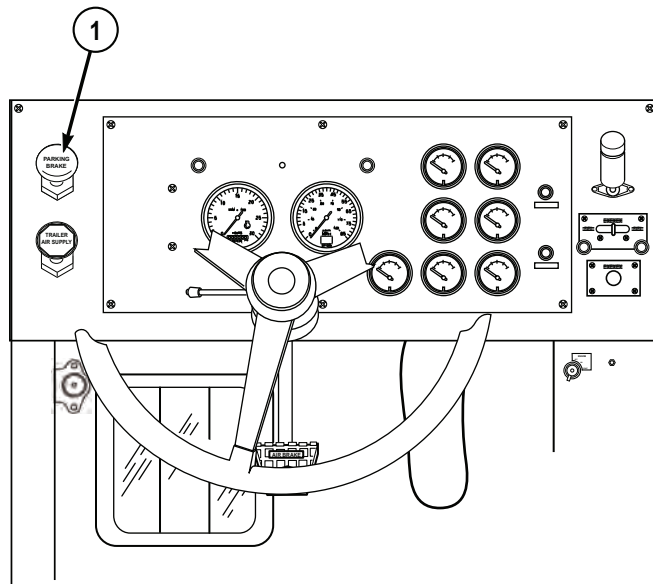


Figure 1.

OPERATE PARKING BRAKES - Continued

2. Push in PARKING BRAKE control (1) to release.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPERATE SERVICE BRAKES

INITIAL SETUP:

Not Applicable

OPERATE SERVICE BRAKES

WARNING



Do not press service brake treadle hard three or four times in a row. Air supply will be used up and service brakes will not work until air is built up again. Failure to comply may result in injury or death to personnel.

1. Ensure both needles (red and green) of AIR PRESS gauge (1) read at least 100 psi (690 kPa) before operating vehicle.

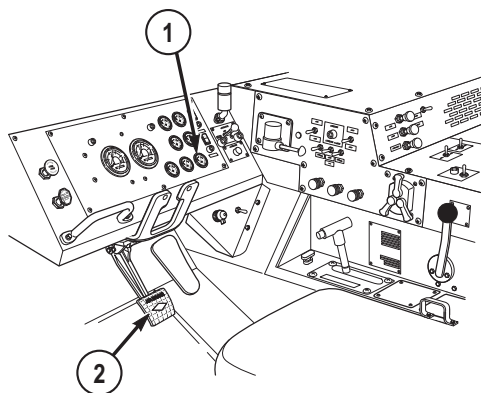


Figure 1.

OPERATE SERVICE BRAKES - Continued

2. Push down and hold service brake pedal (2) as needed to slow or stop vehicle.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPERATE TRAILER BRAKES

INITIAL SETUP:

Not Applicable

OPERATE TRAILER BRAKES

WARNING



Trailer handbrake control is used only when testing trailer brakes. Do not use trailer handbrake control while driving or the trailer may skid and jackknife, causing an accident. Failure to comply may result in injury or death to personnel.

1. Slowly pull back trailer handbrake control (1) to test application of trailer brakes.

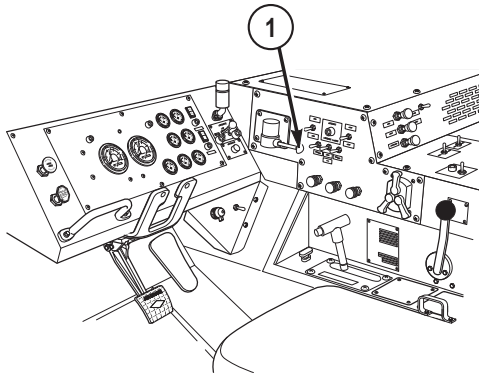


Figure 1.

OPERATE TRAILER BRAKES - Continued

2. Push trailer handbrake control (1) forward to test release of trailer brakes.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPERATE TRANSMISSION AND TRANSFER CASE

INITIAL SETUP:

Not Applicable

OPERATE TRANSMISSION

1. Push in button (1) and move transmission range selector (2) to desired position:
 - a. Select R (reverse) to:

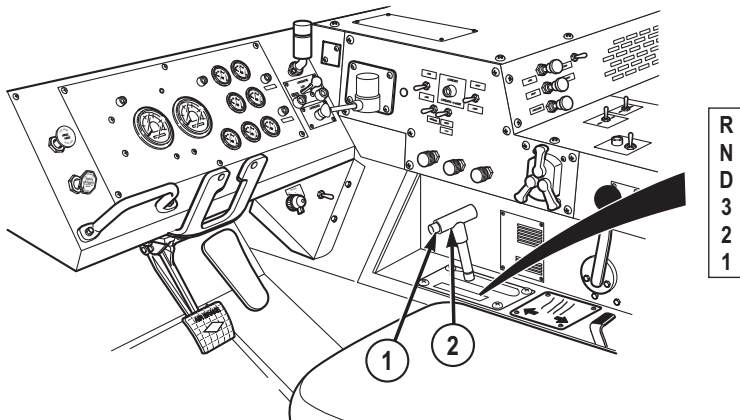


Figure 1.

- (1) Drive vehicle in reverse. (WP 0045)
 - b. Select N (neutral) to:
 - (1) Start engine. (WP 0038)
 - (2) Park vehicle. (WP 0050)
 - (3) Perform stationary power takeoff.
 - (4) Shift transfer case.
 - c. Select D (drive) to:
 - (1) Drive in normal conditions.

OPERATE TRANSMISSION - Continued

- (2) Drive vehicle forward (WP 0044) from a stop.
- d. Select 3 (third gear range) to:
 - (1) Drive vehicle in off-road conditions. (WP 0047)
 - (2) Drive vehicle in city traffic and on highway. (WP 0046)
 - (3) Haul a heavy load.
- e. Select 2 (second gear range) to:
 - (1) Drive down moderate grades.
 - (2) Control vehicle speed.
- f. Select 1 (first gear range) to:
 - (1) Drive vehicle in slippery conditions. (WP 0049)
 - (2) Drive vehicle up/down steep grade. (WP 0048)
 - (3) Give maximum vehicle speed control.

OPERATE TRANSFER CASE

1. Start engine. (WP 0038)

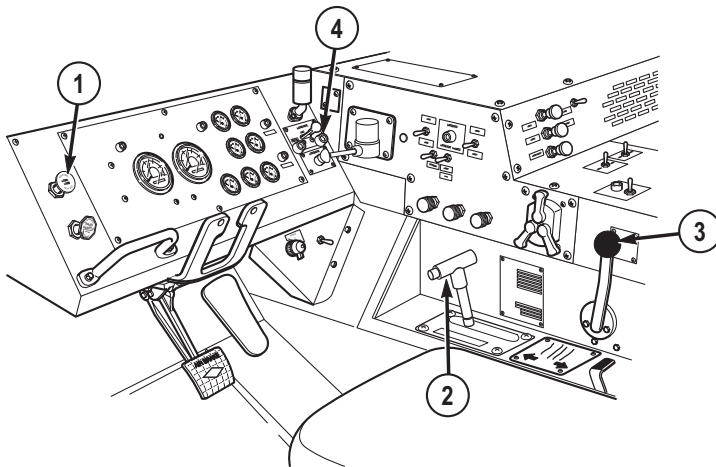


Figure 2.

2. Push in PARKING BRAKE control (1). (WP 0039)
3. Set transmission range selector (2) to N (neutral).

OPERATE TRANSFER CASE - Continued**CAUTION**

- Do not force TRANSFER CASE shift lever. Lever may work hard if there is drive line windup. Using excessive force on shift lever may cause damage to shift linkage or change linkage adjustment.
 - Do not move TRANSFER CASE shift lever when vehicle is moving, or when transmission is in gear. Severe damage to drive line may result.
4. Select transfer case position.

NOTE

If TRANSFER CASE shift lever is hard to move, set transmission range selector to D, then back to N. If transfer case will not shift, refer to troubleshooting procedures. (WP 0152)

5. Set TRANSFER CASE shift lever (3) to H (HI) for highway driving.

NOTE

Selecting L (LO) position automatically selects 8X8 drive in the vehicle traction control system.

6. Set TRANSFER CASE shift lever (3) to L (LO) for off-road driving, 8X8 indicator light (4) will illuminate.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
OPERATE ENGINE BRAKE**

INITIAL SETUP:

Not Applicable

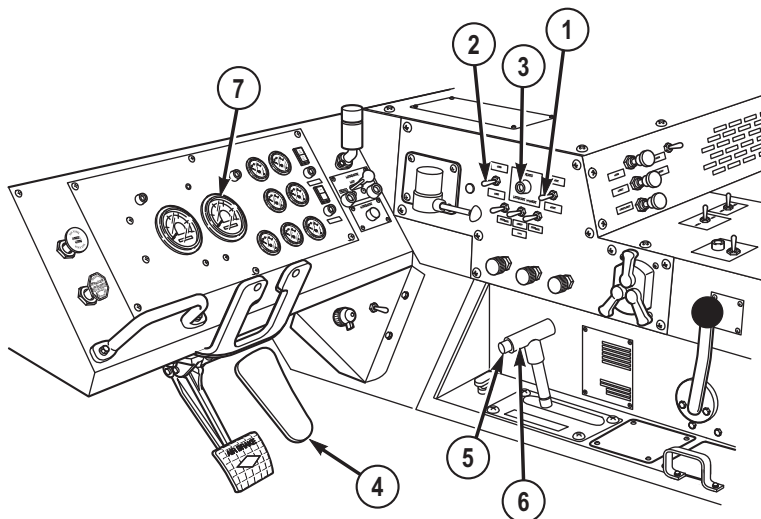
OPERATE ENGINE BRAKE**WARNING**

Do not use engine brake when vehicle is on slippery surface. If engine brake is used incorrectly, vehicle may skid out of control. Failure to comply may result in injury or death to personnel.

NOTE

Service brakes must be used in addition to engine brake for optimum braking capability.

1. Set JACOBS® ENGINE BRAKE HIGH/LOW switch (1) to LOW.

OPERATE ENGINE BRAKE - Continued*Figure 1.*

2. Set JACOBS® ENGINE BRAKE ON/OFF switch (2) to ON. JACOBS® ENGINE BRAKE indicator light (3) will come on.
3. Lift foot off throttle pedal (4). Engine brake will automatically slow vehicle.
4. If too much braking occurs, push in button (5) and set transmission range selector (6) to a higher range.
5. If more braking is required, set JACOBS® ENGINE BRAKE HIGH/LOW switch (1) to HIGH.

NOTE

Engine brake operates best when engine speed is between 1650 and 2100 rpm.

6. Check that tachometer (7) reads between 1650 and 2100 rpm whenever engine brake is used.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
DRIVE VEHICLE FORWARD**

INITIAL SETUP:

Not Applicable

PREPARE VEHICLE**NOTE**

If vehicle has less than 500 miles (805 km), check controls and indicators often during operation and listen for unusual noises or vibrations. Notify field level maintenance of any problems.

1. Remove and stow wheel chocks. (WP 0090)
2. Ensure hydraulic selector valve is in correct position for mission. (WP 0022)
3. Ensure Load Handling System (LHS) is secured in stowed position and cargo is secured.
4. Adjust seat and mirrors as needed. (WP 0092)
5. Adjust air-ride seat and mirrors as needed. (WP 0094)
6. Adjust three-point seatbelt as needed. (WP 0093)
7. Adjust four-point seatbelt as needed. (WP 0095)
8. Start engine. (WP 0038)
9. Turn on lights as required.

WARNING

Do not press service brake treadle hard three or four times in a row. Air supply will be used up and service brakes will not work until air is built up again. Failure to comply may result in injury or death to personnel.

10. Ensure both needles (red and green) AIR PRESS gauge (1) read at least 100 psi (690 kPa) before driving vehicle.

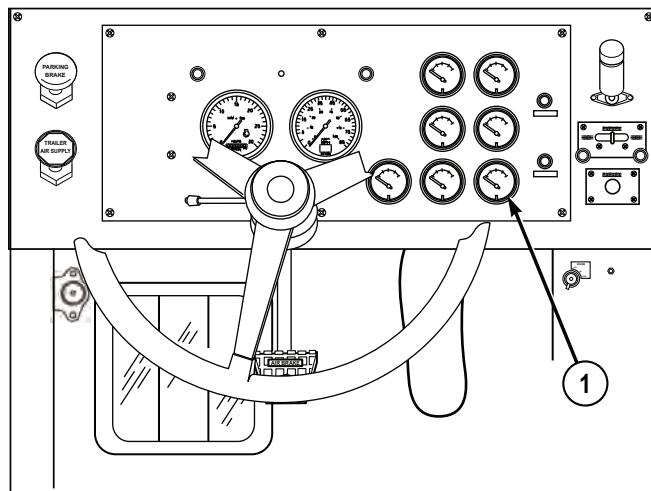
PREPARE VEHICLE - Continued

Figure 1.

DRIVE VEHICLE FORWARD

1. Drive vehicle in city traffic and on highway. (WP 0046)
2. Drive vehicle in off-road conditions. (WP 0047)
3. Drive vehicle in slippery conditions. (WP 0049)
4. Drive vehicle up/down steep grade. (WP 0048)

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE DRIVE VEHICLE IN REVERSE

INITIAL SETUP:

Personnel Required

Operator and Assistant - - - (2)

PREPARE VEHICLE

1. Remove and stow wheel chocks.
2. Adjust seat and mirrors as needed.
3. Adjust air-ride seat and mirrors as needed. (WP 0094)
4. Adjust three-point seatbelt as needed. (WP 0093)
5. Adjust four-point seatbelt as needed. (WP 0095)
6. Start engine. (WP 0038)
7. Turn on lights as required.

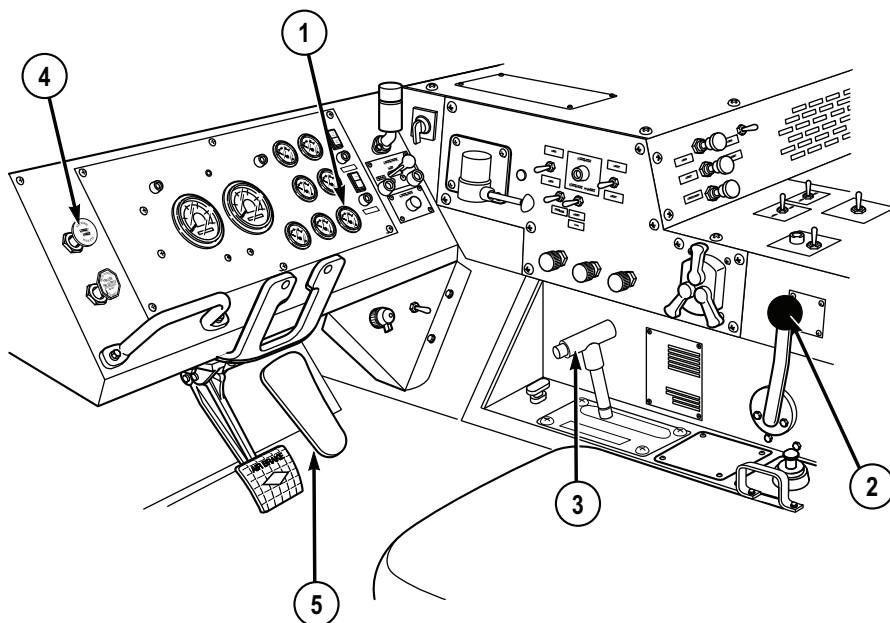
DRIVE VEHICLE IN REVERSE

WARNING



Do not press service brake treadle hard three or four times in a row. Air supply will be used up and service brakes will not work until air is built up again. Failure to comply may result in injury or death to personnel.

1. Make sure both needles (red and green) on AIR PRESS gauge (1) read at least 100 psi (690 kPa) before driving vehicle.

DRIVE VEHICLE IN REVERSE - Continued*Figure 1.***WARNING**

Driver has limited vision to rear. Ground guide is required when driving vehicle in reverse. Failure to comply may result in injury or death to personnel.

CAUTION

Do not move TRANSFER CASE shift lever when vehicle is moving or when transmission is in gear. Severe damage to drive line may result.

2. Set TRANSFER CASE shift lever (2) to HI.

NOTE

Reverse alarm will not sound if blackout lighting is selected.

3. Set transmission range selector (3) to R (reverse).

DRIVE VEHICLE IN REVERSE - Continued

4. Push in PARKING BRAKE control (4).
5. Slowly apply throttle pedal (5).
6. Follow direction from ground guide (as required).

CAUTION

Do not hold steering wheel at full left or full right position for longer than 10 seconds. Oil overheating and pump damage may result.

7. Accelerate, brake, and steer as required.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
DRIVE VEHICLE IN CITY TRAFFIC AND ON HIGHWAY**

INITIAL SETUP:

Not Applicable

OPERATE VEHICLE

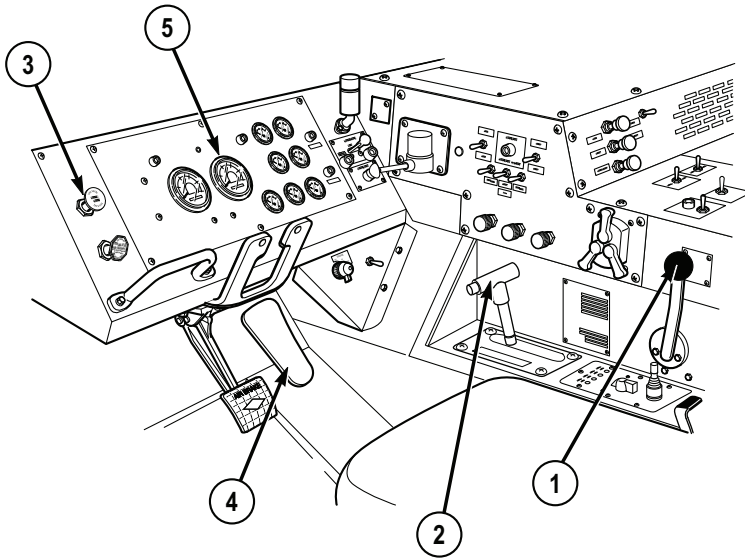
WARNING



Speed limits posted on curves reflect speeds that are considered safe for automobiles. Heavy vehicles with a high center of gravity can roll over at these speed limits. Use care and reduce your speed below the posted limit prior to entering a curve. Failure to comply may result in injury or death to personnel.

CAUTION

- Before starting over-the-road operation, make sure that the Hydraulic Selector Switch and PTO ENGAGE switch (WP 0022) are both set to OFF position. If AUTO circuits have failed, and manual load operation was used, set Hydraulic Selector Switch to MAN TRANS (WP 0022) position.
 - Do not move TRANSFER CASE shift lever when vehicle is moving or when transmission is in gear. Severe damage to drive line will result.
1. Set TRANSFER CASE shift lever (1) to HI.

OPERATE VEHICLE - Continued*Figure 1.*

2. Set transmission range selector (2) to D (drive).
3. Push in PARKING BRAKE control (3).

CAUTION

Maximum no-load governed engine speed is approximately 2250 rpm. Do not let engine speed go above this figure. Under full load, governed speed is approximately 2100 rpm. If engine speed goes above governed speeds, serious engine damage can result.

4. Slowly depress throttle pedal (4) until vehicle reaches desired speed. Tachometer (5) should read 1650 to 2100 rpm.

CAUTION

Do not hold steering wheel at full left or full right position for longer than 10 seconds. Power steering oil can overheat and pump can be damaged.

5. Accelerate, brake, and steer as required.

NOTE

Check system gauges often during vehicle operation. If gauges read other than normal, stop engine and troubleshoot problem.

OPERATE VEHICLE - Continued

6. Check that FUEL gauge (6) shows enough fuel to complete mission.

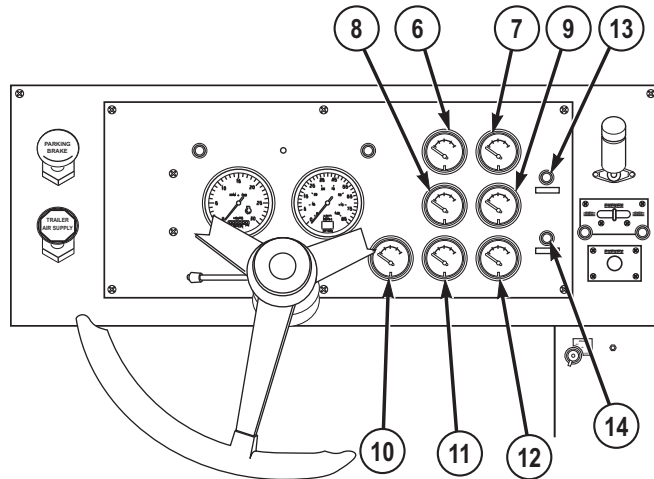


Figure 2.

7. Check that OIL PRESS gauge (7) reads 40 to 70 psi (276 to 483 kPa).
8. Check that TRANS TEMP (transmission temperature) gauge (8) reads 160 to 220° F (71 to 104° C).
9. Check that WATER TEMP gauge (9) reads 180 to 200° F (82 to 93° C).
10. Check that AMPERES gauge (10) reads about zero.
11. Check that BATTERY gauge (11) reads 24 to 28 volts.
12. Check that AIR PRESS gauge (12) red and green needles read 100 to 120 psi (690 to 827 kPa).
13. If OIL-WATER indicator (13) illuminates and buzzer sounds, park vehicle (WP 0050) and notify field level maintenance.
14. If WATER TEMP gauge (9) reads over 230°F (110° C), idle engine until water temperature cools. If water does not cool, shut off engine (WP 0051) and notify field level maintenance.
15. If OIL PRESS gauge (8) reads over 70 psi (483 kPa) or lower than 28 psi (193 kPa), park vehicle (WP 0050), shut off engine (WP 0051), and notify field level maintenance.

OPERATE VEHICLE - Continued

16. If AIR indicator (14) illuminates (red), perform immediate action for loss of air supply system pressure emergency procedures. (WP 0116)

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE DRIVE VEHICLE IN OFF-ROAD CONDITIONS

INITIAL SETUP:

Not Applicable

DRIVE VEHICLE IN OFF-ROAD CONDITIONS

CAUTION

Do not move TRANSFER CASE shift lever when vehicle is moving or when transmission is in gear. Severe damage to drive line may result.

NOTE

8x8 DRIVE indicator (WP 0021) will illuminate when TRANSFER CASE shift lever is positioned to L (LO).

1. Set TRANSFER CASE shift lever (1) to L (LO).

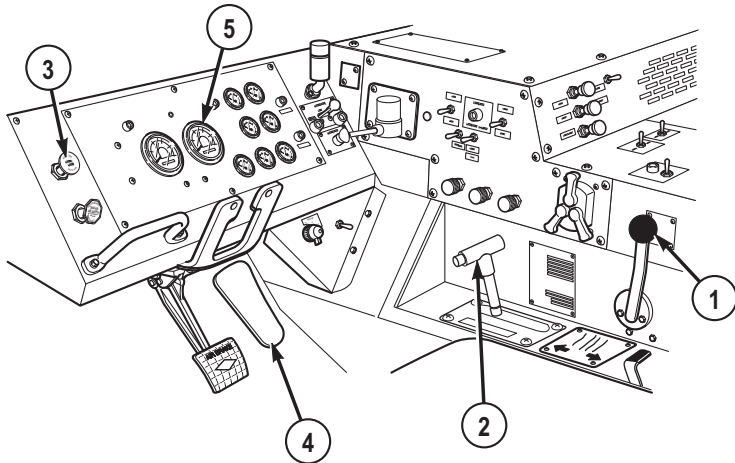


Figure 1.

2. Set transmission range selector (2) to 2 (2nd gear range) or 1 (1st gear range), depending on ground condition. (WP 0042)
3. Push in PARKING BRAKE control (3).

DRIVE VEHICLE IN OFF-ROAD CONDITIONS - Continued**CAUTION**

Never let engine exceed maximum no-load governed engine speed (approximately 2250 rpm) or maximum governed engine speed under load (approximately 2100 rpm). If engine is allowed to go over governed engine speeds, serious engine damage may result.

4. Slowly depress throttle pedal (4) until vehicle reaches desired speed. Tachometer (5) should read 1650 to 2100 rpm.

CAUTION

Do not hold steering wheel at full left or full right position for longer than 10 seconds. Power steering oil can overheat and pump may be damaged.

5. Accelerate, brake, and steer as required.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE DRIVE VEHICLE UP/DOWN STEEP GRADE

INITIAL SETUP:

Not Applicable

DRIVE VEHICLE UP STEEP GRADE

Press and hold throttle pedal (1) all the way down as vehicle moves up grade. Transmission will automatically downshift gears as needed.

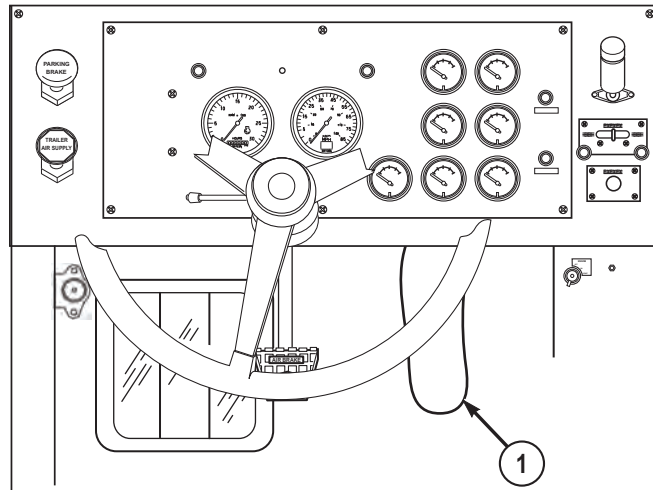


Figure 1.

DRIVE VEHICLE DOWN STEEP GRADE

CAUTION

- Do not allow speed to go above 2100 RPM when driving downhill, or damage to engine can result.
- Engine brake operates best when engine speed is between 1650 and 2100 RPM. Transmission torque converter lockup valve may disengage below 1650 RPM resulting in loss of engine power.

DRIVE VEHICLE DOWN STEEP GRADE - Continued

1. Set transmission range selector (1) to lower range as needed to keep engine speed on tachometer (2) between 1650 and 2100 RPM.

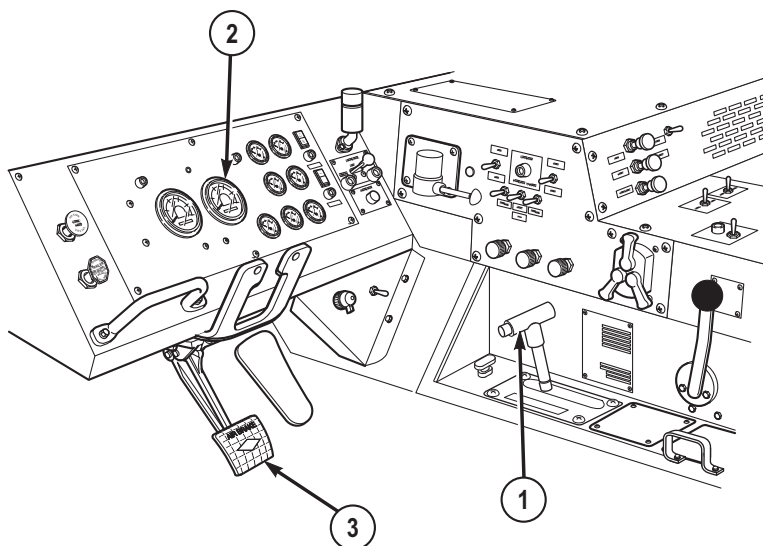


Figure 2.

WARNING

Do not press service brake treadle hard three or four times in a row. Air supply will be used up and service brakes will not work until air is built up again. Failure to comply may result in injury or death to personnel.

2. Use service brake pedal (3) as needed to control vehicle speed.
3. Operate engine brake (WP 0043) as required.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
DRIVE VEHICLE IN SLIPPERY CONDITIONS**

INITIAL SETUP:

Not Applicable

OPERATE VEHICLE

CAUTION

Do not shift TRACTION CONTROL lever while vehicle is moving.
Damage to drive line may result.

NOTE

After TRACTION CONTROL lever is shifted, let vehicle creep forward several feet to allow shift collars to fully engage.

1. If TRANSFER CASE shift lever (1) is set to LO, 8X8 DRIVE is automatically engaged and indicator light (2) will illuminate. Set TRACTION CONTROL lever (3) to INTER-AXLE DIFF. LOCK. Indicator light (4) will illuminate.

OPERATE VEHICLE - Continued

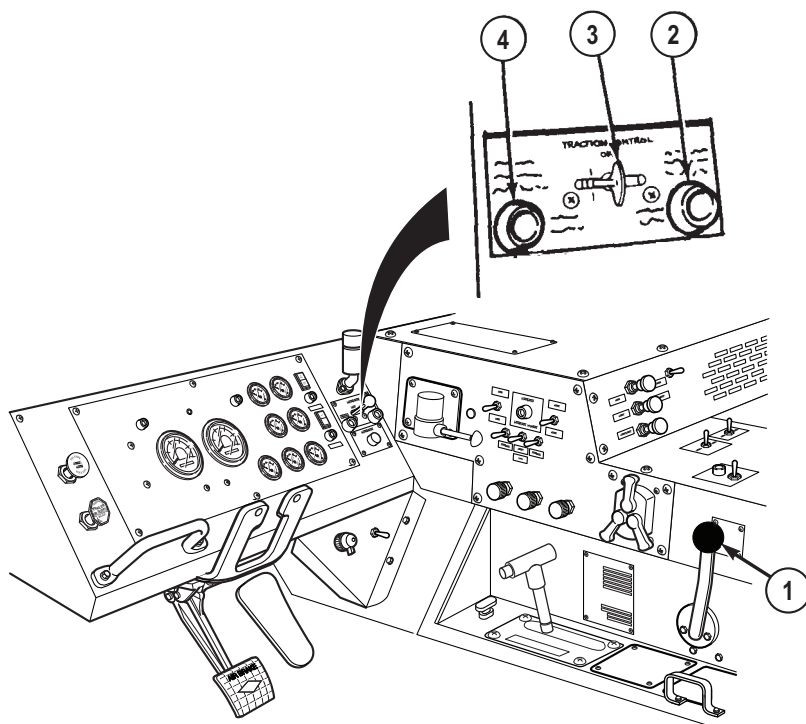


Figure 1.

2. If TRANSFER CASE shift lever (1) is set to HI, set TRACTION CONTROL lever (3) to 8X8 DRIVE. Indicator light (2) will illuminate.

CAUTION

Do not shift TRACTION CONTROL lever while vehicle is moving.
Damage to drive line may result.

NOTE

After TRACTION CONTROL lever is set to OFF position, let vehicle creep forward several feet to allow shift collars to fully disengage.

OPERATE VEHICLE - Continued

3. When vehicle gets good traction again, stop vehicle and set TRACTION CONTROL lever (3) to OFF. Indicator light (2 or 4 as applicable) will go out.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
PARK VEHICLE**

INITIAL SETUP:

Not Applicable

OPERATE VEHICLE

1. Lift foot off throttle pedal (1). Let automatic downshifting of transmission slow vehicle.

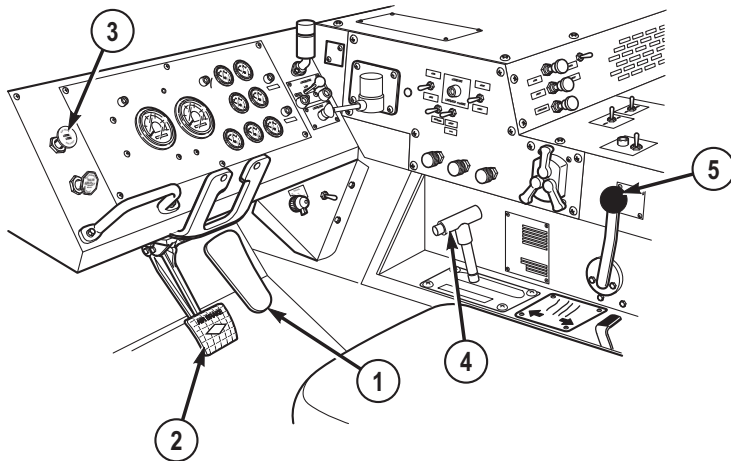


Figure 1.

WARNING

Do not press service brake treadle hard three or four times in a row. Air supply will be used up and service brakes will not work until air is built up again. Failure to comply may result in injury or death to personnel.

2. Push down on service brake pedal (2) until vehicle comes to complete stop.
3. Pull out PARKING BRAKE control (3).

OPERATE VEHICLE - Continued

4. Set transmission range selector (4) to N (neutral).
5. Leave TRANSFER CASE shift lever (5) set to HI or LO.
6. Align front tires in straight-ahead position.
7. Install wheel chocks (WP 0090) as required.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE SHUT OFF ENGINE

INITIAL SETUP:

Not Applicable

SHUT OFF ENGINE

1. Park vehicle. (WP 0050)

CAUTION

Before shutting down engine, run at reduced speed (800 to 1000 rpm) at no-load for three to five minutes to allow turbocharger to slow down and cool off. Turbocharger may be damaged if not allowed to cool off.

2. Push down and hold throttle pedal (1) until tachometer (2) reads 800 to 1000 rpm for three to five minutes.

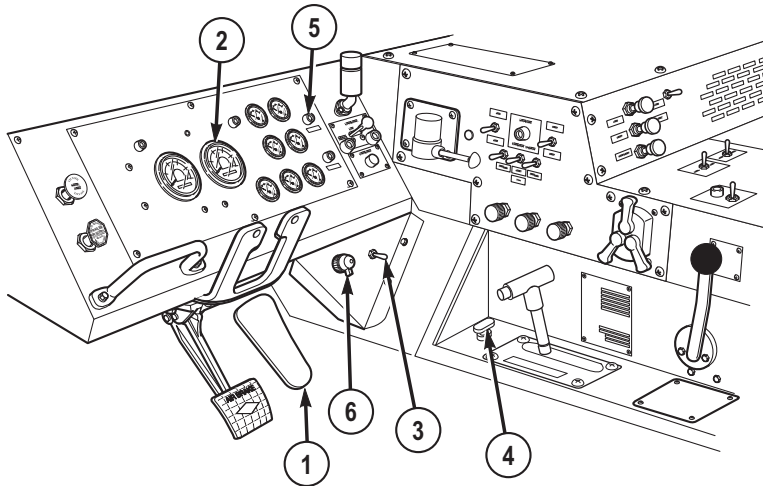


Figure 1.

3. Lift foot off throttle pedal (1).

SHUT OFF ENGINE - Continued**NOTE**

Vehicle may have either ENGINE STOP switch or engine shut down handle, it will never have both.

4. Hold ENGINE STOP switch (3) all the way down, or pull engine shut down handle (4) all the way up until engine shuts down. Buzzer will sound, and OIL-WATER indicator (5) will light.
5. Release ENGINE STOP switch (3) or push engine shut down handle (4) back in.
6. Turn ENGINE switch (6) to OFF. Buzzer and OIL-WATER indicator (5) will go out.

CAUTION

Failure to place light switches in OFF position when vehicle is not in use may cause damage to equipment.

7. Turn off lights as required.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE CONTAINER HANDLING UNIT (CHU) OPERATION

INITIAL SETUP:

Not Applicable

PREPARATION FOR CONTAINER MODE

NOTE

There are two strut and slider assemblies. Driver side shown.

1. Pull down pivot lockpin handle (1), and rotate rear slider (2) over tire until pivot lockpin locks.

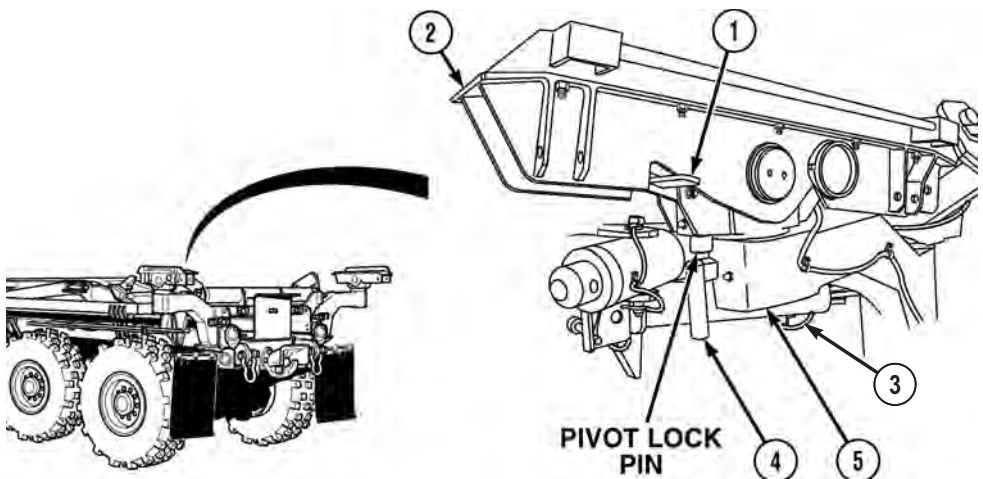
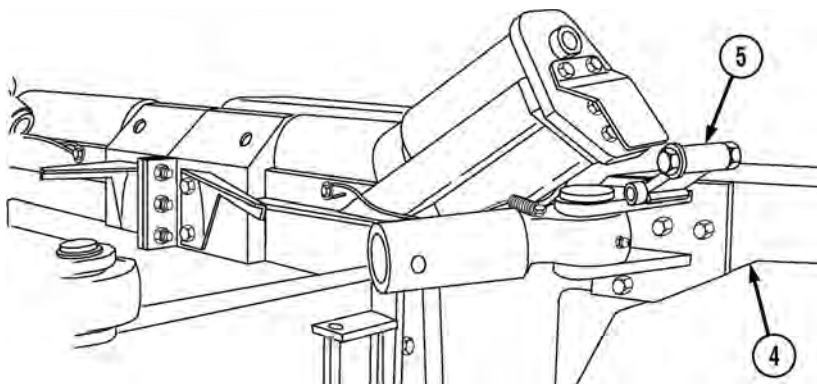
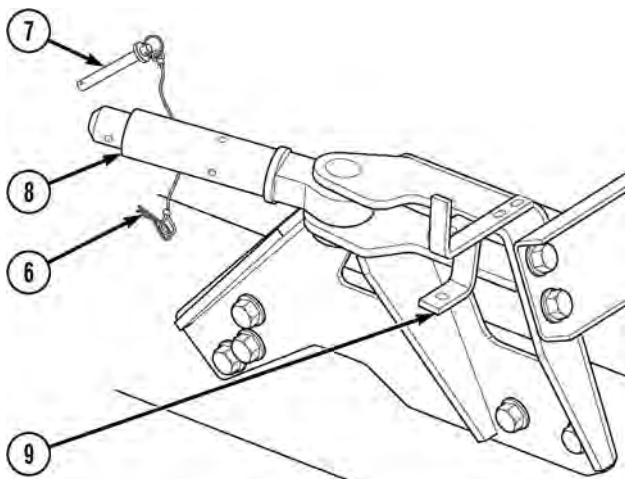


Figure 1.

2. Lift rear of slider (2) and, using handle (3), rotate slider arm (4) outward.
3. Rotate flip lock (5) up to hold slider arm (4). Release slider arm.

PREPARATION FOR CONTAINER MODE - Continued*Figure 2.*

4. Remove lockpin (6) and pin (7) from long strut (8) and strut bracket (9).

*Figure 3.*

PREPARATION FOR CONTAINER MODE - Continued**WARNING**

Ensure fingers and hands are not between strut front and rear halves. Fingers and hands could become pinched during assembly. Failure to comply may result in injury or death to personnel.

5. Align long strut (8) with short strut (10).

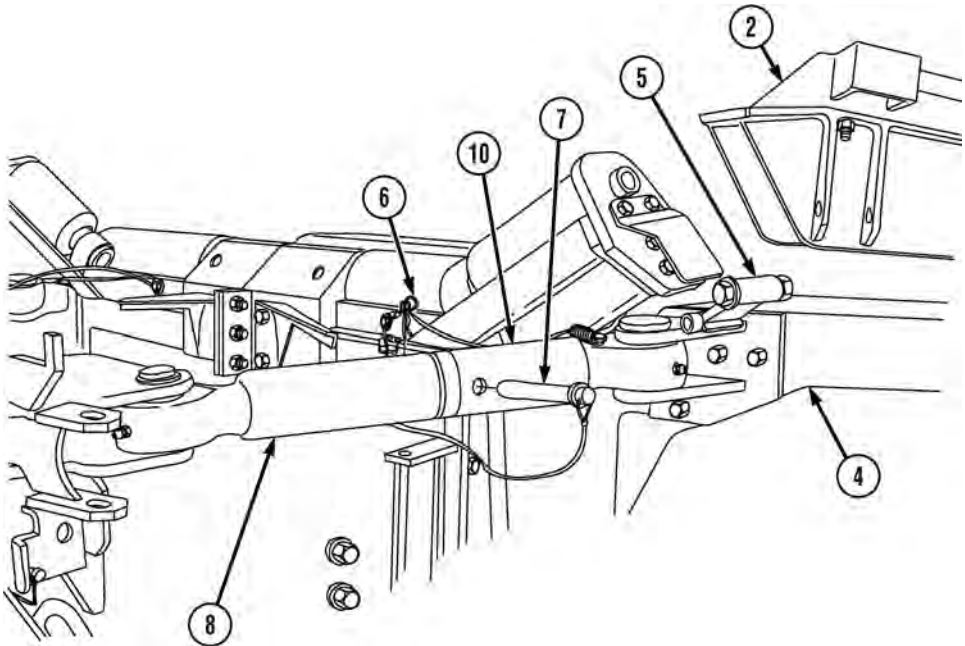


Figure 4.

6. Rotate slider arm (4) out with handle, and disengage flip lock (5) by rotating it down.
7. Position long strut (8) into short strut (10), install pin (7), and lockpin (6). Ensure slider (2) is in straight ahead position.
8. Repeat Steps (1) through (7) for passenger side slider assembly.

NOTE

There are two bumper supports and container guides. Driver side shown.

PREPARATION FOR CONTAINER MODE - Continued

Bumper support is in container mode when bumper support is positioned completely over bracket, toward rear of vehicle.

9. Remove lockpin (11) from bumper support (12).

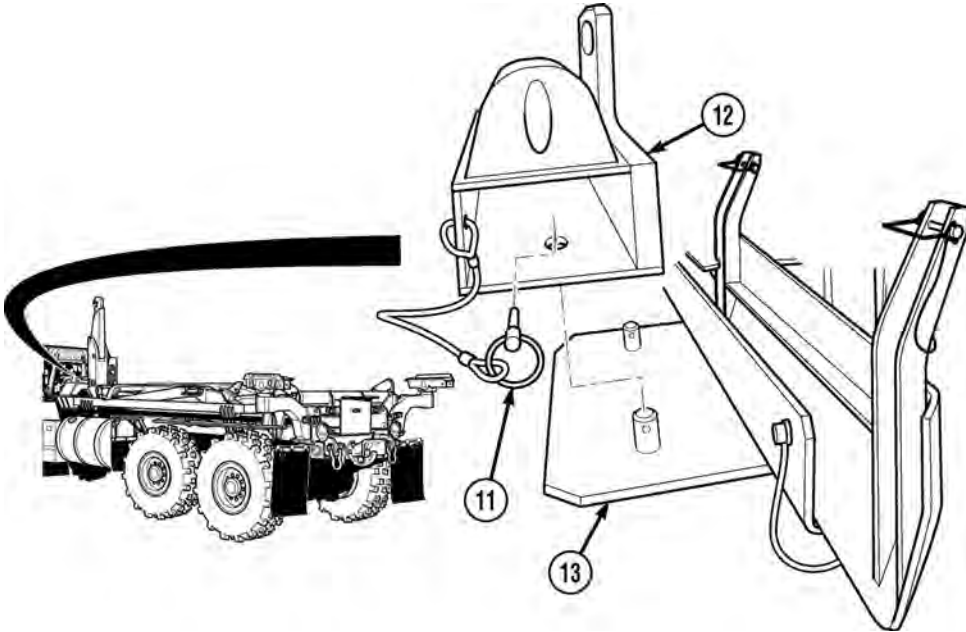


Figure 5.

10. Remove bumper support (12) from stowage tray (13).
11. Install bumper support (12) on front container support (14) and install lockpin (11).

PREPARATION FOR CONTAINER MODE - Continued

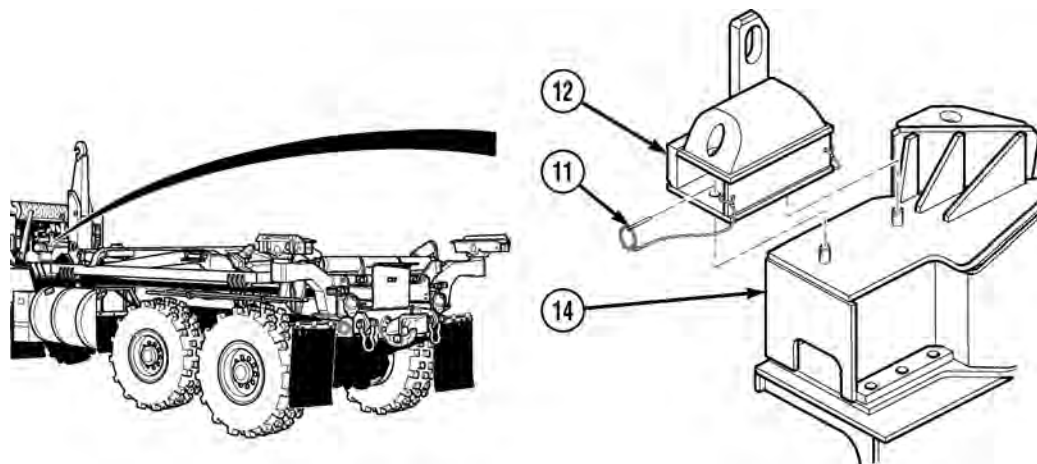


Figure 6.

12. Remove lockpin (15), pin (16), and container guide (17) from storage tray (13).

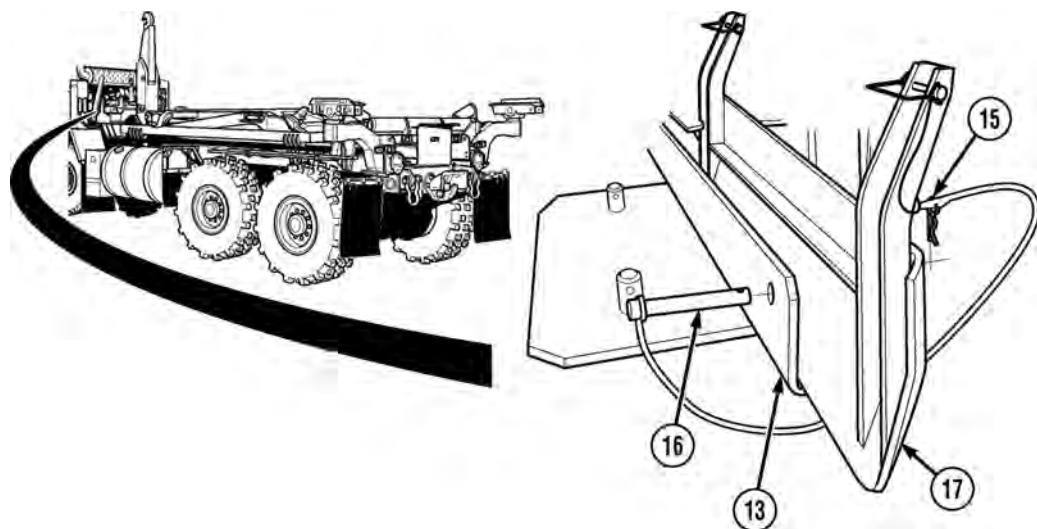


Figure 7.

13. Install pin (16) and lockpin (15) in storage tray (13).
 14. Remove two lockpins (18) from container guide (17).

PREPARATION FOR CONTAINER MODE - Continued

WARNING

Hands may be pinched when installing container guide into slider. Hold container guides by outer edges of plate to avoid pinching between container guides and slider. Failure to comply may result in injury or death to personnel.

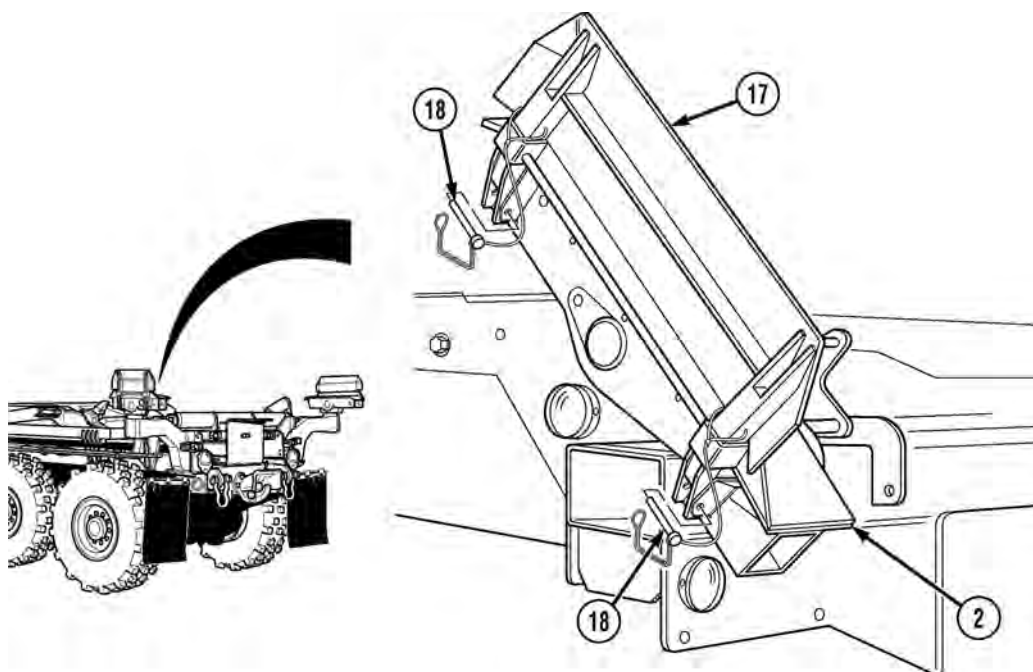


Figure 8.

15. Position container guide (17) in slider (2) and install two lockpins (18).
16. Repeat Steps (9) through (15) for passenger side.

NOTE

There are two rear container locks on front lift adapter. Driver side shown.

17. Remove lockpin (19), pin (20), and rear container lock (21) from stowage bracket on front lift adapter (22).

PREPARATION FOR CONTAINER MODE - Continued

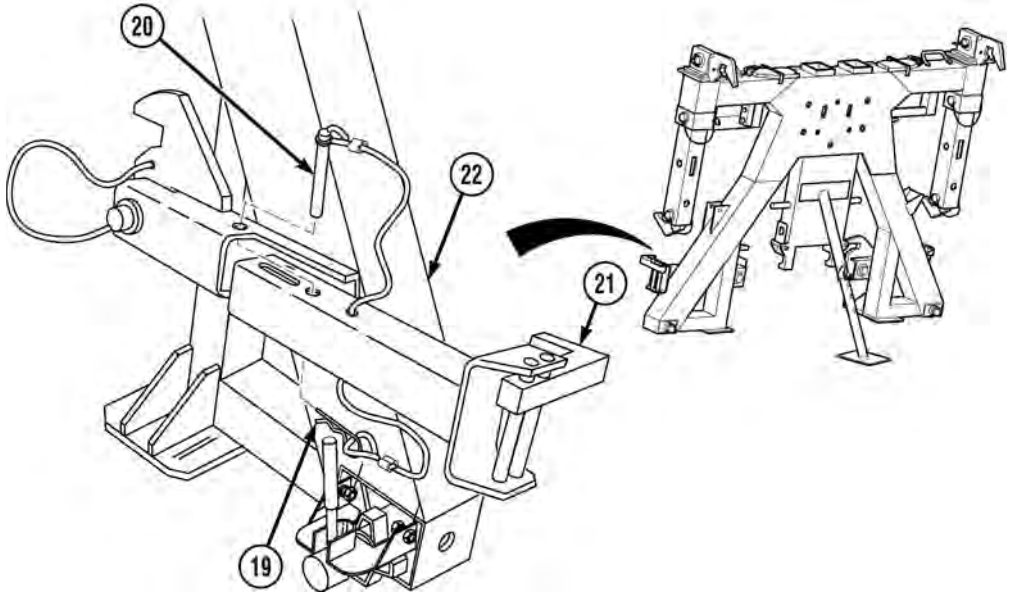


Figure 9.

18. Turn lock handle (23) on slider (2) forward to unlock position.

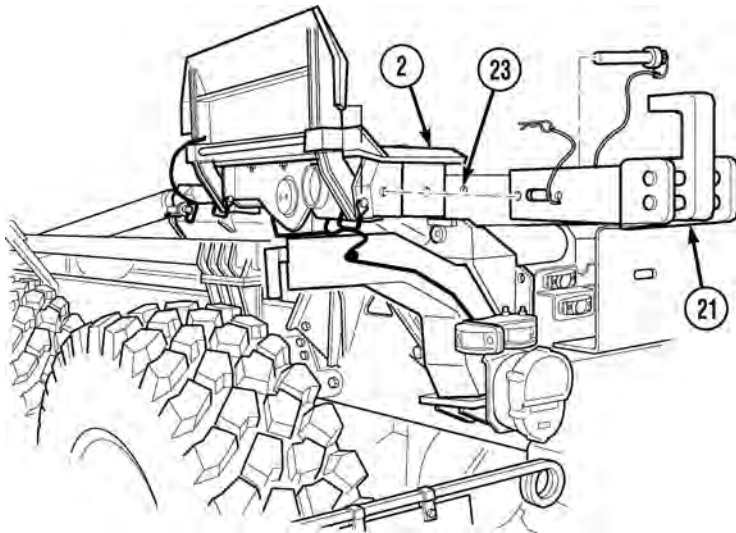


Figure 10.

PREPARATION FOR CONTAINER MODE - Continued**NOTE**

Hook in rear container lock must face up.

19. Position rear container lock (21) in opening of slider (2).

NOTE

Ensure rear container lock pivot pin is in slot of rear container lock.

20. Turn lock handle (23) on slider (2) back to locked position.
21. Pull rear container lock (21) out to ready mode (down position).

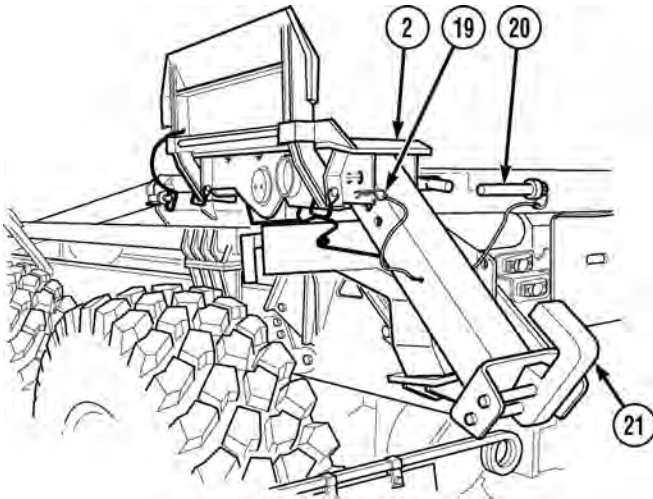


Figure 11.

NOTE

Pin is installed in hole farthest back on slider for ready mode.

22. Install pin (20) and lockpin (19) in slider (2) and rear container lock (21).
23. Repeat Steps (17) through (22) for passenger side.

END OF TASK**RETURN TO FLATRACK MODE****NOTE**

There are two container guides on vehicle. Driver side shown.

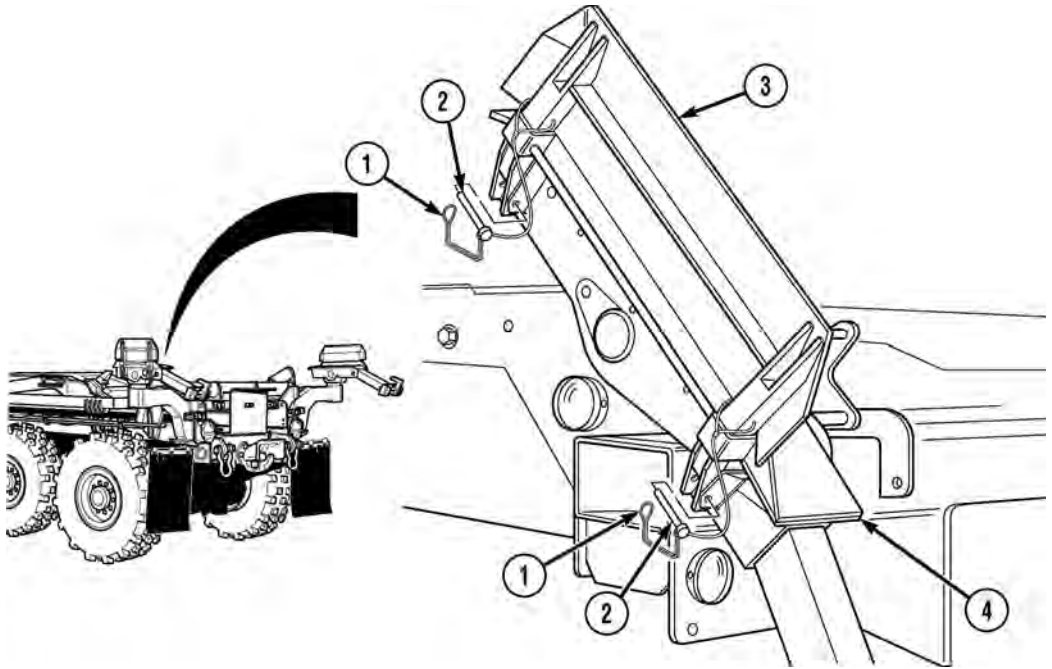
RETURN TO FLATRACK MODE - Continued

Figure 12.

1. Remove two lockpins (1), pins (2), and container guide (3) from slider (4).
2. Install two pins (2) and lockpins (1) in container guide (3).
3. Remove lockpin (5) and pin (6) from stowage tray (7).

RETURN TO FLATRACK MODE - Continued

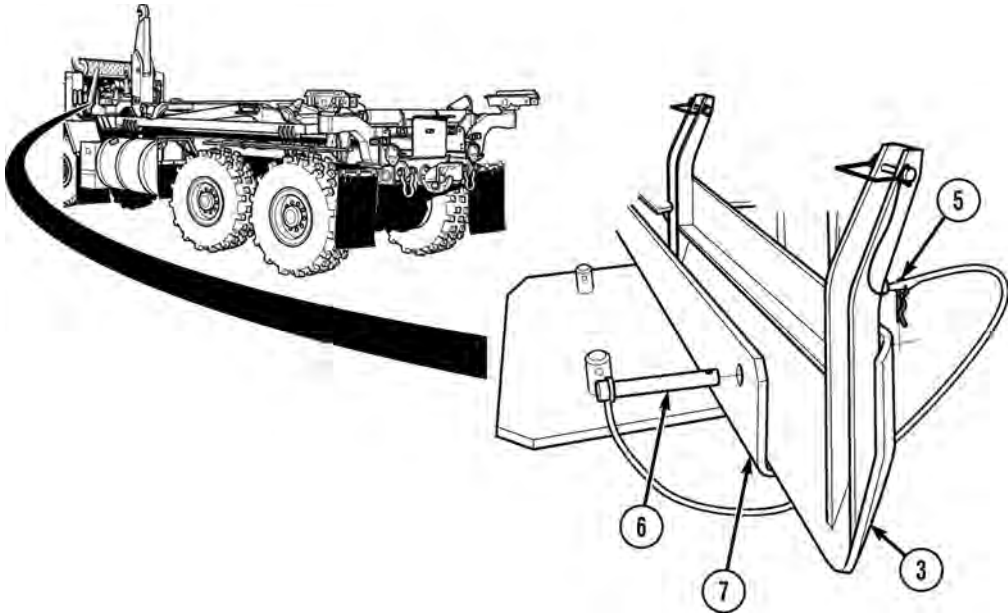


Figure 13.

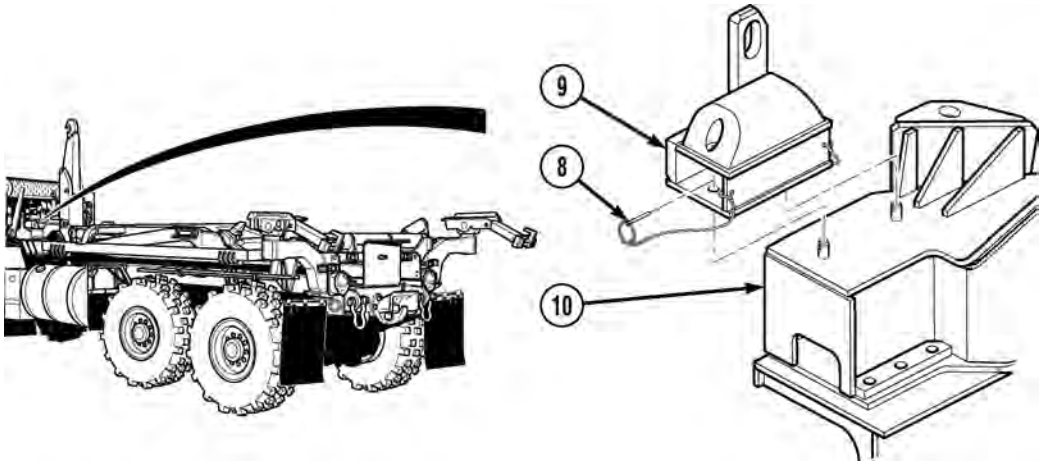
4. Position container guide (3) in stowage tray (7) with pin (6) and lockpin (5).

NOTE

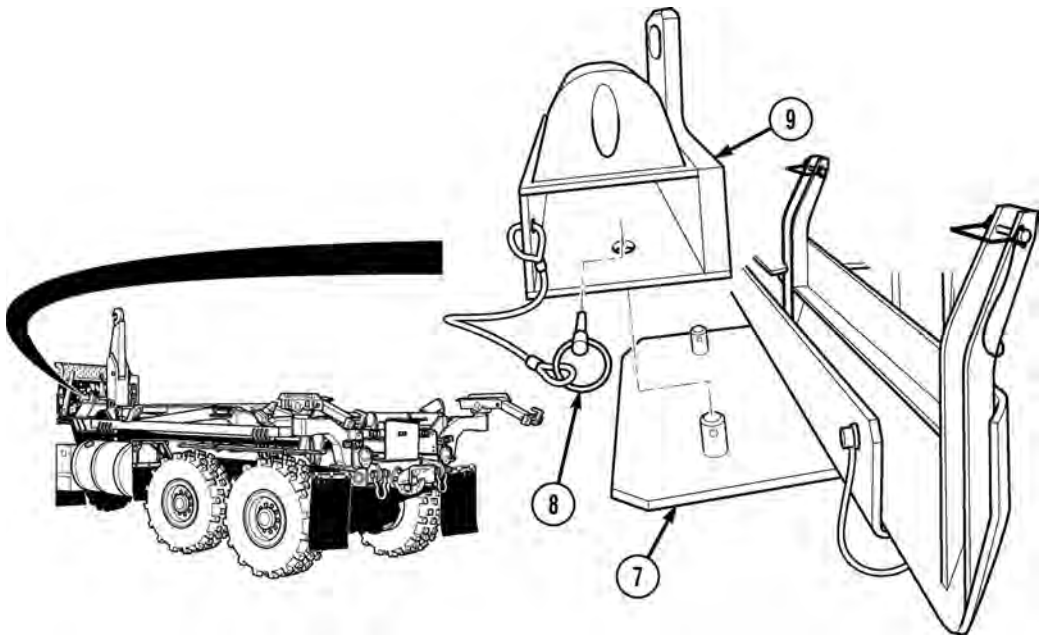
There are two bumper supports on vehicle. Driver side shown.

5. Remove lockpin (8) from bumper support (9).

RETURN TO FLATRACK MODE - Continued

*Figure 14.*

6. Remove bumper support (9) from front container support (10).
7. Stow bumper support (9) on stowage tray (7).

*Figure 15.*

RETURN TO FLATRACK MODE - Continued

8. Install lockpin (8) in bumper support (9).
9. Repeat Steps (1) through (8) for passenger side.

NOTE

There are two rear container locks on vehicle. Driver side shown.

10. Remove lockpin (11) and pin (12) from slider (4) and rear container lock (13).

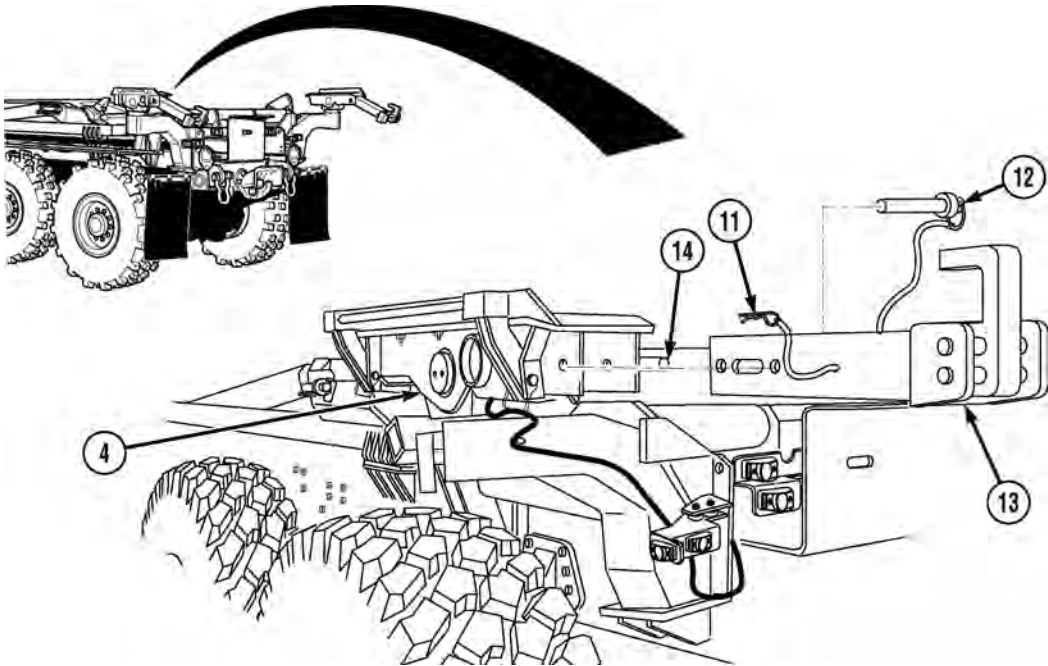


Figure 16.

11. Support rear container lock (13), and turn handle (14) on slider (4) forward to unlocked position.
12. Remove rear container lock (13) from slider (4).
13. Install rear container lock (13), pin (12), and lockpin (11) in stowage bracket on front lift adapter (15).

RETURN TO FLATRACK MODE - Continued

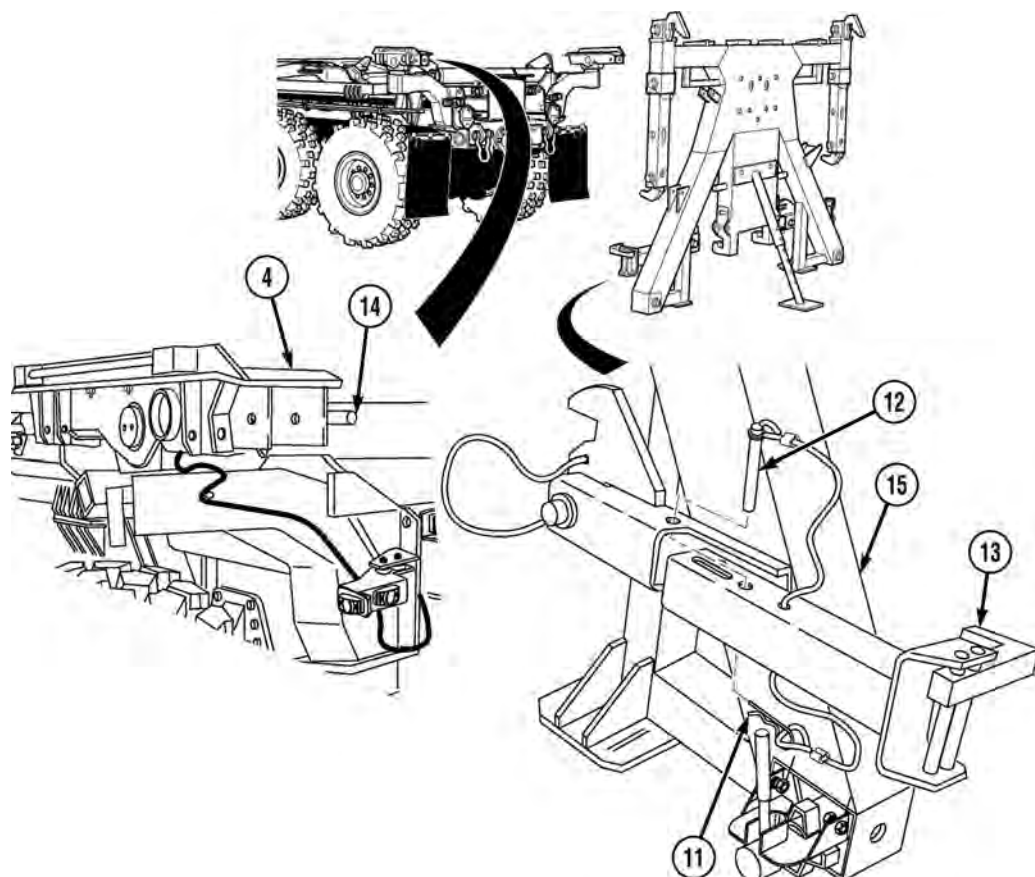


Figure 17.

14. Turn handle (14) on slider (4) back to locked position.
15. Repeat Steps (10) through (14) for passenger side.
16. Remove lockpin (16) and pin (17) from short strut (18) and long strut (19).

RETURN TO FLATRACK MODE - Continued

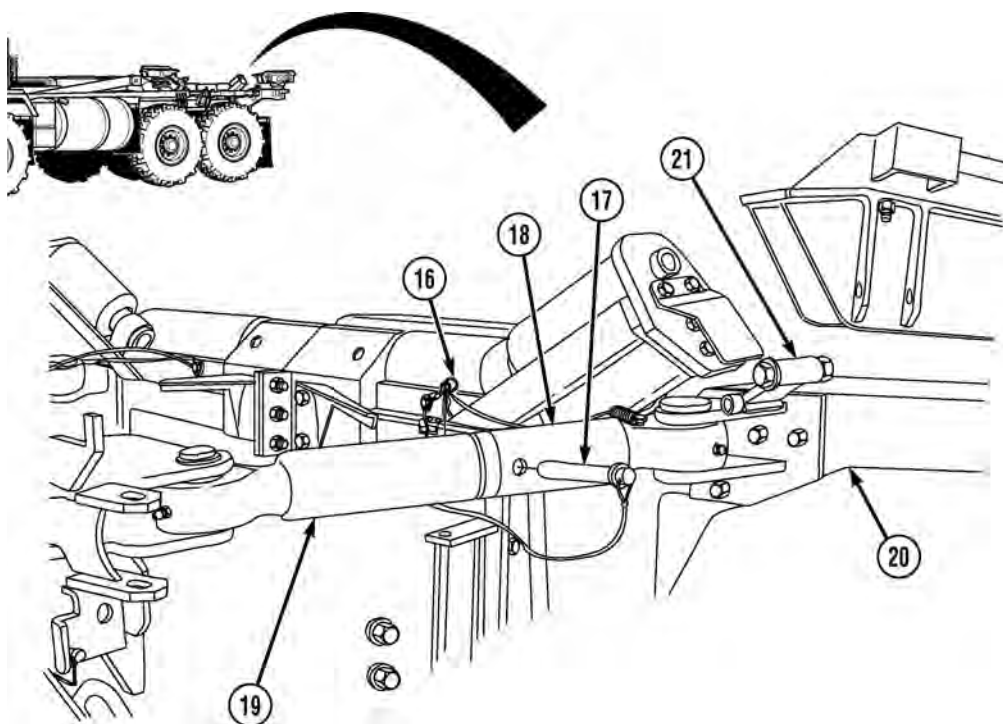
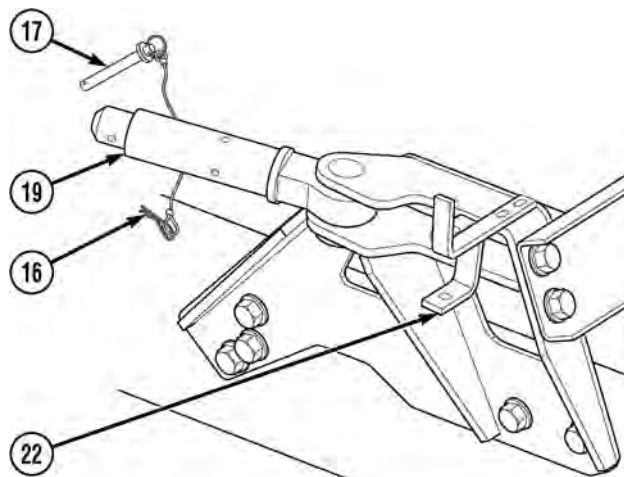
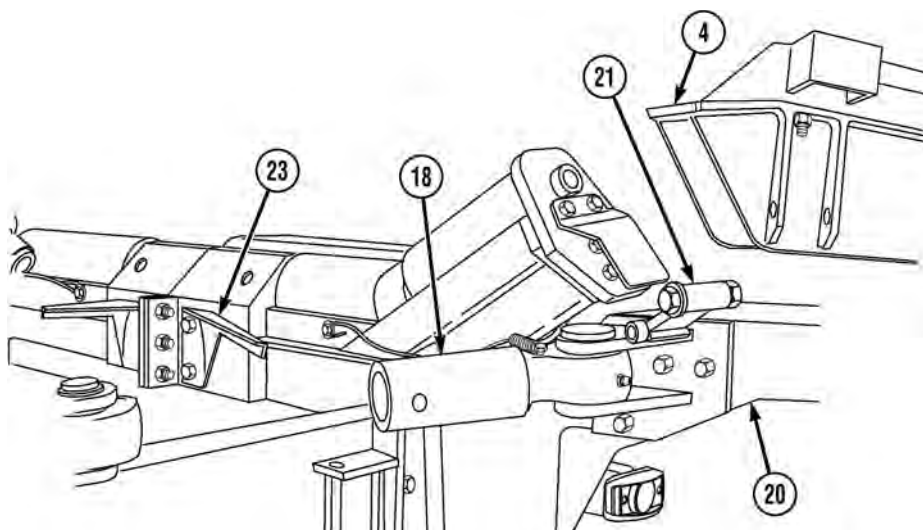


Figure 18.

17. Rotate slider arm (20) with handle outward to separate short strut (18) and long strut (19).
18. Position flip lock (21) up to hold slider arm (20) out.
19. Release slider arm (20).
20. Position long strut (19) on stowage bracket (22), install pin (17), and lockpin (16).

RETURN TO FLATRACK MODE - Continued*Figure 19.*

21. Rotate slider arm (20) with handle outward, and disengage flip lock (21) by rotating it down.

*Figure 20.*

22. Rotate slider arm (20) forward and front of slider (4) down, and position short strut (18) on stow plates (23).

RETURN TO FLATRACK MODE - Continued**WARNING**

Do not hold on to front of slider when stowing. Hands and fingers may be pinched between front of slider and hard lift bracket. Failure to comply may result in injury or death to personnel.

NOTE

Rear of slider may have to be pulled out slightly to position front of slider on retaining bracket.

Pivot lockpins may not lock if lockpin receptacle is full of debris. If this occurs, remove debris and lubricate lockpin and lockpin fitting.

23. Pull down pivot lockpin handle (24), lift rear of slider (4), and rotate front of slider over retaining plate (25) until pivot lockpins lock.

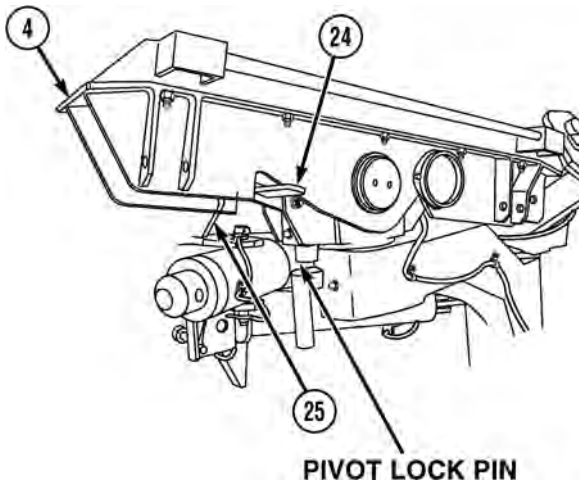


Figure 21.

24. Release pivot lockpin handle (24).

RETURN TO FLATRACK MODE - Continued

25. Repeat Steps (16) through (24) for passenger side.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
LOADING AND UNLOADING CONTAINER (82 INCHES [208 CM] OR TALLER) TO
VEHICLE USING FRONT LIFT ADAPTER (FLA)**

INITIAL SETUP:

Not Applicable

LOADING

WARNING



Front lift adapter weighs 1,600 lbs (727 kg). Do not attempt to lift or move front lift adapter without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

CAUTION

Make sure front lift adapter is in the unlocked position before attempting to load a container to vehicle. Failure to comply will result in damage to equipment.

1. Make sure front lift adapter (1) is unlocked.

LOADING - Continued

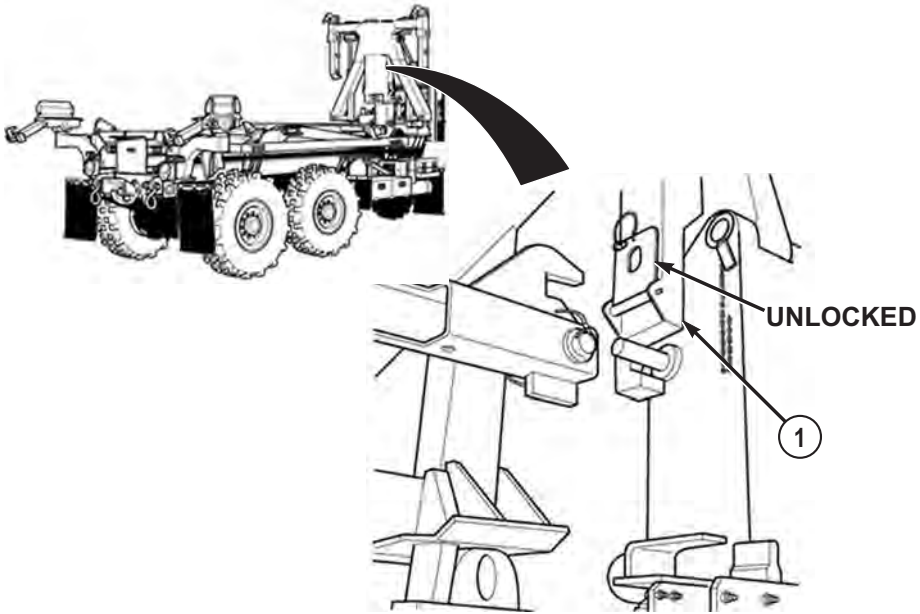


Figure 1.

- 2. Make sure rear container lock (2) is in ready mode. (WP 0052)

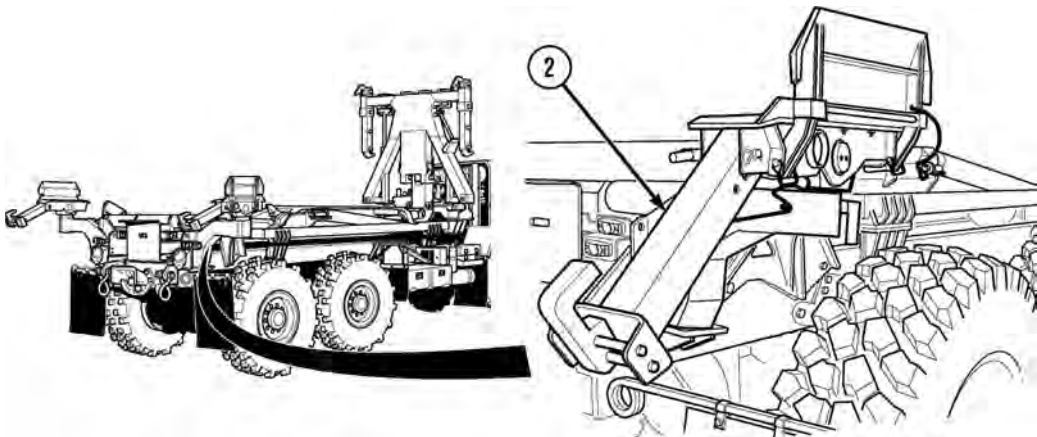


Figure 2.

LOADING - Continued**WARNING**

Two personnel must be used (driver and spotter) to position front lift adapter (FLA). Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Do not attempt loading or unloading operations on a side slope greater than 5 degrees and/or fore/aft slope greater than 20%. Prior to performing loading or unloading operations on slopes, determine if ground surface conditions permit safe loading or unloading operations. Slopes that contain snow, ice, loose gravel, or sand may not permit safe loading or unloading. Failure to comply may result in injury or death to personnel.

WARNING

Do not stand between front lift adapter and container. Vehicle could roll suddenly. Failure to comply may result in injury or death to personnel.

WARNING

Use care when working around front lift adapter. Front lift adapter may swing unexpectedly when not attached to container. Failure to comply may result in injury or death to personnel.

LOADING - Continued**WARNING**

Maximum permissible gross container weight is 24,000 lbs (10 896 kg). Do not exceed gross container weight. Failure to comply may result in or injury or death to personnel and damage to equipment.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

CAUTION

- Use extreme caution when loading/unloading container with side doors. Container must remain centered during loading/unloading, or flanges on side may be damaged and/or door hinges may make hard contact with guides.
- When operating CHU with nonstandard, end-opening, 20 ft. long (6.1 m) shipping containers, operator needs to take extra care to make sure that sliders and guides contact container properly, container slides on sliders properly, and container loads centered on vehicle. Failure to comply can result in container getting hung up or making hard contact with sliders and guides, causing damage to equipment.

NOTE

- For detailed instructions on how to operate the LHS, refer to loading/unloading flatrack in AUTO mode. (WP 0064)
- Rear mud flaps may be pinned up to provide better visibility of front lift adapter lower container locks.
- Multiple connected containers cannot be used with CHU. This includes Six CONS and Quad CONS.

3. Start engine. (WP 0038)

LOADING - Continued

4. Push in PARKING BRAKE control (3).

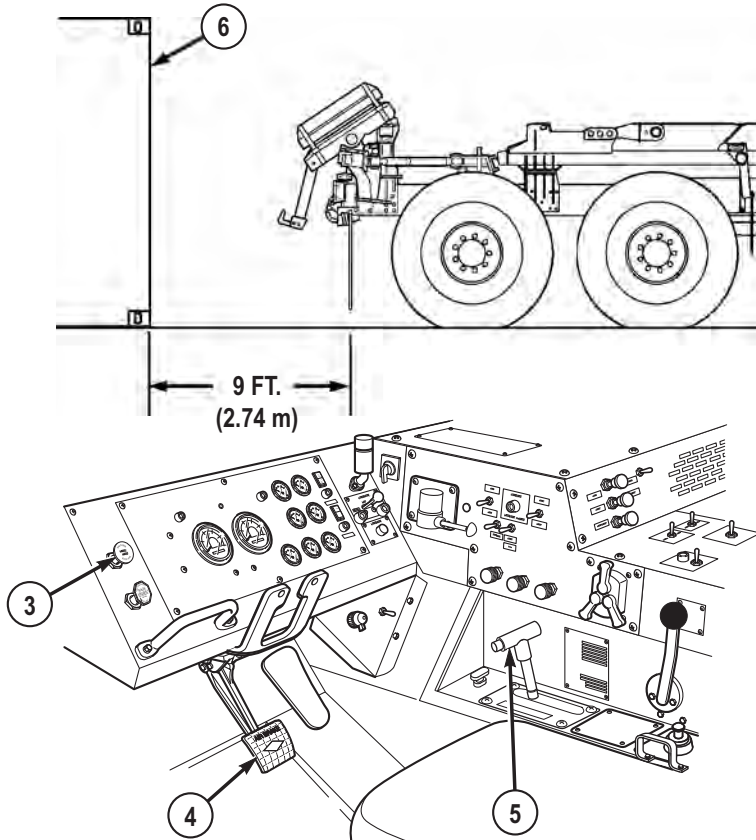


Figure 3.

5. Apply service brake pedal (4) and set transmission range selector (5) to R (reverse).
6. Release service brake pedal (4) and position rear of vehicle within 9 ft. (2.74 m) of front of container (6), aligning centerline of vehicle within 2 in. (50 cm) of container centerline.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

7. Apply service brake pedal (4) and set transmission range selector (5) to N (neutral).
8. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

LOADING - Continued

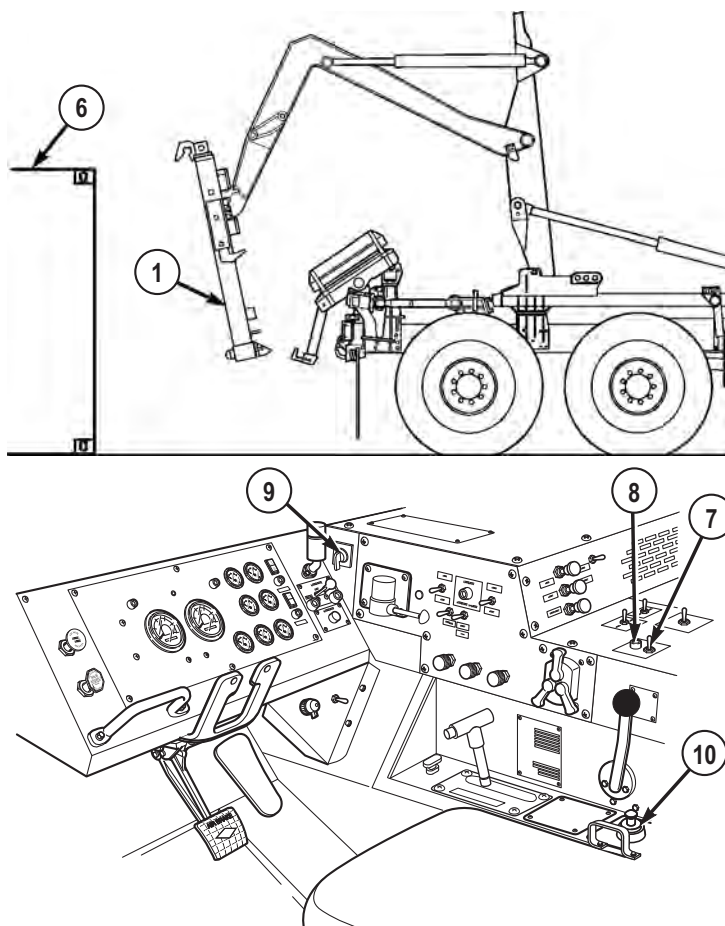


Figure 4.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

9. Turn hydraulic selector switch (9) to AUTO.

CAUTION

On steep downgrades, contact is possible between the front lift adapter lower legs and the rear sliders during empty LHS cycles. If contact appears likely, switch hydraulic selector to MAN H.A. position and retract (LOAD) hook arm a few inches. Return hydraulic selector to AUTO and

LOADING - Continued

continue (UNLOAD) operation. Repeat as required. Failure to comply may result in damage to equipment.

10. Move joystick (10) to UNLOAD position until front lift adapter (1) is positioned in front of container (6).
11. Operate LHS in AUTO mode until front lift adapter (1) is approximately 1 ft. (30 cm) off of ground.
12. Release joystick (10).

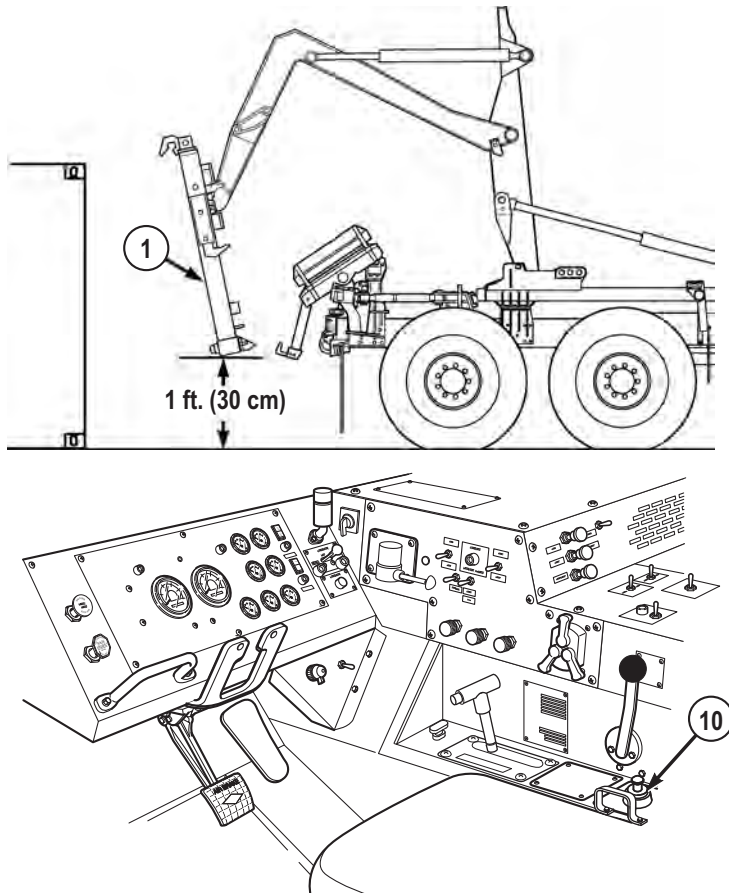


Figure 5.

13. Shut off engine. (WP 0051)

LOADING - Continued**NOTE**

- Refer to the front lift adapter data plate for the proper configuration needed for the height of each container being loaded.
- There are two slide arms. Passenger side shown.

14. Remove lock pin (11) and pin (12) from front lift adapter (1) and slide arm (13) upper hole.

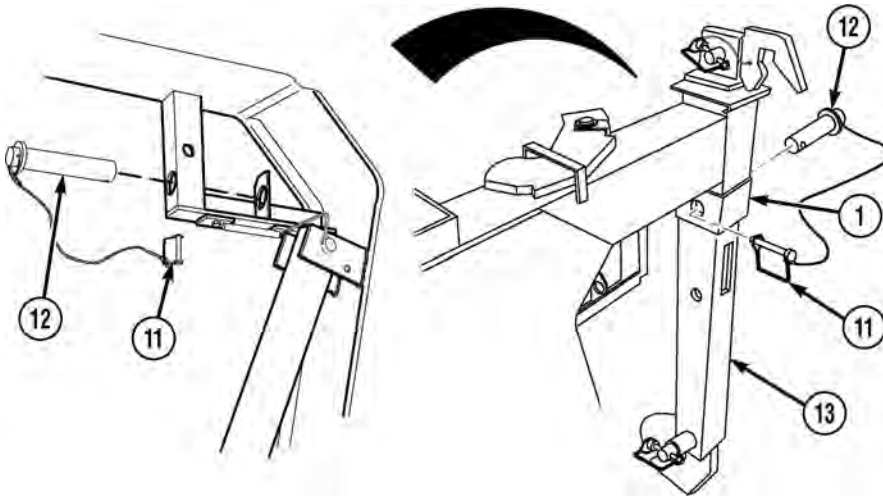


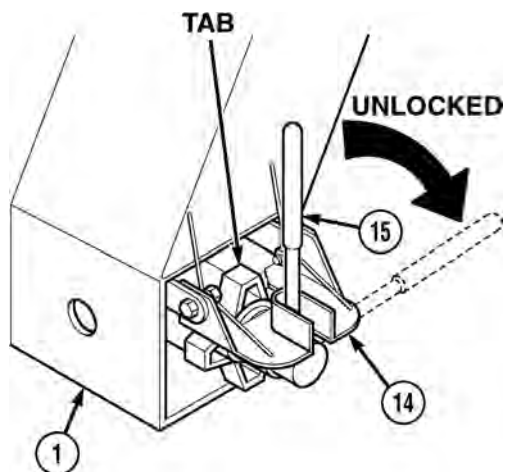
Figure 6.

15. Install pin (12) and lock pin (11) in stow position on front lift adapter (1).
16. Repeat Steps (14) and (15) for driver side slide arm.

NOTE

- Make sure front lift adapter lower container lock handle is positioned in slot on handle lock plate.
- Make sure tab on handnut faces up.
- There are two front lift adapter lower container locks and rear sliders. Passenger side shown.

17. Raise handle lock plate (14) and rotate lower container lock handle (15) toward center of front lift adapter (1) to unlocked position.

LOADING - Continued*Figure 7.*

18. Release handle lock plate (14) on front lift adapter (1).
19. Repeat Steps (17) and (18) for driver side lower container locks and rear sliders.

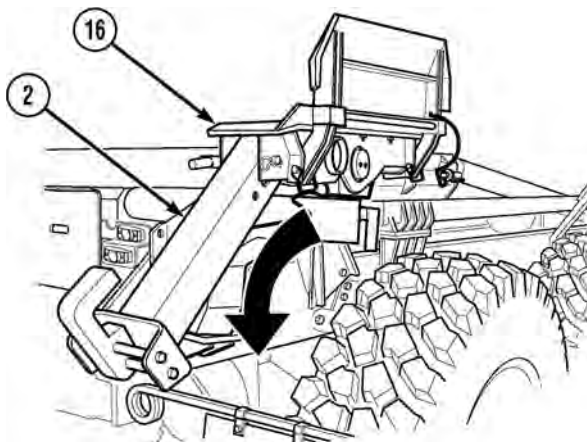
CAUTION

Make sure sliders are clear of debris and surfaces are properly greased, or damage to equipment may result.

NOTE

There are two rear sliders and container locks. Passenger side shown.

20. Rotate slider (16) so rear of slider faces down.

LOADING - Continued*Figure 8.*

21. Make sure rear container lock (2) is in ready mode (down) position.
22. Repeat Steps (20) and (21) for driver side rear slider and container lock.
23. Start engine. (WP 0038)
24. Position slide arm upper front hooks (17) just below and in front of container upper corner castings (18).

LOADING - Continued

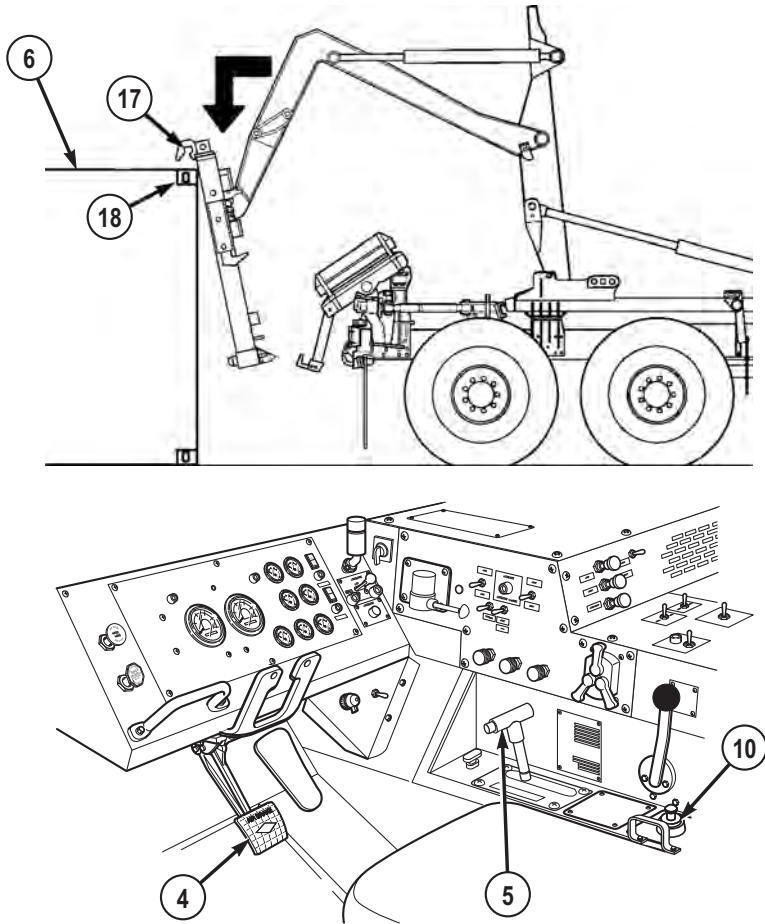


Figure 9.

25. Apply service brake pedal (4) and set transmission range selector (5) to R (reverse).

WARNING

Do not allow front lift adapter to contact the ground when slide arm hooks are not engaged with container upper corner castings. Failure to comply may result in injury or death to personnel and damage to equipment.

LOADING - Continued

26. Release service brake pedal (4) and slowly back up to approximately 1 ft. (30 cm) from front of container (6).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

27. Apply service brake pedal (4) and set transmission range selector (5) to N (neutral). Move joystick (10) to LOAD and raise front lift adapter until front hooks (17) are above container upper corner castings (18).
28. Set transmission range selector (5) to R (reverse). Release service brake pedal (4) and slowly back up until slide arm upper front hooks (17) are just above front of container upper corner castings (18).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

29. Apply service brake pedal (4) and set transmission range selector (5) to N (neutral).

LOADING - Continued

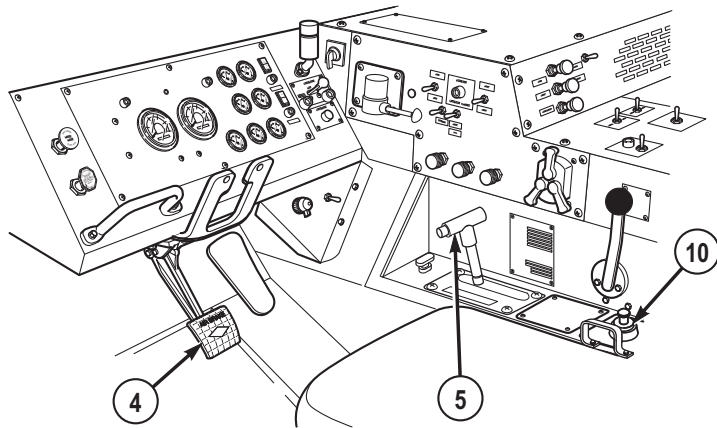
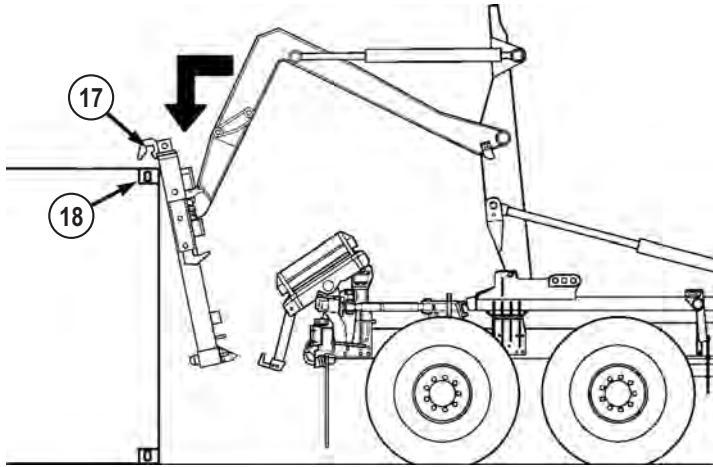


Figure 10.

CAUTION

Make sure slide arm upper front hooks are fully engaged with container upper corner castings. Failure to comply may result in damage to equipment.

NOTE

- To get upper hooks to properly seat, it may be necessary to drive vehicle forward slightly.

LOADING - Continued

- When container is on side slope, it may be difficult to get both upper hooks properly seated. Front lift adapter hangs level. To get front lift adapter to hang closer to same angle as container, it may be necessary to temporarily remove one rear container lock from slider and stow on downhill side of front lift adapter.
30. Release service brake pedal (4) and, moving joystick (10) to UNLOAD, lower slide arm upper front hooks (17) into container upper corner castings (18).
 31. Apply service brake pedal (4) and set transmission range selector (5) to D (drive).
 32. Release service brake pedal (4) and move vehicle forward approximately 1 ft. (30 cm).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

33. Apply service brake pedal (4) and set transmission range selector (5) to N (neutral).
34. Move joystick (10) to UNLOAD until lower container locks (19) are aligned with container lower front corner castings (20).

LOADING - Continued

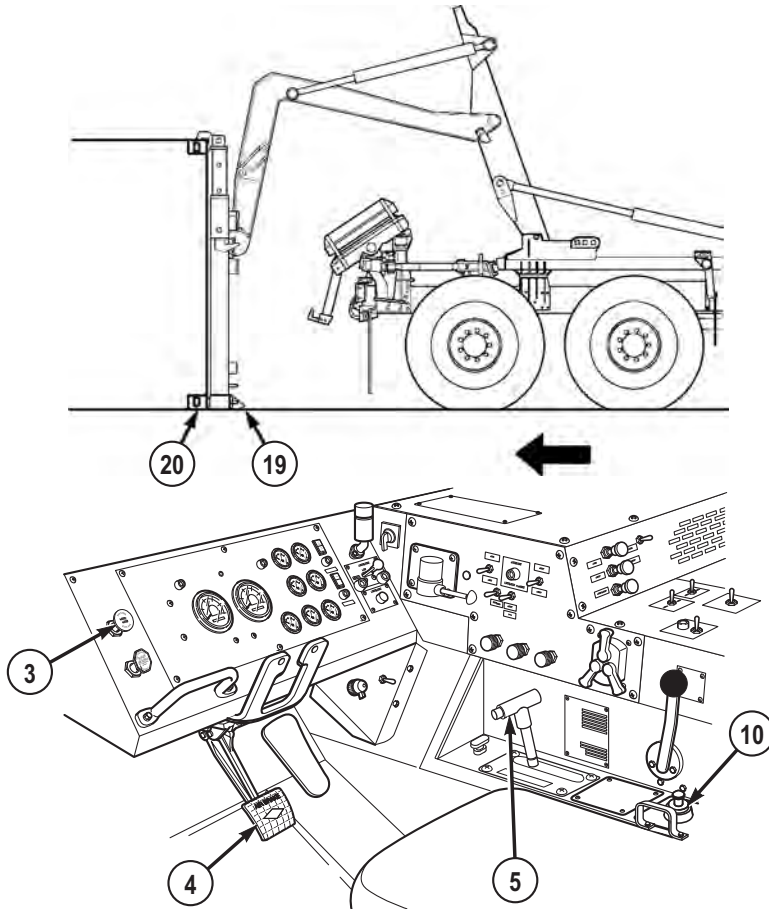


Figure 11.

35. Apply service brake pedal (4) and set transmission range selector (5) to R (reverse). Back vehicle up until lower container locks (19) are seated in container lower front corner castings (20).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

36. Apply service brake pedal (4) and set transmission range selector (5) to N (neutral).
37. Pull out PARKING BRAKE control (3).

LOADING - Continued**CAUTION**

Make sure lower container locks are fully engaged with container lower front corner castings. Failure to comply may result in damage to equipment.

NOTE

- To get container lock handle to rotate, it may be necessary to loosen handnut.
- There are two lower container locks. Passenger side shown.
- After tightening handnut, it may be necessary to loosen handnut slightly to align tab with handle lock plate.
- Make sure lower container lock handle is secured in slot on handle lock plate.

38. Hold handle lock plate (14) up and rotate lower container lock handle (15) up in the locked position.

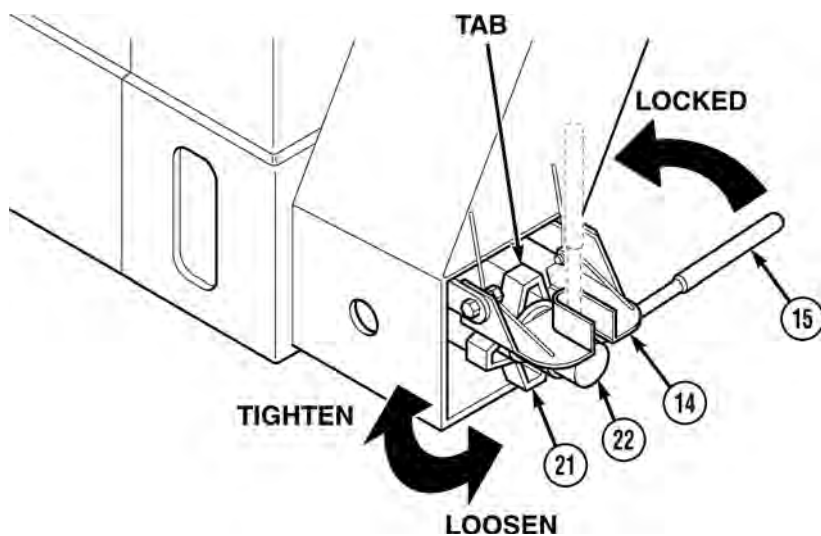


Figure 12.

39. Turn handnut (21) clockwise and tighten stem (22).

NOTE

Make sure tab on handnut faces up.

LOADING - Continued

40. Lower handle lock plate (14) over lower container lock handle (15) and handnut (21) tab.

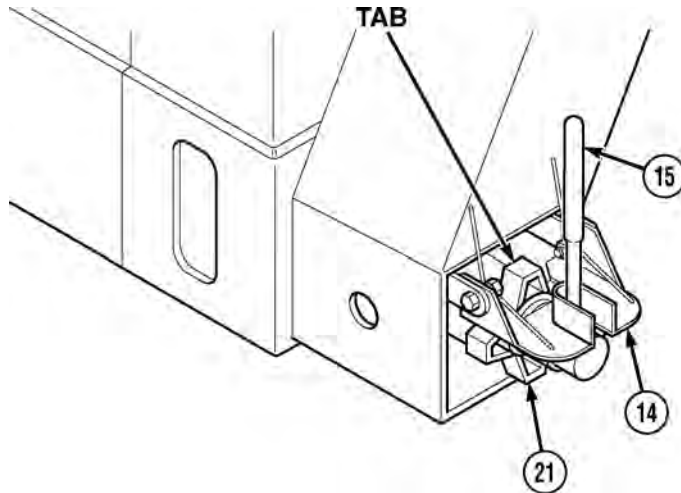


Figure 13.

41. Repeat Steps (38) through (40) for driver side lower container lock.
42. Push in PARKING BRAKE control (3) and release service brake pedal (4).

LOADING - Continued

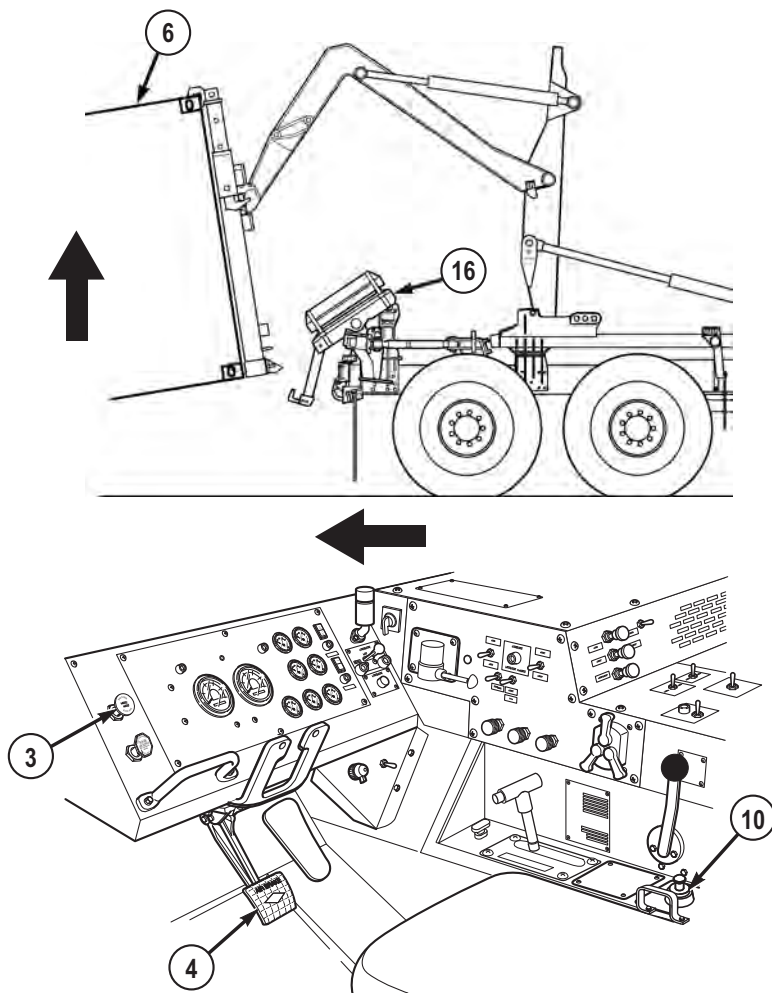


Figure 14.

WARNING



When loading or unloading containers on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle

LOADING - Continued

service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

CAUTION

- If LHS OVER LOAD indicator illuminates but loading operation continues, operator is cautioned that LHS is nearing maximum capacity. In this situation, operator should notify supervisor if it appears payload is unevenly distributed in container or if container load exceeds 24,000 lbs (10 896 kg). If any of these conditions exist, payload must be redistributed or reduced, or damage to equipment may result.
- Load must be evenly distributed in the container. Uneven load distribution may cause the LHS OVER LOAD indicator to give false signals and cause the LHS to operate incorrectly. Damage to equipment may result.
- If LHS OVER LOAD indicator illuminates and normal operation has stopped, return load to original position and notify supervisor to have payload redistributed or weight reduced. Failure to comply may result in damage to equipment.
- Make sure parking brake is not applied before starting load sequence, or damage to equipment may occur.

NOTE

- The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.
- If container is extremely light or empty, it may be necessary to place transmission range selector to R (reverse) and allow vehicle to roll under container.

43. Move joystick (10) to LOAD. Vehicle will be pulled toward container (6) as it lifts.

WARNING

Ensure that container has contacted rear sliders correctly and is between guides. Failure to comply may result in injury or death to personnel and damage to equipment.

LOADING - Continued**CAUTION**

Reduce engine speed to idle before container contacts rear sliders, or damage to equipment may result.

NOTE

- LHS OVERLOAD indicator may illuminate when lifting container from unusual conditions.
- As load is lifted, vehicle will be pulled under container. Some steering wheel adjustments may have to be made to make sure that container contacts rear sliders correctly and is between guides.

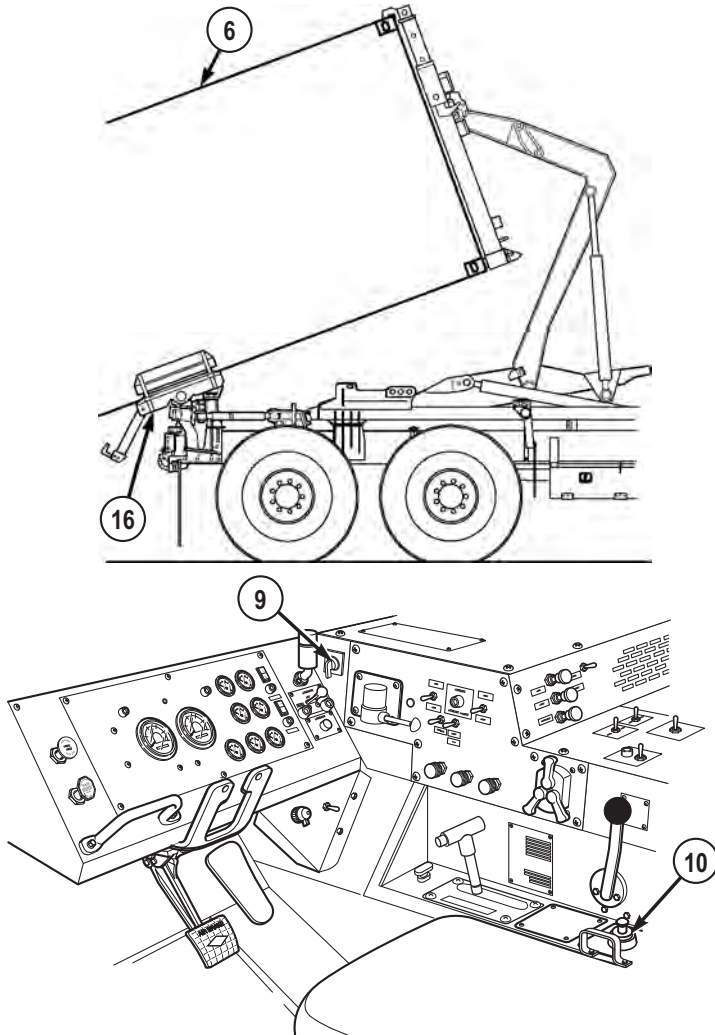
44. As container (6) contacts rear sliders (16), reduce engine speed to idle and apply service brake pedal (4).

NOTE

If container is being loaded in soft soil conditions, perform Steps (45) through (48).

45. Release joystick (10).

LOADING - Continued

*Figure 15.***CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

46. Turn hydraulic selector switch (9) to MAN H.A.
47. Move joystick (10) to LOAD until container (6) is approximately 2 ft. (61 cm) off the ground. Release joystick (10).

LOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

48. Turn hydraulic selector switch (9) to AUTO. Resume normal AUTO operations.

NOTE

Engine speed may be increased and decreased to ease loading.

49. After container (6) contacts rear sliders (16), increase engine speed to approximately 1500 rpm until container is almost loaded. Reduce engine speed to idle.

CAUTION

After completing loading operations using CHU kit and container (LHS NO TRANSIT indicator goes out), operator must release the joystick from the LOAD position. Failure to release the joystick may cause LHS OVER LOAD indicator to illuminate and hydraulic cylinders to remain active, forcing a temporary bow in the LHS frame, resulting in contact between LHS and container.

50. Continue loading until container (6) is fully loaded and LHS NO TRANS indicator (23) goes out.

LOADING - Continued

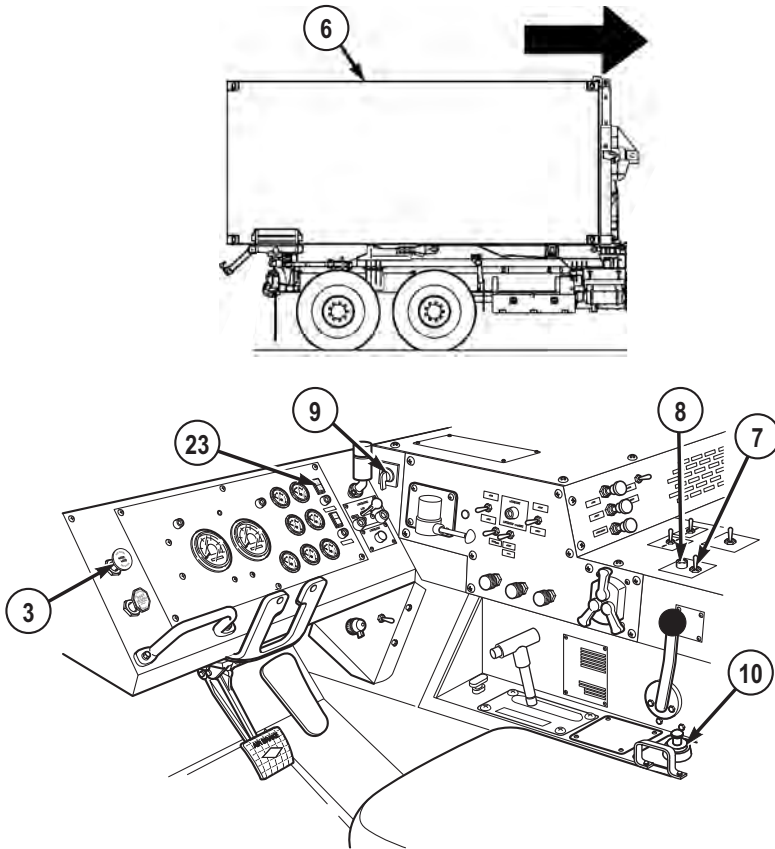


Figure 16.

51. Release joystick (10).
52. Pull out PARKING BRAKE control (3).

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Hydraulic selector switch must be in the OFF position before driving vehicle, or hydraulic system could overheat.

53. Turn hydraulic selector switch (9) to OFF.
54. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.
55. Shut off engine. (WP 0051)

LOADING - Continued**NOTE**

- If container is not centered, and transit locks cannot be installed and pinned, repeat Steps (42) through (52) to reposition container.
- There are two rear container locks. Passenger side shown.

56. Support rear container lock (2) and remove lock pin (24) and pin (25).

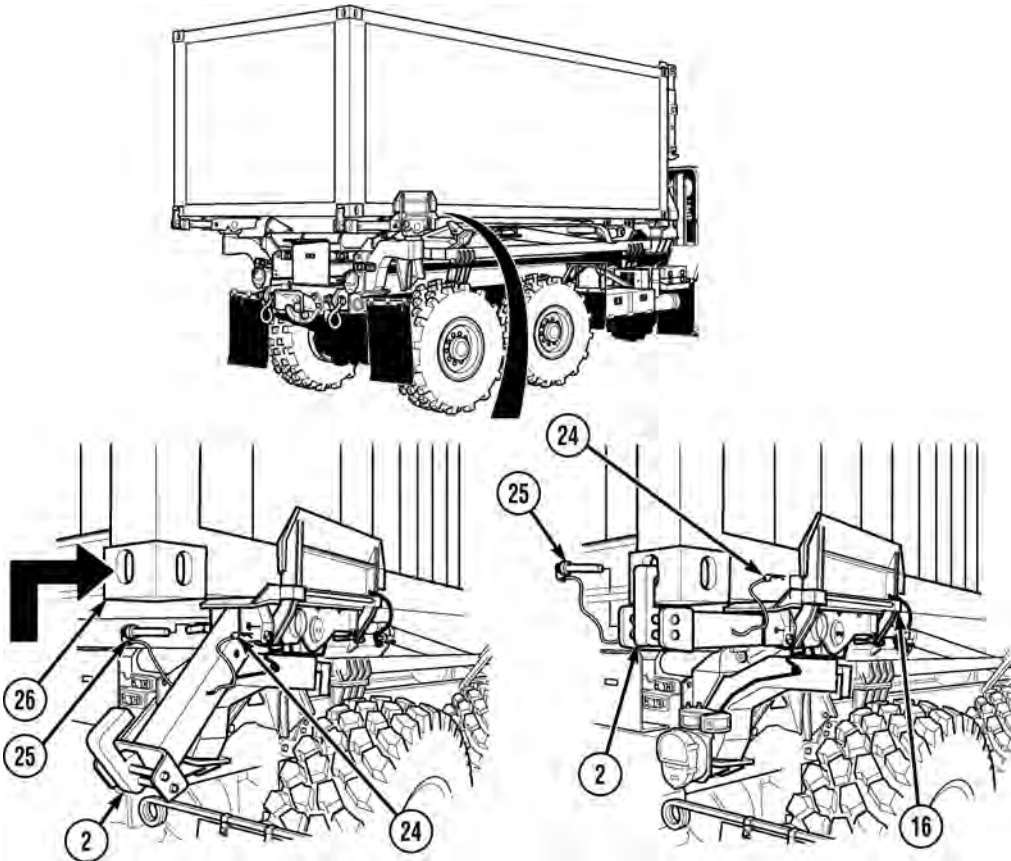


Figure 17.

57. Rotate rear container lock (2) up and position into container lower rear corner casting (26).
58. Install pin (25) and lock pin (24) in rear container lock (2) and slider (16).

LOADING - Continued**WARNING**

Do not reduce tire pressure when loaded with FRS or container. Highway tire pressure, 60 psi (414 kPa) front and 83 psi (572 kPa) rear, is required at all times when loaded with FRS or container. If equipped with armor kit, highway tire pressure 75 psi (517 kPa) front is required at all times. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Maximum side slope when loaded with an FRS or container is 30%. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

When loaded with FRS or container, the center of gravity is moved up and toward rear of vehicle. Use extreme care when turning and ascending or descending on a grade. Failure to comply may result in injury or death to personnel.

59. Perform Steps (57) through (59) for driver side container lock.

UNLOADING**WARNING**

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

WARNING

Do not attempt loading or unloading operations on a side slope greater than 5 degrees and/or fore/aft slope greater than 20%. Prior to performing loading or unloading operations on slopes, determine if ground surface conditions permit safe loading or unloading operations. Slopes that contain snow, ice, loose gravel, or sand may not permit safe loading or unloading. Failure to comply may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

UNLOADING - Continued**CAUTION**

- Check that ground conditions where container will be placed can support the container weight, or damage to the container, front lift adapter, or LHS may result.
- Use extreme caution when loading/unloading container with side doors. Container must remain centered during loading/unloading or flanges on side may be damaged and/or door hinges may make hard contact with guides.

NOTE

For detailed instructions on how to operate the LHS, refer to loading/unloading flatrack in AUTO mode. (WP 0064)

1. Check area for operating room at front and rear of vehicle. Check overhead clearance and ground conditions.

NOTE

There are two rear container locks. Passenger side shown.

2. Remove lock pin (1), pin (2), and rear container lock (3) from lower rear corner casting (4).

UNLOADING - Continued

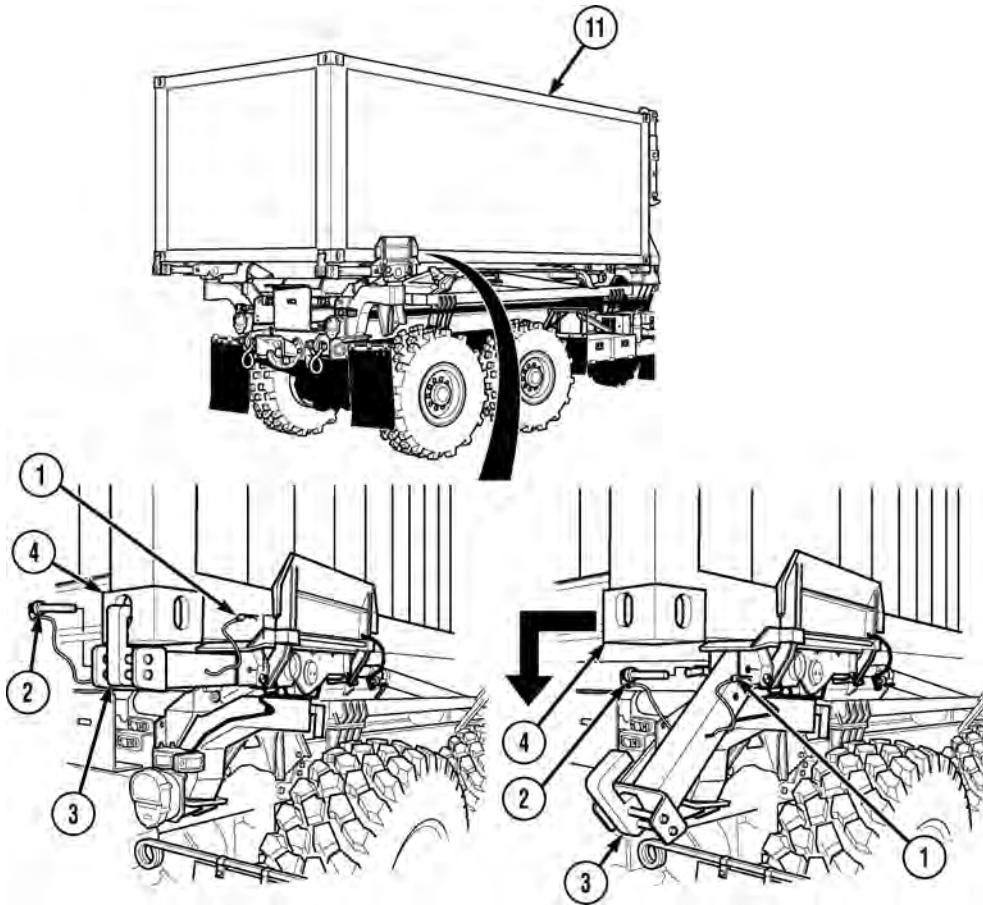


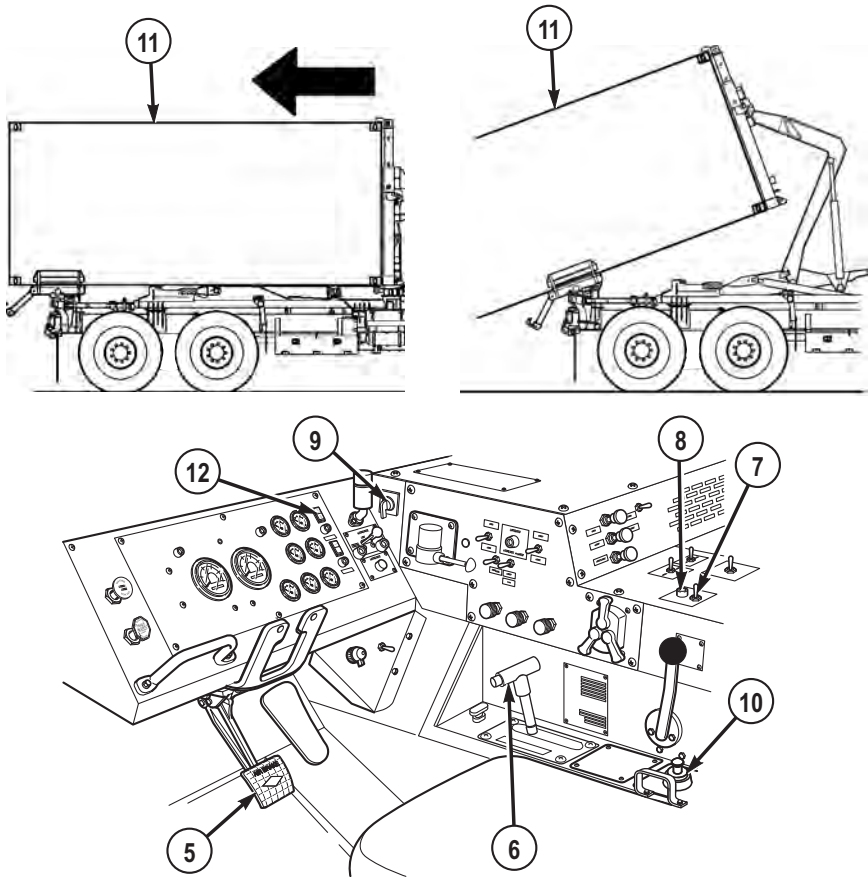
Figure 18.

3. Rotate rear container lock (3) in down position and install pin (2) and lock pin (1).
4. Perform Steps (2) and (3) for driver side.
5. Start engine. (WP 0038)

NOTE

LHS will only operate when transmission range selector is in N (neutral).

6. Apply service brake pedal (5) and set transmission range selector (6) to N (neutral).

UNLOADING - Continued*Figure 19.*

7. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

8. Turn hydraulic selector switch (9) to AUTO.

UNLOADING - Continued**WARNING**

When loading or unloading containers on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

9. Move joystick (10) to UNLOAD. Container (11) will start to move rearward. LHS NO TRANS indicator (12) will illuminate. Maintain engine speed at idle until front of container raises approximately 1 ft. (30 cm).

NOTE

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.

10. Continue to unload container (11) until back edge of container (11) touches ground.
11. Release service brake pedal (5) and allow container (11) to push vehicle forward from under container (11).

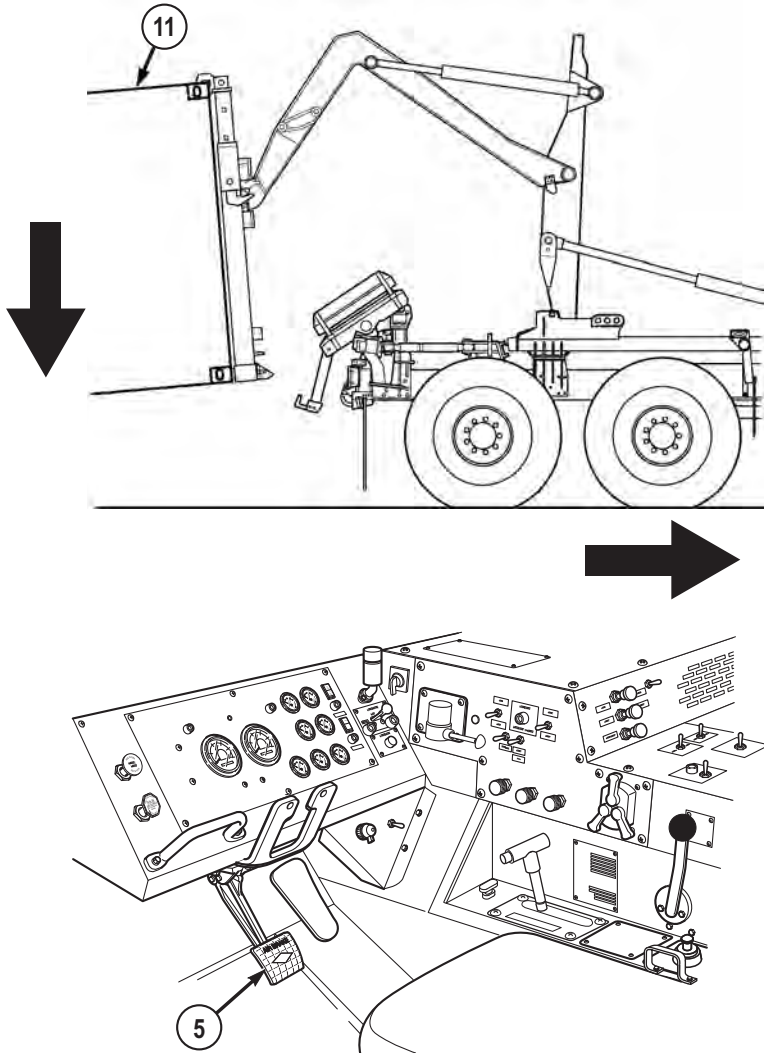
UNLOADING - Continued

Figure 20.

12. As front of container (11) approaches within approximately 8 in. (20.3 cm) of ground, decrease engine speed to idle and apply service brake pedal (5).

CAUTION

Once vehicle's rear suspension has been relieved of container load, do not continue in UNLOAD position as possibility of jacking up the rear of vehicle with hook arm may occur and damage to equipment may result.

UNLOADING - Continued**NOTE**

If container is extremely light or empty, it may be necessary to place transmission range selector to D (drive) and allow vehicle to move out from under container.

13. Continue unloading until bottom of container (11) is on ground and rear suspension is unloaded.
14. Release joystick (10) when container (11) is resting on ground.

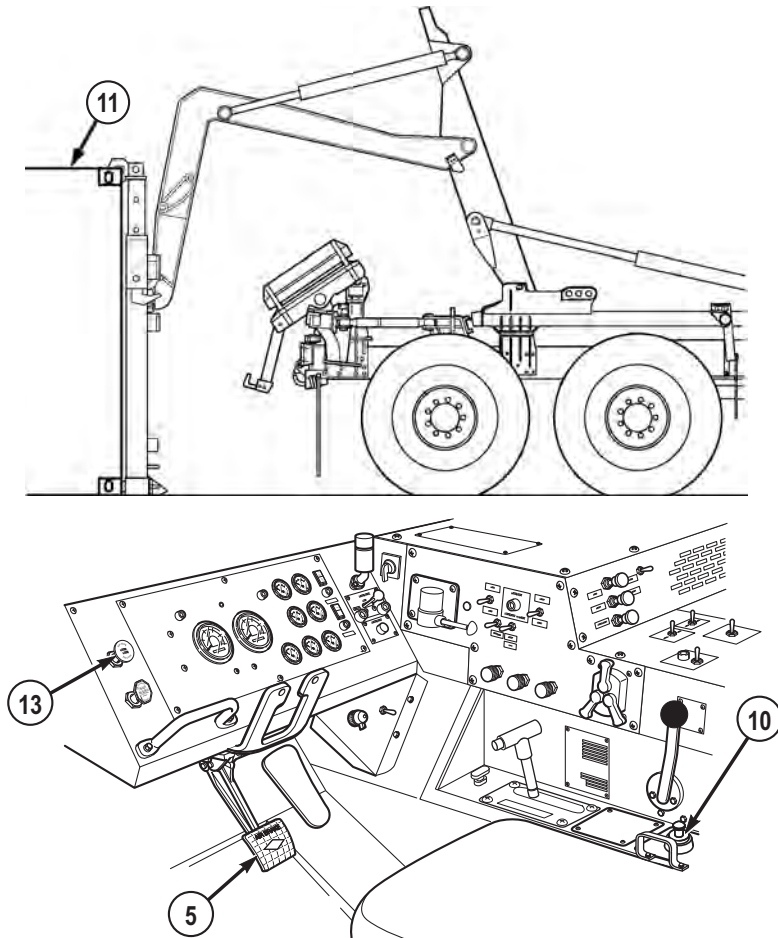


Figure 21.

15. Pull out PARKING BRAKE control (13).

UNLOADING - Continued

16. Release service brake pedal (5).

WARNING

Ensure that all tension has been relieved between LHS hook and front lift adapter prior to unlocking front lift adapter lower container locks. Stay clear of front lift adapter when unlocking front lift adapter lower container locks as front lift adapter may separate from container unexpectedly. Failure to comply may result in injury or death to personnel.

NOTE

There are two adapter lower container locks. Passenger side shown.

17. Raise handle lock plate (14) and turn handnut (15) counterclockwise to loosen stem (16).

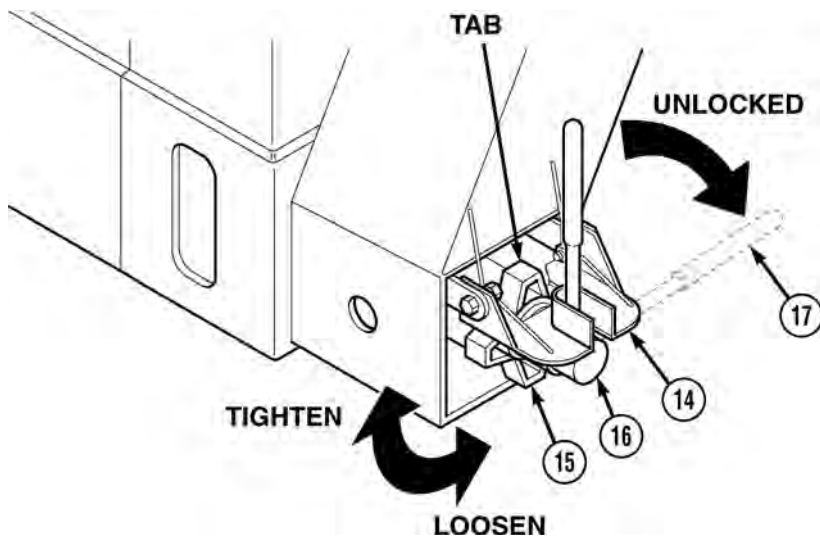


Figure 22.

NOTE

Make sure tab on handnut faces up.

UNLOADING - Continued

18. Rotate lower container lock handle (17) toward center of vehicle to unlocked position.

CAUTION

Handnut must be tightened clockwise to tighten stem. Failure to tighten stem may cause damage to equipment during next container loading procedure.

19. Turn handnut (15) clockwise to tighten stem (16).
20. Release handle lock plate (14) over container lock handle (17) and handnut (15) tab.
21. Repeat Steps (17) through (20) for driver side adapter lower container lock.
22. Push in PARKING BRAKE control (13).

UNLOADING - Continued

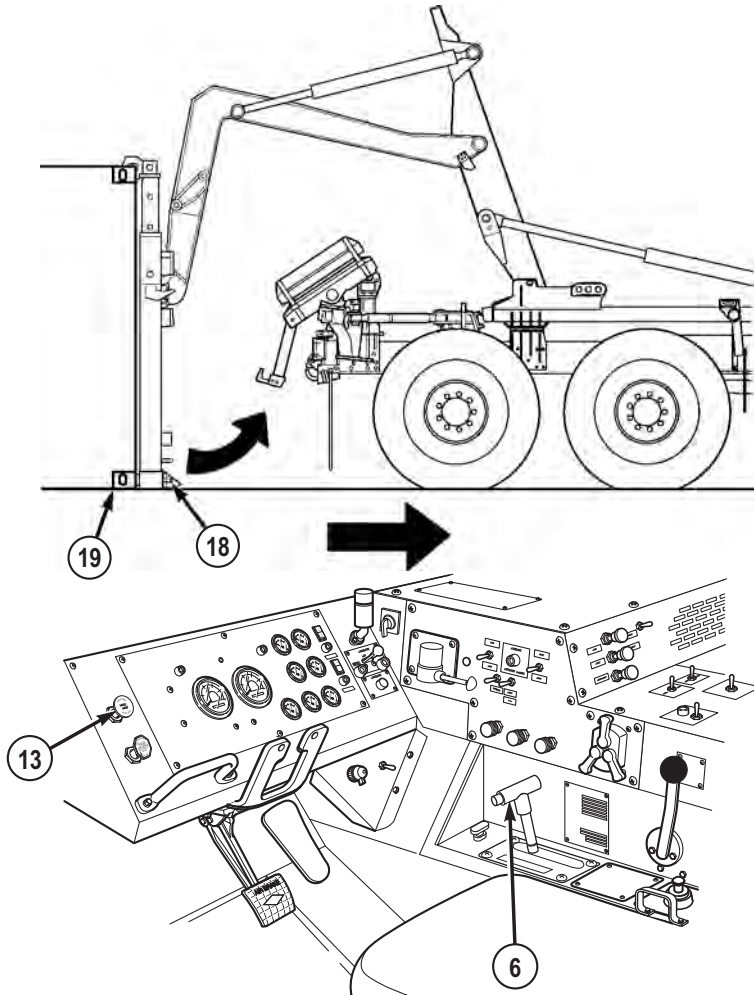


Figure 23.

23. Set transmission range selector (6) to D (drive).
24. Move vehicle forward until lower container locks (18) disengage from lower front corner castings (19) approximately 4 to 6 in. (10 to 15 cm).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

25. Apply service brake pedal (5) and set transmission range selector (6) to N (neutral).

UNLOADING - Continued

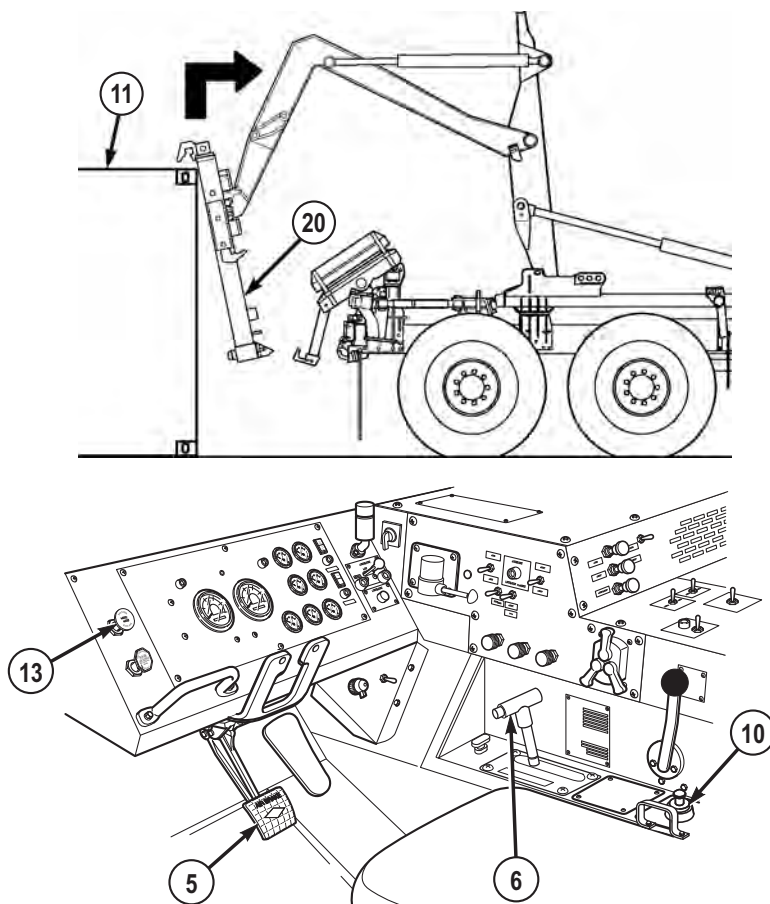


Figure 24.

CAUTION

Make sure that slide arm upper front hooks are completely disengaged and do not hang up in container upper corner castings when retracting LHS. Failure to comply may result in damage to the slide arm upper front hooks and/or container.

NOTE

It may be necessary to move the vehicle forward or backward slightly to get the slide arm upper front hooks to disengage.

UNLOADING - Continued

26. Move joystick (10) to LOAD position until front lift adapter (20) is disengaged from container (11).
27. Release joystick (10).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

28. Set transmission range selector (6) to N (neutral).
29. Pull out PARKING BRAKE control (13).

CAUTION

- On steep downgrades, contact is possible between the front lift adapter lower legs and the rear sliders during empty LHS cycles. If contact appears likely, set hydraulic selector switch to MAN H.A. and retract (LOAD) hook arm a few inches. Set hydraulic selector switch to MAN M.F. and retract the main frame until the front lift adapter clears the rear sliders. Return hydraulic selector to AUTO and continue (LOAD) operation. Failure to comply may result in damage to equipment.
- Never drive with LHS NO TRANS indicator illuminated. An illuminated indicator means that the LHS is not fully stowed. Failure to comply may result in damage to equipment.

NOTE

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.

30. Move joystick (10) to LOAD position until LHS is fully retracted and front lift adapter (20) is positioned on bumper supports (21). LHS NO TRANS indicator (12) will go out signaling LHS is in transport position.
31. Release joystick (10).

UNLOADING - Continued

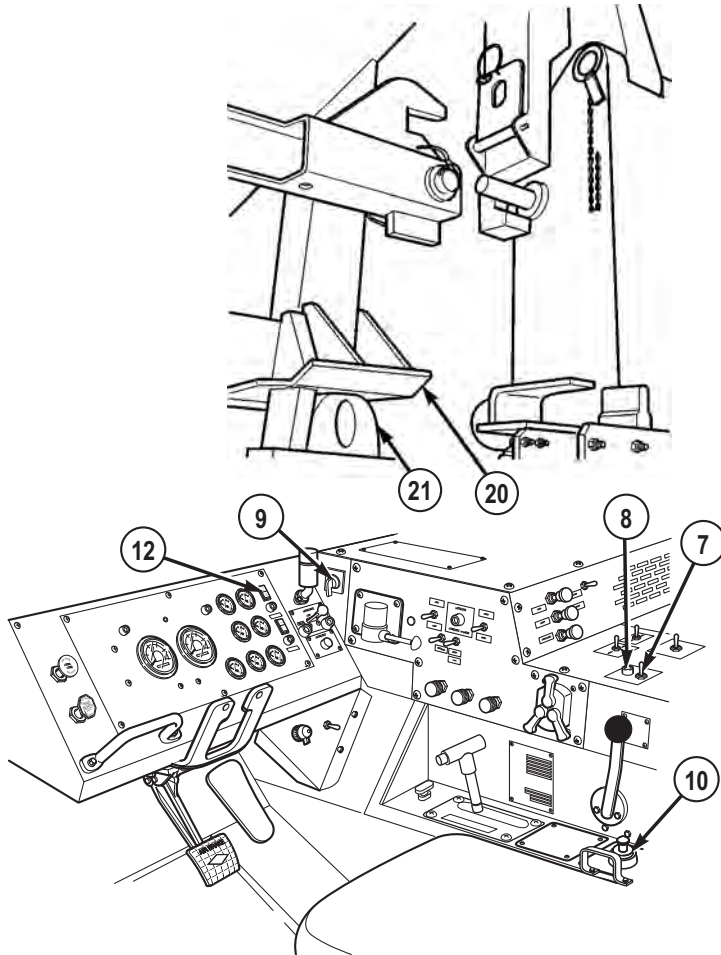


Figure 25.

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Hydraulic selector switch must be in the OFF position before driving vehicle, or hydraulic system could overheat.

32. Turn hydraulic selector switch (9) to OFF.

UNLOADING - Continued

33. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
LOADING AND UNLOADING CONTAINER (72 INCHES [183 CM] OR TALLER) TO
VEHICLE USING FRONT LIFT ADAPTER (FLA)**

INITIAL SETUP:

Not Applicable

LOADING

WARNING



Front lift adapter weighs 1,600 lbs (727 kg). Do not attempt to lift or move front lift adapter without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

CAUTION

Ensure front lift adapter is in the unlocked position before attempting to load a container to vehicle. Failure to comply will result in damage to equipment.

1. Ensure front lift adapter (1) is unlocked. (WP 0052)

LOADING - Continued

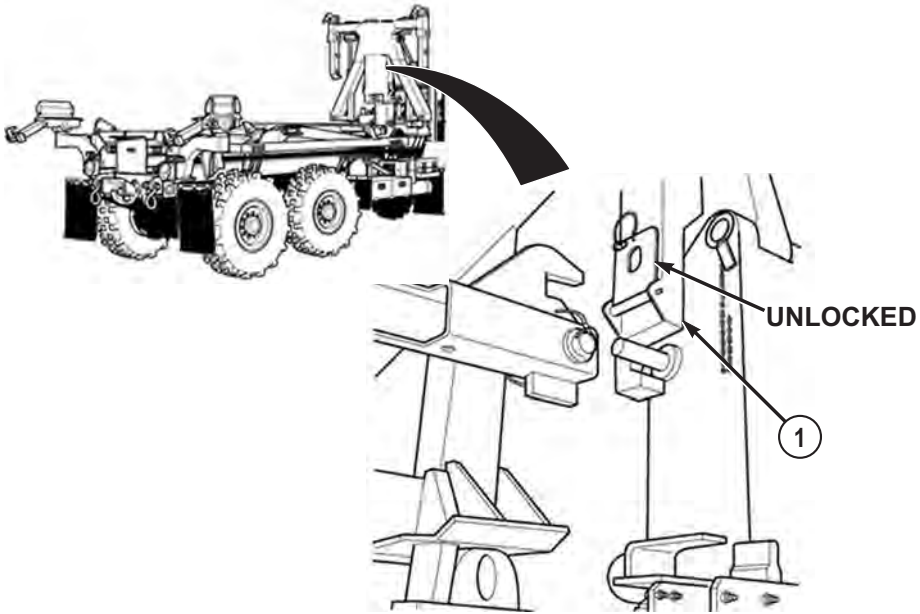


Figure 1.

2. Ensure rear container lock (2) is in ready mode. (WP 0052)

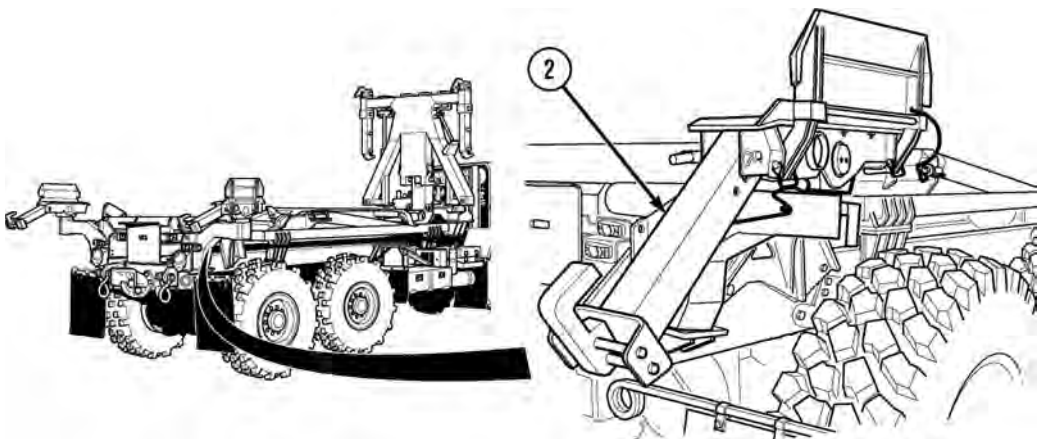
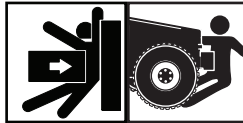


Figure 2.

LOADING - Continued**WARNING**

Do not attempt loading or unloading operations on a side slope greater than 5 degrees and/or fore/aft slope greater than 20%. Prior to performing loading or unloading operations on slopes, determine if ground surface conditions permit safe loading or unloading operations. Slopes that contain snow, ice, loose gravel, or sand may not permit safe loading or unloading. Failure to comply may result in injury or death to personnel.

WARNING

Do not stand between front lift adapter and container. Vehicle could roll suddenly. Failure to comply may result in injury or death to personnel.

WARNING

Use care when working around front lift adapter. Front lift adapter may swing unexpectedly when not attached to container. Failure to comply may result in injury or death to personnel.

WARNING

Maximum permissible gross container weight is 24,000 lbs (10 896 kg). Do not exceed gross container weight. Failure to comply may result in or injury or death to personnel and damage to equipment.

LOADING - Continued**WARNING**

Two personnel must be used (driver and spotter) to position front lift adapter (FLA). Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

CAUTION

- Use extreme caution when loading/unloading container with side doors. Container must remain centered during loading/unloading or flanges on side may be damaged and/or door hinges may make hard contact with guides.
- When operating CHU with nonstandard, end-opening, 20-ft.-long shipping containers, operator needs to take extra care to ensure that sliders and guides contact container properly, container slides on sliders properly, and container loads centered on vehicle. Failure to comply can result in container getting hung up or making hard contact with sliders and guides, causing damage to CHU or container.

NOTE

- For detailed instructions on how to operate the LHS, refer to loading/unloading flatrack in AUTO mode. (WP 0064)
- Rear mud flaps may be pinned up to provide better visibility of front lift adapter lower container locks.
- Multiple connected containers cannot be used with CHU. This includes Six CONS and Quad CONS.

3. Start engine. (WP 0038)

LOADING - Continued

4. Push in PARKING BRAKE control (3).

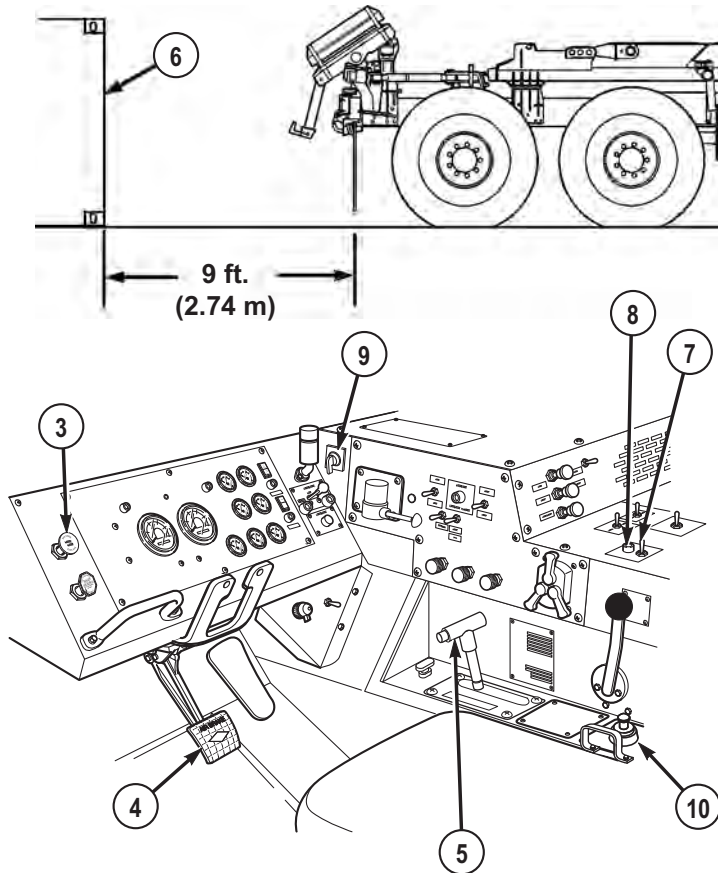


Figure 3.

5. Apply service brake pedal (4), and set transmission range selector (5) to R (reverse).
6. Release service brake pedal (4), and position rear of vehicle within 9 ft. (2.74 m) of front of container (6), aligning centerline of vehicle within 2 in. (5 cm) of container centerline.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

7. Apply service brake pedal (4), and set transmission range selector (5) to N (neutral).
8. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

LOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

9. Turn hydraulic selector switch (9) to AUTO.

CAUTION

On steep downgrades, contact is possible between the front lift adapter lower legs and the rear sliders during empty LHS cycles. If contact appears likely, switch hydraulic selector to MAN H.A. and retract (LOAD) hook arm a few inches. Return hydraulic selector to AUTO and continue (UNLOAD) operation. Repeat as required. Failure to comply may result in damage to equipment.

10. Move joystick (10) to UNLOAD position until front lift adapter (1) is positioned in front of container (6).

LOADING - Continued

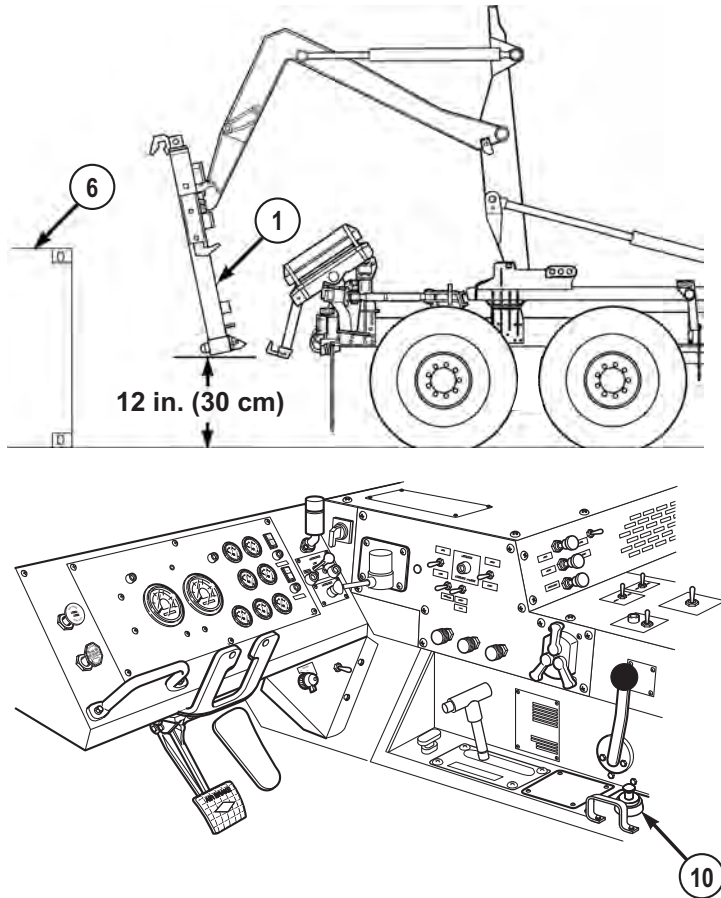


Figure 4.

11. Operate LHS in AUTO mode until front lift adapter (1) is approximately 1 ft. (30 cm) off of ground.
12. Release joystick (10).
13. Shut off engine. (WP 0051)

NOTE

- Refer to the front lift adapter data plate for the proper configuration needed for the height of each container being loaded.
 - There are two slide arms. Passenger side shown.
14. Remove lock pin (11), pin (12), and standard hook (13) from slide arm (14).

LOADING - Continued

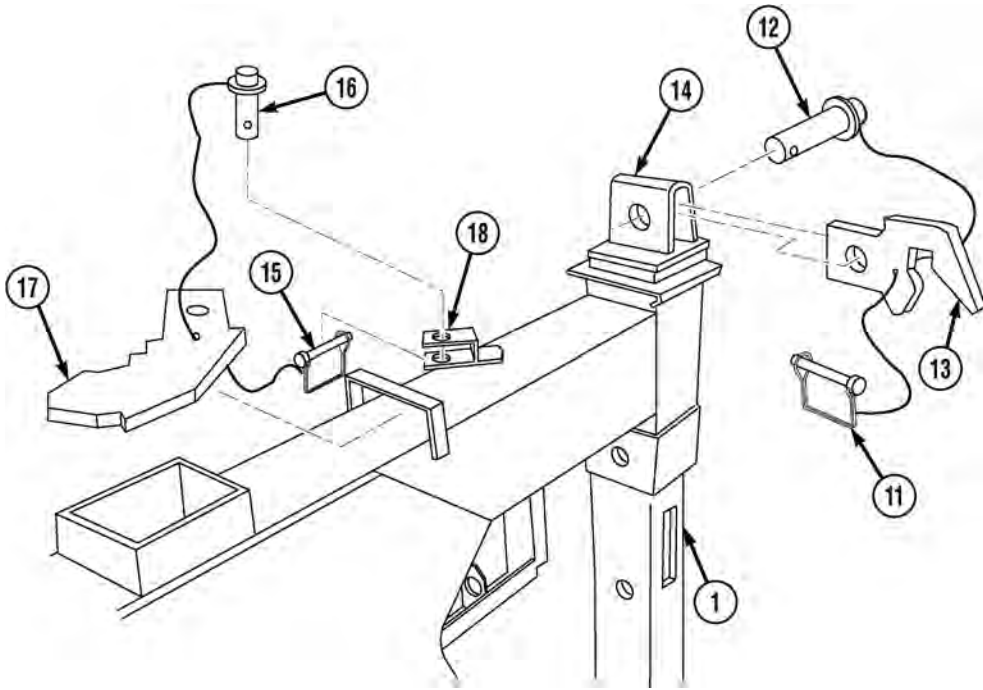


Figure 5.

15. Remove lock pin (15), pin (16), and 6 ft. (1.8 m) hook (17) from stowage bracket (18) on front lift adapter (1).

NOTE

Ensure 6 ft. (1.8 m) hook faces down when installed.

16. Install 6 ft. (1.8 m) hook (17), pin (16), and lock pin (15) in slide arm (14).

LOADING - Continued

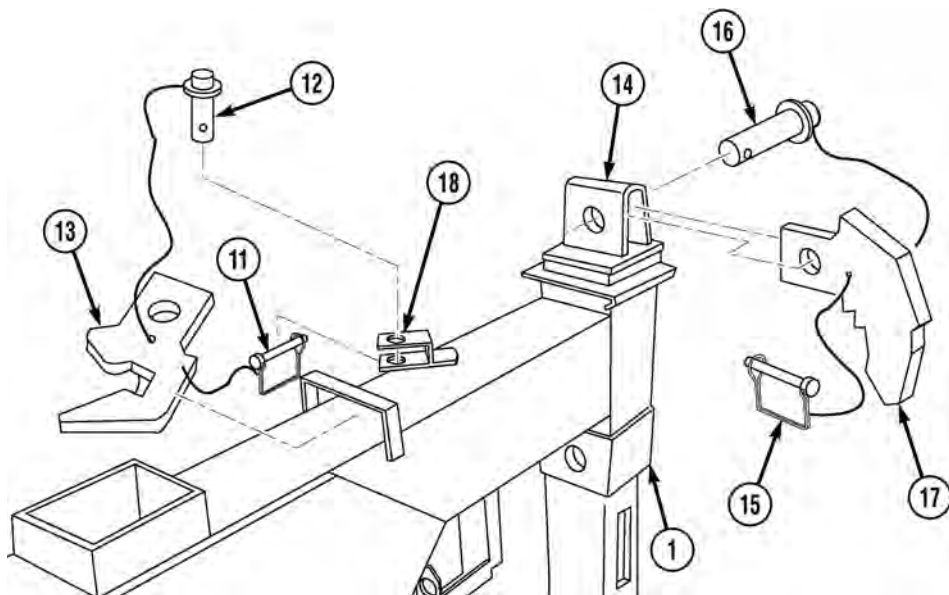


Figure 6.

17. Install standard hook (13), pin (12), and lock pin (11) in stowage bracket (18) on front lift adapter (1).

NOTE

If pin is in stowed position, perform Steps (18) and (19).

18. Remove lock pin (19) and pin (20) from stow position on front lift adapter (1).

LOADING - Continued

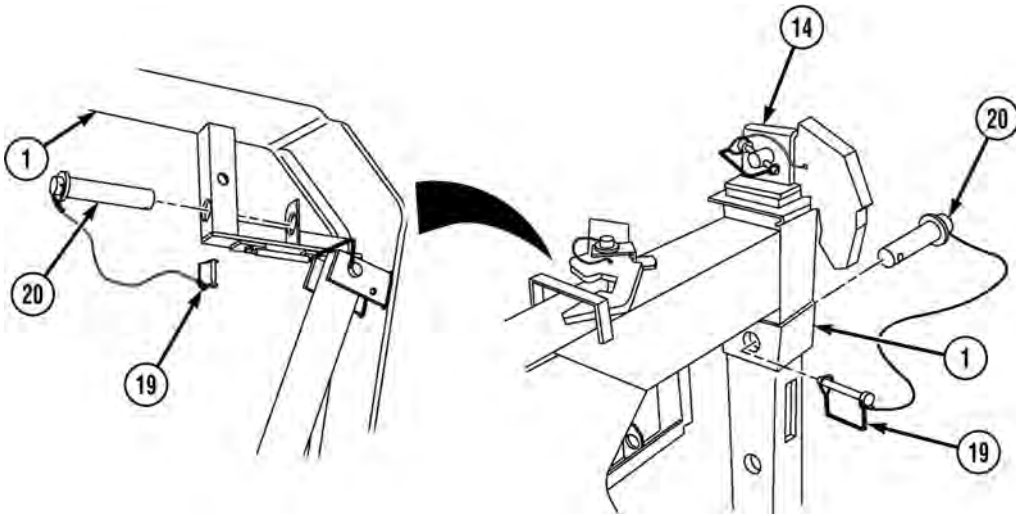
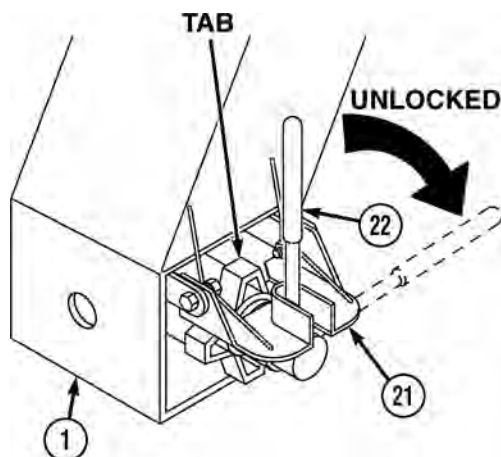


Figure 7.

19. Install pin (20) and lock pin (19) in front lift adapter (1) and slide arm (14) in upper hole.
20. Repeat Steps (14) through (19) for driver side slide arm.

NOTE

- There are two front lift adapter lower container locks. Passenger side shown.
 - Ensure front lift adapter lower container lock handle is positioned in slot on handle lock plate.
 - Ensure tab on handnut faces up.
21. Raise handle lock plate (21) and rotate lower container lock handle (22) toward center of front lift adapter (1) to unlocked position.

LOADING - Continued*Figure 8.*

22. Release handle lock plate (21) on front lift adapter (1).
23. Repeat Steps (21) and (22) for driver side lower container lock.

CAUTION

Ensure sliders are clear of debris and surfaces are properly greased, or damage to equipment may result.

NOTE

There are two rear sliders and container locks. Passenger side shown.

24. Rotate slider (23) so rear of slider faces down.

LOADING - Continued

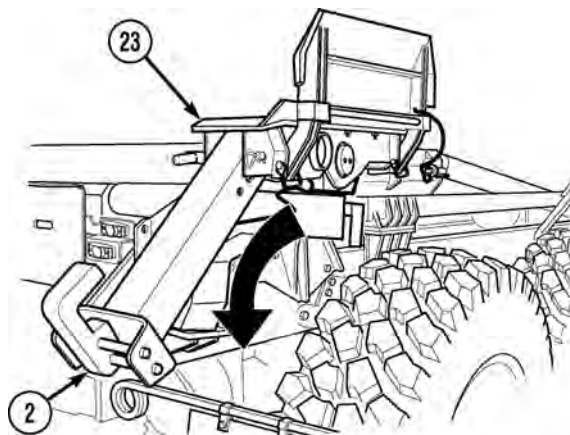


Figure 9.

25. Ensure rear container lock (2) is in ready mode or down position. (WP 0052)
26. Repeat Steps (24) and (25) for driver side rear slider and container lock.
27. Start engine. (WP 0038)
28. Position slide arm 6 ft. (1.8 m) hooks (17) just above and in front of container upper corner castings (24).

LOADING - Continued

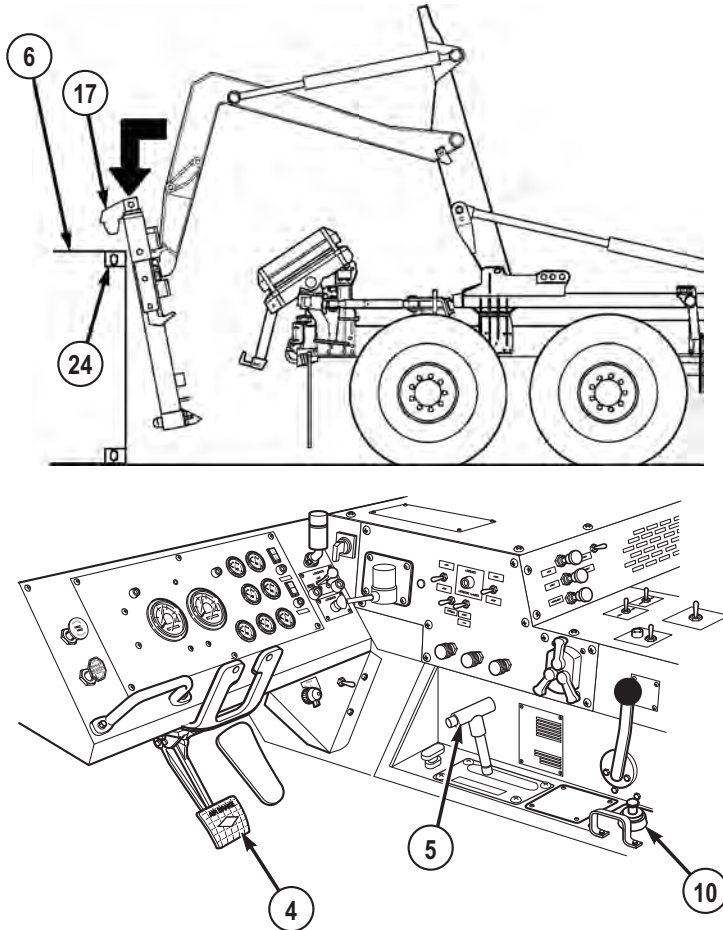


Figure 10.

29. Apply service brake pedal (4), and set transmission range selector (5) to R (reverse).

WARNING



Do not allow front lift adapter to contact the ground when slide arm hooks are not engaged with container upper corner castings. Failure to comply may result in injury or death to personnel and damage to equipment.

LOADING - Continued

30. Release service brake pedal (4) and slowly back up vehicle to approximately 1 ft. (30 cm) from front of container (6).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

31. Apply service brake pedal (4), set transmission range selector (5) to N (neutral), move joystick (10) to load, and raise front lift adapter until slide arm 6 ft. (1.8 m) hooks (17) are above container upper corner castings (24).

CAUTION

Ensure slide arm 6 ft. (1.8 m) hooks are fully engaged with container upper corner castings. Failure to comply may result in damage to equipment.

NOTE

- To get slide arm 6 ft. (1.8 m) hooks to properly seat, it may be necessary to drive vehicle forward slightly.
 - When container is on side slope, it may be difficult to get both upper hooks properly seated. Front lift adapter hangs level. To get front lift adapter to hang closer to same angle as container, it may be necessary to temporarily remove one rear container lock from slider and stow on downhill side of front lift adapter.
32. Release service brake pedal (4) and, moving joystick (10) to UNLOAD, lower slide arm 6 ft. (1.8 m) (17) into container upper corner castings (24).
33. Apply service brake pedal (4), and set transmission range selector (5) to R (reverse).

LOADING - Continued

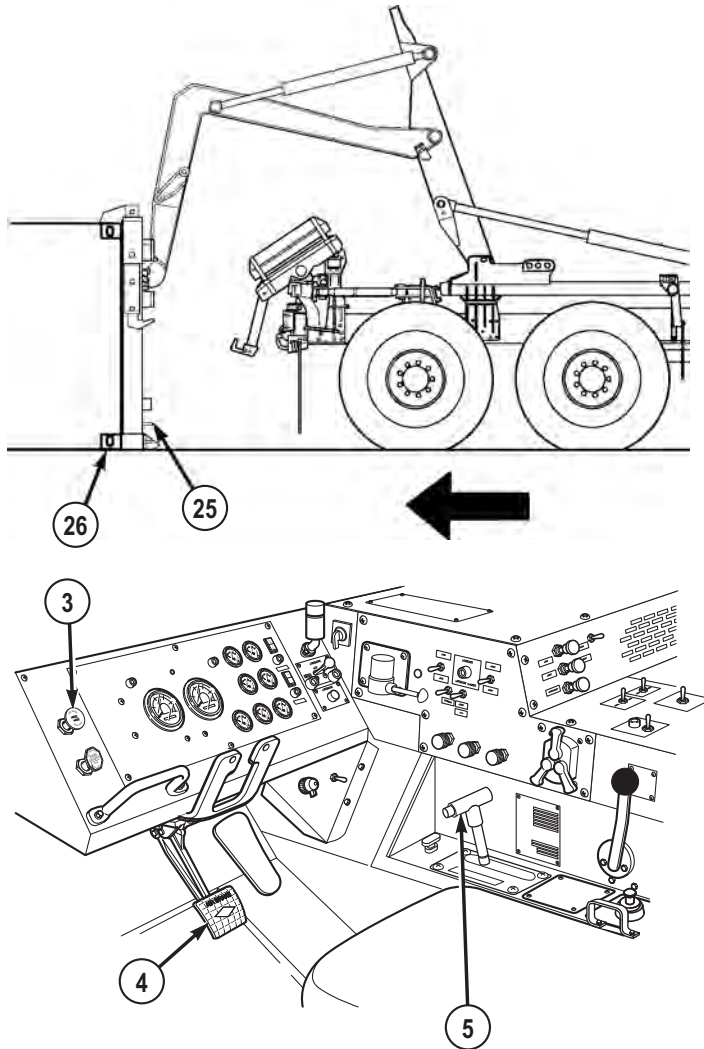


Figure 11.

34. Back up vehicle until lower container locks (25) are seated in container lower front corner castings (26). Stop vehicle.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

LOADING - Continued

35. Set transmission range selector (5) to N (neutral) and pull out PARKING BRAKE control (3).

CAUTION

Ensure lower container locks are fully engaged with container lower front corner castings. Failure to comply may result in damage to equipment.

NOTE

- To get container lock handle to rotate, it may be necessary to loosen handnut.
 - There are two lower container locks. Passenger side shown.
 - After tightening handnut, it may be necessary to loosen handnut slightly to align tab with handle lock plate.
 - Ensure lower container lock handle is secured in slot on handle lock plate.
36. Hold handle lock plate (21) up and rotate lower container lock handle (22) up in the locked position.

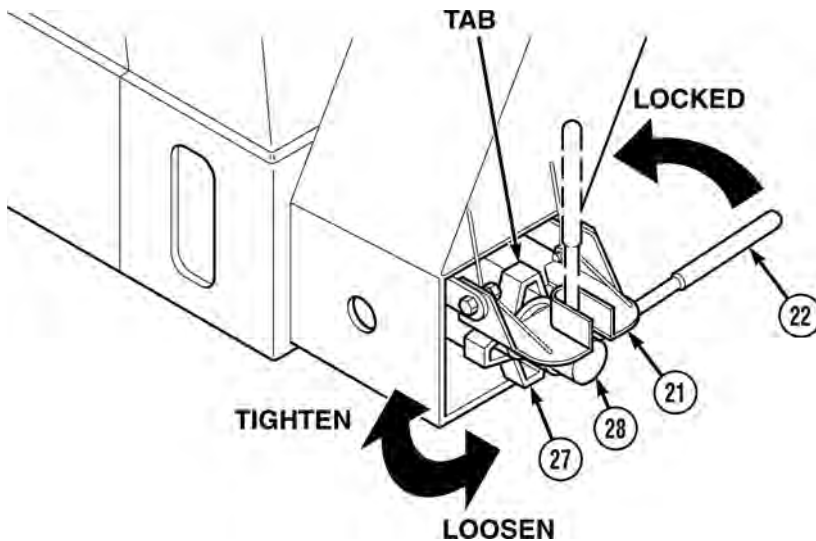


Figure 12.

37. Turn handnut (27) clockwise and tighten stem (28).

LOADING - Continued**NOTE**

Ensure tab on handnut faces up.

38. Lower handle lock plate (21) over lower container lock handle (22) and handnut (27) tab.

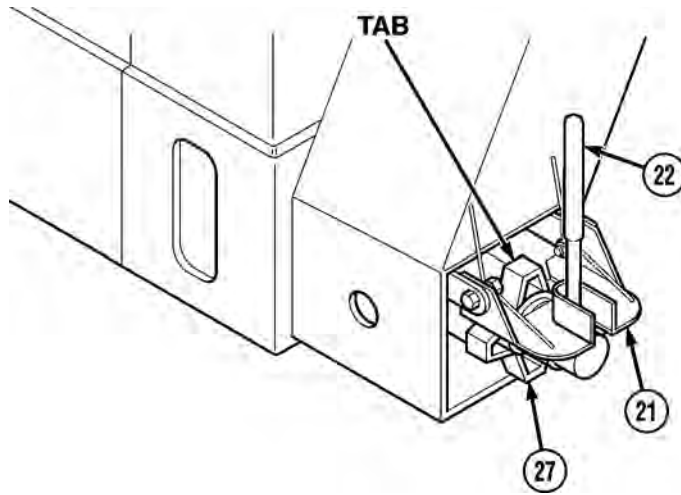


Figure 13.

39. Repeat Steps (36) through (38) for driver side lower container lock.
40. Push in PARKING BRAKE control (3) and release service brake pedal (4).

LOADING - Continued

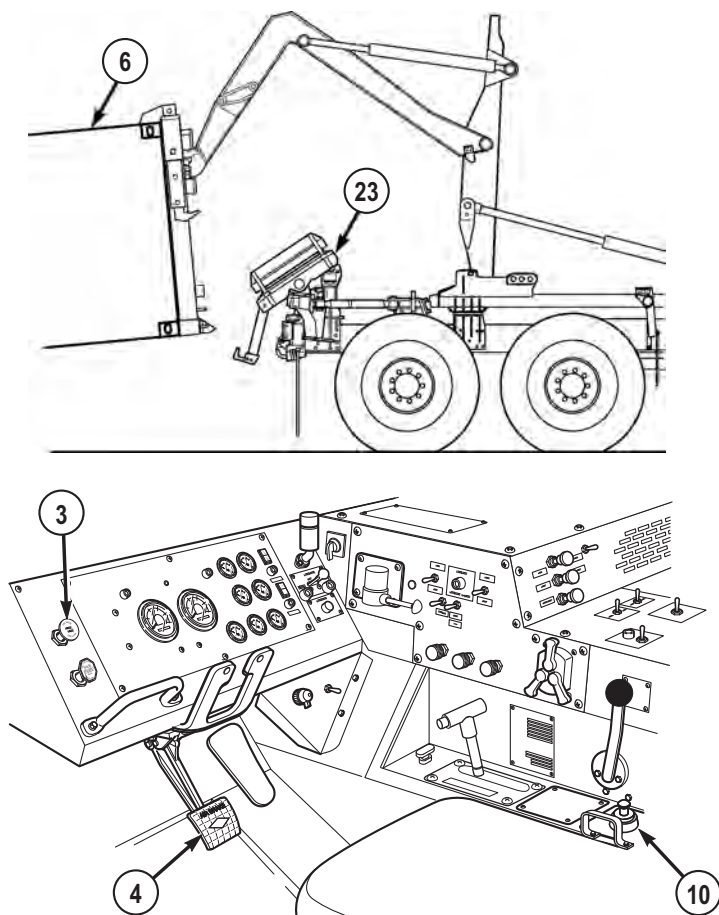


Figure 14.

WARNING

When loading or unloading containers on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

LOADING - Continued**CAUTION**

- If LHS OVER LOAD indicator illuminates but loading operation continues, operator is cautioned that LHS is nearing maximum capacity. In this situation, operator should notify supervisor if it appears payload is unevenly distributed in container or if container load exceeds 24,000 lbs (10 886 kg). If any of these conditions exist, payload must be redistributed or reduced, or damage to equipment may result.
- Load must be evenly distributed in the container. Uneven load distribution may cause the LHS OVER LOAD indicator to give false signals and cause the LHS to operate incorrectly. Damage to equipment may result.
- If LHS OVER LOAD indicator illuminates and normal operation has stopped, return load to original position and notify supervisor to have payload redistributed or weight reduced. Failure to comply may result in damage to equipment.
- Ensure PARKING BRAKE control is not applied before starting load sequence, or damage to equipment may occur.

NOTE

- The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.
 - If container is extremely light or empty, it may be necessary to place transmission range selector to R (reverse) and allow vehicle to roll under container.
 - If container is not centered, and transit locks cannot be installed and pinned, repeat Steps (39) through (48) to reposition container.
 - LHS will only operate when transmission range selector is in N (neutral).
41. Move joystick (10) to LOAD, allowing vehicle to be pulled under container (6).

LOADING - Continued**WARNING**

Ensure that container has contacted rear sliders correctly and is between guides. Failure to comply may result in injury or death to personnel and damage to equipment.

CAUTION

Reduce engine speed to idle before container contacts rear sliders, or damage to equipment may result.

NOTE

- LHS OVER LOAD indicator may illuminate when lifting container from unusual conditions.
- As load is lifted, vehicle will be pulled under container. Some steering wheel adjustment may have to be made to ensure that container contacts rear sliders correctly and is between guides.

42. As container (6) contacts rear sliders (23), reduce engine speed to idle and apply service brake pedal (4).

NOTE

If container is being loaded in soft soil conditions, perform Steps (43) through (48).

43. Release joystick (10).

LOADING - Continued

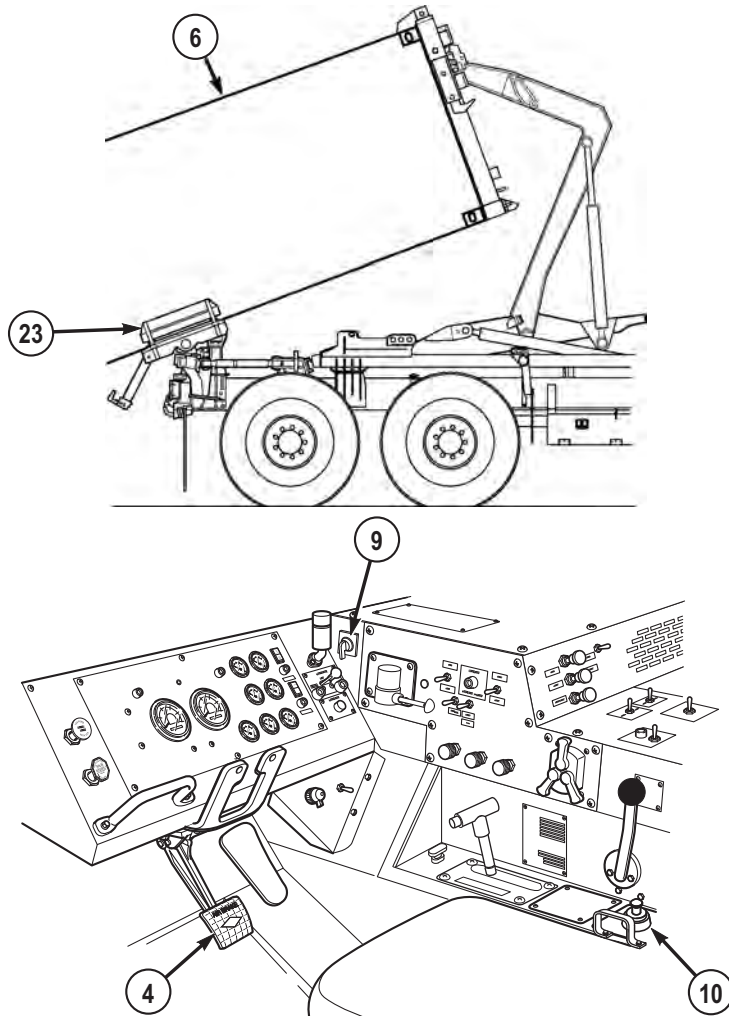


Figure 15.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

44. Turn hydraulic selector switch (9) to MAN H.A.
45. Move joystick (10) to LOAD until container (6) is approximately 2 ft. (0.61 m) off the ground.

LOADING - Continued

46. Release joystick (10).

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

47. Turn hydraulic selector switch (9) to AUTO. Resume normal AUTO operations.

NOTE

Engine speed may be increased and decreased to ease loading.

48. After container (6) contacts rear sliders (23), increase engine speed to approximately 1500 rpm until container is almost loaded. Reduce engine speed to idle.

CAUTION

After loading operations using CHU kit and container are complete, and the LHS NO TRANSIT indicator goes out, operator must release the joystick from LOAD position. Failure to release joystick may cause LHS OVER LOAD indicator to illuminate and hydraulic cylinders to remain active forcing a temporary bow in the LHS frame, resulting in contact between LHS and container.

49. Continue loading until container (6) is fully loaded and LHS NO TRANSIT indicator (29) goes out.

LOADING - Continued

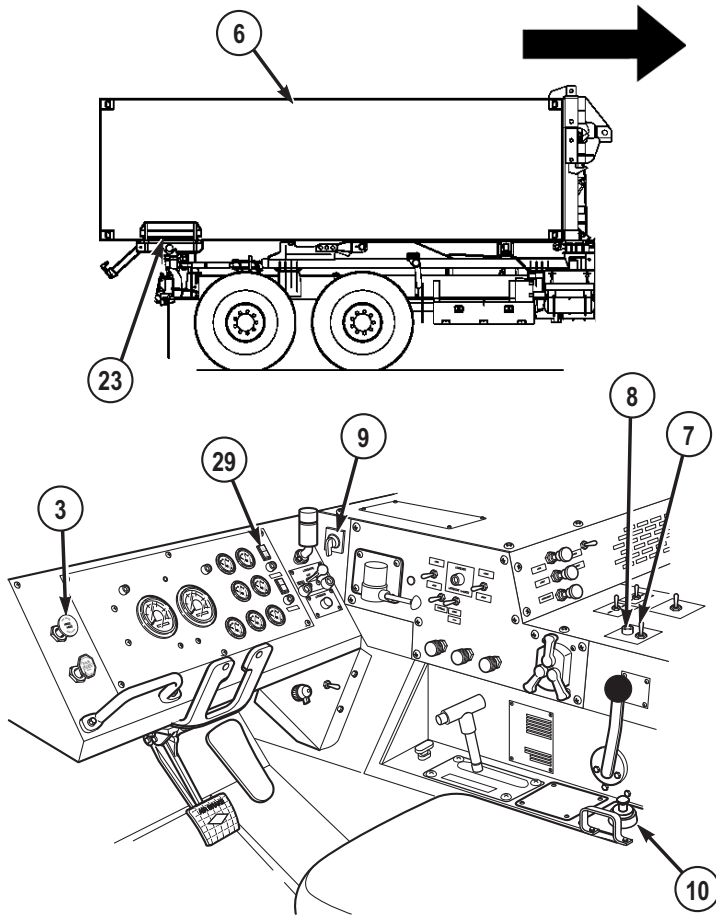


Figure 16.

50. Release joystick (10).
51. Pull out PARKING BRAKE control (3).

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Hydraulic selector switch must be in the OFF position before driving vehicle, or hydraulic system could overheat.

52. Turn hydraulic selector switch (9) to OFF.

LOADING - Continued

53. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.
54. Shut off engine. (WP 0051)

NOTE

- There are two rear container locks. Passenger side shown.
- If container is not centered, and transit locks cannot be installed and pinned, repeat Steps (40) through (52) to reposition container.

55. Support rear container lock (2) and remove lock pin (30) and pin (31).

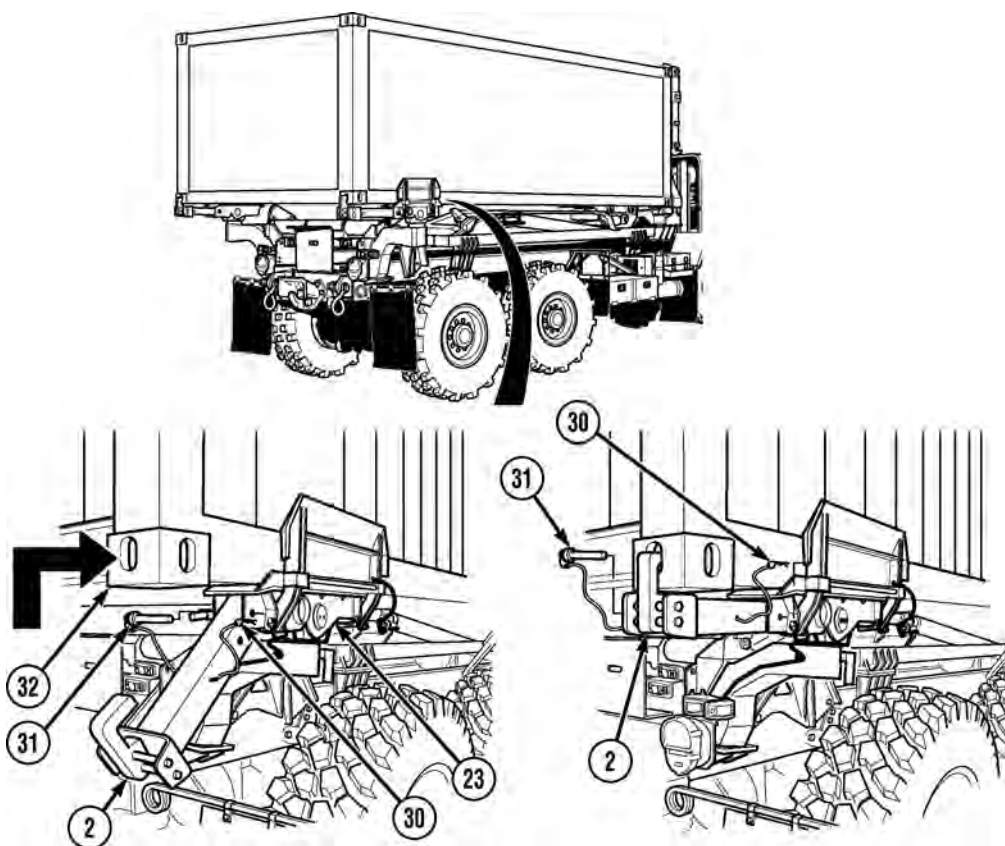


Figure 17.

56. Rotate rear container lock (2) up and position into container lower rear corner casting (32).

LOADING - Continued

57. Install pin (31) and lock pin (30) in rear container lock (2) and slider (23).

WARNING

Do not reduce tire pressure when loaded with FRS or container. Highway tire pressure, 60 psi (414 kPa) front and 83 psi (572 kPa) rear, is required at all times when loaded with FRS or container. If equipped with armor kit, highway tire pressure 75 psi (517 kPa) front is required at all times. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Maximum side slope when loaded with an FRS or container is 30%. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

When loaded with FRS or container, the center of gravity is moved up and toward rear of vehicle. Use extreme care when turning and ascending or descending on a grade. Failure to comply may result in injury or death to personnel.

58. Perform Steps (55) through (57) for driver side rear container lock.

UNLOADING**WARNING**

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

WARNING

Do not attempt loading or unloading operations on a side slope greater than 5 degrees and/or fore/aft slope greater than 20%. Prior to performing loading or unloading operations on slopes, determine if ground surface conditions permit safe loading or unloading operations. Slopes that contain snow, ice, loose gravel, or sand may not permit safe loading or unloading. Failure to comply may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

UNLOADING - Continued**CAUTION**

- Check that ground conditions where container will be placed can support the container weight or damage to the container, front lift adapter or LHS may result.
- Use extreme caution when loading/unloading container with side doors. Container must remain centered during loading/unloading or flanges on side may be damaged and/or door hinges may make hard contact with guides.

NOTE

For detailed instructions on how to operate the LHS, refer to loading/unloading flatrack in AUTO mode. (WP 0064)

1. Check area for operating room at front and rear of vehicle. Check overhead clearance and ground conditions.

NOTE

There are two rear container locks. Passenger side shown.

2. Remove lock pin (1), pin (2), and rear container lock (3) from lower rear corner casting (4).

UNLOADING - Continued

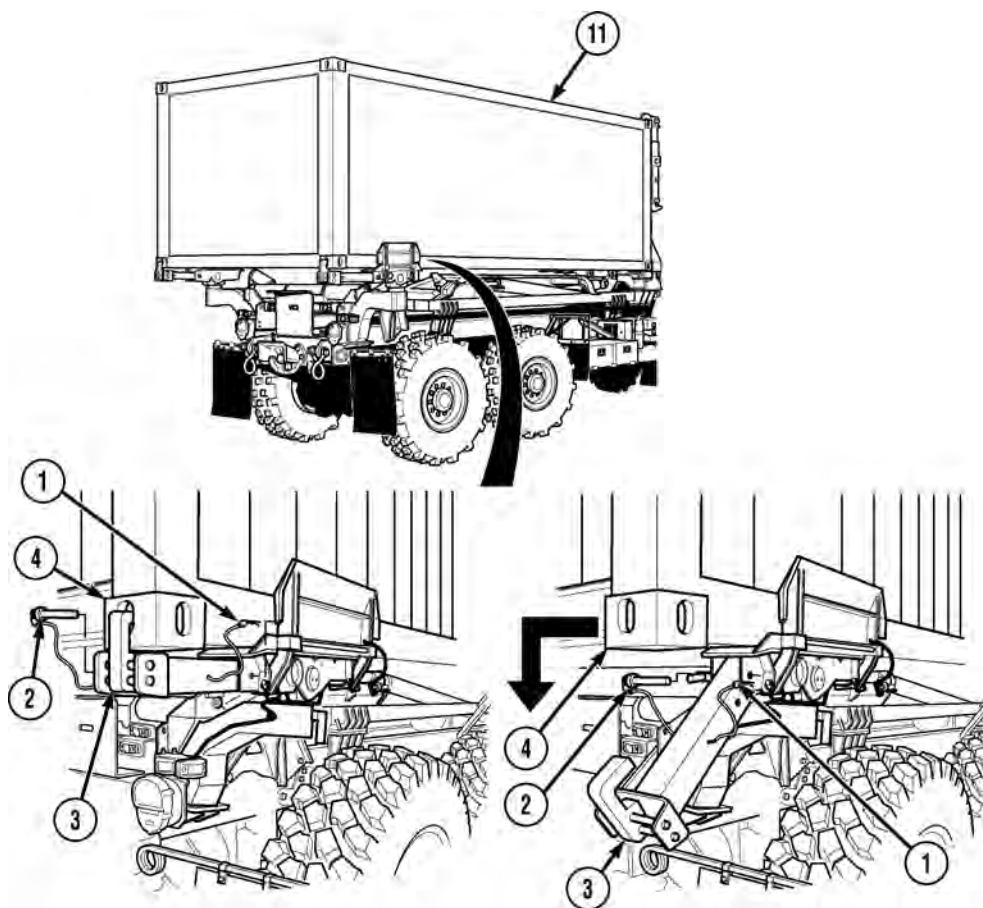


Figure 18.

3. Rotate rear container lock (3) in down position and install pin (2) and lock pin (1).
4. Perform Steps (2) and (3) for driver side rear container lock.
5. Start engine. (WP 0038)

NOTE

LHS will only operate when transmission range selector is in N (neutral).

6. Apply service brake pedal (5), and set transmission range selector (6) to N (neutral).

UNLOADING - Continued

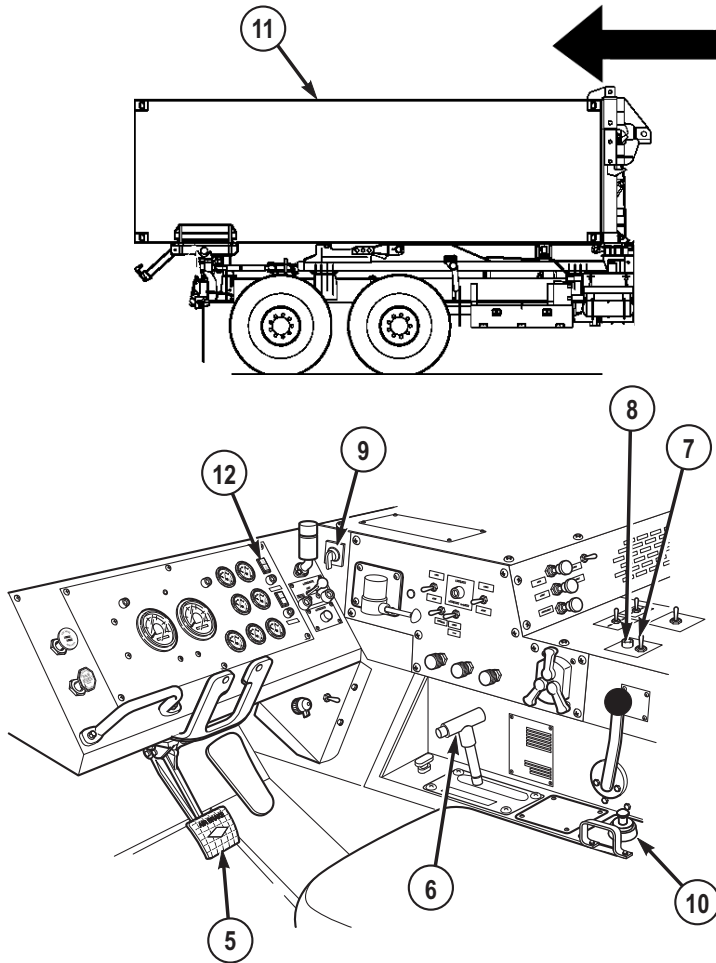


Figure 19.

7. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

8. Turn hydraulic selector switch (9) to AUTO.

UNLOADING - Continued**WARNING**

When loading or unloading containers on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

NOTE

LHS will not operate and unload if rear container locks are engaged.

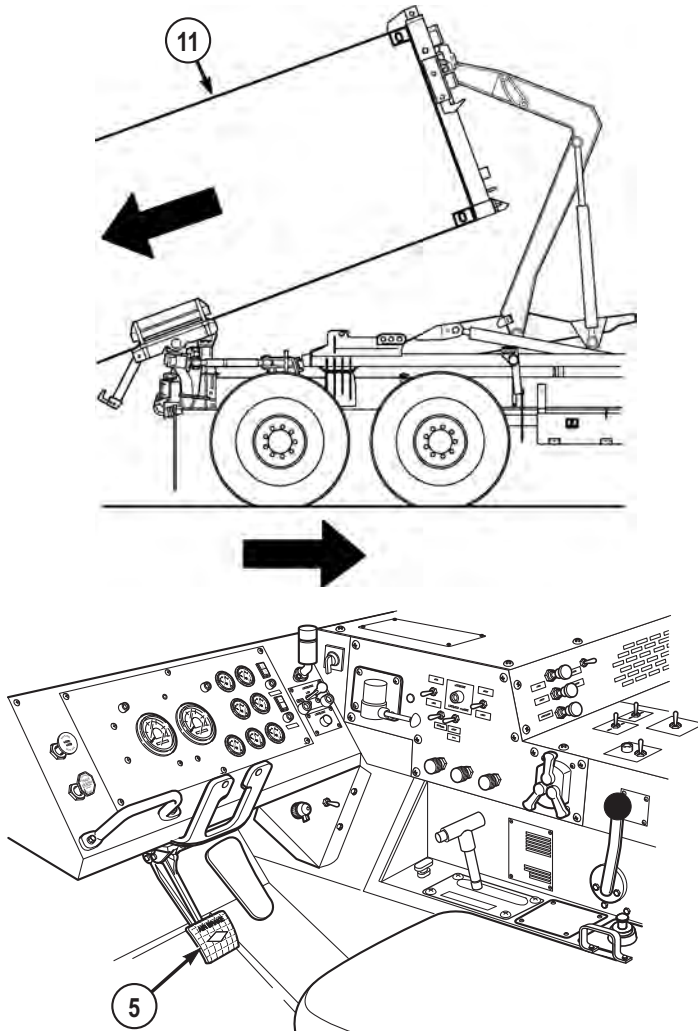
9. Move joystick (10) to UNLOAD. Container (11) will start to move rearward. LHS NO TRANSIT indicator (12) will illuminate. Maintain engine speed at idle until front of container raises approximately 1 ft. (30 cm).

NOTE

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.

10. Continue to unload container (11) until back edge of container touches ground.
11. Release service brake pedal (5) and allow container (11) to push vehicle forward from under container.

UNLOADING - Continued

*Figure 20.*

12. As front of container (11) approaches within approximately 8 in. (20.3 cm) of ground, decrease engine speed to idle and apply service brake pedal (5).

CAUTION

Once vehicle's rear suspension has been relieved of container load, do not continue in UNLOAD position as possibility of jacking up rear of vehicle with hook arm may occur and damage to equipment may result.

UNLOADING - Continued**NOTE**

If container is extremely light or empty, it may be necessary to set transmission range selector to D (drive) and allow vehicle to move out from under container.

13. Continue unloading until bottom of container (11) is on ground and rear suspension is unloaded.

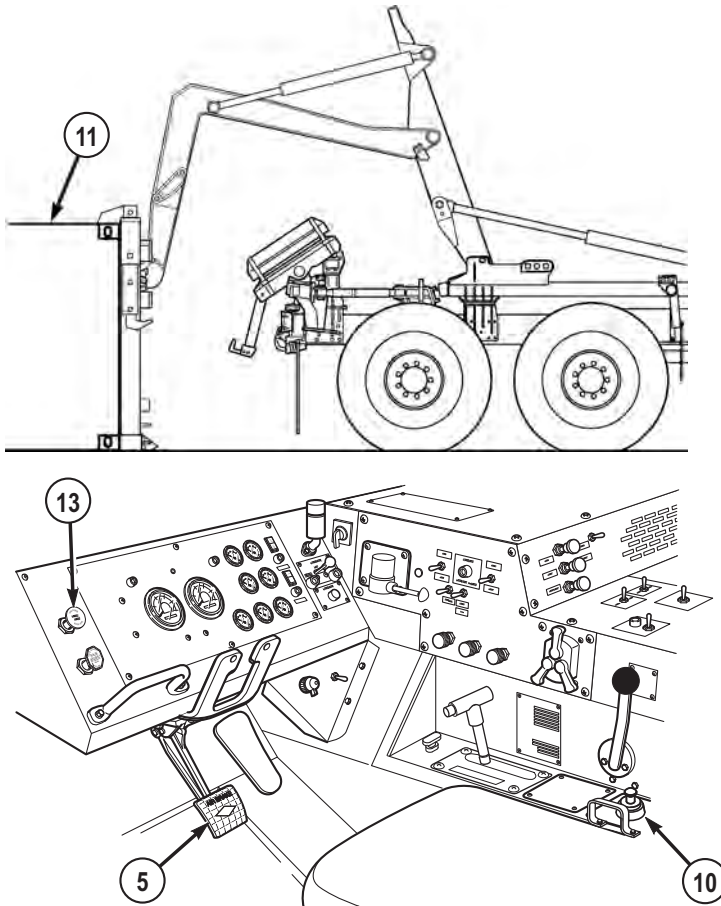


Figure 21.

14. Release joystick (10) when container (11) is resting on ground.
15. Pull out PARKING BRAKE control (13).
16. Release service brake pedal (5).

UNLOADING - Continued**WARNING**

Ensure that all tension has been relieved between LHS hook and front lift adapter prior to unlocking front lift adapter lower container locks. Stay clear of front lift adapter when unlocking front lift adapter lower container locks as front lift adapter may separate from container unexpectedly. Failure to comply may result in injury or death to personnel.

NOTE

There are two adapter lower container locks. Passenger side shown.

17. Raise handle lock plate (14) and turn handnut (15) counterclockwise to loosen stem (16).

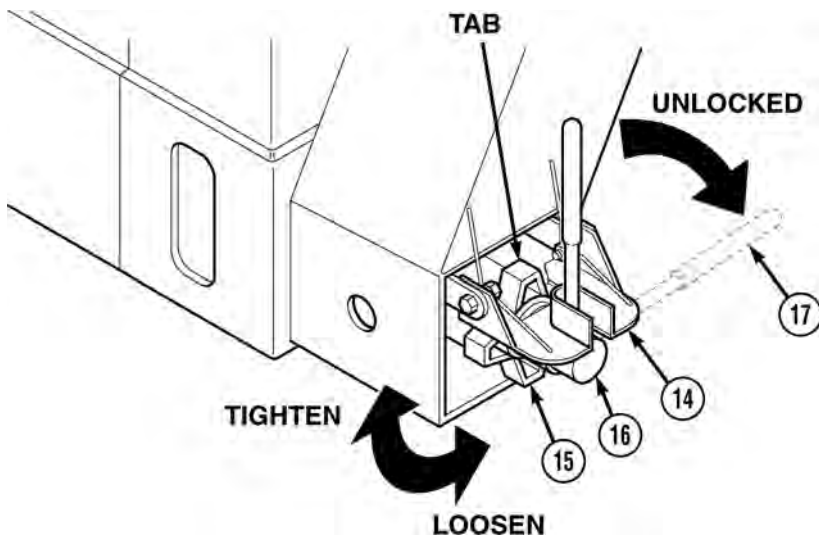


Figure 22.

NOTE

Ensure tab on handnut faces up.

18. Rotate lower container lock handle (17) toward center of vehicle to unlocked position.

UNLOADING - Continued**CAUTION**

Handnut must be tightened clockwise to tighten stem. Failure to tighten stem may cause damage to equipment during next container loading procedure.

19. Turn handnut (15) clockwise and tighten stem (16).
20. Release handle lock plate (14) over container lock handle (17) and handnut (15) tab.
21. Repeat Steps (17) through (20) for driver side adapter lower container lock.
22. Push in PARKING BRAKE control (13).

UNLOADING - Continued

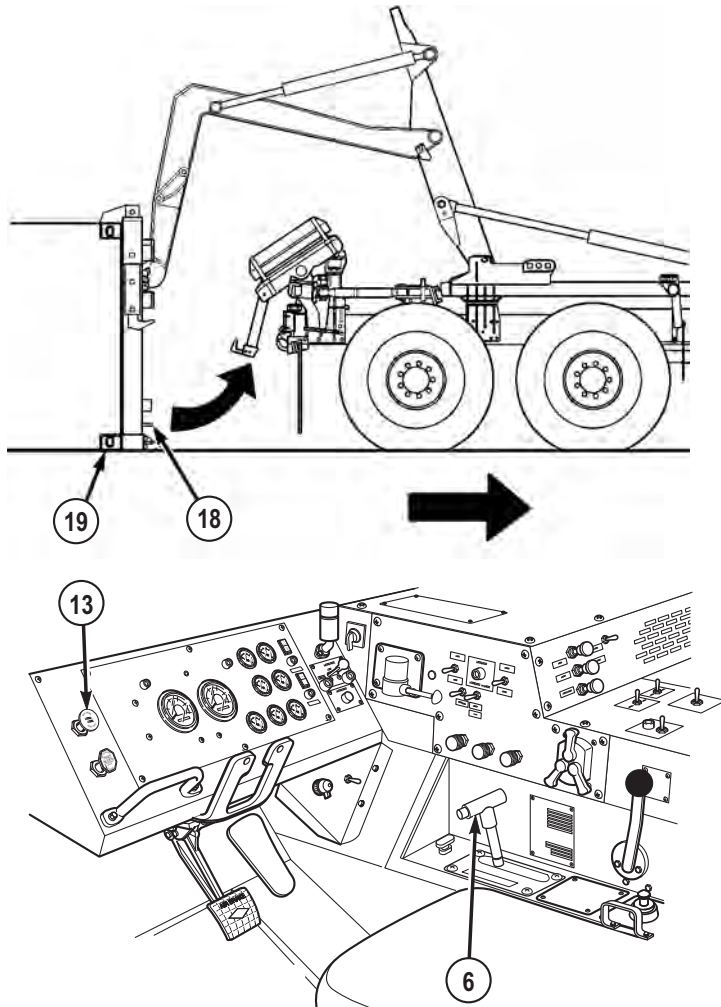


Figure 23.

23. Set transmission range selector (6) to D (drive).
24. Move vehicle forward until lower container locks (18) disengage from lower front corner castings (19) approximately 4 to 6 in. (10 to 15 cm).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

25. Apply service brake pedal (5), and set transmission range selector (6) to N (neutral).

UNLOADING - Continued

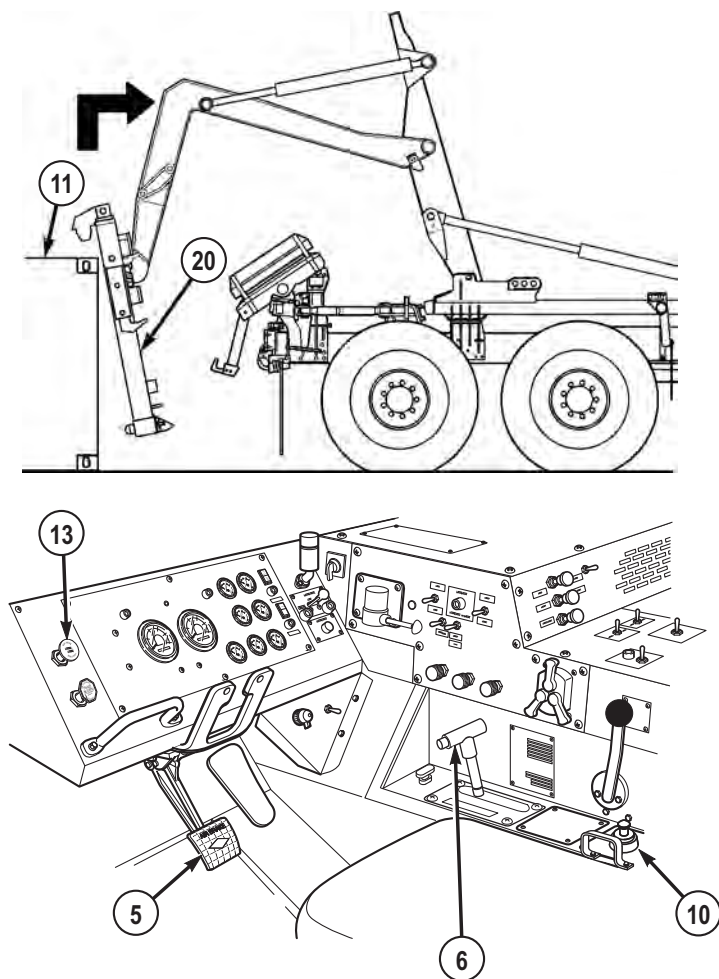


Figure 24.

CAUTION

Ensure that the slide arm 6 ft. (1.8 m) hooks are completely disengaged and do not hang up in container upper corner castings when retracting LHS. Failure to comply may result in damage to equipment.

NOTE

It may be necessary to move the vehicle forward or backward slightly to get the slide arm 6 ft. (1.8 m) hooks to disengage.

UNLOADING - Continued

26. Move joystick (10) to LOAD position until front lift adapter (20) is disengaged from container (11).
27. Release joystick (10).
28. Move vehicle forward until rear of vehicle is approximately 9 ft. (2.74 m) in front of container (11).

NOTE

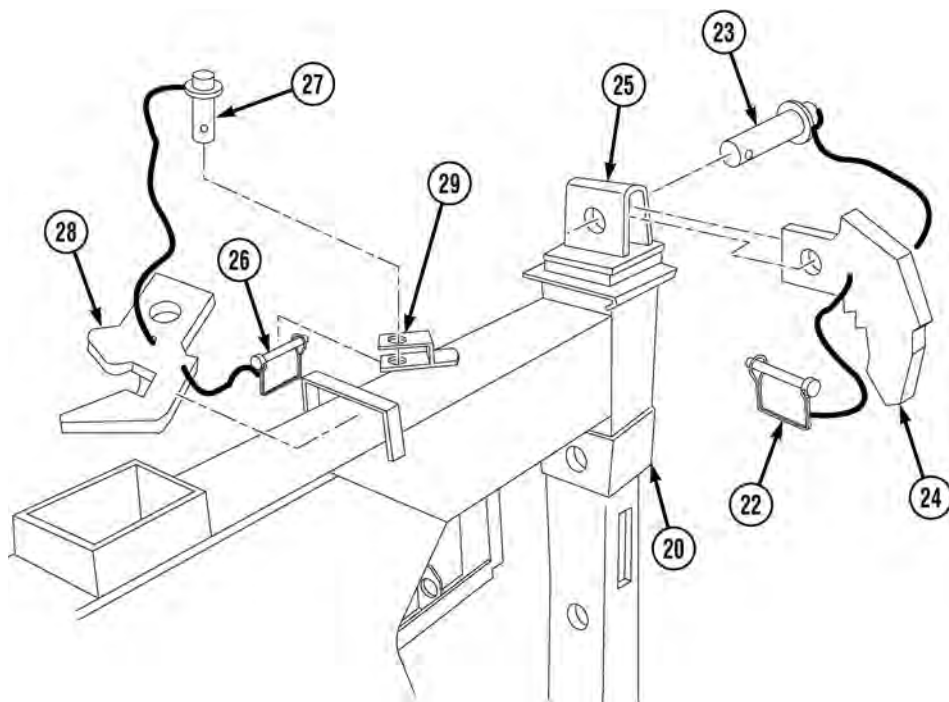
LHS will only operate when transmission range selector is in N (neutral).

29. Set transmission range selector (6) to N (neutral).
30. Pull out PARKING BRAKE control (13).
31. Move joystick (10) to unload position until front lift adapter (20) is positioned approximately 1 ft. (30 cm) off ground.

NOTE

- Perform Steps (31) through (36) if remainder of CHU operation does not require use of 6 ft. (1.8 m) hooks.
 - There are two slide arms. Passenger side shown.
32. Remove lock pin (22), pin (23), and 6 ft. (1.8 m) hook (24) from slide arm (25).

UNLOADING - Continued

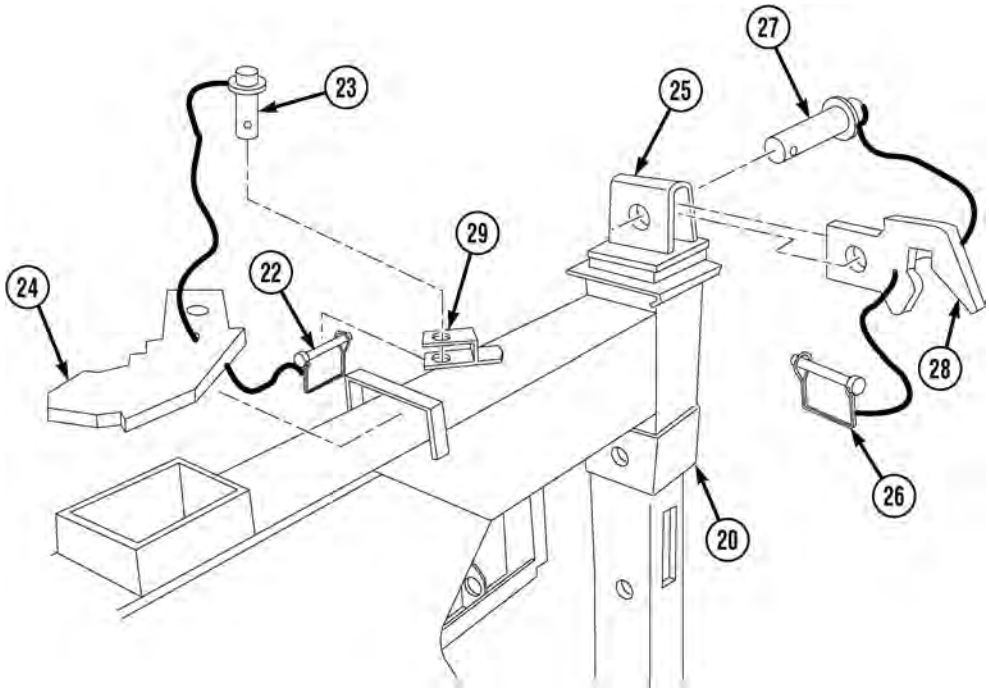
*Figure 25.*

33. Remove lock pin (26), pin (27), and standard hook (28) from stowage bracket (29) on front lift adapter (20).

NOTE

Ensure standard hooks face down when installed.

34. Install standard hook (28), pin (27), and lock pin (26) on slide arm (25).

UNLOADING - Continued*Figure 26.*

35. Install 6 ft. (1.8 m) hook (24), pin (23), and lock pin (22) in stowage bracket (29) on front lift adapter (20).
36. Repeat Steps (31) through (36) for left side slide arm.

CAUTION

- On steep downgrades, contact is possible between the front lift adapter lower legs and the rear sliders during empty LHS cycles. If contact appears likely, switch hydraulic selector to MAN H.A. and retract (LOAD) hook arm a few inches. Switch hydraulic selector to MAN M.F. and retract the main frame until the front lift adapter clears the rear sliders. Return hydraulic selector to AUTO and continue (LOAD) operation. Failure to comply may result in damage to equipment.
- Never drive with LHS NO TRANSIT indicator illuminated. An illuminated indicator means that the LHS is not fully stowed. Failure to comply may result in damage to equipment.

UNLOADING - Continued**NOTE**

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.

37. Move joystick (10) to LOAD position until LHS is fully retracted and front lift adapter (20) is positioned on bumper supports (21). LHS NO TRANSIT indicator(12) will go out, which indicates LHS is in transport position.

UNLOADING - Continued

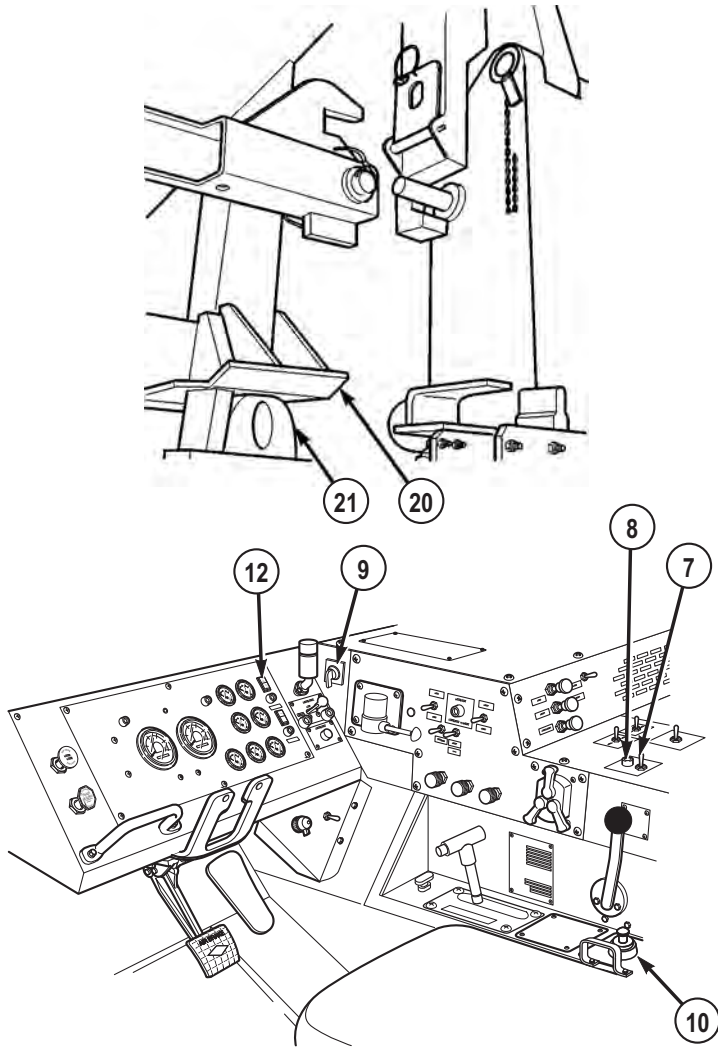


Figure 27.

38. Release joystick (10).

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Hydraulic selector switch must be in the OFF position before driving vehicle, or hydraulic system could overheat.

UNLOADING - Continued

39. Turn hydraulic selector switch (9) to OFF.
40. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
LOADING AND UNLOADING CONTAINER (51 INCHES [130 CM] OR TALLER) TO
VEHICLE USING FRONT LIFT ADAPTER (FLA)**

INITIAL SETUP:

Not Applicable

LOADING

WARNING



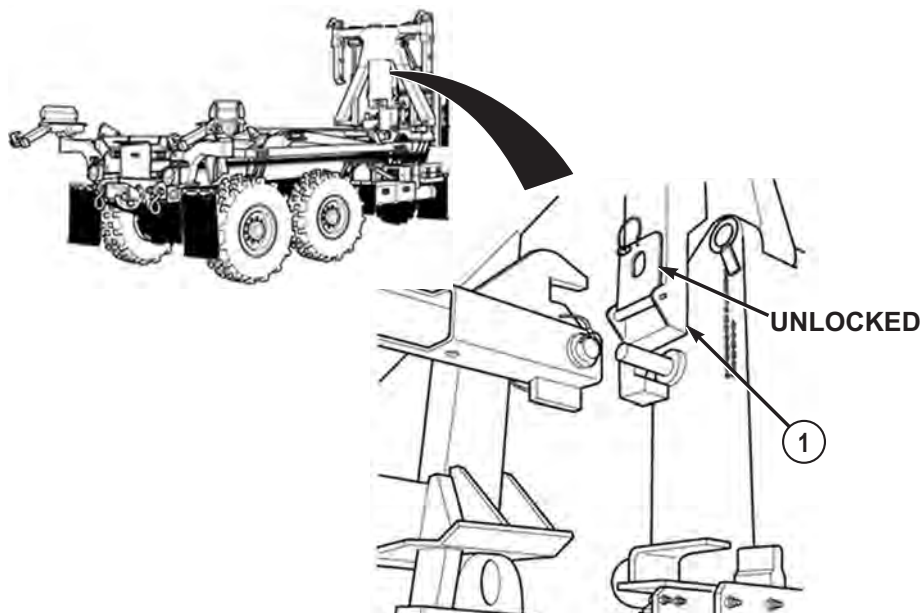
Front lift adapter weighs 1,600 lbs (727 kg). Do not attempt to lift or move front lift adapter without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

CAUTION

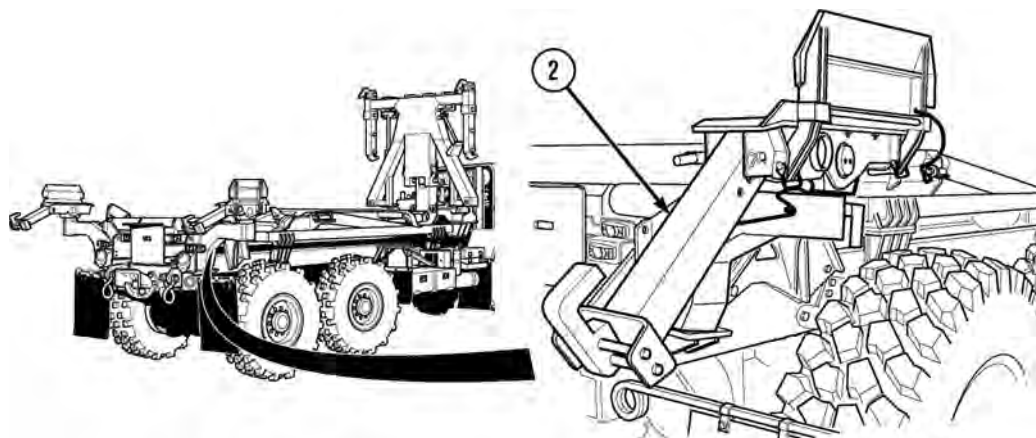
Ensure front lift adapter is in the unlocked position before attempting to load a container to vehicle. Failure to comply will result in damage to equipment.

1. Ensure front lift adapter (1) is unlocked. (WP 0057)

LOADING - Continued

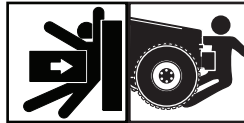
*Figure 1.*

2. Ensure rear container lock (2) is in ready mode. (WP 0052)

*Figure 2.*

LOADING - Continued**WARNING**

Do not attempt loading or unloading operations on a side slope greater than 5 degrees and/or fore/aft slope greater than 20%. Prior to performing loading or unloading operations on slopes, determine if ground surface conditions permit safe loading or unloading operations. Slopes that contain snow, ice, loose gravel, or sand may not permit safe loading or unloading. Failure to comply may result in injury or death to personnel.

WARNING

Do not stand between front lift adapter and container. Vehicle could roll suddenly. Failure to comply may result in injury or death to personnel.

WARNING

Use care when working around front lift adapter. Front lift adapter may swing unexpectedly when not attached to container. Failure to comply may result in injury or death to personnel.

WARNING

Maximum permissible gross container weight is 24,000 lbs (10 896 kg). Do not exceed gross container weight. Failure to comply may result in or injury or death to personnel and damage to equipment.

LOADING - Continued**WARNING**

Two personnel must be used (driver and spotter) to position front lift adapter (FLA). Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

CAUTION

- Use extreme caution when loading/unloading container with side doors. Container must remain centered during loading/unloading or flanges on side may be damaged and/or door hinges may make hard contact with guides.
- When operating CHU with nonstandard, end-opening, 20 ft. long shipping containers, operator needs to take extra care to ensure that sliders and guides contact container properly, container slides on sliders properly, and container loads centered on vehicle. Failure to comply may result in container getting hung up or making hard contact with sliders and guides, causing damage to CHU or container.

NOTE

- For detailed instructions on how to operate the LHS, refer to loading/unloading flatrack in AUTO mode. (WP 0064)
- Rear mud flaps may be pinned up to provide better visibility of front lift adapter lower container locks.
- Multiple connected containers cannot be used with CHU. This includes Six CONS and Quad CONS.

3. Start engine. (WP 0038)

LOADING - Continued

4. Push in PARKING BRAKE control (3).

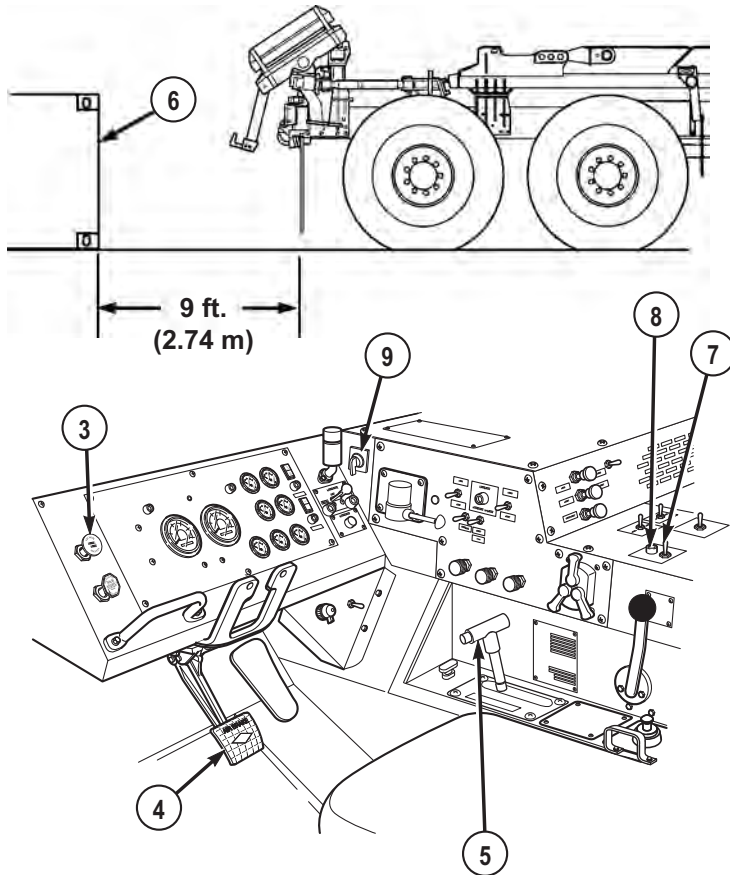


Figure 3.

5. Apply service brake pedal (4), and set transmission range selector (5) to R (reverse).
6. Release service brake pedal (4) and position rear of vehicle within 9 ft. (2.74 m) of front of container (6), aligning centerline of vehicle within 2 in. (5 cm) of container centerline.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

7. Apply service brake pedal (4), and set transmission range selector (5) to N (neutral).
8. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

LOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

9. Turn hydraulic selector switch (9) to AUTO.

CAUTION

On steep downgrades, contact is possible between the front lift adapter lower legs and the rear sliders during empty LHS cycles. If contact appears likely, switch hydraulic selector to MAN H.A. and retract (LOAD) hook arm a few inches. Return hydraulic selector to AUTO and continue (UNLOAD) operation. Repeat as required. Failure to comply may result in damage to equipment.

10. Move joystick (10) to UNLOAD position until front lift adapter (1) is positioned in front of container (6).

LOADING - Continued

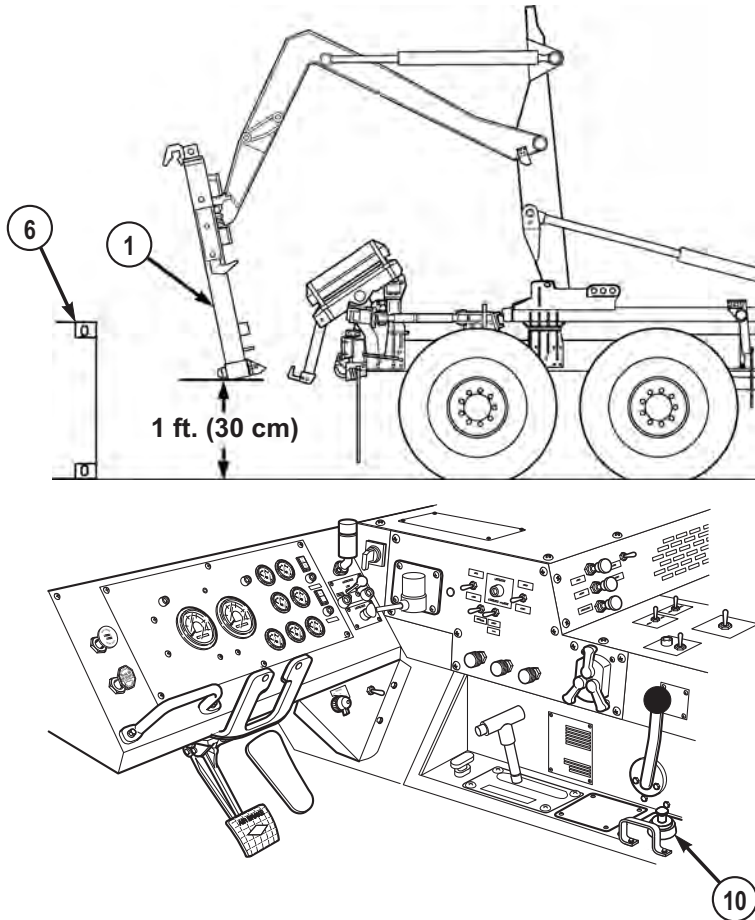


Figure 4.

11. Operate LHS in AUTO mode until front lift adapter (1) is approximately 1 ft. (30 cm) off of ground.
12. Release joystick (10).
13. Shut off engine. (WP 0051)

NOTE

- Refer to the front lift adapter data plate for the proper configuration needed for the height of container being loaded.
- There are two slide arms. Passenger side shown.

LOADING - Continued

14. Remove lockpin (11), pin (12), and half-height container front hook (13) from stowage bracket (14) on front lift adapter (1).

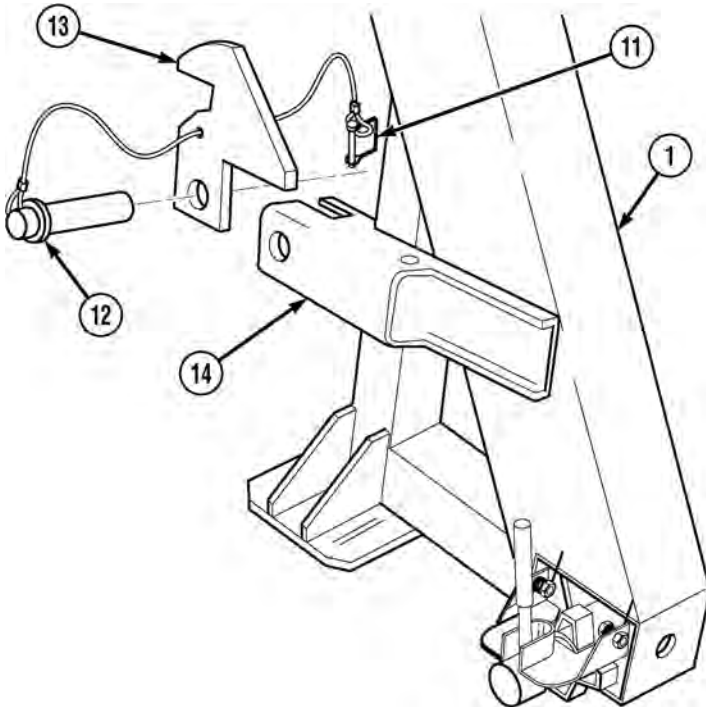


Figure 5.

NOTE

Ensure half-height container front hooks face down when installed.

15. Position half-height container front hook (13) in slot (15) on slide arm (16) and install pin (12) and lockpin (11) on front lift adapter (1).

LOADING - Continued

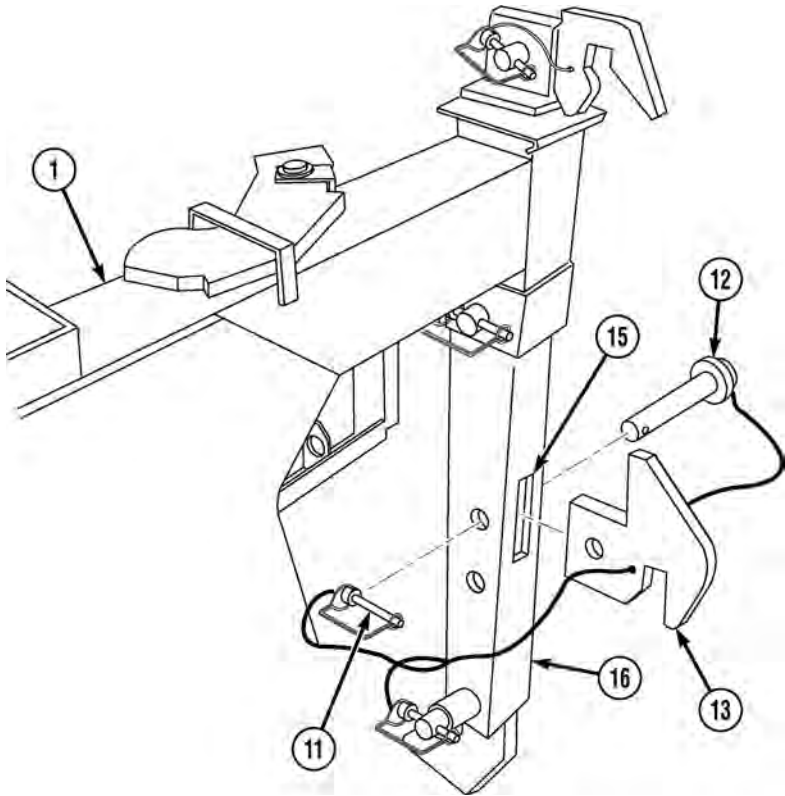


Figure 6.

16. Remove lockpin (17) and pin (18) from front lift adapter (1) slide arm (16) upper hole.

LOADING - Continued

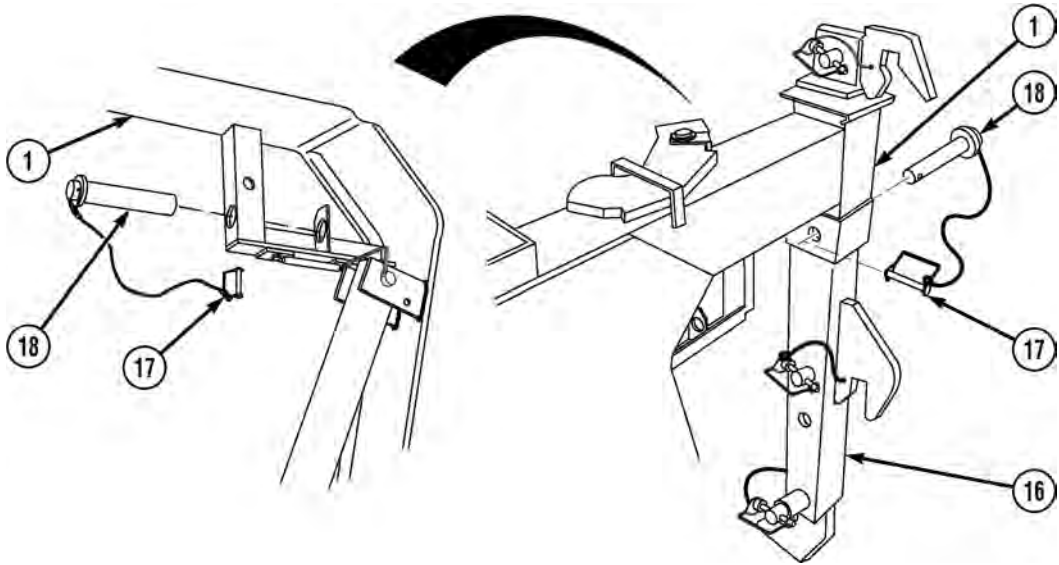


Figure 7.

17. Install pin (18) and lockpin (17) in stow position on front lift adapter (1).
18. Repeat Steps (14) through (17) for driver side.

NOTE

- Ensure front lift adapter lower container lock handle is positioned in slot on handle lock plate.
 - Ensure tab on handnut faces up.
 - There are two front lift adapter lower container locks and rear sliders. Passenger side shown.
19. Raise handle lock plate (19) and rotate lower container lock handle (20) toward center of front lift adapter (1) to unlocked position.

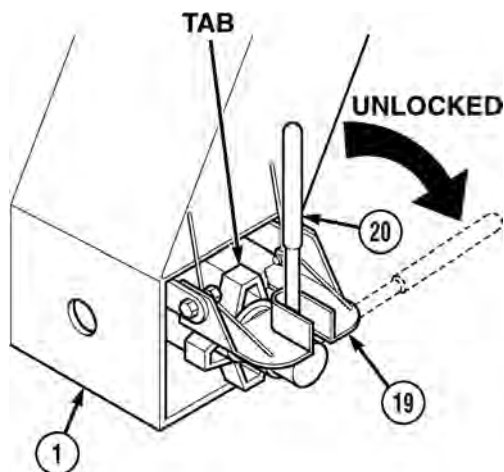
LOADING - Continued

Figure 8.

20. Release handle lock plate (19) on front lift adapter (1).
21. Repeat Steps (19) and (20) for driver side lower container lock and rear slider.

CAUTION

- Ensure sliders are clear of debris and surfaces are properly greased, or damage to equipment may result.
 - There are two rear sliders and container locks. Passenger side shown.
22. Rotate slider (21) so rear of slider faces down.

LOADING - Continued

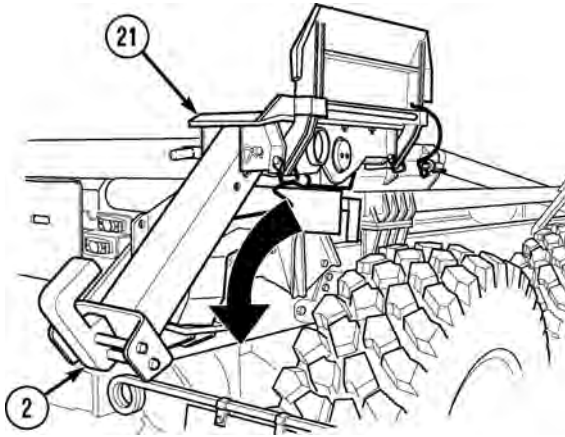


Figure 9.

23. Ensure rear container lock (2) is in ready mode or down position. (WP 0052)
24. Repeat Steps (22) and (23) for driver side rear slider.
25. Start engine. (WP 0038)
26. Position half-height container front hooks (13) just above and in front of half-height container upper front corner castings (22).

LOADING - Continued

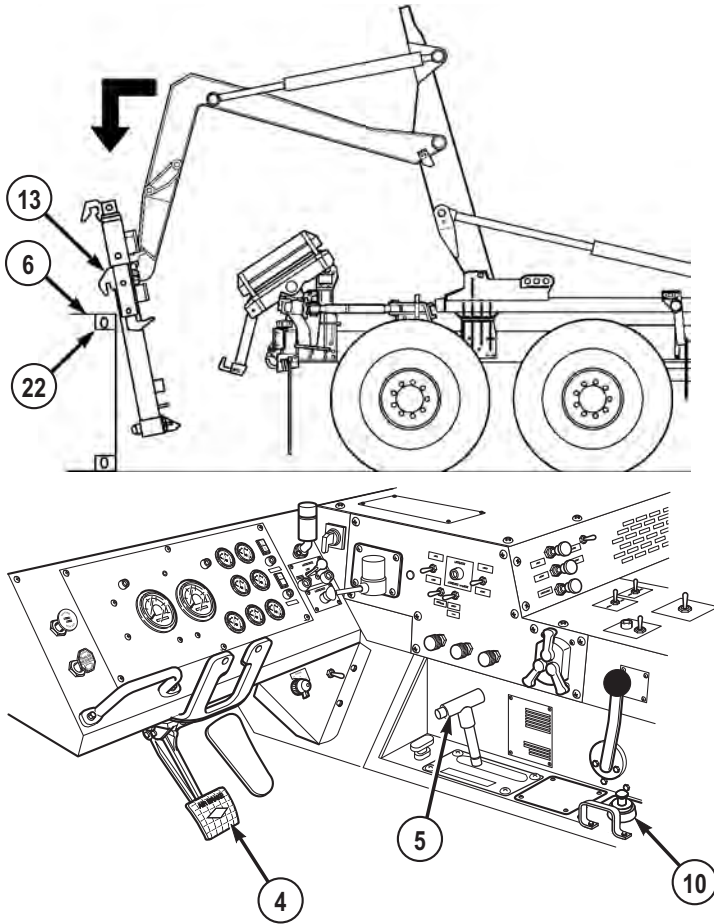


Figure 10.

27. Apply service brake pedal (4), and set transmission range selector (5) to R (reverse).

WARNING



Do not allow front lift adapter to contact the ground when half-height container front hooks are not engaged with container upper corner

LOADING - Continued

castings. Failure to comply may result in injury or death to personnel and damage to equipment.

28. Release service brake pedal (4) and slowly back up to approximately 1 ft. (30 cm) from front of container (6).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

29. Apply service brake pedal (4), set transmission range selector (5) to N (neutral), move joystick (10) to LOAD, and raise front lift adapter until half-height container front hooks (13) are above container upper front corner castings (22).

CAUTION

Ensure half-height container front hooks are fully engaged with container upper corner castings. Failure to comply may result in damage to equipment.

NOTE

- To get half-height container front hooks to properly seat, it may be necessary to drive vehicle forward slightly.
 - When container is on side slope, it may be difficult to get both upper hooks properly seated. Front lift adapter hangs level. To get front lift adapter to hang closer to same angle as container, it may be necessary to temporarily remove one rear container lock from slider and stow on downhill side of front lift adapter.
30. Release service brake pedal (4), move joystick (10) to UNLOAD, and lower half-height container front hooks (13) into half-height container upper front corner castings (22).
 31. Set transmission range selector (5) to R (Reverse), move vehicle backward approximately 1 ft. (30 cm).

LOADING - Continued

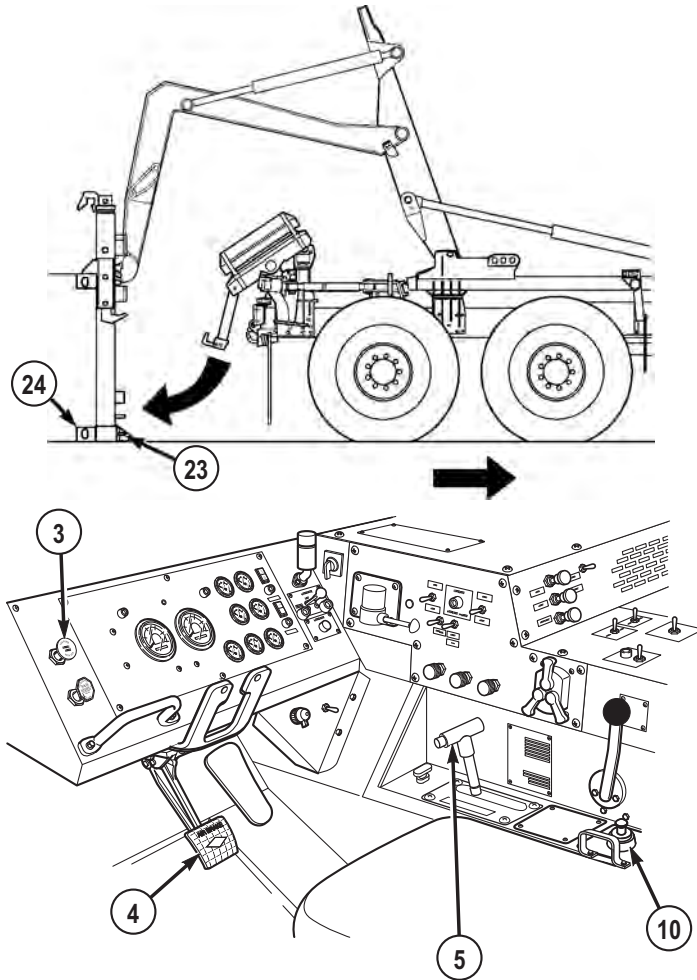


Figure 11.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

32. Apply service brake pedal (4), set transmission range selector (5) to N (neutral), and move joystick (10) to UNLOAD until lower container locks (23) are aligned with container lower front corner castings (24).
33. Apply service brake pedal (4) and set transmission range selector (5) to D (drive).

LOADING - Continued

34. Drive vehicle forward until lower container locks (23) are seated in container lower front corner castings (24).
35. Apply service brake pedal (4).
36. Release joystick (10).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

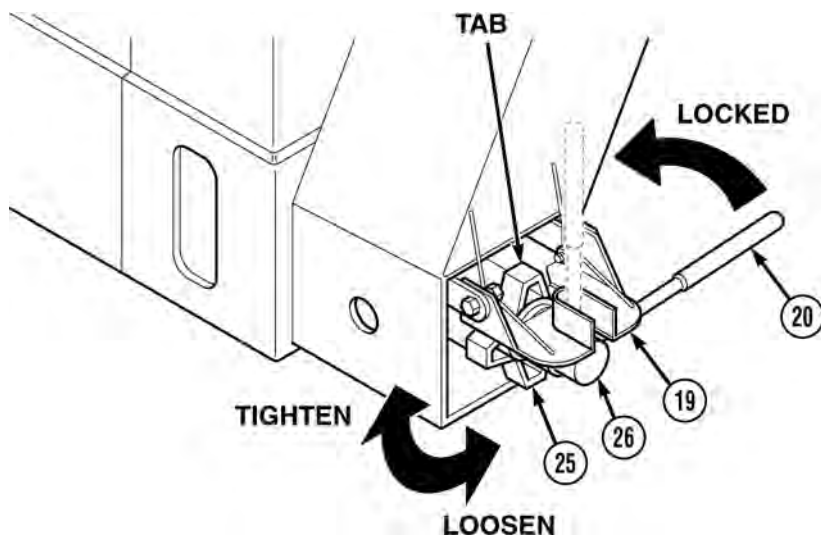
37. Set transmission range selector (5) to N (neutral).
38. Pull out PARKING BRAKE control (3).

CAUTION

Ensure lower container locks are fully engaged with container lower front corner castings. Failure to comply may result in damage to equipment.

NOTE

- To get container lock handle to rotate, it may be necessary to loosen handnut.
 - After tightening handnut, it may be necessary to loosen handnut slightly to align tab with handle lock plate.
 - Ensure lower container lock handle is secured in slot on handle lock plate.
 - There are two lower container locks. Passenger side shown.
39. Hold handle lock plate (19) and rotate lower container lock handle (20) up in the locked position.

LOADING - Continued*Figure 12.*

40. Turn handnut (25) clockwise to tighten stem (26).

NOTE

Ensure tab on handnut faces up.

41. Lower handle lock plate (19) over lower container lock handle (20) and handnut (25) tab.
42. Repeat Steps (35) through (40) for driver side lower container lock.
43. Push in PARKING BRAKE control (3) and release service brake pedal (4).

LOADING - Continued

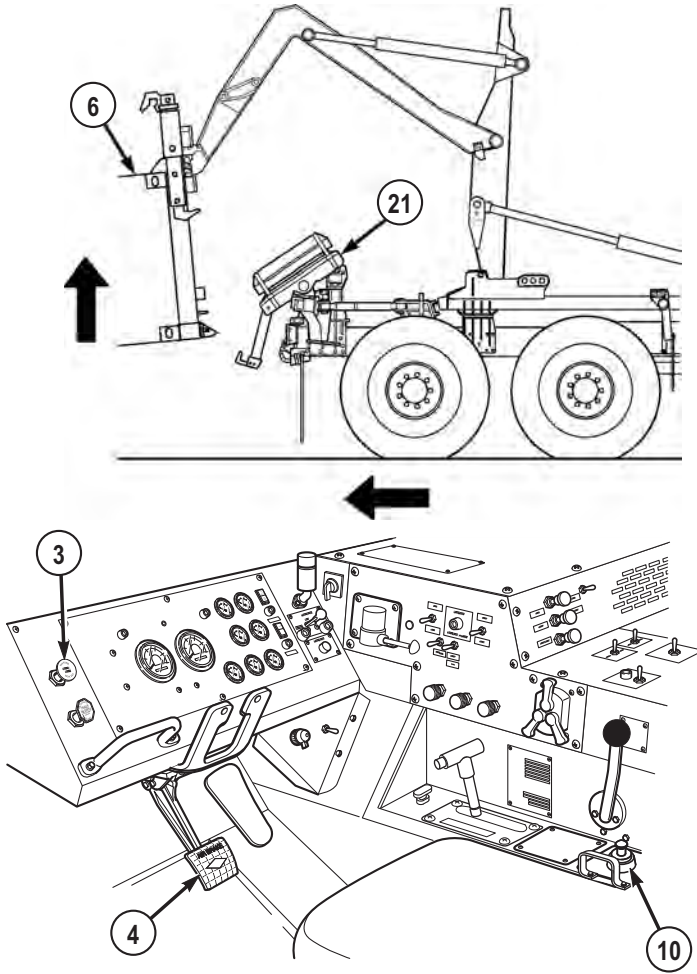


Figure 13.

WARNING



When loading or unloading containers on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle

LOADING - Continued

service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

CAUTION

- If LHS OVER LOAD indicator illuminates but loading operation continues, operator is cautioned that LHS is nearing maximum capacity. In this situation, operator should notify supervisor if it appears payload is unevenly distributed in container or if container load exceeds 24,000 lbs (10 896 kg). If any of these conditions exist, payload must be redistributed or reduced, or damage to equipment may result.
- Load must be evenly distributed in the container. Uneven load distribution may cause the LHS OVER LOAD indicator to give false signals and cause the LHS to operate incorrectly. Damage to equipment may result.
- If LHS OVER LOAD indicator illuminates and normal operation has stopped, return load to original position and notify supervisor to have payload redistributed or weight reduced. Failure to comply may result in damage to equipment.
- Ensure PARKING BRAKE control is not pulled out before starting load sequence, or damage to equipment may occur.

NOTE

- The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.
 - If container is extremely light or empty, it maybe necessary to place transmission range selector to R (reverse) and allow vehicle to roll under container.
 - If container is not centered, and transit locks cannot be installed and pinned, repeat Steps (39) through (47) to reposition container.
44. Move joystick (10) to LOAD, allowing vehicle to be pulled under container (6).

LOADING - Continued**WARNING**

Ensure that container has contacted rear sliders correctly and is between guides. Failure to comply may result in injury or death to personnel and damage to equipment.

CAUTION

Reduce engine speed to idle before container contacts rear sliders, or damage to equipment may result.

NOTE

- LHS OVER LOAD indicator may illuminate when lifting container from unusual conditions.
- As load is lifted, vehicle will be pulled under container. Some steering wheel adjustment may have to be made to ensure that container contacts rear sliders correctly and is between guides.

45. As container (6) contacts rear sliders (21), reduce engine speed to idle and apply service brake pedal (4).

NOTE

If container is being loaded in soft soil conditions, perform Steps (45) through (49).

46. Release joystick (10).

LOADING - Continued

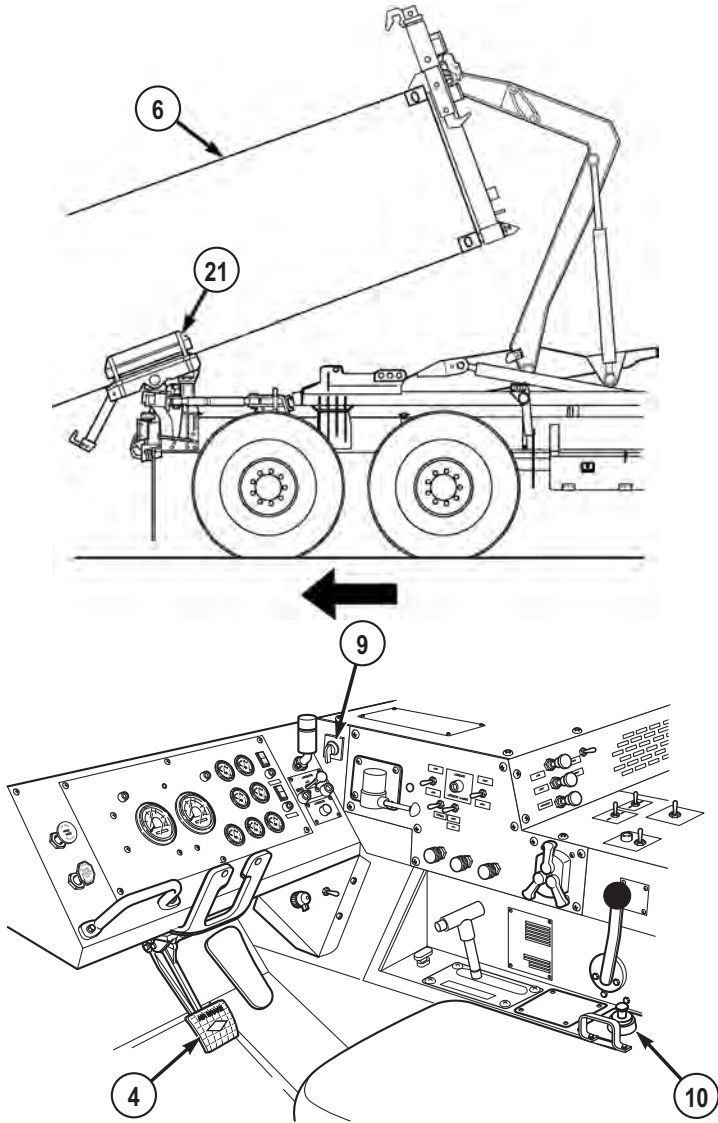


Figure 14.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

47. Turn hydraulic selector switch (9) to MAN H.A.

LOADING - Continued

48. Move joystick (10) to LOAD until container (6) is approximately 2 ft. (61 cm) off the ground. Release joystick (10).
49. Release joystick (10).

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

50. Turn hydraulic selector switch (9) to AUTO. Resume normal AUTO operations.

NOTE

Engine speed may be increased and decreased to ease loading.

51. After container (6) contacts rear sliders (21), increase engine speed to approximately 1500 rpm until container is almost loaded. Reduce engine speed to idle.

CAUTION

After loading operations using CHU kit and container, and LHS NO TRANSIT indicator goes out, operator must release the joystick from the LOAD position. Failure to release the joystick may cause LHS OVER LOAD indicator to illuminate and hydraulic cylinders to remain active forcing a temporary bow in the LHS frame, resulting in contact between LHS and container.

52. Continue loading until container (6) is fully loaded and LHS NO TRANSIT lamp (27) goes out.

LOADING - Continued

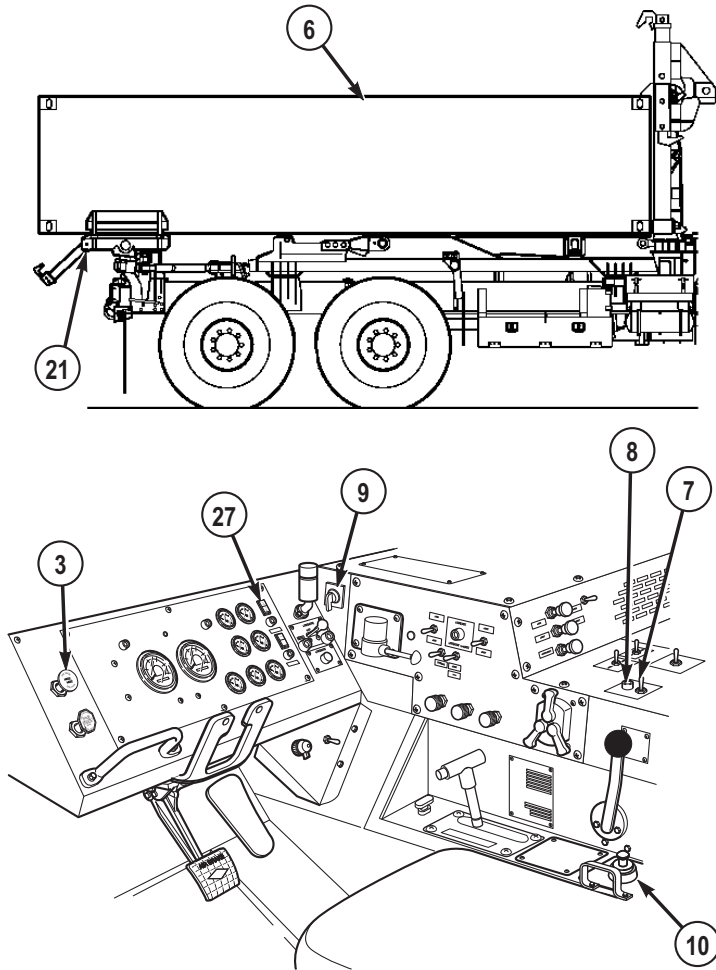


Figure 15.

53. Release joystick (10).
54. Pull out PARKING BRAKE control (3).

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Hydraulic selector switch must be in the OFF position before driving vehicle, or hydraulic system could overheat.

LOADING - Continued

55. Turn hydraulic selector switch (9) to OFF.
56. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.
57. Shut off engine. (WP 0051)

NOTE

- There are two rear container locks. Passenger side shown.
- If container is not centered and transit locks cannot be installed and pinned, repeat Steps (44) through (57) to reposition container.

58. Support rear container lock (2) and remove lockpin (28) and pin (29).

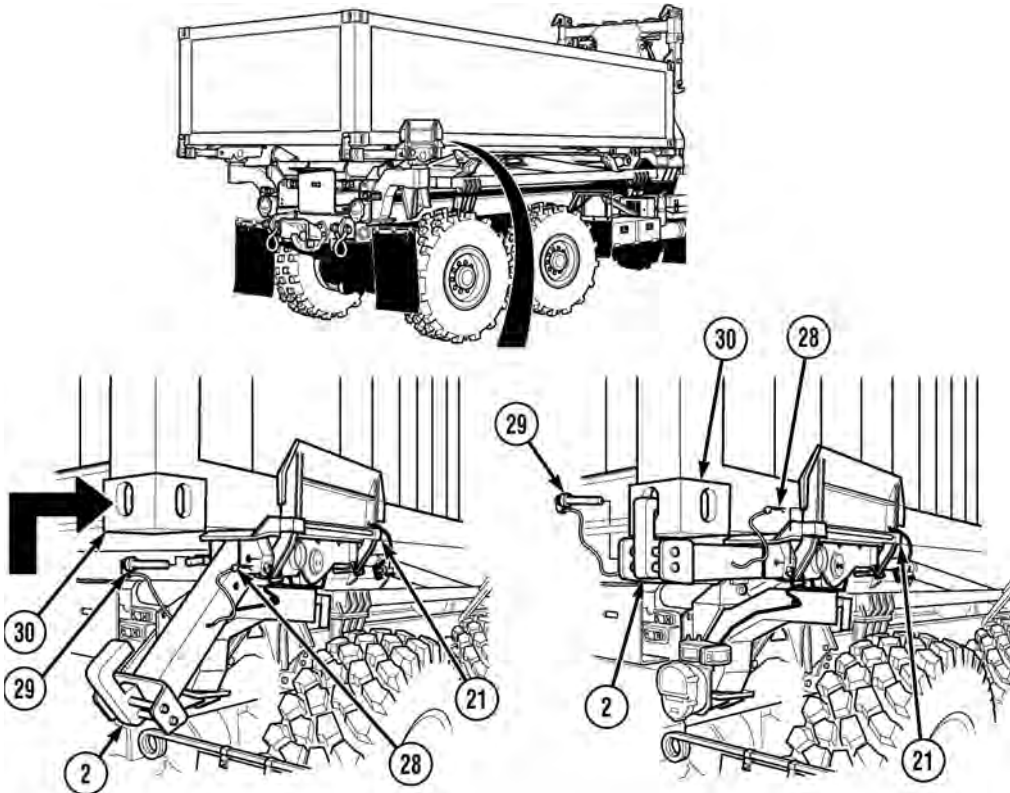


Figure 16.

59. Rotate rear container lock (2) up and position into container lower rear corner casting (30).

LOADING - Continued

60. Install pin (29) and lockpin (28) in rear container lock (2) and slider (21).

WARNING

Do not reduce tire pressure when loaded with FRS or container. Highway tire pressure, 60 psi (414 kPa) front and 83 psi (572 kPa) rear, is required at all times when loaded with FRS or container. If equipped with armor kit, highway tire pressure 75 psi (517 kPa) front is required at all times. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Maximum side slope when loaded with an FRS or container is 30%. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

When loaded with FRS or container, the center of gravity is moved up and toward rear of vehicle. Use extreme care when turning and ascending or descending on a grade. Failure to comply may result in injury or death to personnel.

61. Perform Steps (58) through (60) for driver side.

UNLOADING**WARNING**

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

WARNING

Do not attempt loading or unloading operations on a side slope greater than 5 degrees and/or fore/aft slope greater than 20%. Prior to performing loading or unloading operations on slopes, determine if ground surface conditions permit safe loading or unloading operations. Slopes that contain snow, ice, loose gravel, or sand may not permit safe loading or unloading. Failure to comply may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

UNLOADING - Continued**CAUTION**

- Check that ground conditions where container will be placed can support the container weight, or damage to the container, front lift adapter or LHS may result.
- Use extreme caution when loading/unloading container with side doors. Container must remain centered during loading/unloading or flanges on side may be damaged and/or door hinges may make hard contact with guides.

NOTE

For detailed instructions on how to operate the LHS, refer to loading/unloading flatrack in AUTO mode. (WP 0064)

1. Check area for operating room at front and rear of vehicle. Check overhead clearance and ground conditions.

NOTE

There are two rear container locks. Passenger side shown.

2. Remove lockpin (1), pin (2), and rear container lock (3) from lower rear corner casting (4).

UNLOADING - Continued

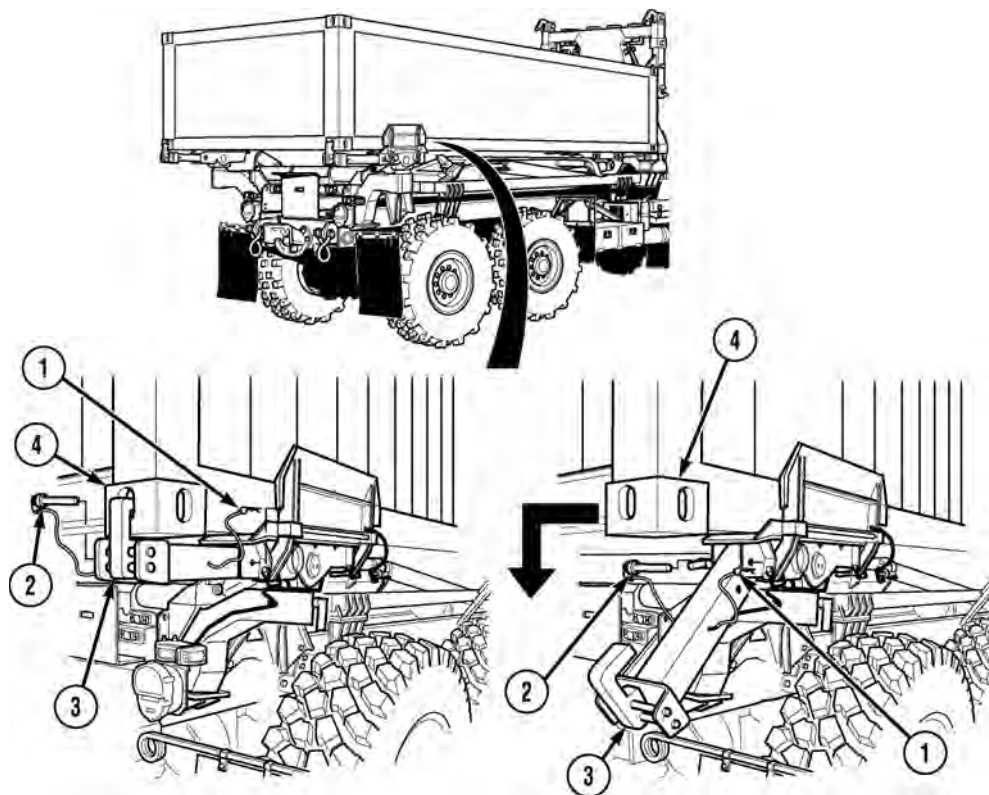


Figure 17.

3. Rotate rear container lock (3) in down position and install pin (2) and lockpin (1).
4. Perform Steps (2) and (3) for driver side rear container lock.
5. Start engine. (WP 0038)

NOTE

LHS will only operate when transmission range selector is in N (neutral).

6. Apply service brake pedal (5), and set transmission range selector (6) to N (neutral).

UNLOADING - Continued

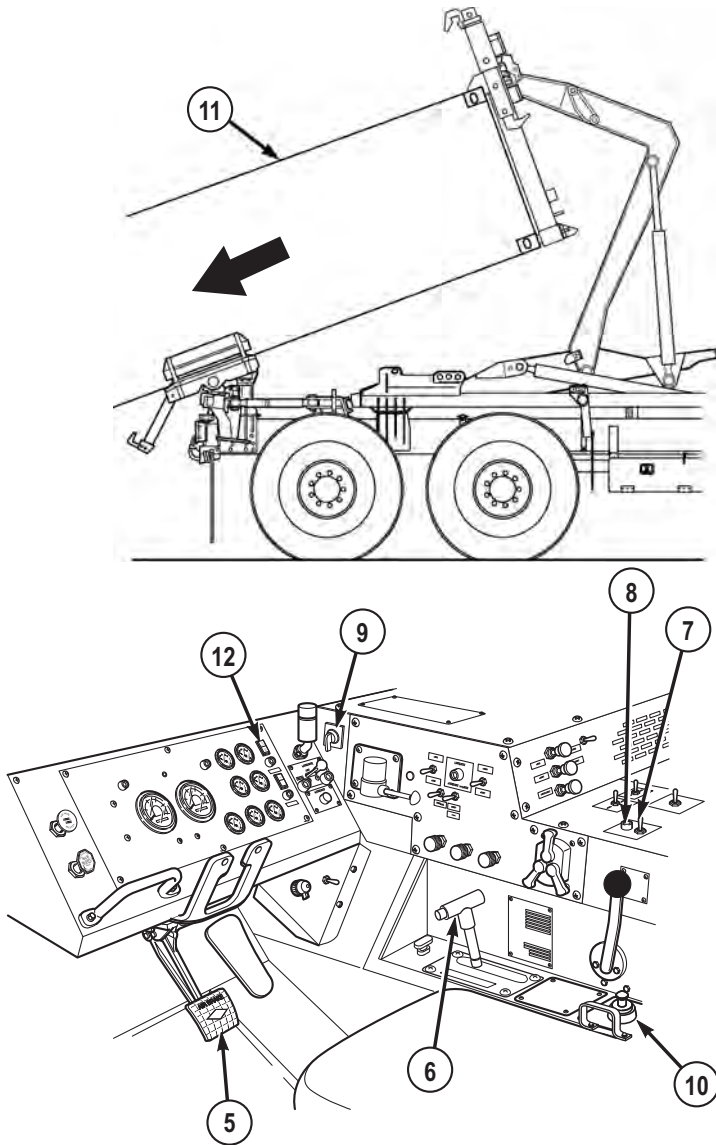


Figure 18.

7. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

UNLOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

8. Turn hydraulic selector switch (9) to AUTO.

WARNING

When loading or unloading containers on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

NOTE

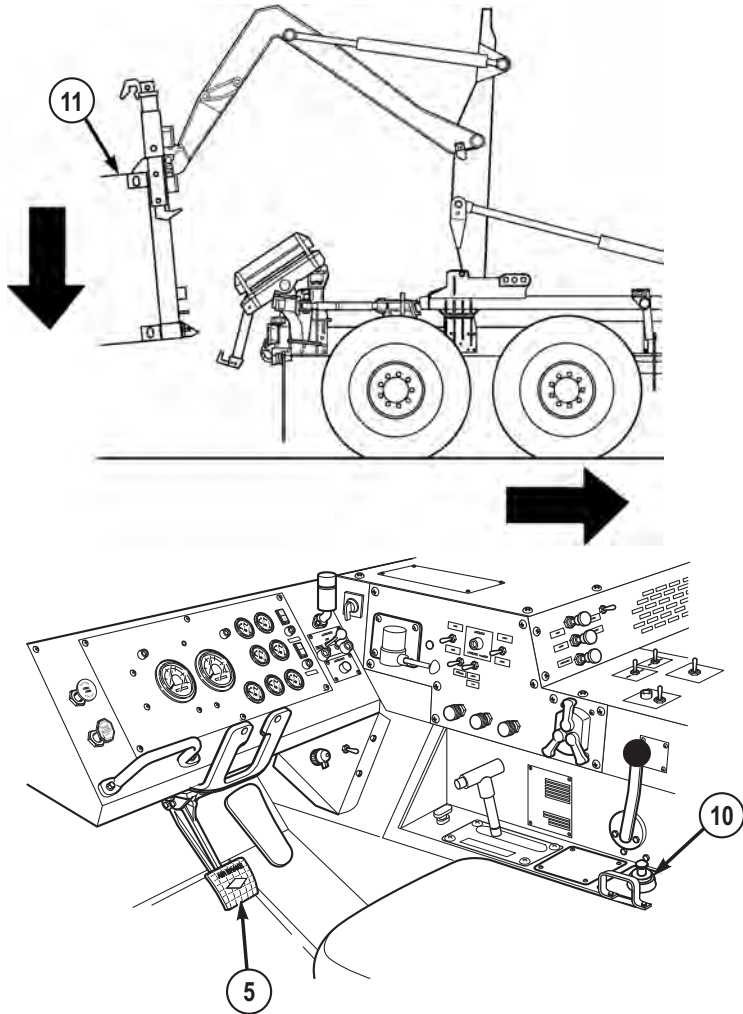
LHS will not operate and unload if rear container locks are engaged.

9. Move joystick (10) to UNLOAD. Container (11) will start to move rearward. LHS NO TRANS indicator (12) will illuminate. Maintain engine speed at idle until front of container raises approximately 1 ft. (30 cm).

NOTE

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.

10. Continue to unload container (11) until back edge of container touches ground.
11. Release service brake pedal (5) and allow container (11) to push vehicle forward from under container.
12. As front of container (11) approaches within approximately 8 in. (20.3 cm) of ground, decrease engine speed to idle and apply service brake pedal (5).

UNLOADING - Continued*Figure 19.***CAUTION**

Once vehicle's rear suspension has been relieved of container load, do not continue in UNLOAD position as possibility of jacking up the rear of vehicle with hook arm may occur and damage to equipment may result.

13. Continue unloading until bottom of container (11) is on ground and rear suspension is unloaded.
14. Release joystick (10) when container (11) is resting on ground.

UNLOADING - Continued

15. Pull out PARKING BRAKE control (13).

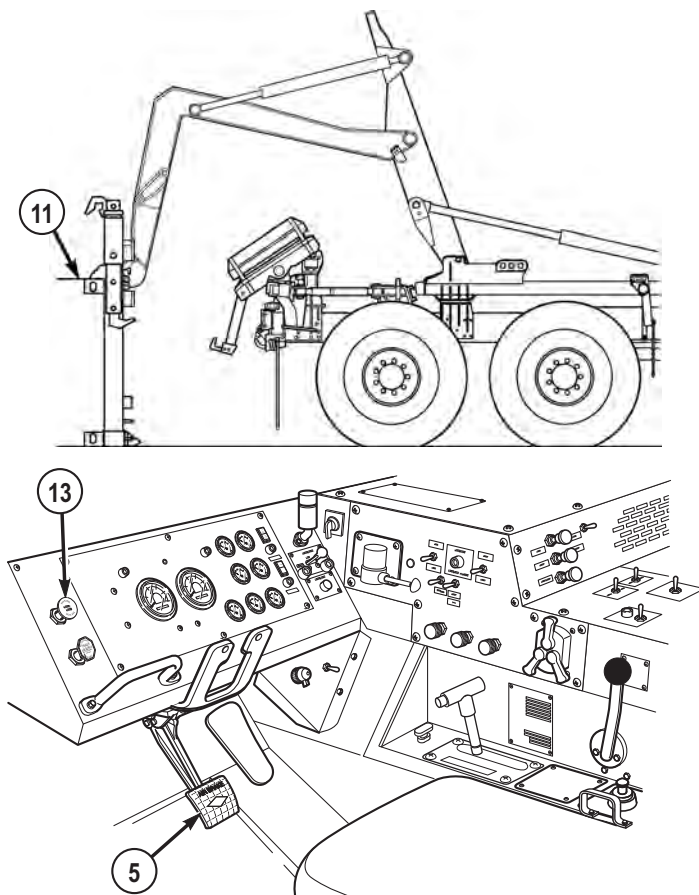


Figure 20.

16. Release service brake pedal (5).

WARNING

Ensure that all tension has been relieved between LHS hook and front lift adapter prior to unlocking front lift adapter lower container locks. Stay

UNLOADING - Continued

clear of front lift adapter when unlocking front lift adapter lower container locks as front lift adapter may separate from container unexpectedly. Failure to comply may result in injury or death to personnel.

NOTE

There are two front lift adapter lower container locks. Passenger side shown.

17. Raise handle lock plate (14), turn handnut (15) counterclockwise to loosen stem (16).

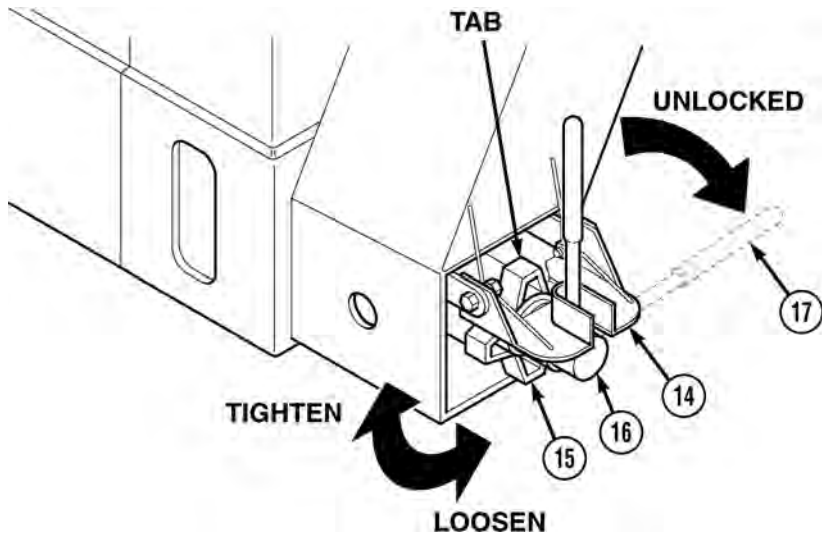


Figure 21.

NOTE

Ensure tab on handnut faces up.

18. Rotate lower container lock handle (17) toward center of vehicle to unlocked position.

CAUTION

Handnut must be tightened clockwise to tighten stem. Failure to tighten stem may cause damage to equipment during next container loading procedure.

19. Turn handnut (15) clockwise to tighten stem (16).
20. Release handle lock plate (14) over container lock handle and handnut (15) tab.
21. Repeat Steps (17) through (20) for driver side adapter lower container lock.

UNLOADING - Continued

22. Push in PARKING BRAKE control (13).

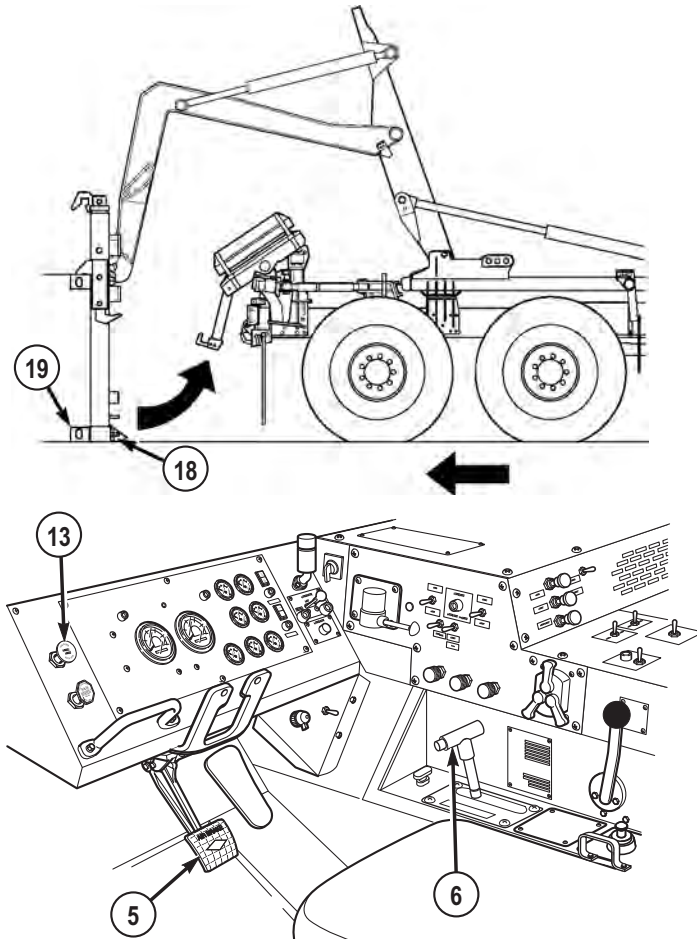


Figure 22.

23. Set transmission range selector (6) to R (reverse).
 24. Move vehicle backward until lower container locks (18) disengage from lower front corner castings (19) approximately 4 to 6 in. (10 to 15 cm).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

25. Apply service brake pedal (5), and set transmission range selector (6) to N (neutral).

UNLOADING - Continued**CAUTION**

Ensure that half-height container front hooks are completely disengaged and do not hang up in container upper corner castings when retracting LHS. Failure to comply may result in damage to half-height container front hooks and/or container.

NOTE

It may be necessary to move the vehicle forward or backward slightly to get the half-height container front hooks to disengage.

26. Move joystick (10) to LOAD position until front lift adapter (20) is disengaged from container (11).

UNLOADING - Continued

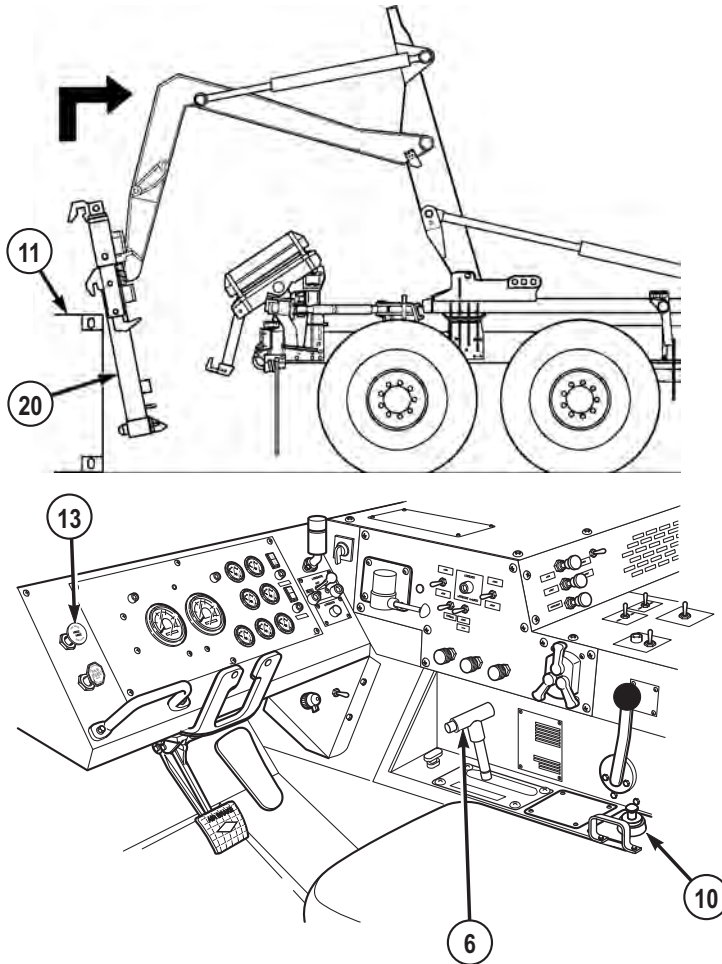


Figure 23.

27. Release joystick (10).
28. Move vehicle forward until rear of vehicle is approximately 9 ft. (2.74 m) in front of container.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

29. Set transmission range selector (6) to N (neutral).
30. Pull out PARKING BRAKE control (13).

UNLOADING - Continued

31. Move joystick (10) to unload position until front lift adapter is positioned approximately 1 ft. (30 cm) off the ground.

NOTE

- Perform Steps (32) through (36) if CHU operations for 51 in. (130 cm) containers have been completed.
- There are two slide arms and half-height container front hooks. Passenger side shown.

32. Remove lockpin (22) and pin (23) from stow position on front lift adapter (20).

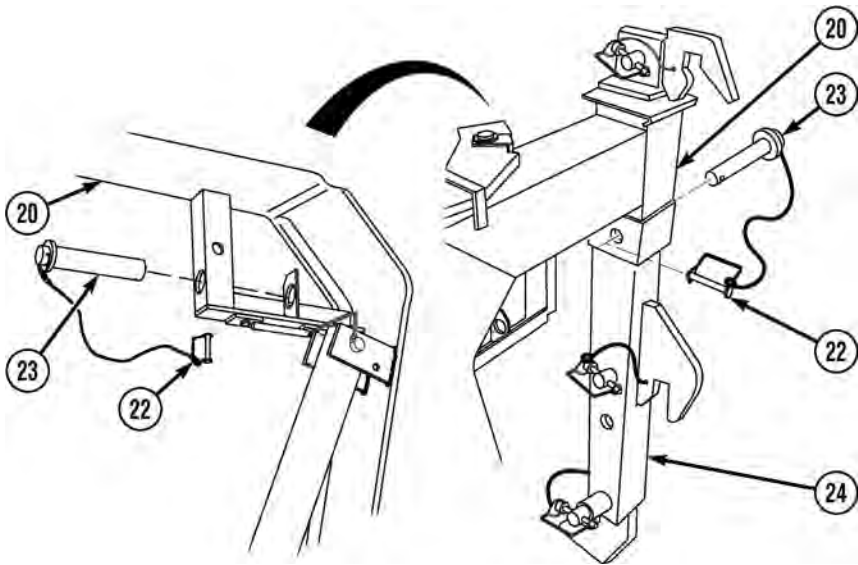


Figure 24.

33. Install pin (23) and lockpin (22) in front lift adapter (20) and slide arm (24) upper hole.
34. Remove lockpin (25), pin (26), and half-height container front hook (27) from slot (28) in slide arm (24).

UNLOADING - Continued

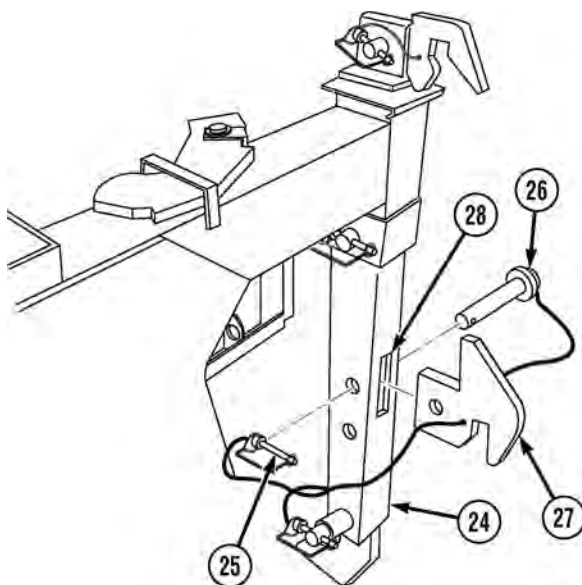
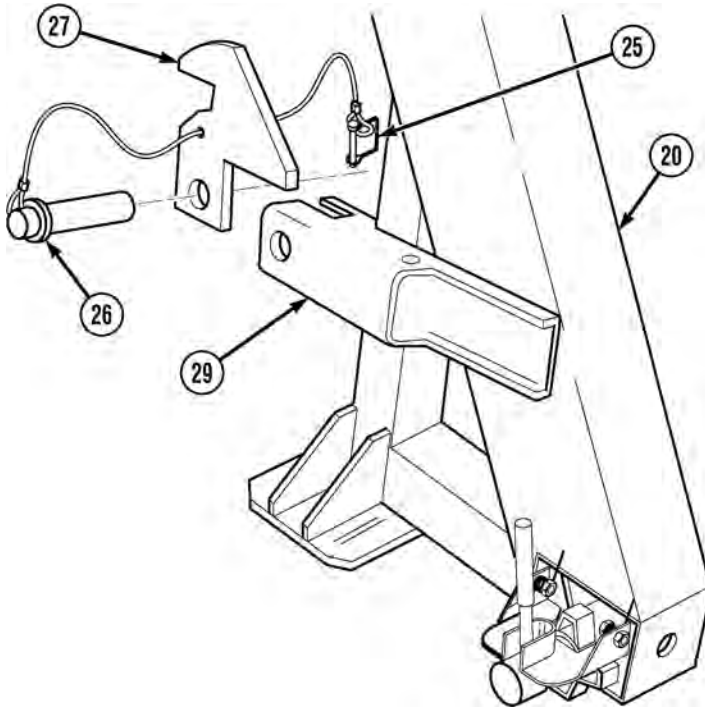


Figure 25.

35. Position half-height container front hook (27) in stowage bracket (29) on front lift adapter (20) and install pin (26) and lockpin (25).

UNLOADING - Continued*Figure 26.*

36. Repeat Steps (32) through (35) for driver side slide arms and half-height container front hooks.

CAUTION

- On steep downgrades, contact is possible between the front lift adapter lower legs and the rear sliders during empty LHS cycles. If contact appears likely, switch hydraulic selector to MAN H.A. and retract (LOAD) hook arm a few inches. Switch hydraulic selector to MAN M.F. and retract the main frame until the front lift adapter clears the rear sliders. Return hydraulic selector to AUTO and continue (LOAD) operation. Failure to comply may result in damage to equipment.
- Never drive with LHS NO TRANSIT indicator illuminated. An illuminated indicator means that the LHS is not fully stowed. Failure to comply may result in damage to equipment.

UNLOADING - Continued**NOTE**

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.

37. Move joystick (10) to LOAD position until LHS is fully retracted and front lift adapter (20) is positioned on bumper supports (21). LHS NO TRANS lamp (12) will go out signaling LHS is in transport position.

UNLOADING - Continued

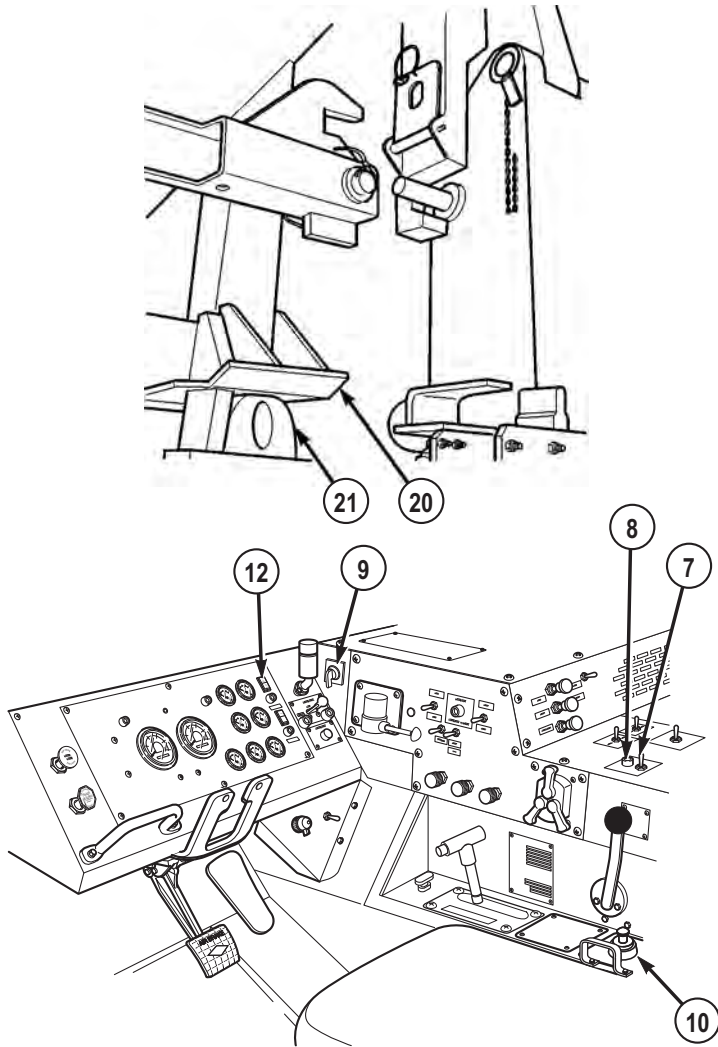


Figure 27.

38. Release joystick (10).

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Hydraulic selector switch must be in the OFF position before driving vehicle, or hydraulic system could overheat.

UNLOADING - Continued

39. Turn hydraulic selector switch (9) to OFF.
40. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.
41. Shut off engine. (WP 0051)

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
LOADING AND UNLOADING CONTAINER (48 INCHES [122 CM] OR TALLER) TO
VEHICLE USING FRONT LIFT ADAPTER (FLA)**

INITIAL SETUP:

Not Applicable

LOADING

WARNING



Front lift adapter weighs 1,600 lbs (727 kg). Do not attempt to lift or move front lift adapter without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

CAUTION

Ensure front lift adapter is in the unlocked position before attempting to load a container to vehicle. Failure to comply will result in damage to equipment.

1. Ensure front lift adapter (1) is unlocked. (WP 0057)

LOADING - Continued

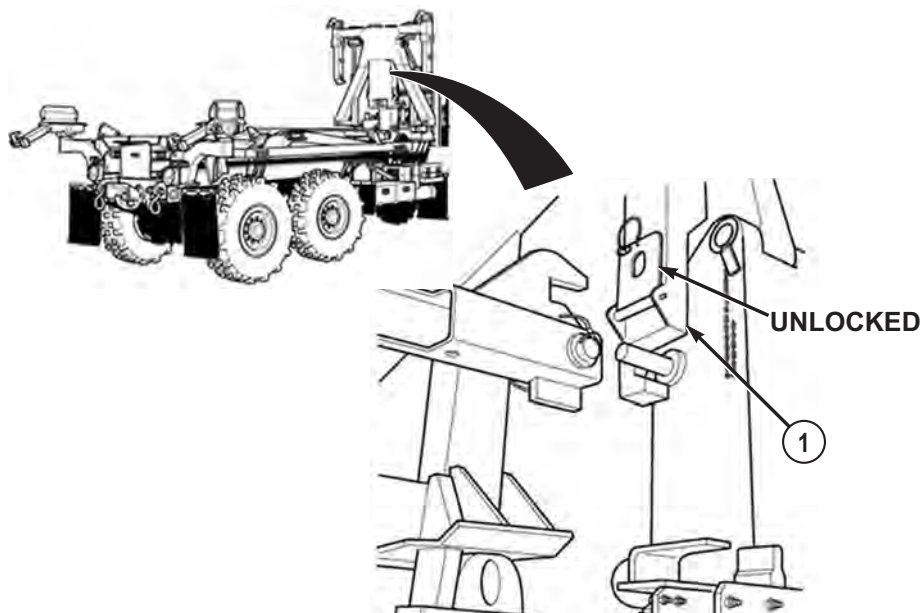


Figure 1.

2. Ensure rear container lock (2) is in ready mode. (WP 0052)

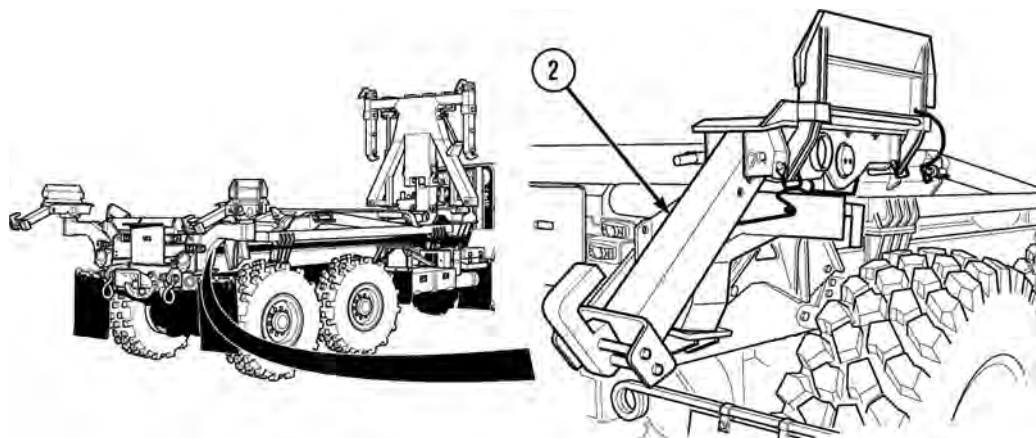
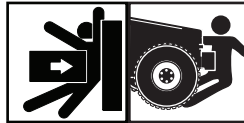


Figure 2.

LOADING - Continued**WARNING**

Do not attempt loading or unloading operations on a side slope greater than 5 degrees and/or fore/aft slope greater than 20%. Prior to performing loading or unloading operations on slopes, determine if ground surface conditions permit safe loading or unloading operations. Slopes that contain snow, ice, loose gravel, or sand may not permit safe loading or unloading. Failure to comply may result in injury or death to personnel.

WARNING

Do not stand between front lift adapter and container. Vehicle could roll suddenly. Failure to comply may result in injury or death to personnel.

WARNING

Use care when working around front lift adapter. Front lift adapter may swing unexpectedly when not attached to container. Failure to comply may result in injury or death to personnel.

WARNING

Maximum permissible gross container weight is 24,000 lbs (10 896 kg). Do not exceed gross container weight. Failure to comply may result in or injury or death to personnel and damage to equipment.

LOADING - Continued**WARNING**

Two personnel must be used (driver and spotter) to position front lift adapter (FLA). Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

CAUTION

- Use extreme caution when loading/unloading container with side doors. Container must remain centered during loading/unloading or flanges on side may be damaged and/or door hinges may make hard contact with guides.
- When operating CHU with nonstandard, end-opening, 20 ft. (6.1 m) long shipping containers, operator needs to take extra care to ensure that sliders and guides contact container properly, container slides on sliders properly, and container loads centered on vehicle. Failure to comply can result in container getting hung up or making hard contact with sliders and guides, causing damage to CHU or container.

NOTE

- For detailed instructions on how to operate the LHS, refer to loading/unloading flatrack in AUTO mode. (WP 0064)
- Rear mud flaps may be pinned up to provide better visibility of front lift adapter lower container locks.
- Multiple connected containers cannot be used with CHU. This includes Six CONS and Quad CONS.

3. Start engine. (WP 0038)

LOADING - Continued

4. Push in PARKING BRAKE control (3).

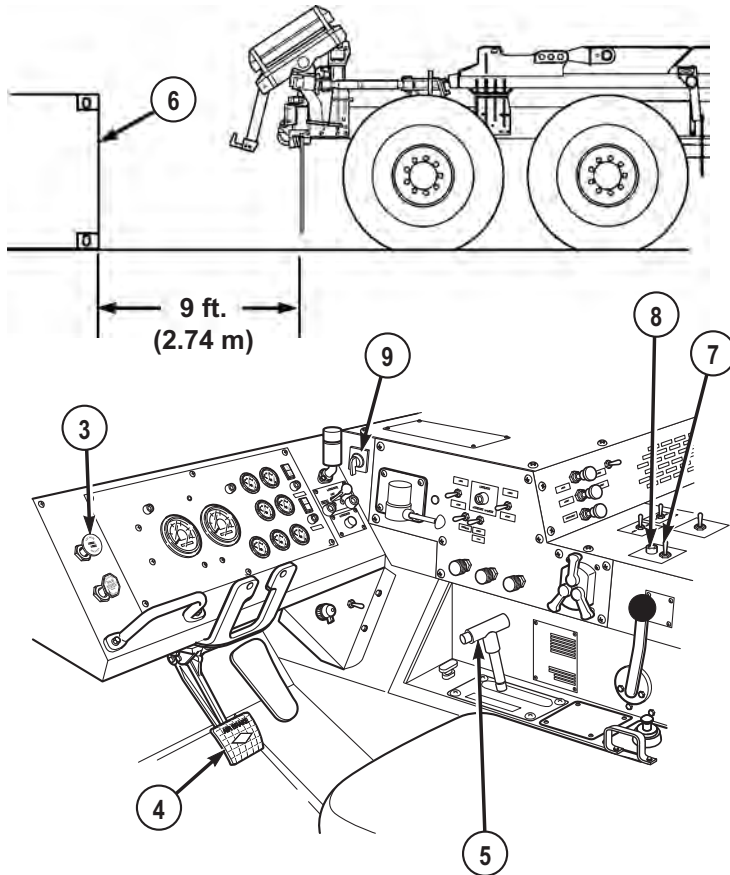


Figure 3.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

5. Apply service brake pedal (4) and set transmission range selector (5) to N (neutral).
6. Release service brake pedal (4) and position rear of vehicle within 9 ft. (2.74 m) of front of container (6), aligning centerline of vehicle within 2 in. (5 cm) of container centerline.
7. Apply service brake pedal (4) and set transmission range selector (5) to N (neutral).
8. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

LOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

9. Turn hydraulic selector switch (9) to AUTO.

CAUTION

On steep downgrades, contact is possible between the front lift adapter lower legs and the rear sliders during empty LHS cycles. If contact appears likely, switch hydraulic selector to MAN H.A. and retract (LOAD) hook arm a few inches. Return hydraulic selector to AUTO and continue (UNLOAD) operation. Repeat as required. Failure to comply may result in damage to equipment.

10. Move joystick (10) to UNLOAD position until front lift adapter (1) is positioned in front of container (6).

LOADING - Continued

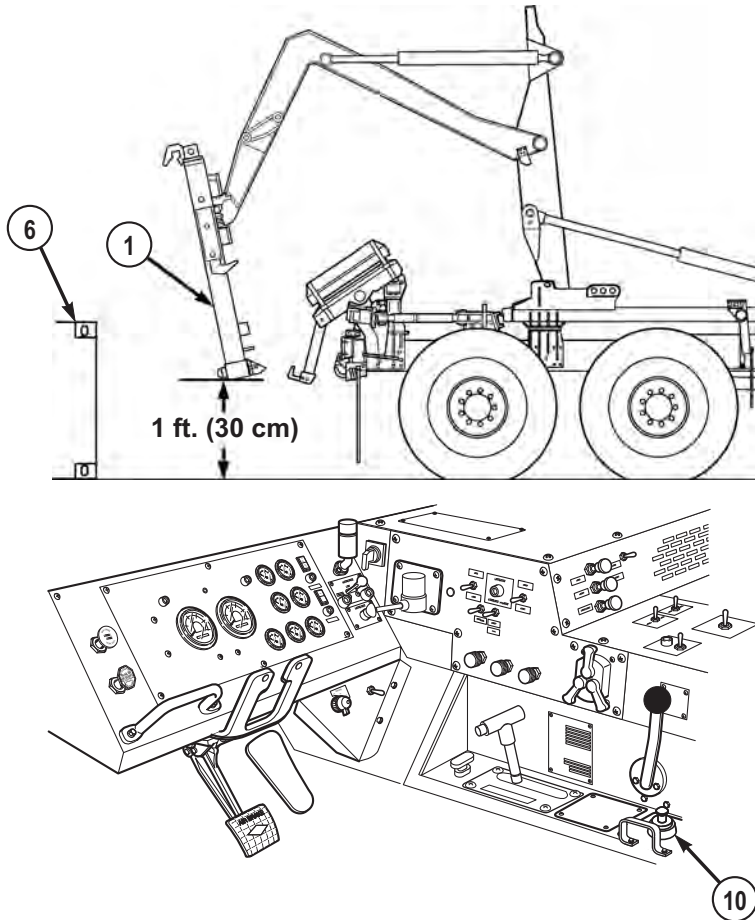


Figure 4.

11. Operate LHS in AUTO mode until front lift adapter (1) is approximately 1 ft. (30 cm) off ground.
12. Release joystick (10).
13. Shut off engine. (WP 0051)

NOTE

- Refer to the front lift adapter data plate for the proper configuration needed for the height of container being loaded.
- There are two slide arms. Passenger side shown.

LOADING - Continued

14. Remove lock pin (11), pin (12), and half-height container front hook (13) from stowage bracket (14) on front lift adapter (1).

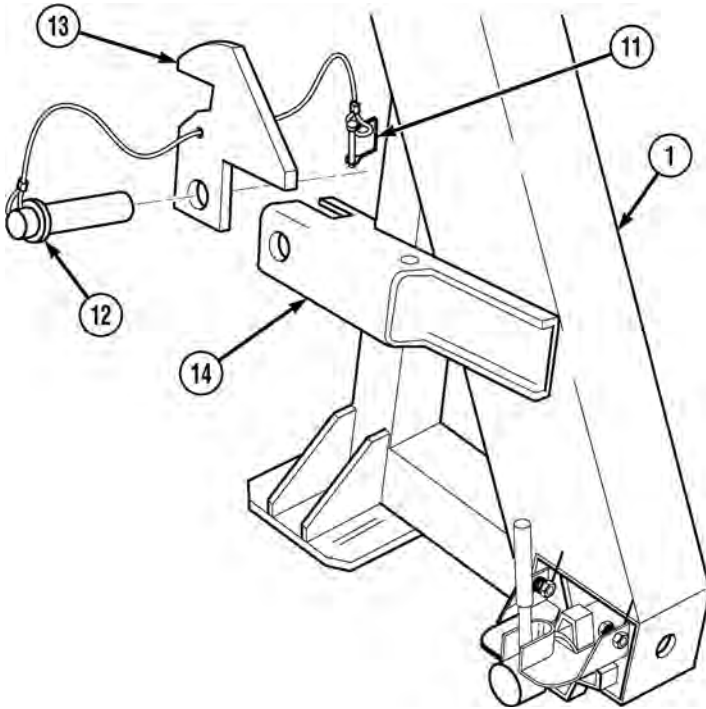


Figure 5.

NOTE

Ensure half-height container front hooks face down when installed.

15. Position half-height container front hook (13) in slot (15) on slide arm (16) and install pin (12) and lock pin (11) on front lift adapter (1).

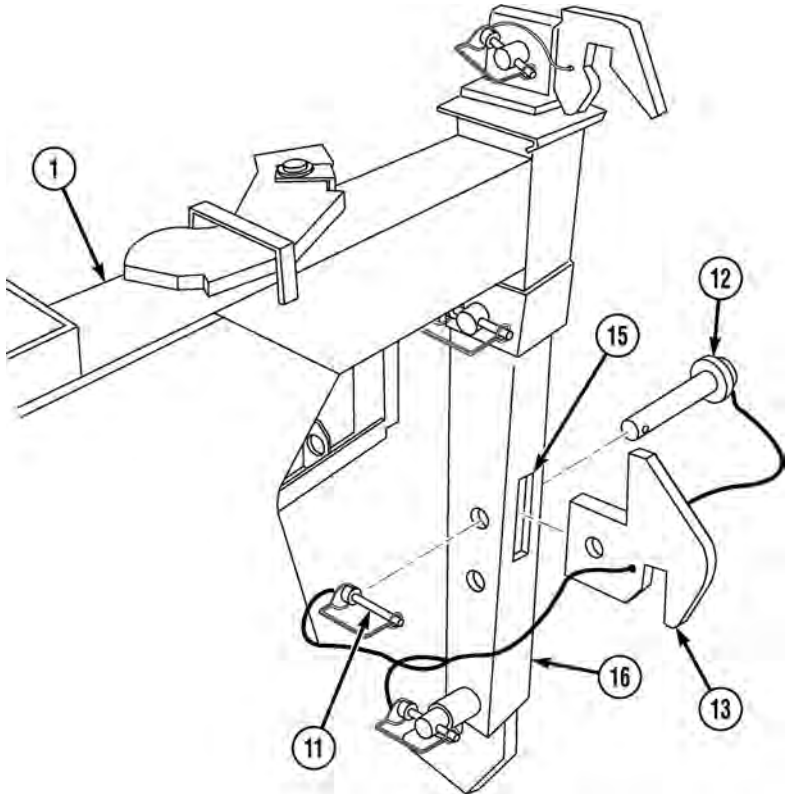
LOADING - Continued

Figure 6.

NOTE

If pin is in stow position, perform Steps (16) and (17).

16. Remove lock pin (17) and pin (18) from stow position on front lift adapter (1).

LOADING - Continued

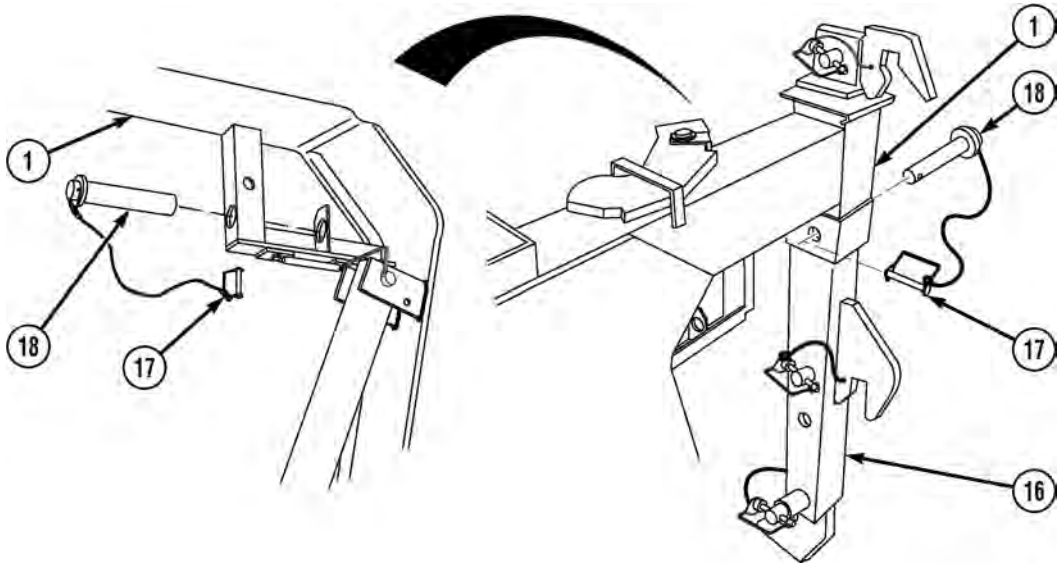


Figure 7.

17. Install pin (18) and lock pin (17) in front lift adapter (1) and slide arm (16) in upper hole.
18. Repeat Steps (14) through (17) for driver side slide arms.

NOTE

- There are two front lift adapter lower container locks and rear sliders. Passenger side shown.
 - Ensure front lift adapter lower container lock handle is positioned in slot on handle lock plate.
 - Ensure tab on handnut faces up.
19. Raise handle lock plate (19) and rotate lower container lock handle (20) toward center of front lift adapter (1) to unlocked position.

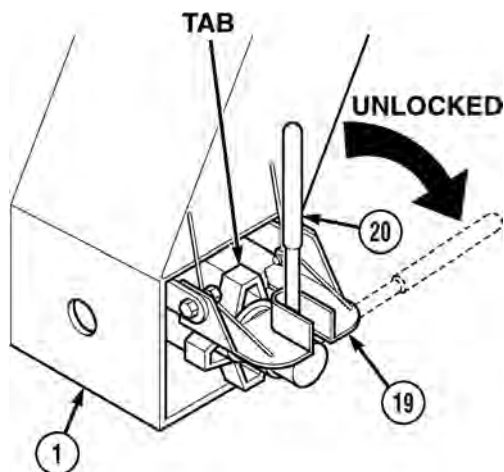
LOADING - Continued

Figure 8.

20. Release handle lock plate (19) on front lift adapter (1).
21. Repeat Steps (19) and (20) for driver side lower container lock and rear slider.

CAUTION

Ensure sliders are clear of debris and surfaces are properly greased, or damage to equipment may result.

NOTE

There are two rear sliders and container locks. Passenger side shown.

22. Rotate slider (21) so rear of slider faces down.

LOADING - Continued

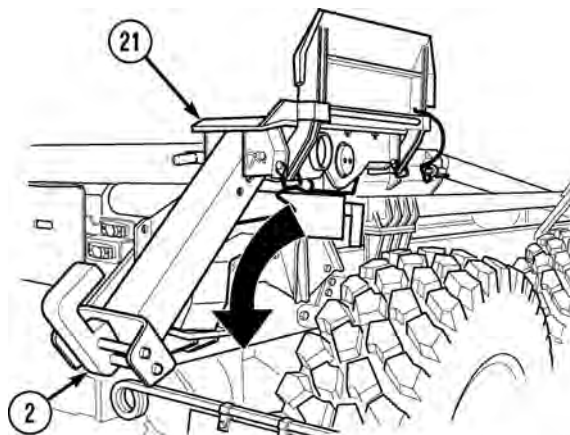


Figure 9.

23. Ensure rear container lock (2) is in ready mode or down position. (WP 0052)
24. Repeat Steps (22) and (23) for driver side rear slider.
25. Start engine. (WP 0038)
26. Position half-height container front hooks (13) just above and in front of half-height container upper front corner castings (22).

LOADING - Continued

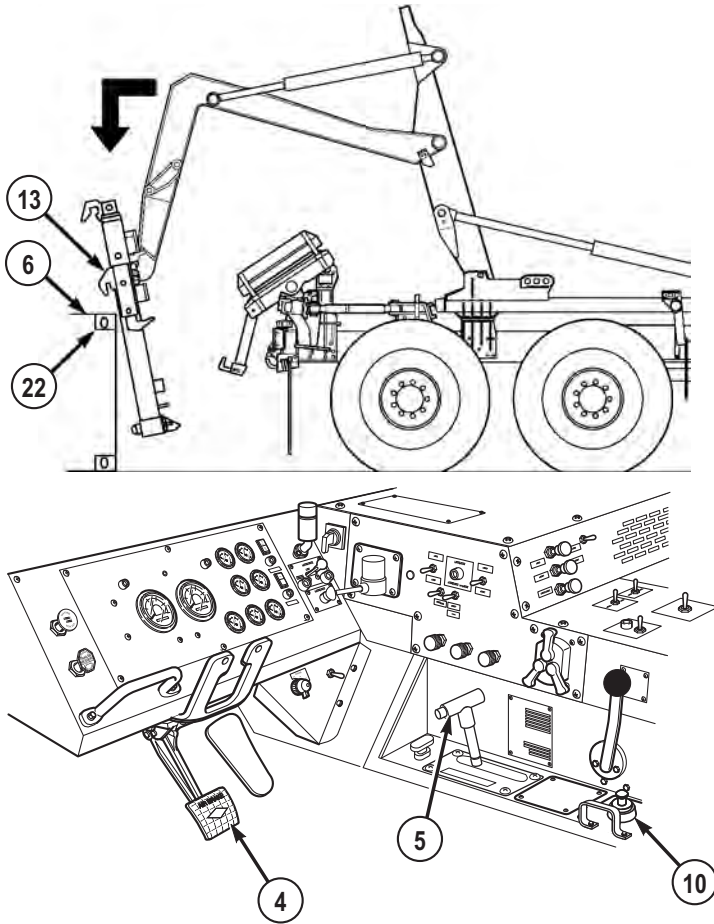


Figure 10.

27. Apply service brake pedal (4) and set transmission range selector (5) to R (reverse).

WARNING



Do not allow front lift adapter to contact the ground when half-height container front hooks are not engaged with container upper corner

LOADING - Continued

castings. Failure to comply may result in injury or death to personnel and damage to equipment.

28. Release service brake pedal (4) and slowly back up to approximately 1 ft. (30 cm) from front of container (6).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

29. Apply service brake pedal (4), set transmission range selector (5) to N (neutral), move joystick (10) to LOAD, and raise front lift adapter until half-height container front hooks (13) are above container upper front corner castings (22).

CAUTION

Ensure half-height container front hooks are fully engaged with container upper front corner castings. Failure to comply may result in damage to equipment.

NOTE

To get half-height container front hooks to properly seat, it may be necessary to drive vehicle forward slightly.

30. Release service brake pedal (4) and, moving joystick (10) to UNLOAD, lower half-height container front hooks (13) into half-height container upper front corner castings (22).
31. Set transmission range selector (5) to R (reverse), back up vehicle approximately 1 ft. (30 cm).

LOADING - Continued

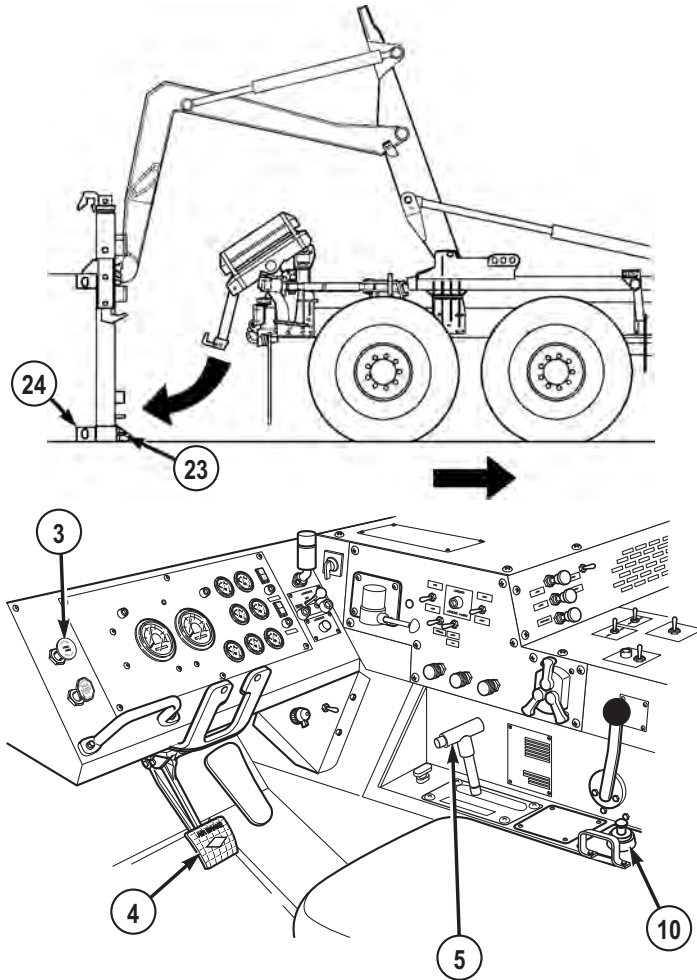


Figure 11.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

32. Apply service brake pedal (4) and set transmission range selector (5) to N (neutral). Move joystick (10) to UNLOAD until lower container locks (23) are aligned with container lower front corner castings (24).
33. Apply service brake pedal (4) and set transmission range selector (5) to D (drive).

LOADING - Continued

34. Drive vehicle forward until lower container locks (23) are seated in container lower front corner castings (24).
35. Apply service brake pedal (4).
36. Release joystick (10).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

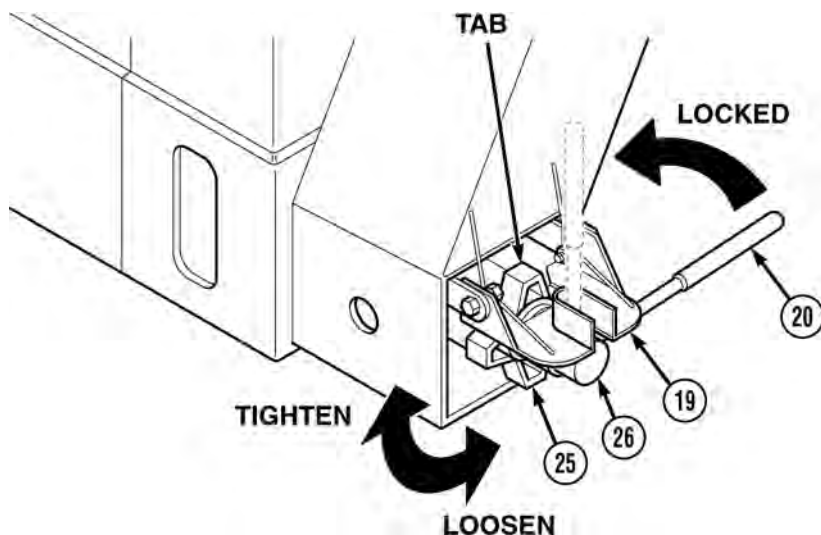
37. Set transmission range selector (5) to N (neutral).
38. Pull out PARKING BRAKE control (3).

CAUTION

Ensure lower container locks are fully engaged with container lower front corner castings. Failure to comply may result in damage to equipment.

NOTE

- To get container lock handle to rotate, it may be necessary to loosen handnut.
 - After tightening handnut, it may be necessary to loosen handnut slightly to align tab with handle lock plate.
 - Ensure lower container lock handle is secured in slot on handle lock plate.
 - There are two lower container locks. Passenger side shown.
39. Hold handle lock plate (19) and rotate lower container lock handle (20) up in the locked position.

LOADING - Continued*Figure 12.*

40. Turn handnut (25) clockwise and tighten stem (26).

NOTE

Ensure tab on handnut faces up.

41. Lower handle lock plate (19) over lower container lock handle (20) and handnut (25) tab.
42. Repeat Steps (39) through (41) for driver side lower container lock.
43. Push in PARKING BRAKE control (3) and release service brake pedal (4).

LOADING - Continued

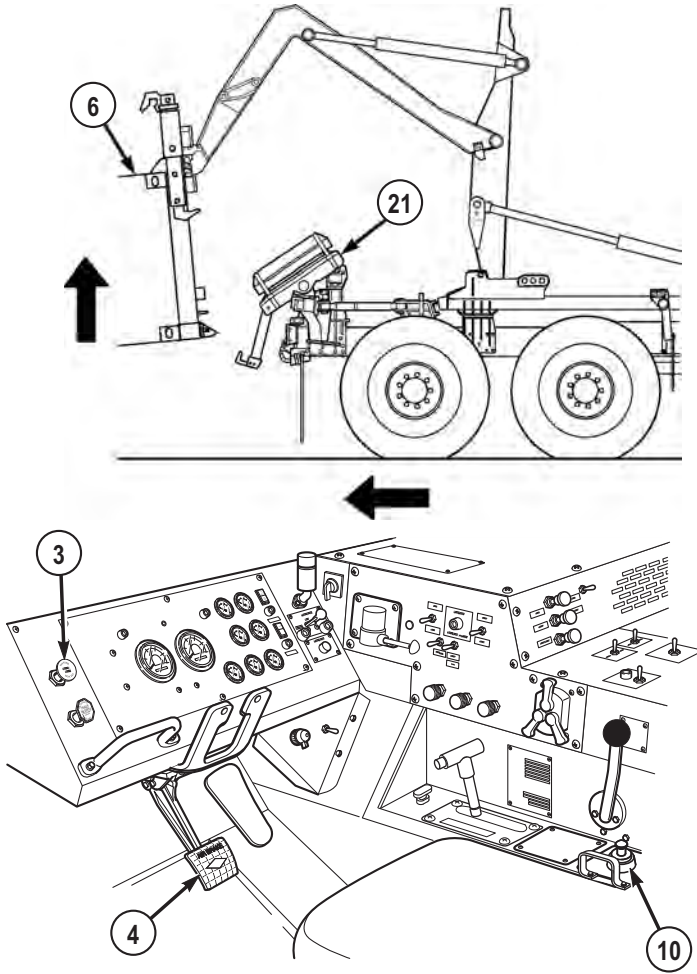


Figure 13.

WARNING



When loading or unloading containers on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle

LOADING - Continued

service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

CAUTION

- If LHS OVER LOAD indicator illuminates but loading operation continues, operator is cautioned that LHS is nearing maximum capacity. In this situation, operator should notify supervisor if it appears payload is unevenly distributed in container or if container load exceeds 24,000 lbs (10 896 kg). If any of these conditions exist, payload must be redistributed or reduced, or damage to equipment may result.
- Load must be evenly distributed in the container. Uneven load distribution may cause the LHS OVER LOAD indicator to give false signals and cause the LHS to operate incorrectly. Damage to equipment may result.
- If LHS OVER LOAD indicator illuminates and normal operation has stopped, return load to original position and notify supervisor to have payload redistributed or weight reduced. Failure to comply may result in damage to equipment.
- Ensure PARKING BRAKE is not pulled out before starting load sequence, or damage to equipment may occur.

NOTE

- The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.
 - If container is extremely light or empty, it may be necessary to set transmission range selector to R (reverse) and allow vehicle to roll under container.
 - If container is not centered, and transit locks cannot be installed and pinned, repeat Steps (39) through (52) to reposition container.
44. Move joystick (10) to LOAD, allowing vehicle to be pulled under container (6).

LOADING - Continued**WARNING**

Ensure that container has contacted rear sliders correctly and is between guides. Failure to comply may result in injury or death to personnel and damage to equipment.

CAUTION

Reduce engine speed to idle before container contacts rear sliders, or damage to equipment may result.

NOTE

- LHS OVER LOAD indicator may illuminate when lifting container from unusual conditions.
- As load is lifted, vehicle will be pulled under container. Some steering wheel adjustment may have to be made to Ensure that container contacts rear sliders correctly and is between guides.

45. As container (6) contacts rear sliders (21), reduce engine speed to idle and apply service brake pedal (4).

NOTE

If container is being loaded in soft soil conditions, perform Steps (45) through (50).

46. Release joystick (10).

LOADING - Continued

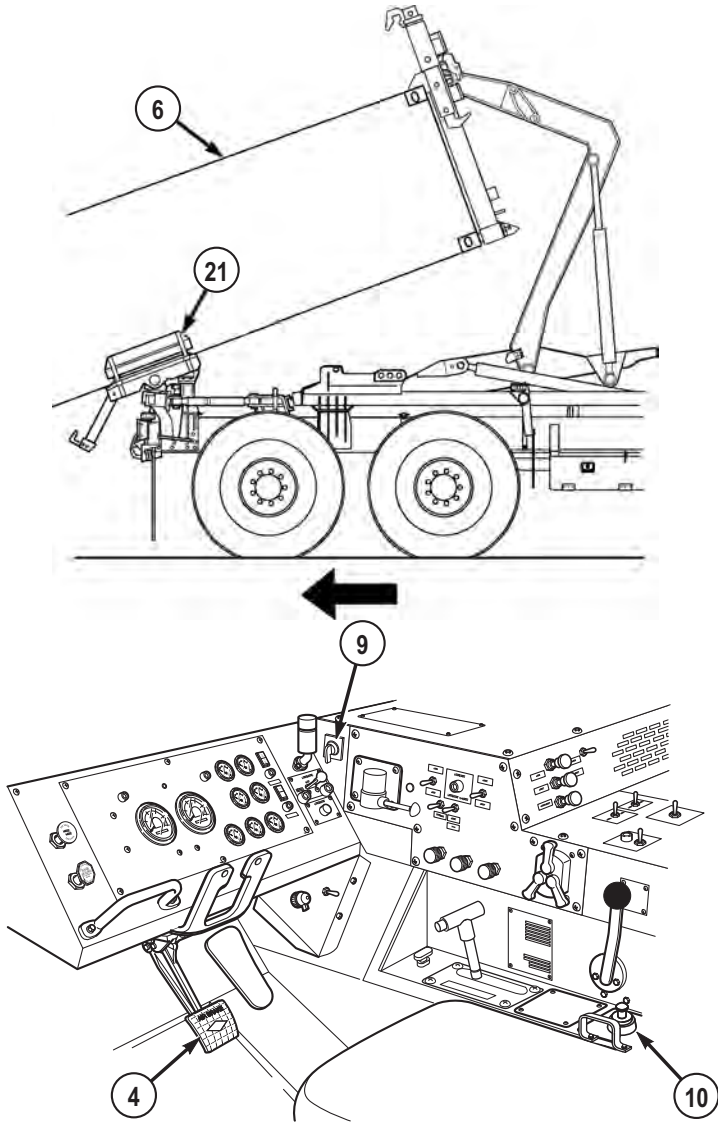


Figure 14.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

47. Turn hydraulic selector switch (9) to MAN H.A.

LOADING - Continued

48. Move joystick (10) to LOAD until container (6) is approximately 2 ft. (61 cm) off of ground.
49. Release joystick (10).

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

50. Turn hydraulic selector switch (9) to AUTO. Resume normal AUTO operations.

NOTE

Engine speed may be increased and decreased to ease loading.

51. After container (6) contacts rear sliders (21), increase engine speed to approximately 1500 rpm until container is almost loaded. Reduce engine speed to idle.

CAUTION

After loading operations using CHU kit and container and the LHS NO TRANSIT indicator goes off, operator must release the joystick from the LOAD position. Failure to release the joystick may cause LHS OVER LOAD indicator to illuminate and hydraulic cylinders to remain active, forcing a temporary bow in the LHS frame, resulting in contact between LHS and container.

52. Continue loading until container (6) is fully loaded and LHS NO TRANSIT indicator (27) goes out.

LOADING - Continued

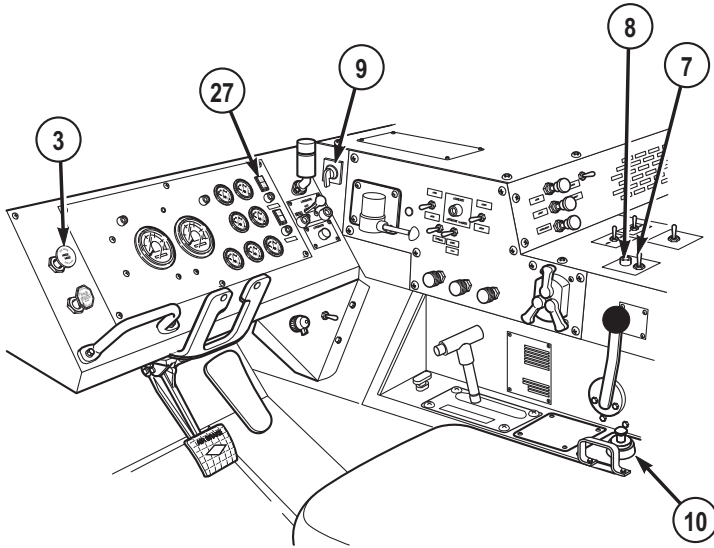
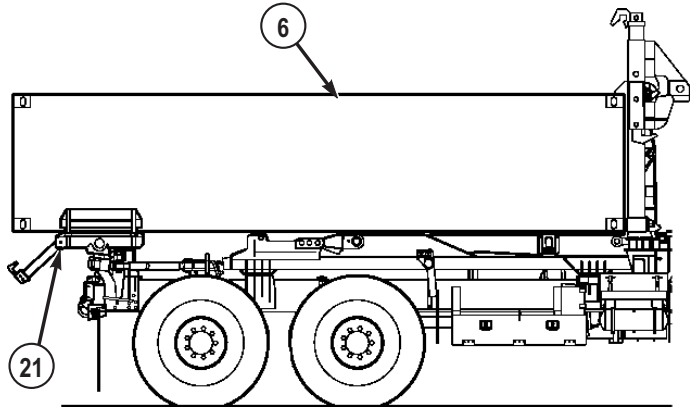


Figure 15.

Figure 16.

- 53. Release joystick (10).
- 54. Pull out PARKING BRAKE control (3).

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

LOADING - Continued

- Hydraulic selector switch must be in the OFF position before driving vehicle, or hydraulic system could overheat.

55. Turn hydraulic selector switch (9) to OFF.
56. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.
57. Shut off engine. (WP 0051)

NOTE

- If container is not centered, and transit locks cannot be installed and pinned, repeat Steps (44) through (57) to reposition container.
- There are two rear container locks. Passenger side shown.

58. Support rear container lock (2) and remove lock pin (28) and pin (29).

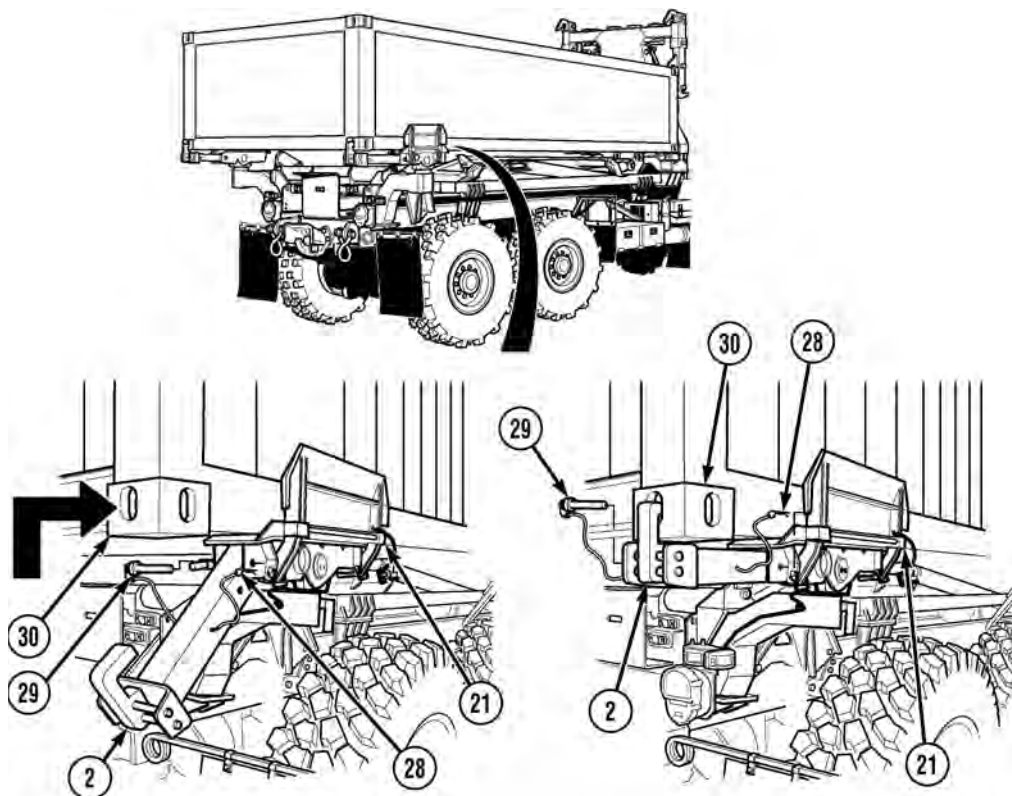


Figure 17.

LOADING - Continued

59. Rotate rear container lock (2) up and position into container lower rear corner casting (30).
60. Install pin (29) and lock pin (28) in rear container lock (2) and slider (21).

WARNING

Do not reduce tire pressure when loaded with FRS or container. Highway tire pressure, 60 psi (414 kPa) front and 83 psi (572 kPa) rear, is required at all times when loaded with FRS or container. If equipped with armor kit, highway tire pressure 75 psi (517 kPa) front is required at all times. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Maximum side slope when loaded with an FRS or container is 30%. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

When loaded with FRS or container, the center of gravity is moved up and toward rear of vehicle. Use extreme care when turning and ascending or descending on a grade. Failure to comply may result in injury or death to personnel.

61. Perform Steps (57) through (59) for driver side rear container lock.

UNLOADING**WARNING**

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

WARNING

Do not attempt loading or unloading operations on a side slope greater than 5 degrees and/or fore/aft slope greater than 20%. Prior to performing loading or unloading operations on slopes, determine if ground surface conditions permit safe loading or unloading operations. Slopes that contain snow, ice, loose gravel, or sand may not permit safe loading or unloading. Failure to comply may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

UNLOADING - Continued**CAUTION**

- Check that ground conditions where container will be placed can support the container weight, or damage to the container, front lift adapter, or LHS may result.
- Use extreme caution when loading/unloading container with side doors. Container must remain centered during loading/unloading or flanges on side may be damaged and/or door hinges may make hard contact with guides.

NOTE

For detailed instructions on how to operate the LHS, refer to loading/unloading flatrack in AUTO mode. (WP 0064)

1. Check area for operating room at front and rear of vehicle. Check overhead clearance and ground conditions.

NOTE

There are two rear container locks. Passenger side shown.

2. Remove lock pin (1), pin (2), and rear container lock (3) from lower rear corner casting (4).

UNLOADING - Continued

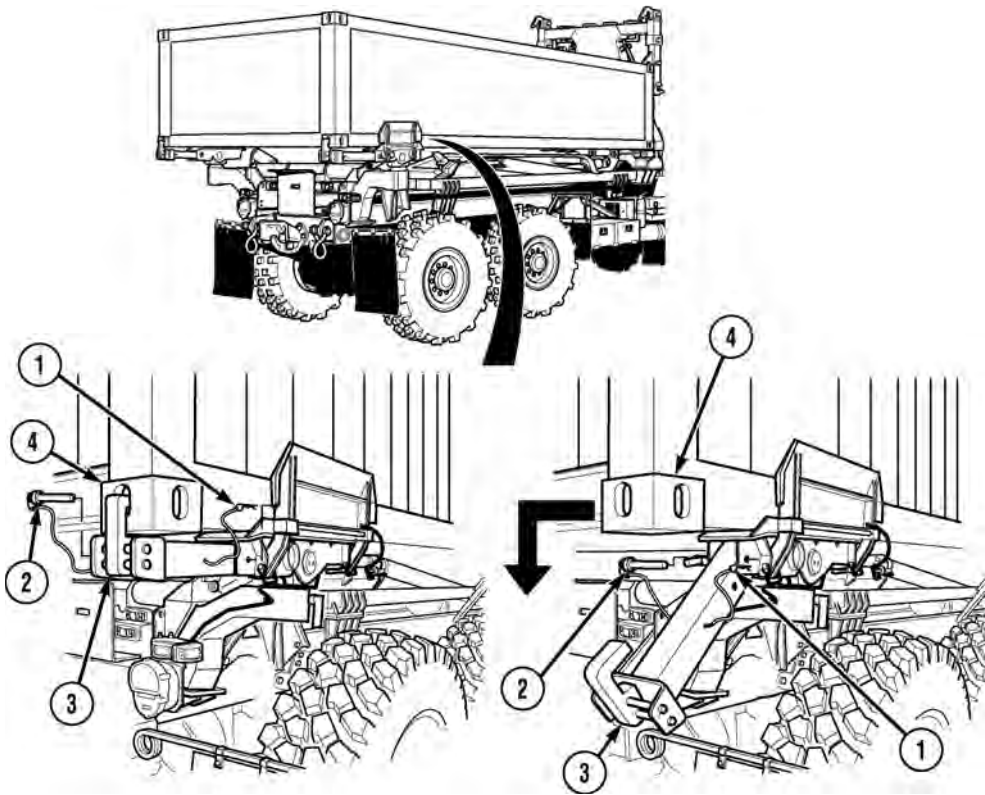


Figure 18.

3. Rotate rear container lock (3) in down position and install pin (2) and lock pin (1).
4. Perform Steps (2) and (3) for driver side rear container lock.
5. Start engine. (WP 0038)

NOTE

LHS will only operate when transmission range selector is in N (neutral).

6. Apply service brake pedal (5) and set transmission range selector (6) to N (neutral).

UNLOADING - Continued

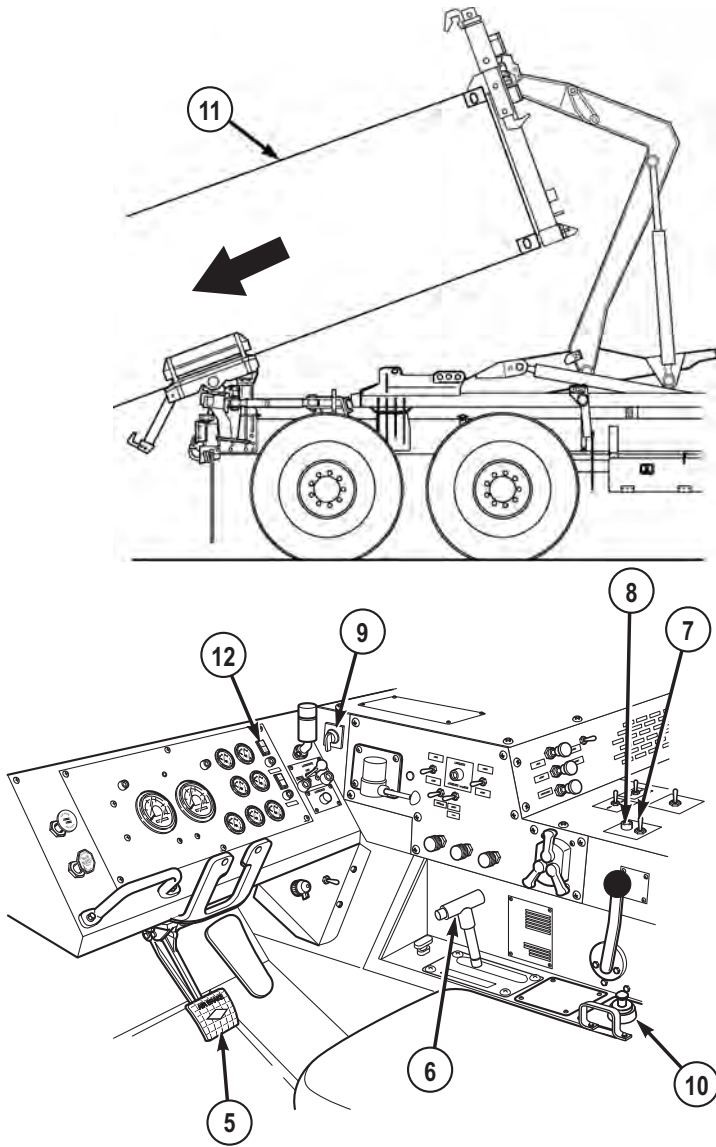


Figure 19.

7. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

UNLOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

8. Turn hydraulic selector switch (9) to AUTO.

WARNING

When loading or unloading containers on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

NOTE

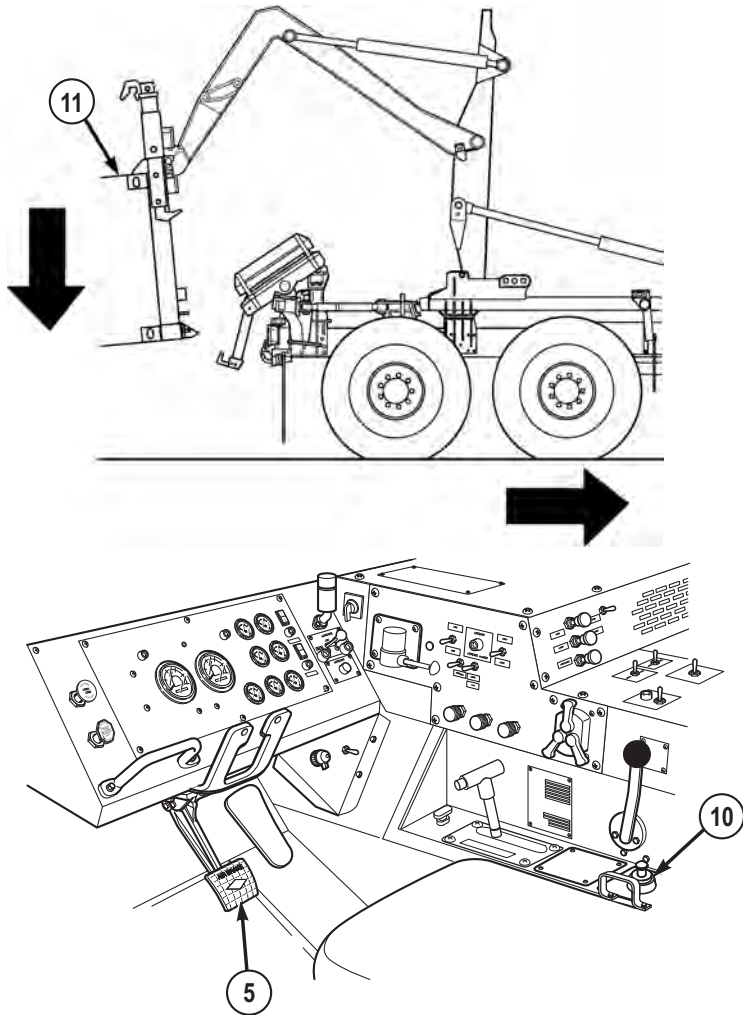
LHS will not operate and unload if rear container locks are engaged.

9. Move joystick (10) to UNLOAD. Container (11) will start to move rearward. LHS NO TRANS indicator (12) will illuminate. Maintain engine speed at idle until front of container raises approximately 1 ft. (30 cm).

NOTE

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.

10. Continue to unload container (11) until back edge of container touches ground.
11. Release service brake pedal (5) and allow container (11) to push vehicle forward from under container.
12. As front of container (11) approaches within approximately 8 in. (20.3 cm) of ground, decrease engine speed to idle and apply service brake pedal (5).

UNLOADING - Continued*Figure 20.***CAUTION**

Once trucks rear suspension has been relieved of container load, do not continue in UNLOAD position as possibility of jacking up the rear of vehicle with hook arm may occur and damage to equipment may result.

13. Continue unloading until bottom of container (11) is on ground and rear suspension is unloaded.
14. Release joystick (10) when container (11) is resting on ground.

UNLOADING - Continued

15. Pull out PARKING BRAKE control (13).

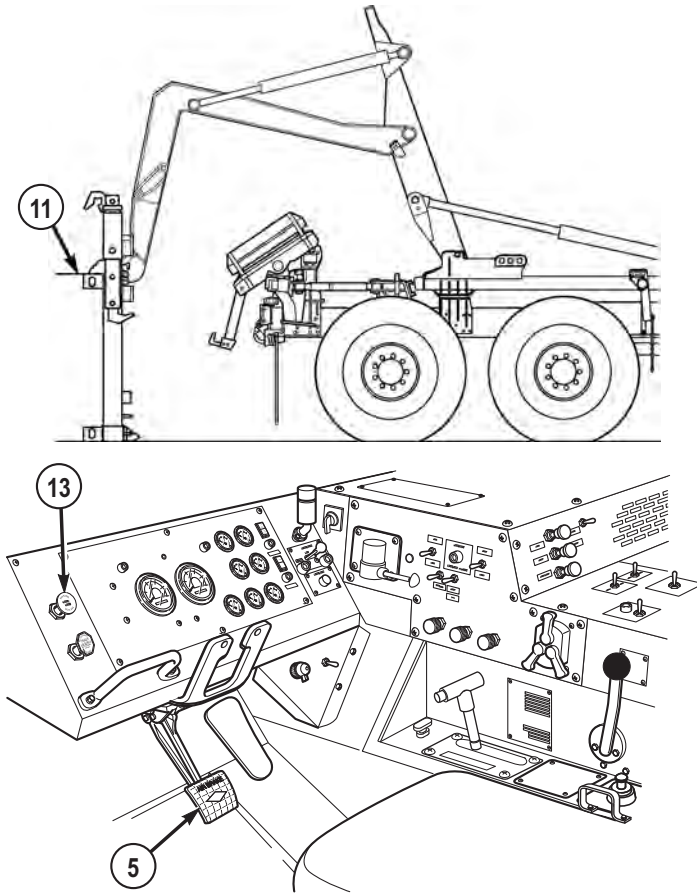


Figure 21.

16. Release service brake pedal (5).

WARNING



Ensure that all tension has been relieved between LHS hook and front lift adapter prior to unlocking front lift adapter lower container locks. Stay

UNLOADING - Continued

clear of front lift adapter when unlocking front lift adapter lower container locks as front lift adapter may separate from container unexpectedly. Failure to comply may result in injury or death to personnel.

NOTE

There are two front lift adapter lower container locks. Passenger side shown.

17. Raise handle lock plate (14) and turn handnut (15) to loosen stem (16).

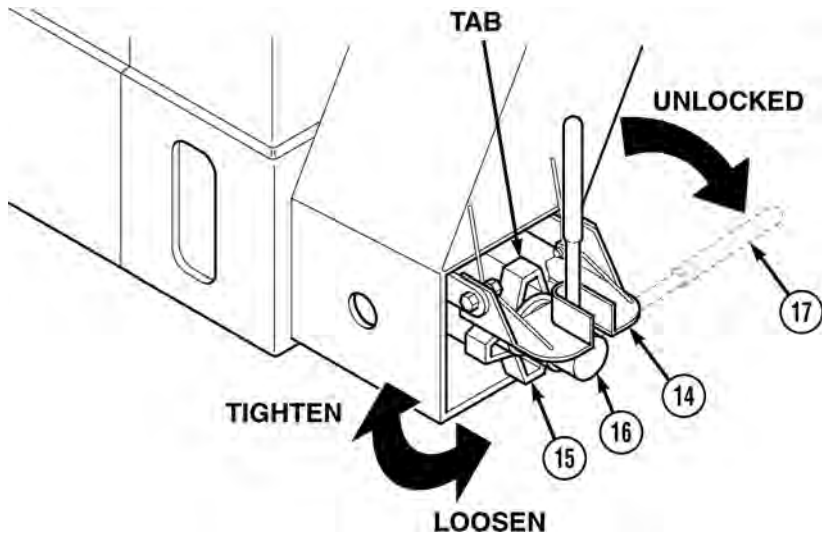


Figure 22.

NOTE

Ensure tab on handnut faces up.

18. Rotate lower container lock handle (17) toward center of vehicle to unlocked position.

CAUTION

Handnut must be tightened clockwise to tighten stem. Failure to tighten stem may cause damage to equipment during next container loading procedure.

19. Tighten handnut (15) clockwise to tighten stem (16).
20. Release handle lock plate (14) over container lock handle and handnut (15) tab.
21. Repeat Steps (17) through (20) for driver side adapter lower container lock.

UNLOADING - Continued

22. Push in PARKING BRAKE control (13).

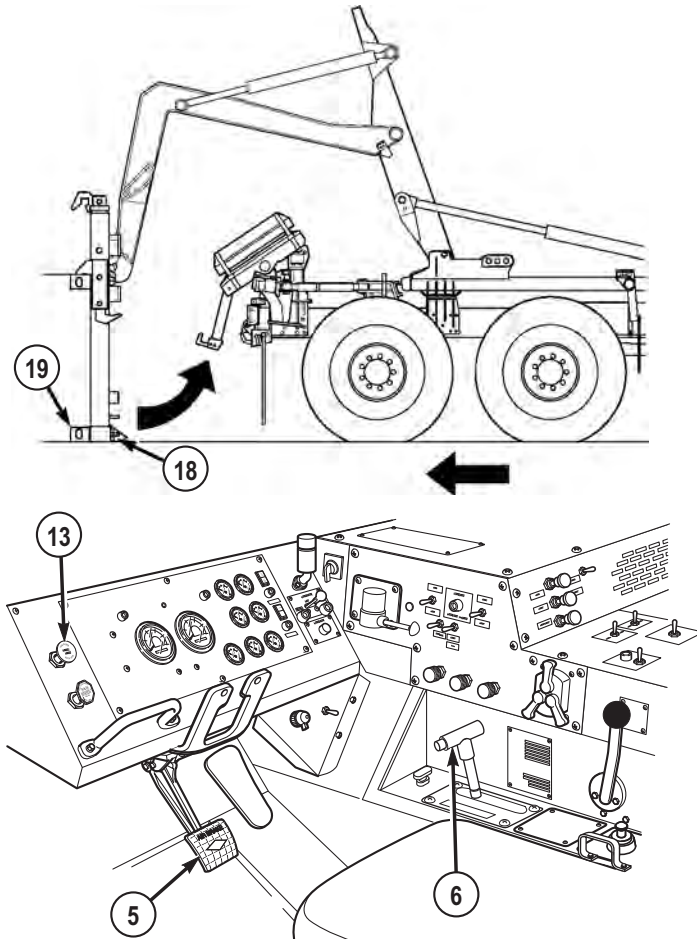


Figure 23.

23. Set transmission range selector (6) to R (reverse).
 24. Move vehicle backward until lower container locks (18) disengage from lower front corner castings (19) approximately 4 to 6 in. (10 to 15 cm).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

25. Apply service brake pedal (5) and set transmission range selector (6) to N (neutral).

UNLOADING - Continued**CAUTION**

Ensure that the half-height container front hooks are completely disengaged and do not hang up in container upper corner castings when retracting LHS. Failure to comply may result in damage to the half-height container front hooks and/or container.

NOTE

It may be necessary to move the vehicle forward or backward slightly to get the half-height container front hooks to disengage.

26. Move joystick (10) to LOAD position until front lift adapter (20) is disengaged from container (11).

UNLOADING - Continued

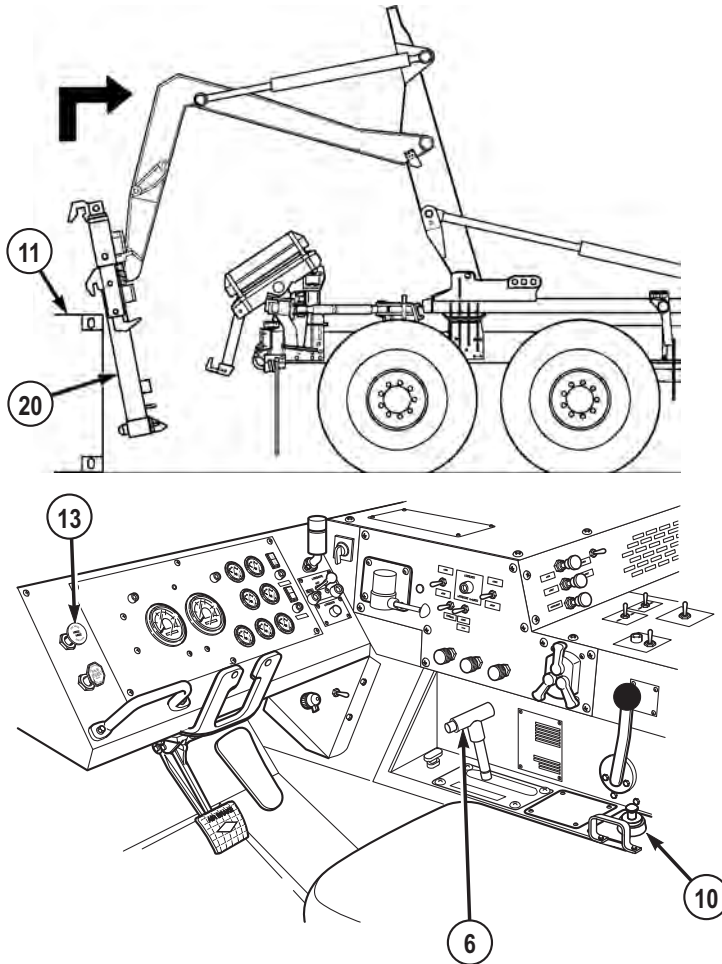


Figure 24.

27. Release joystick (10).
28. Move vehicle forward until rear of vehicle is approximately 9 ft. (2.74 m) in front of container.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

29. Set transmission range selector (6) to N (neutral).
30. Pull out PARKING BRAKE control (13).

UNLOADING - Continued**NOTE**

- Perform Steps (31) through (33) if CHU operations for 48 in. (122 cm) containers have been completed.
- There are two slide arms and half-height container front hooks. Passenger side shown.

31. Remove pin lock (22), pin (23), and half-height container front hook (24) from slide arm (25).

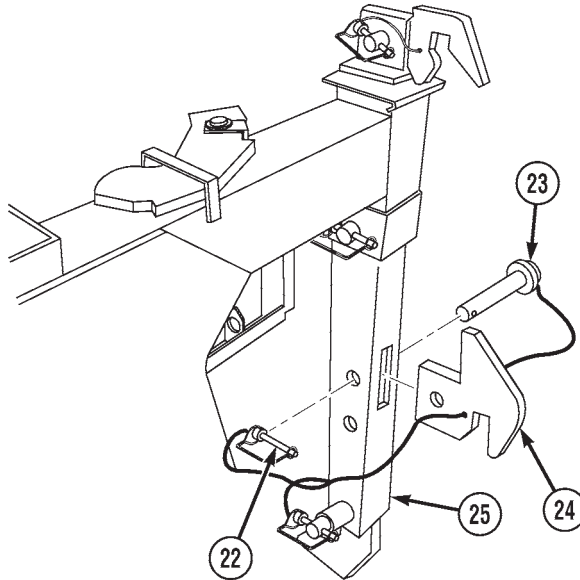
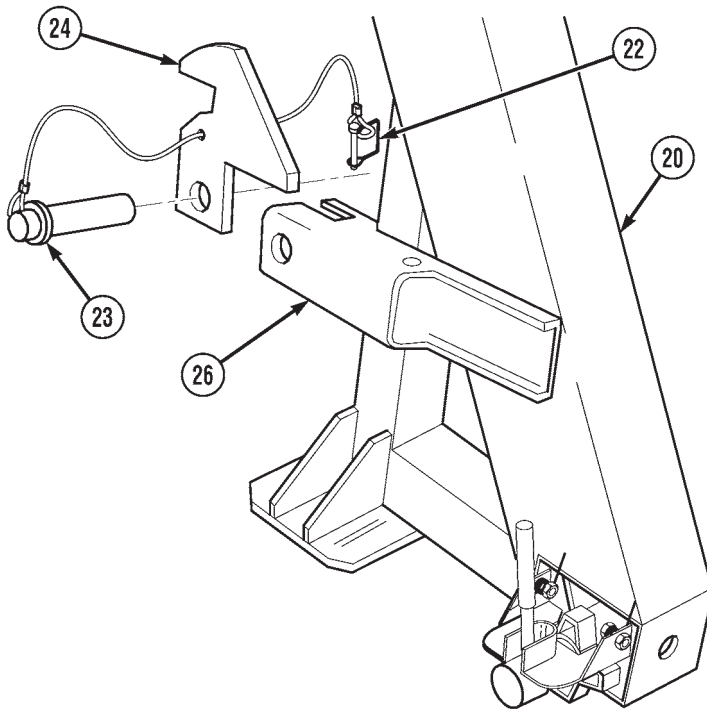


Figure 25.

32. Install half-height container front hook (24), pin (23), and lock pin (22) in stowage bracket (26) on front lift adapter (20).

UNLOADING - Continued*Figure 26.*

33. Repeat Steps (31) and (32) for driver side.

CAUTION

- On steep downgrades, contact is possible between the front lift adapter lower legs and the rear sliders during empty LHS cycles. If contact appears likely, switch hydraulic selector to MAN H.A. and retract (LOAD) hook arm a few inches. Switch hydraulic selector to MAN M.F. and retract the main frame until the front lift adapter clears the rear sliders. Return hydraulic selector to AUTO and continue (LOAD) operation. Failure to comply may result in damage to equipment.
- Never drive with LHS NO TRANS lamp illuminated. An illuminated lamp means that the LHS is not fully stowed. Failure to comply may result in damage to equipment.

UNLOADING - Continued**NOTE**

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to approximately 1500 rpm to reduce loading and unloading times.

34. Move joystick (10) to LOAD position until LHS is fully retracted and front lift adapter (20) is positioned on bumper supports (21). LHS NO TRANS indicator (12) will go out signaling LHS is in transport position.
35. Release joystick (10).

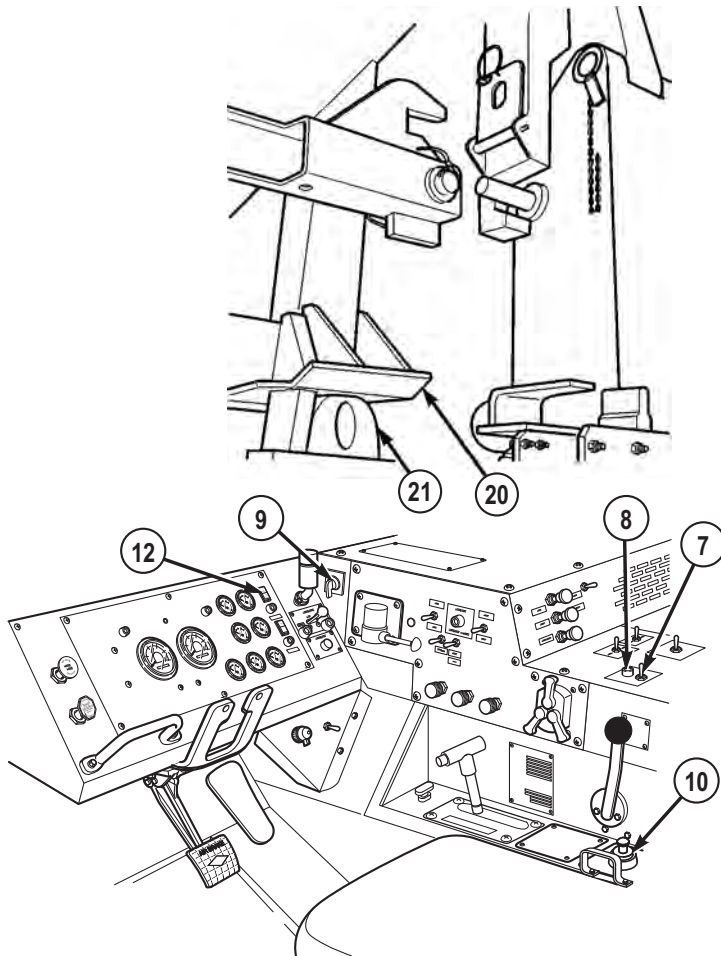


Figure 27.

UNLOADING - Continued**CAUTION**

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Hydraulic selector switch must be in the OFF position before driving vehicle, or hydraulic system could overheat.

36. Turn hydraulic selector switch (9) to OFF.

37. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
TRANSPORT FRONT LIFT ADAPTER (FLA) WITHOUT CONTAINER**

INITIAL SETUP:

Not Applicable

FRONT LIFT ADAPTER (FLA) IN LOCKED POSITION (VEHICLE WITHOUT CONTAINER)

1. Start engine. (WP 0038)

NOTE

LHS will only operate when transmission range selector is in N (neutral).

2. Apply service brake pedal (1) and set transmission range selector (2) to N (Neutral).

FRONT LIFT ADAPTER (FLA) IN LOCKED POSITION (VEHICLE WITHOUT CONTAINER) - Continued

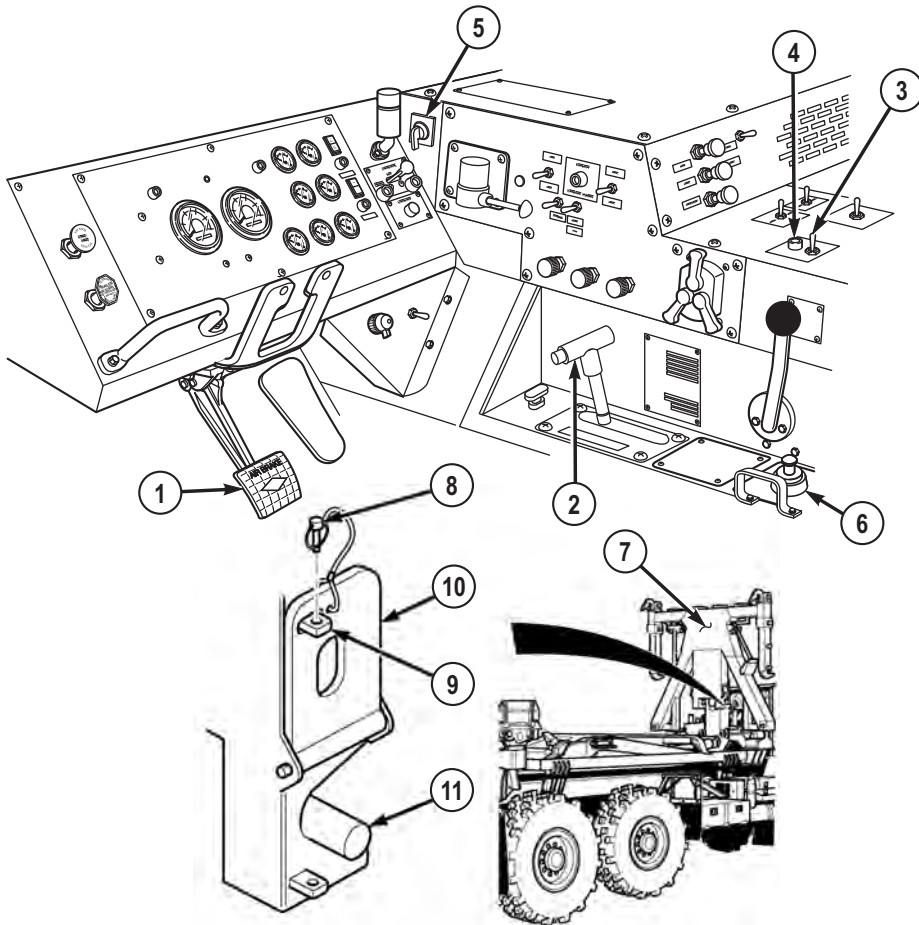


Figure 1.

3. Set PTO ENGAGE switch (3) to ON position. Indicator light (4) will illuminate.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

4. Turn hydraulic selector switch (5) to AUTO.
5. Move joystick (6) to UNLOAD position, and raise FLA (7) approximately 2 in. (5.08 cm).

FRONT LIFT ADAPTER (FLA) IN LOCKED POSITION (VEHICLE WITHOUT CONTAINER) - Continued

6. Shut off engine. (WP 0051)

WARNING



Front lift adapter weighs 1,600 lbs (727 kg). Do not attempt to lift or move front lift adapter without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

NOTE

There are two locking plates on FLA. Both locking plates are locked and unlocked the same way. Passenger side shown.

7. Remove quick release pin (8) from bracket (9) to free locking plate (10).
8. Rotate locking plate (10) down to engage LHS hook arm pivot pin (11).
9. Install quick release pin (8) in bracket (12) to secure locking plate (10).

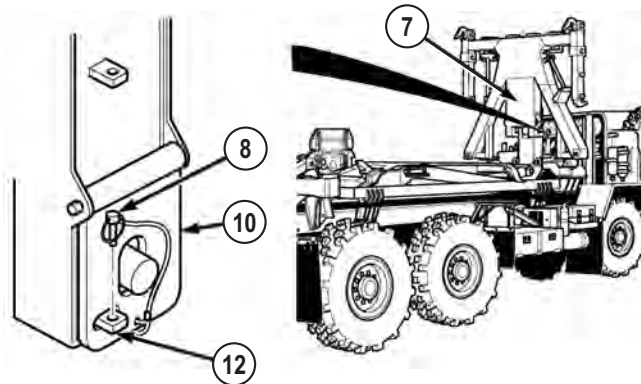


Figure 2.

10. Repeat Steps (7) through (9) for driver side locking plate.
11. Stow FLA (7) on vehicle. (WP 0062)

FRONT LIFT ADAPTER (FLA) IN UNLOCKED POSITION (LOAD/UNLOAD CONTAINER, INSTALL/REMOVE FRONT LIFT ADAPTER FROM LHS)

1. Start engine. (WP 0038)

NOTE

LHS will only operate when transmission range selector is in N (neutral).

2. Apply service brake pedal (1) and set transmission range selector (2) to N (Neutral).

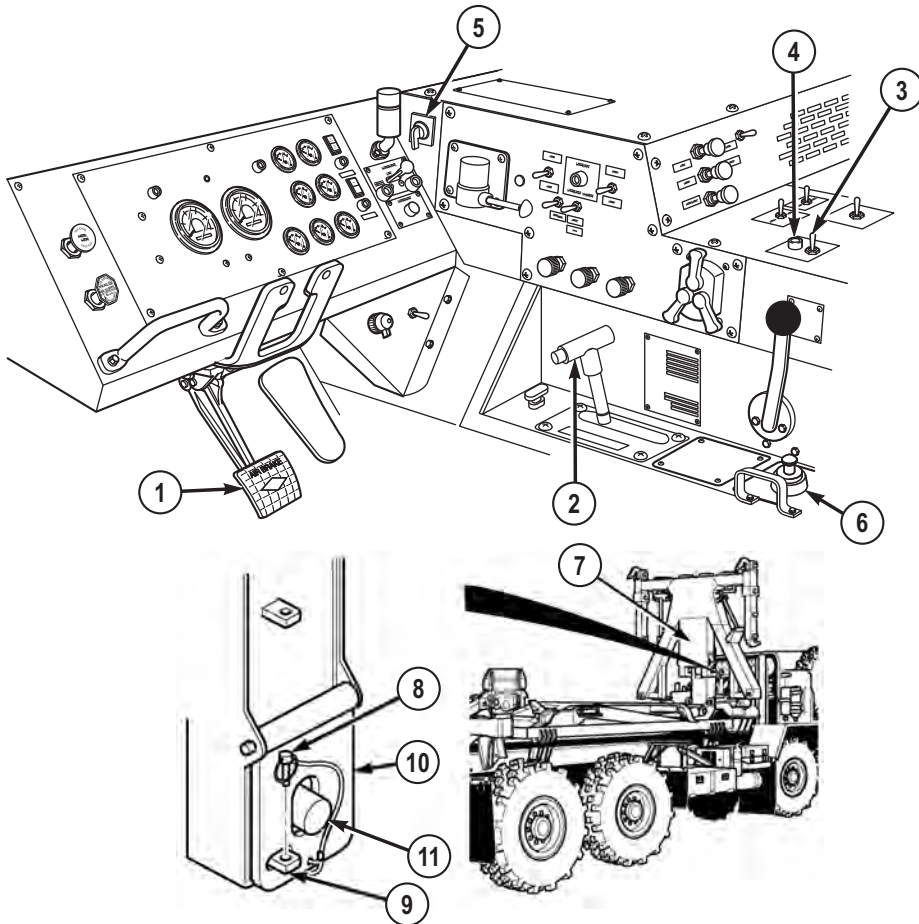


Figure 3.

3. Set PTO ENGAGE switch (3) to ON position. Indicator light (4) will illuminate.

FRONT LIFT ADAPTER (FLA) IN UNLOCKED POSITION (LOAD/UNLOAD CONTAINER, INSTALL/REMOVE FRONT LIFT ADAPTER FROM LHS) - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

4. Turn hydraulic selector switch (5) to AUTO.
5. Move joystick (6) to UNLOAD position, and raise FLA (7) approximately 2 in. (5.08 cm).
6. Shut off engine. (WP 0051)

WARNING

Front lift adapter weighs 1,600 lbs (727 kg). Do not attempt to lift or move front lift adapter without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

NOTE

There are two locking plates on FLA. Both locking plates are locked and unlocked the same way. Passenger side shown.

7. Remove quick release pin (8) from bracket (9) holding locking plate (10) over LHS arm pivot pin (11).
8. Rotate locking plate (10) up to disengage LHS hook arm pivot pin (11).

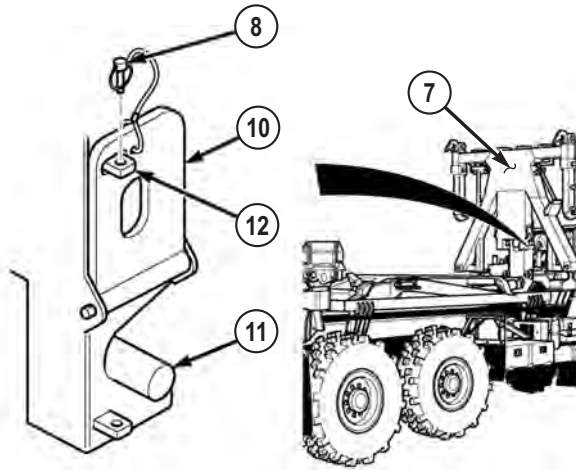
FRONT LIFT ADAPTER (FLA) IN UNLOCKED POSITION (LOAD/UNLOAD CONTAINER, INSTALL/REMOVE FRONT LIFT ADAPTER FROM LHS) - Continued

Figure 4.

9. Install quick release pin (8) in bracket (12) to secure locking plate (10).
10. Repeat Steps (7) through (9) for driver side locking plate.
11. Stow FLA (7) on vehicle. (WP 0062)

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE RECOVER CONTAINER SUNK IN MUD USING LIFT HOOKS

INITIAL SETUP:

Personnel Required

Operator and Assistant - - - (2)

OPERATION

1. Ensure front lift adapter is in 82 in. (208 cm) or more container mode. (WP 0053)

WARNING



Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

WARNING



Maximum permissible gross container weight is 24,000 lbs (10 896 kg). Do not exceed gross container weight. Failure to comply may result in or injury or death to personnel and damage to equipment.

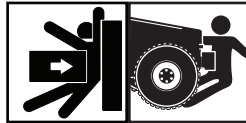
WARNING



Use care when working around front lift adapter. Front lift adapter may swing unexpectedly when not attached to container. Failure to comply may result in injury or death to personnel.

OPERATION - Continued**WARNING**

Do not attempt loading or unloading operations on a side slope greater than 5 degrees and/or fore/aft slope greater than 20%. Prior to performing loading or unloading operations on slopes, determine if ground surface conditions permit safe loading or unloading operations. Slopes that contain snow, ice, loose gravel, or sand may not permit safe loading or unloading. Failure to comply may result in injury or death to personnel.

WARNING

Do not stand between front lift adapter and container. Vehicle could roll suddenly. Failure to comply may result in injury or death to personnel.

NOTE

- For detailed instructions on how to operate the LHS, refer to loading/unloaded flatrack in AUTO mode (WP 0064).
 - Rear mud flaps may be pinned up to provide better visibility of front lift adapter lower container locks.
 - Ensure soft soil conditions around stuck container are able to support vehicle during recovery operation.
2. Start engine. (WP 0038)
 3. Push in PARKING BRAKE control (1), apply service brake pedal (2), and set transmission range selector (3) to R (reverse).

OPERATION - Continued

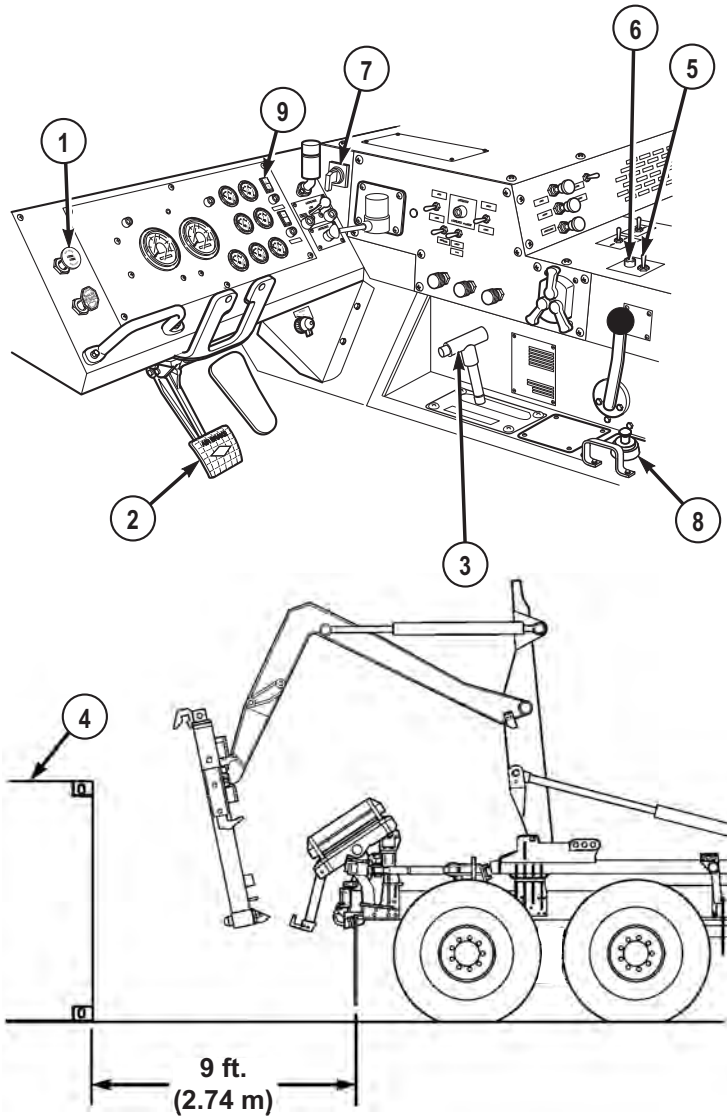


Figure 1.

4. Release service brake pedal (2) and position rear of vehicle within 9 ft. (2.74 m) of front of container (4), aligning centerline of vehicle within 2 in. (5 cm) of container centerline.
5. Apply service brake pedal (2) and set transmission range selector (3) to N (neutral).

OPERATION - Continued

6. Set PTO ENGAGE switch (5) to ON position. Indicator light (6) will illuminate.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

7. Turn hydraulic selector switch (7) to AUTO.

CAUTION

On steep downgrades, contact is possible between the front lift adapter lower legs and the rear sliders during empty LHS cycles. If contact appears likely, switch hydraulic selector to MAN H.A. and retract (LOAD) hook arm a few inches. Return hydraulic selector to AUTO and continue (UNLOAD) operation. Repeat as required. Failure to comply may result in damage to equipment.

8. Move joystick (8) to UNLOAD. Hook arm will raise and begin to move rearward. LHS NO TRANSIT indicator (9) will illuminate to indicate hook arm is up and load lock has been cleared.
9. Continue to hold joystick (8) in UNLOAD position until front lift adapter (10) is approximately 1 ft. (30 cm) off the ground.

OPERATION - Continued

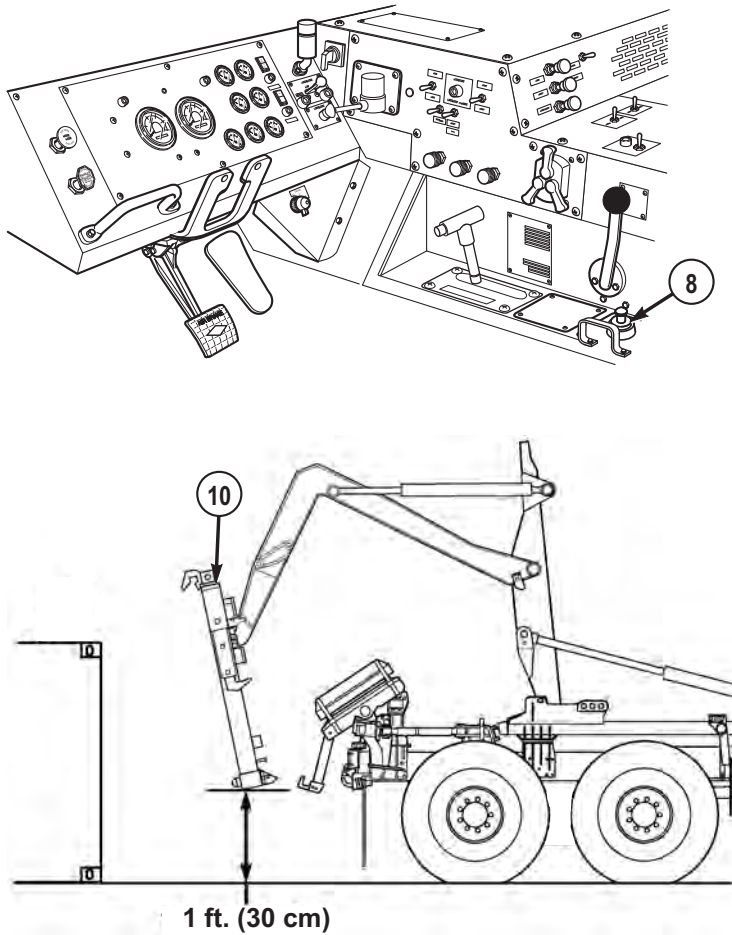


Figure 2.

10. Release joystick (8).
11. Shut off engine. (WP 0051)

NOTE

There are two lift hooks, both installed the same way. Passenger side shown.

12. Remove lock pin (11), collar (12), pin (13), and lift hook (14) from slide arm (15).

OPERATION - Continued

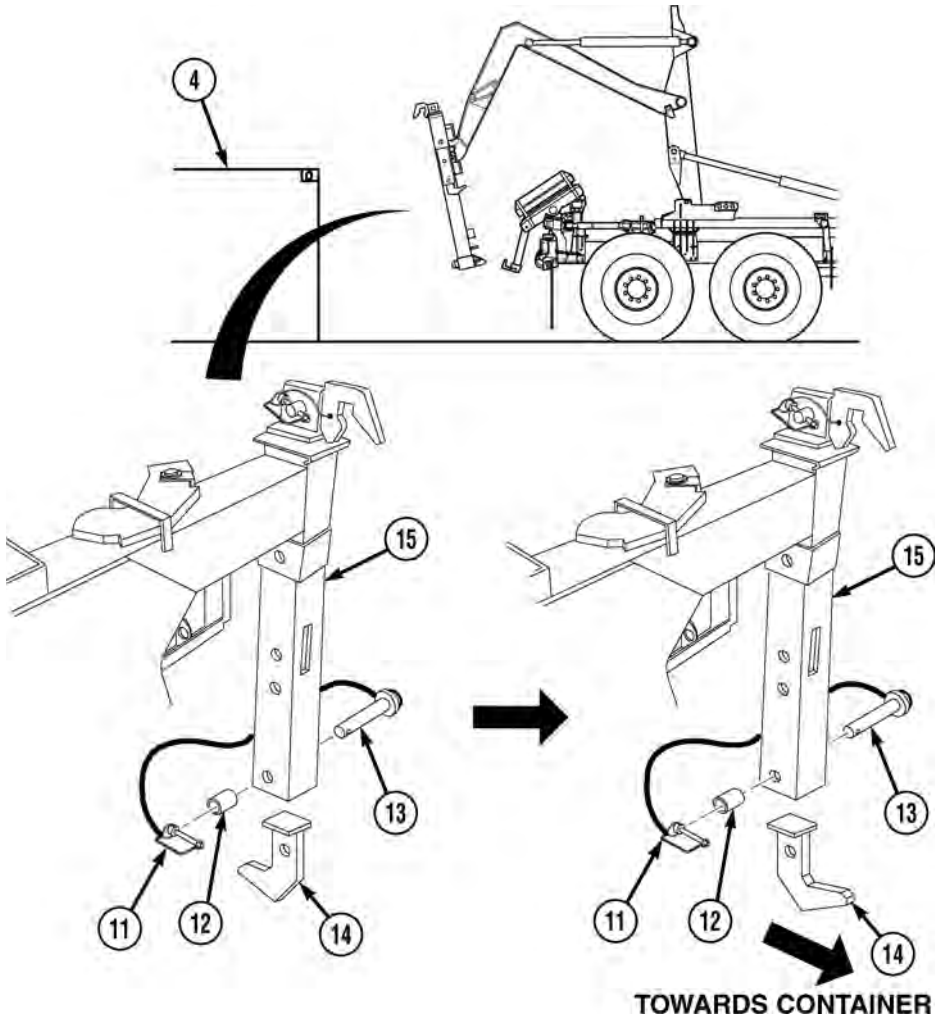
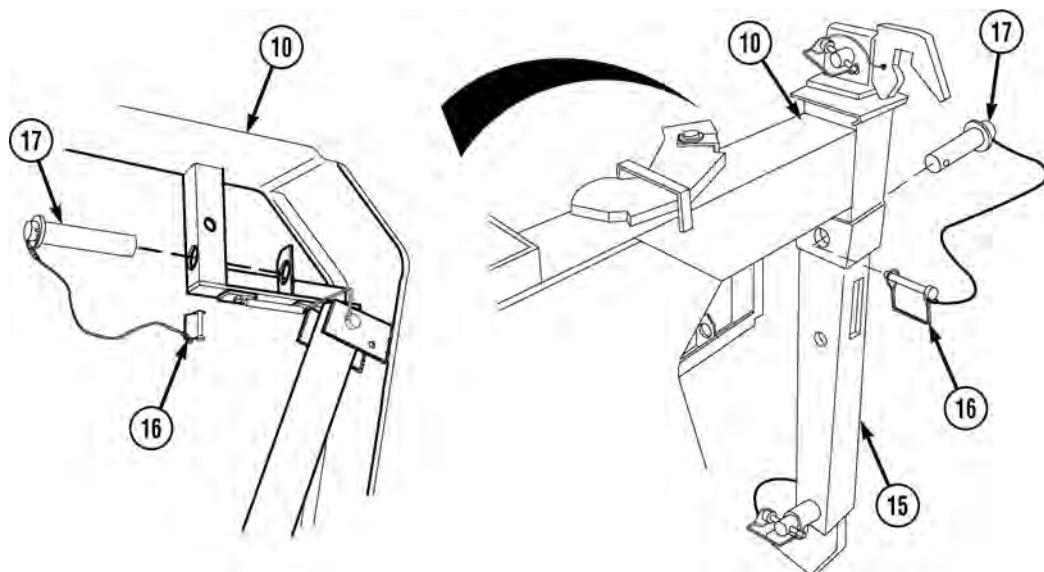


Figure 3.

13. Rotate lift hook (14) toward container (4).
14. Install lift hook (14), pin (13), collar (12), and lock pin (11) in slide arm (15).
15. Remove lock pin (16) and pin (17) from stow position on front lift adapter (10).

OPERATION - Continued*Figure 4.*

16. Install pin (17) and lock pin (16) in front lift adapter (10), and slide arm (15) in upper hole.
17. Repeat Steps (12) through (16) for driver side lift hook.
18. Start engine. (WP 0038)
19. Move joystick (8) to load and raise front lift adapter (10) until lift hooks (14) are aligned with container top ISO corners (18) on container (4).

OPERATION - Continued

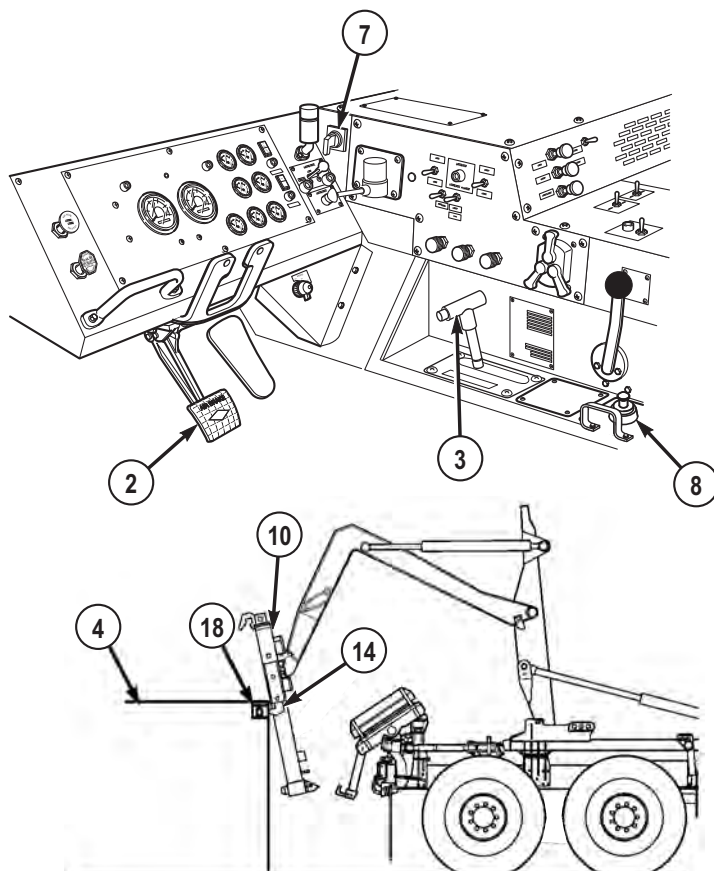


Figure 5.

20. Apply service brake pedal (2) and set transmission range selector (3) to R (reverse).

CAUTION

Ensure slide arm lift hooks are fully engaged with container upper corner castings. Failure to comply may result in damage to equipment.

21. Release service brake pedal (2). Position lift hooks (14) in container top ISO corners (18) on container (4).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

22. Apply service brake pedal (2) and set transmission range selector (3) to N (neutral).

OPERATION - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

23. Turn hydraulic selector switch (7) to MAN H.A.

WARNING

Ensure lower container locks do not contact container. If lower container locks contact container lift hooks will disengage container causing container to drop and front lift adapter to become erratic. Failure to comply may result in injury or death to personnel.

24. With the aid of an assistant, slowly lift up container (4) with LHS until lower corner castings are approximately 6 in. (15 cm) from container.
25. Release service brake pedal (2) and back vehicle up approximately 1 ft. (30 cm).
26. Apply service brake pedal (2).
27. Repeat Steps (24) through (26) until front of container (4) is out of mud and wheel chocks (19) can be positioned under container (4).

OPERATION - Continued

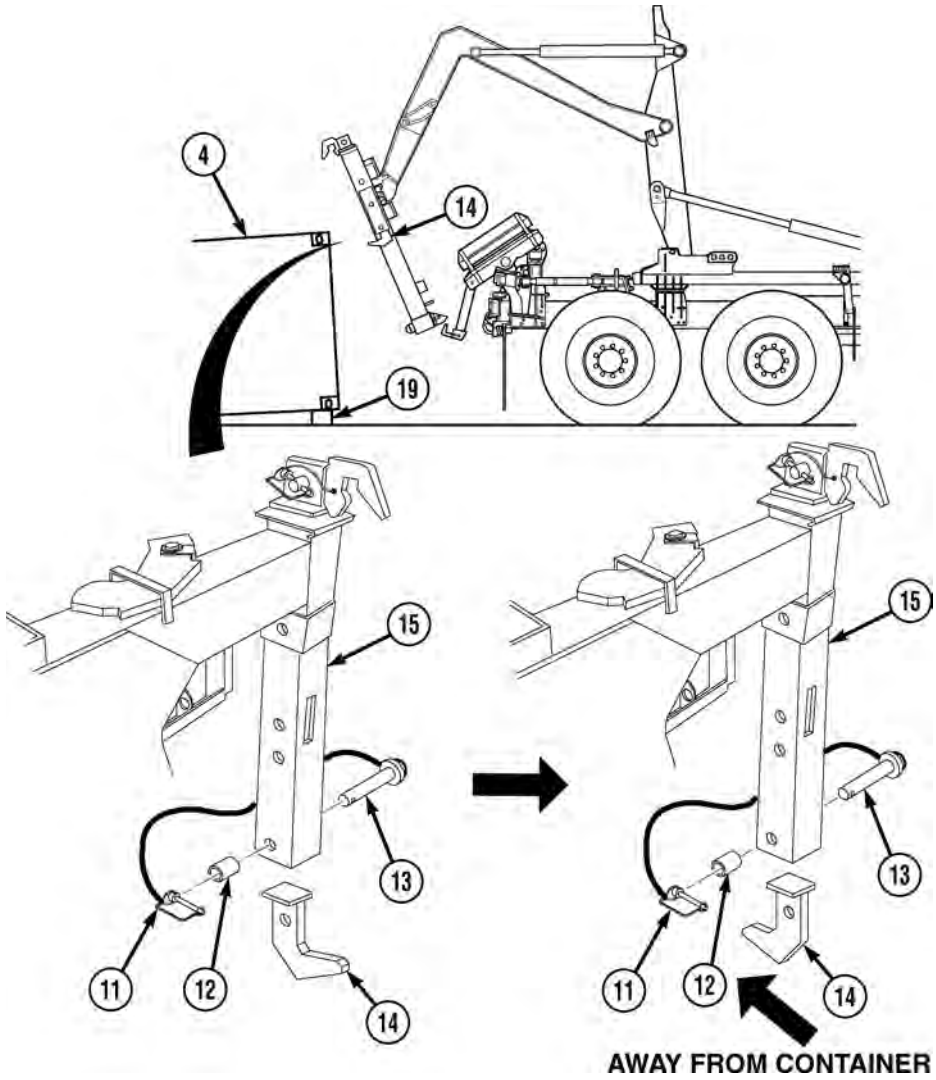
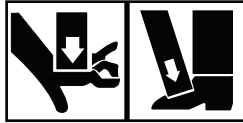


Figure 6.

OPERATION - Continued**WARNING**

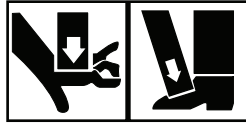
Do not put hands, arms, or any body parts under container when positioning chock blocks. Failure to comply may result in injury or death to personnel.

28. Position two wheel chocks (19) under end of container (4).
29. Lower LHS to position container (4) on wheel chocks (19) and disengage lift hooks (14) from container (4).

NOTE

There are two lift hooks, passenger side shown.

30. Remove lock pin (11), collar (12), pin (13), and lift hook (14) from slide arm (15).
31. Rotate lift hook (14) away from container (4).
32. Install lift hook (14), pin (13), collar (12), and lock pin (11) in slide arm (15).
33. Repeat Steps (30) through (32) for driver side lift hook.
34. Attach front lift adapter to container (4), follow normal container loading procedures, (WP 0064)configure for over-the-road operations, (WP 0046) and refer to applicable equipment/container:
 - a. Container handling unit (CHU) operation. (WP 0052)
 - b. Container 82 inches (208 cm) or taller, vehicle using forward lift adapter (FLA). (WP 0053)
 - c. Container 72 inches (183 cm) or taller, vehicle using forward lift adapter (FLA). (WP 0054)
 - d. Container 51 inches (130 cm) or taller, vehicle using forward lift adapter (FLA). (WP 0055)
 - e. Container 48 Inches (122 cm) or taller, vehicle using forward lift adapter (FLA). (WP 0056)
35. Raise container (4) end 1 ft. (30 cm).

OPERATION - Continued**WARNING**

Do not put hands, arms, or any body parts under container when positioning chock blocks. Failure to comply may result in injury or death to personnel.

NOTE

- See loading and unloading container:
- container handling unit. (WP 0052)
- 82 inches (208 cm) or taller using (FLA). (WP 0053)
- 72 inches (183 cm) or taller using (FLA). (WP 0054)
- 51 inches (130 cm) or taller using (FLA). (WP 0055)
- 48 inches (122 cm) or taller vehicle Using (FLA). (WP 0056)

36. Remove and stow wheel chocks (19).

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
LOADING/UNLOADING STACKED M3 CROP TO/FROM TRAILER**

INITIAL SETUP:

Not Applicable

LOADING AND UNLOADING PROCEDURES**NOTE**

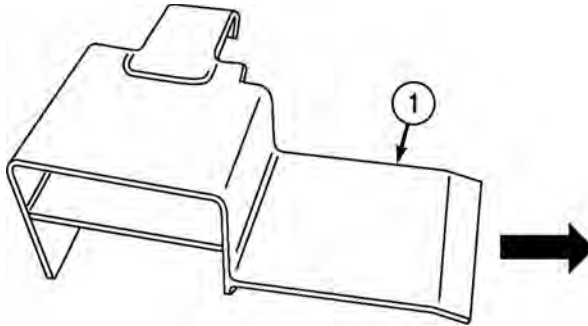
- Refer to TM 9-3990-260-14P for CROP stacking/unstacking procedures.
 - Refer to loading/unloading flatrack in AUTO mode (WP 0064) for operation to load/unload CROPs onto vehicle.
 - The M3/M3A1 CROP should be loaded as close to the center of gravity point as possible. As payload reaches the maximum lifting capacity of LHS; and a load is not centered on CROP, the center of gravity can restrict the lifting capability of the vehicle. Approximate center of gravity is centered 111 in. (282 cm) from the front edge of the CROP.
 - Once CROPs are loaded on vehicle, they are loaded onto a trailer using the following procedures.
1. Remove CROP loading ramps from their storage location on trailer.

CAUTION

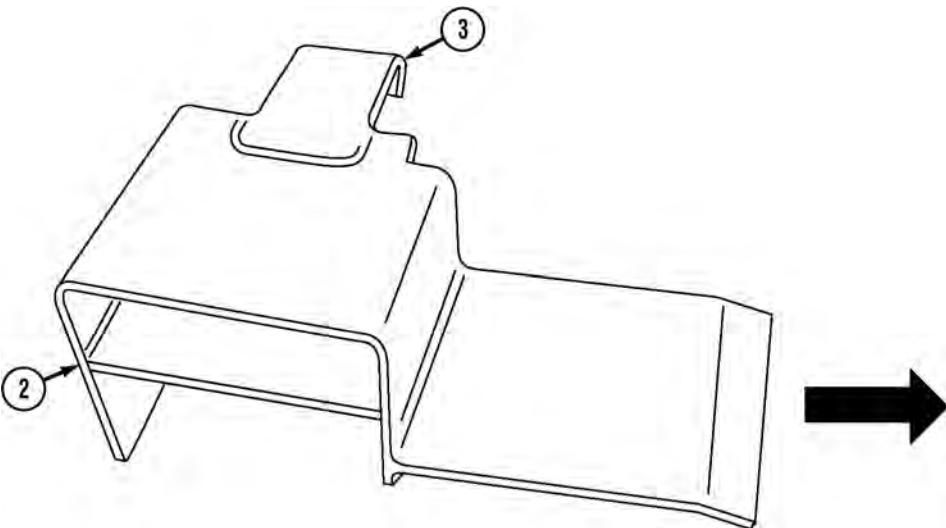
There are left and right side CROP loading ramps. For proper operation, ramps must be engaged on correct side of trailer. Failure to comply may result in equipment damage.

NOTE

- There are two CROP loading ramps, right and left side. Right side CROP loading ramp shown.
 - For proper engagement and operation of CROP loading ramps, the following installation instructions must be followed.
2. Position CROP loading ramps with sloped portion (1) facing forward on trailer frame bed, toward trailer tongue.

LOADING AND UNLOADING PROCEDURES - Continued*Figure 1.*

3. With squared back portion (2) of CROP loading ramp flush against and contacting trailer stops, engage hook portion (3) over inboard trailer guide rail.

*Figure 2.*

4. Repeat Steps (2) and (3) for left side CROP loading ramp.

LOADING AND UNLOADING PROCEDURES - Continued**WARNING**

Ensure all personnel stand clear of CROP when CROP is being moved. Failure to comply may result in injury or death to personnel.

CAUTION

If right and left ramps are not properly positioned, equipment damage may result.

5. Load CROPs onto trailer. (WP 0066)
6. Refer to normal transfer of flatrack from trailer to vehicle (WP 0067) for procedures to unload CROPs from trailer to vehicle and loading/unloading flatrack in AUTO mode (WP 0064) to unload CROPs from vehicle to ground or loading/unloading ISO container with M3 CROP (WP 0060) to unload CROPs from vehicle to ISO container.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
LOADING/UNLOADING ISO CONTAINER WITH M3 CROP**

INITIAL SETUP:

Personnel Required

Operator and Assistant - - - (2)

LOADING ISO CONTAINER

WARNING



CROP weighs 3,800 lbs (1 727 kg). Six CROPs weigh 22,800 lbs (10 364 kg). Ensure all personnel stand clear of CROP when CROP is being moved. Failure to comply may result in injury or death to personnel.

WARNING



Always lift stack of CROPs by connecting lift device to bottom CROP. Failure to comply may result in injury or death to personnel.

CAUTION

- Attempting to load/unload stack of CROPs or loaded CROP in ISO container requires extreme care to prevent damage to equipment. Clearance between ISO container ceiling and top of load, inside walls, and each side of CROP are designed to be close, requiring at least one ground guide to assist during difficult insertion/removal procedure.
- Ensure web straps securing stack of CROPs are removed prior to insertion into ISO container. Failure to comply may result in damage to web straps during insertion procedure.

LOADING ISO CONTAINER - Continued**NOTE**

- This procedure is a two soldier task.
- For detailed instructions on how to operate the LHS, refer to loading/unloaded flatrack in AUTO mode (WP 0064).
- Stack of six CROPs is maximum that can be loaded into ISO container.
- The use of ramps during loading/unloading process is optional.

1. Open ISO container doors (1) and secure in open position.

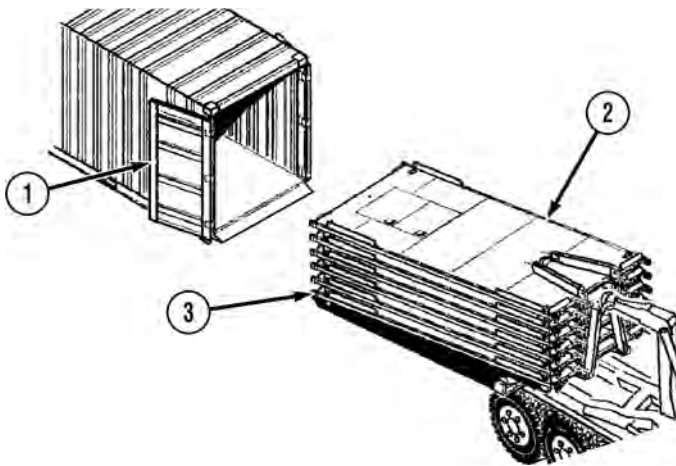


Figure 1.

2. Remove web straps securing CROPs.
3. Back vehicle up (WP 0045) to approximately 15 ft. (4.6 m) from ISO container door opening.
4. Unload CROPs (2) (WP 0064) until bottom CROP rollers (3) are approximately 1 ft. (30 cm) from ground.

LOADING ISO CONTAINER - Continued**WARNING**

Do not stand between CROP and ISO container. Ensure all personnel stand clear of CROP when CROP is being moved. Failure to comply may result in injury or death to personnel.

CAUTION

M3 CROP is designed to fit into door opening of 91 in. (231 cm). If container is more than 10 years old, door opening may not be wide enough. **DO NOT** attempt to force CROP into containers with door openings less than 91 in. (231 cm). Failure to comply will result in damage to equipment.

NOTE

- Several attempts to insert CROPs may be required because ISO container door opening is only slightly wider than CROP.
 - If CROP load is too tall to insert into ISO container according to Steps (5) and (6), perform Steps (7) through (9), then proceed to Step (10).
5. Using at least one ground guide, carefully back vehicle up and insert rear of CROP (2) approximately 2 ft. (61 cm) into ISO container (4).

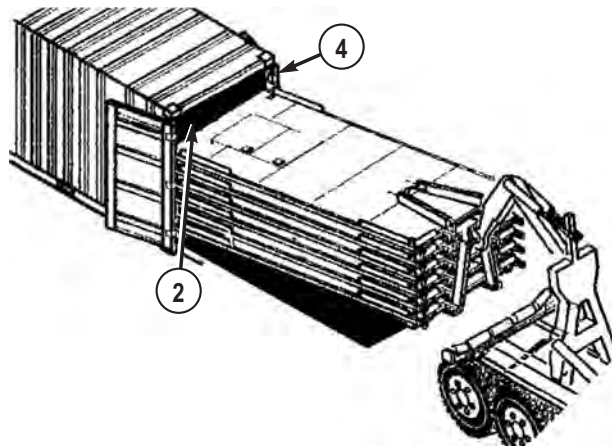


Figure 2.

LOADING ISO CONTAINER - Continued**CAUTION**

Extreme caution must be used to ensure bottom CROP rollers remain inside ISO container. Failure to comply may result in damage to equipment.

6. Unload CROPs (2) (WP 0064) allowing vehicle to be pushed forward, until front of bottom CROP (2) is approximately 1 ft. (30 cm) from ground.

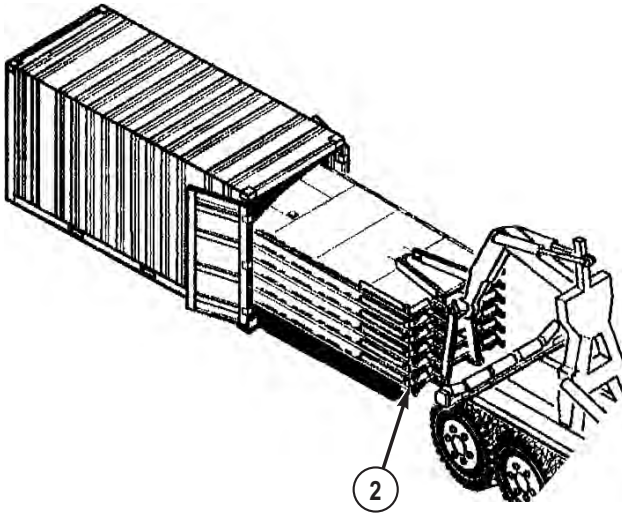
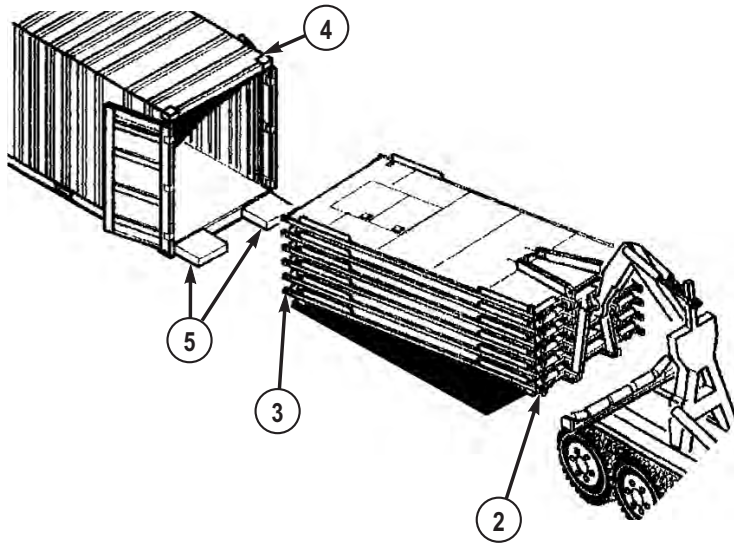


Figure 3.

NOTE

If use of ISO container loading platforms are not required, proceed to Step (10).

7. Position ISO container loading platforms (5) on ground, in front of and against ISO container door opening so CROP rollers (3) can roll up container loading platforms (5) into ISO container.

LOADING ISO CONTAINER - Continued*Figure 4.*

8. Unload CROPs (2) (WP 0064) until bottom CROP rollers (3) are grounded in front of ISO container loading platforms (5) and front of bottom CROP (2) is approximately 12 to 18 in. (30 to 46 cm) from ground.

WARNING

Do not stand between CROP and ISO container. Ensure all personnel stand clear of CROP when CROP is being moved. Failure to comply may result in injury or death to personnel.

CAUTION

- M3 CROP is designed to fit into door opening of 91 in. (231 cm). If container is more than 10 years old, door opening may not be wide enough. **DO NOT** attempt to force CROP into containers with door openings less than 91 in. (231 cm). Failure to comply will result in damage to equipment.
- Ensure CROPs do not contact top of ISO container door opening or inside walls of ISO container. Failure to exercise extreme caution during insertion may result in damage to ISO container or CROP.

LOADING ISO CONTAINER - Continued**NOTE**

Several attempts to insert CROPs may be required because ISO container door opening is only slightly wider than CROP.

9. Using at least one ground guide, use vehicle to push CROPs (2) up loading platforms (5) and into ISO container (4).

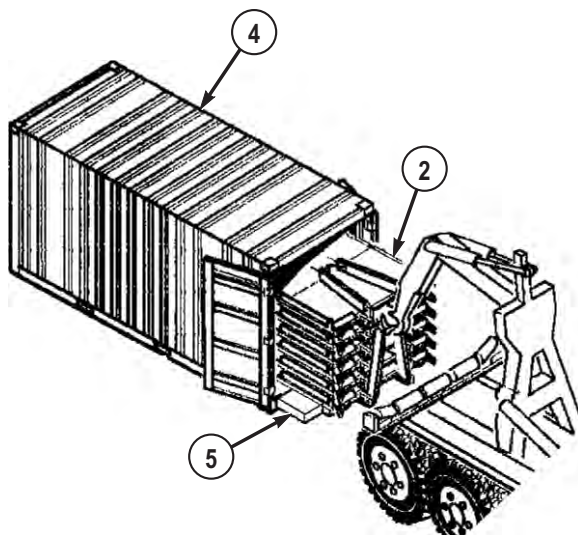


Figure 5.

10. Using at least one ground guide, back vehicle up (WP 0045) until CROPs front twist lock housings are inside ISO container (4).
11. If CROPs appear to be out of alignment inside ISO container (4):
 - a. Stop vehicle. Pull vehicle and CROPs forward several feet. Back up vehicle and realign CROPs.
 - b. After CROPs have been properly realigned, back vehicle up until CROPs front twist lock housings are inside ISO container.
12. Unload CROPs (WP 0064) entire weight to ISO container floor. Disconnect LHS lift hook from CROP, and move vehicle forward approximately 3 ft. (.9 m).
13. Remove ISO container loading platforms (5).
14. Attach hook arm extension (6) to LHS hook arm (7).

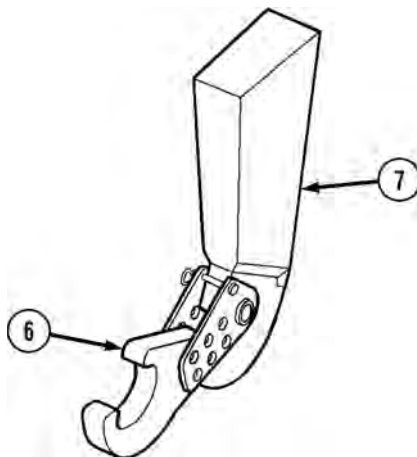
LOADING ISO CONTAINER - Continued

Figure 6.

WARNING

Always lift stack of CROPs by connecting lift device to bottom CROP.
Failure to comply may result in injury or death to personnel.

15. Connect hook arm extension to bottom CROP. Lift and push CROPs into ISO container until CROPs rear bumpers (8) firmly contact front of ISO container and bracing mechanism cams (9) can be positioned into shoring slots (10) on both sides of ISO container door.

LOADING ISO CONTAINER - Continued

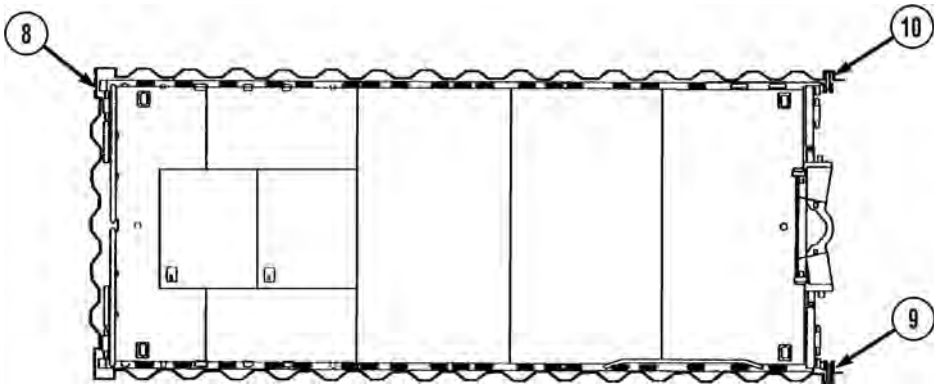


Figure 7.

16. Disconnect hook arm extension (6) from CROPs and Drive vehicle forward (WP 0044) so ISO container doors can be closed.

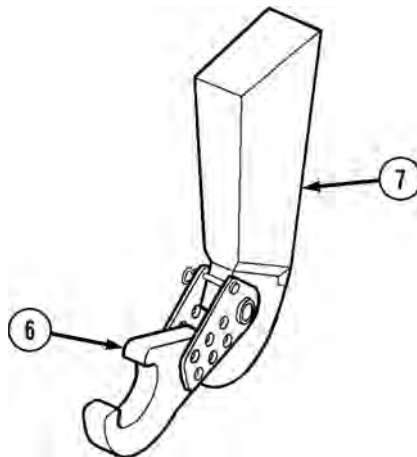


Figure 8.

17. Remove hook arm extension assembly (6) from LHS hook arm (7) and return hook arm extension (6) to stowage.

NOTE

The bracing mechanisms consist of a free-to-rotate cam positioned between two collars welded to threaded rod. The front adjustment collar is equipped with holes, which a pin can be inserted to provide leverage to turn and adjust the cam position fore and aft, enabling it to engage the

LOADING ISO CONTAINER - Continued

shoring slot. The same pin is used to secure cam after engaged in shoring slot.

18. Rotate cams (9) in left and right bracing mechanisms until shoring slots (10) on both sides of ISO container are engaged.

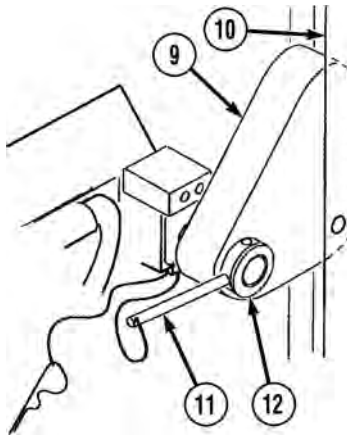


Figure 9.

19. If cam (9) will not engage shoring slot (10), insert pin (11) into adjustment collar (12), and turn adjusting cam (9) forward or aft until cam (9) will engage shoring slot (10).

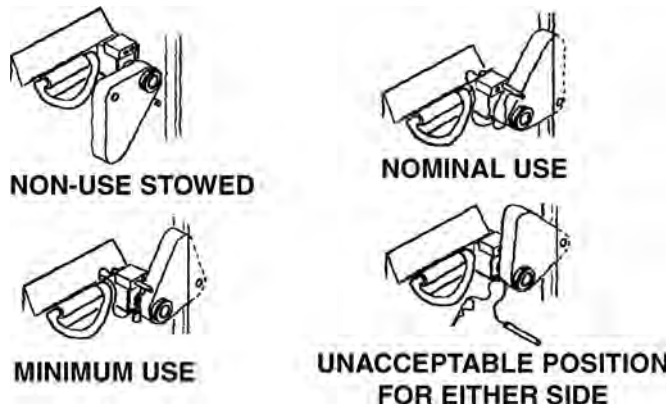


Figure 10.

LOADING ISO CONTAINER - Continued**NOTE**

Depending upon CROP distance from shoring slots, cams will engage in one of two positions depicted above as nominal position and minimum position. If required, use a forklift to position CROPs so either nominal or minimum position can be achieved.

- Using pin (11), turn adjustment collar (12) until cam (9) is pushed and positioned tight against front of shoring slot (10).

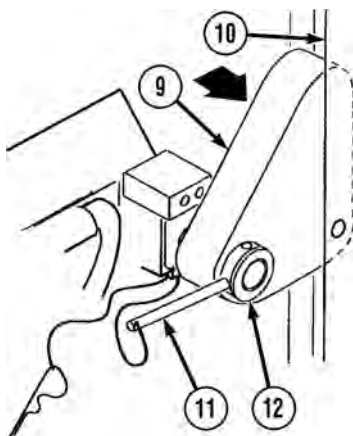
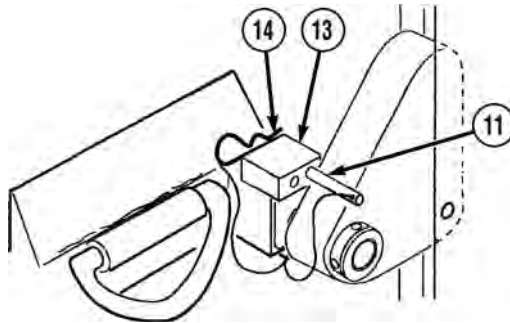


Figure 11.

NOTE

Outside hole is preferred in Step (21). Pin ensures that cam cannot be dislodged during transit.

- Insert pin (11) into one of the two holes in cam securing block (13), and install hitch-pin clip (14).

LOADING ISO CONTAINER - Continued*Figure 12.***NOTE**

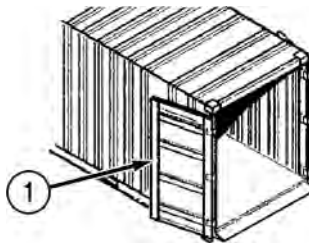
If stack of CROPs is the load, repeat Steps (18) through (21) on bottom CROP and at least every other CROP in stack.

22. Close and secure ISO container doors.

UNLOADING ISO CONTAINER**NOTE**

- This procedure is a two soldier task.
- For detailed instructions on how to operate the LHS, refer to loading/unloaded flatrack in AUTO mode. (WP 0064)

1. Open ISO container doors (1) and secure in open position.

*Figure 13.*

2. Remove hitch-pin clip (2) and pin (3) from cam securing block (4).

UNLOADING ISO CONTAINER - Continued

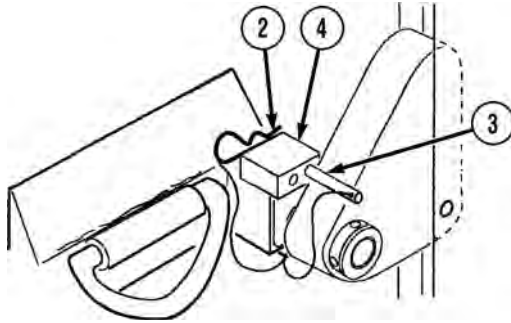


Figure 14.

3. Using pin (3), turn adjustment collar (5) until cam (6) is free from shoring slot (7).

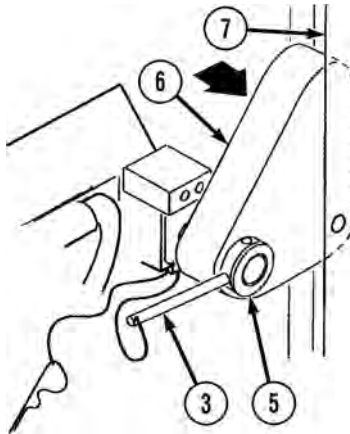
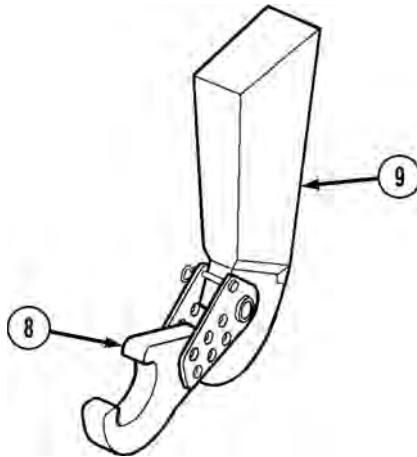


Figure 15.

4. Install hook arm extension assembly (8) on LHS hook arm (9).

UNLOADING ISO CONTAINER - Continued*Figure 16.***WARNING**

Always lift stack of CROPs by connecting lift device to bottom CROP. Failure to comply may result in injury or death to personnel.

CAUTION

- Attempting to load/unload stack of CROPs or loaded CROP in ISO container requires extreme care to prevent damage to equipment. Clearance between ceiling of ISO container and top of load and inside walls of ISO container and each side of CROP is designed to be close, requiring at least one ground guide to assist during difficult insertion/removal procedure.
 - Ensure CROPs do not contact top of ISO container door opening or inside walls of ISO container. Failure to exercise extreme caution during removal may result in damage to ISO container or CROPs.
5. Connect hook extension assembly (8) to bottom CROP (10). Load CROPs, and move vehicle forward until CROPs front twist lock housings are outside ISO container.

UNLOADING ISO CONTAINER - Continued

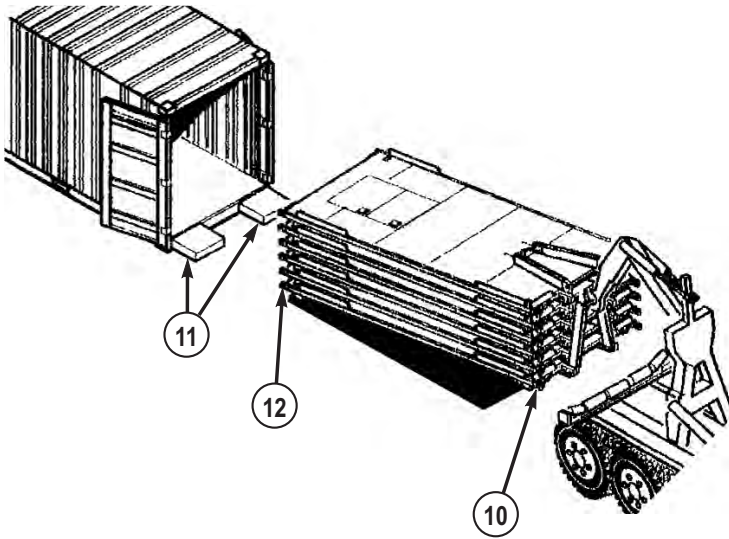


Figure 17.

6. Remove and stow hook arm extension assembly (8) from LHS hook arm (9).

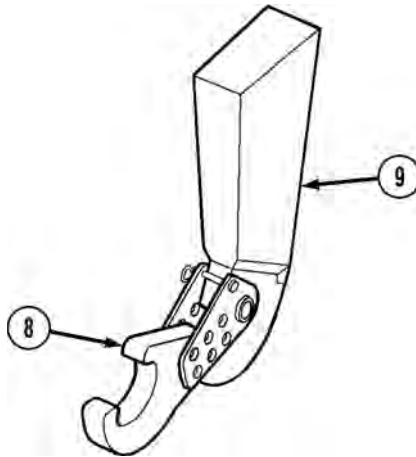
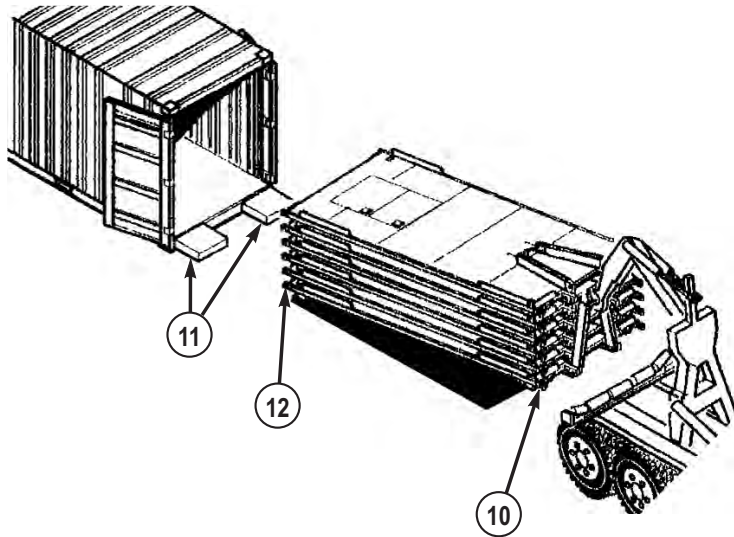


Figure 18.

7. Connect hook arm (9) to bottom CROP (10).

UNLOADING ISO CONTAINER - Continued*Figure 19.***WARNING**

CROP weighs 3,800 lbs (1 727 kg). Six CROPs weigh 22,800 lbs (10 364 kg). Ensure all personnel stand clear of CROP when CROP is being moved. Failure to comply may result in injury or death to personnel.

CAUTION

Ensure CROPs do not contact top of ISO container door opening or inside walls of ISO container. Failure to exercise extreme caution during insertion may result in damage to ISO container or CROPs.

8. Load CROPs (10) (WP 0064) onto vehicle.

NOTE

If CROP load is too tall to remove from ISO container according to Step (8), perform Steps (9) through (11).

UNLOADING ISO CONTAINER - Continued

9. Position ISO container loading platforms (11) on ground, in front of and against ISO container door opening, so CROP rollers (12) can roll down platforms (11) out of ISO container.
10. Drive vehicle forward (WP 0044) until CROP rollers are out of ISO container.
11. Load CROPs (10) (WP 0064) onto vehicle.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
INSTALLATION/REMOVAL OF RAIL TRANSPORT STRUT**

INITIAL SETUP:

Not Applicable

RAIL TRANSPORT STRUT INSTALLATION

NOTE

- Ensure ISO lower corner castings are free of dirt and debris.
 - There are two ISO corner locks. Both are opened the same way. Passenger side shown.
 - Ensure container is fully loaded on vehicle and rear container locks are opened, refer to; loading/unloading container (82 inches [208 cm] or taller) to vehicle using front lift adapter (FLA) (WP 0053), loading/unloading container (72 inches [183 cm] or taller) to vehicle using front lift adapter (FLA) (WP 0054), loading/unloading container (51 inches [130 cm] or taller) to vehicle using front lift adapter (FLA) (WP 0055), and loading/unloading container (48 inches [122 cm] or taller) to vehicle using front lift adapter (FLA) (WP 0056).
1. Remove lock pin (1) from bracket (2) and lift tab (3) to unlock handle (4).

RAIL TRANSPORT STRUT INSTALLATION - Continued

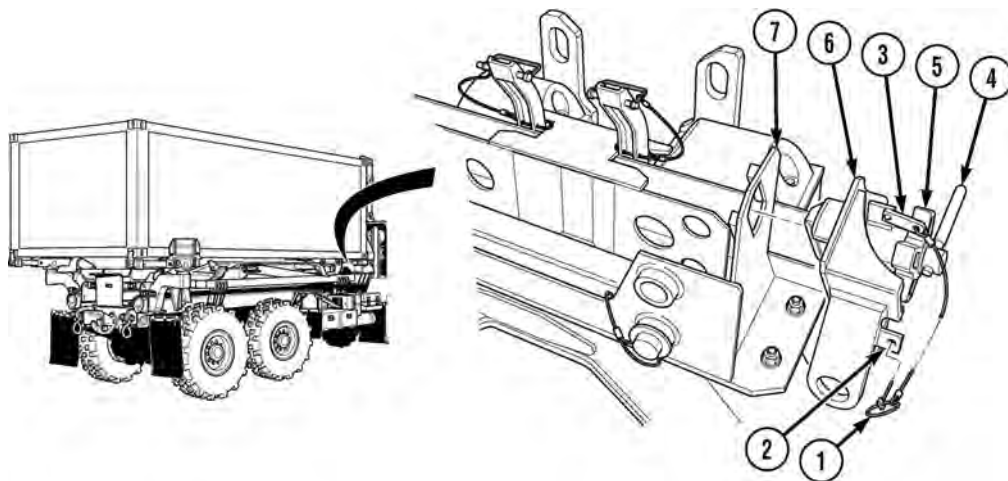


Figure 1.

2. Loosen handnut (5), rotate lock handle (4) 90 degrees, and remove ISO corner lock (6) from stowage bracket (7).
3. Position ISO corner lock (6) in front bottom corner casting (8) of ISO container (9).

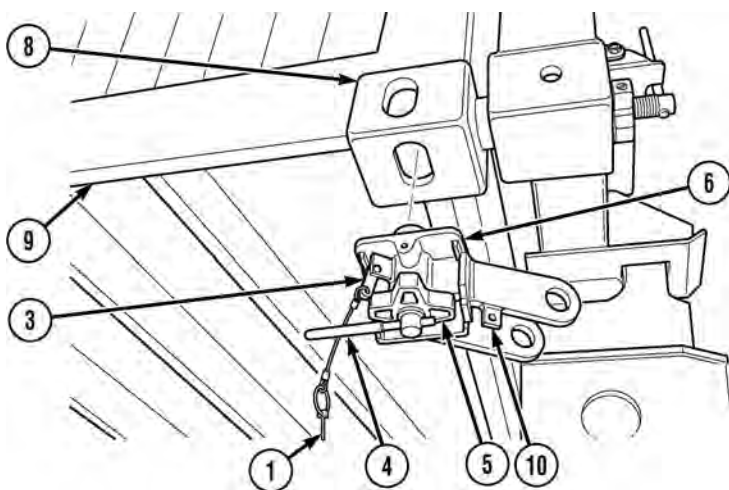


Figure 2.

RAIL TRANSPORT STRUT INSTALLATION - Continued**NOTE**

ISO corner lock handle will point toward front or rear of vehicle when in locked position.

4. Rotate lock handle (4) 90 degrees to locked position and tighten handnut (5).
5. Rotate tab (3) down to lock handnut (5) and install lock pin (1) in bracket (10).

WARNING

Rail transport struts weigh 60 lbs (27 kg). Do not attempt to lift or move rail transport struts without the aid of an assistant. Failure to comply may result in injury or death to personnel.

6. Remove two lock pins (11), pins (12), and rail transport strut (13) from stowage bracket (7).

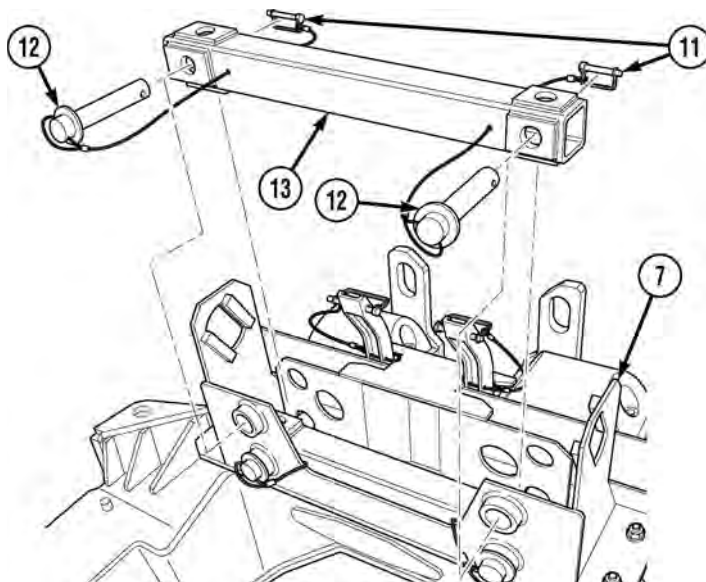


Figure 3.

RAIL TRANSPORT STRUT INSTALLATION - Continued**NOTE**

- There are two different lengths to the rail transport strut: one stenciled "L" for longer hole placement, and another stenciled "S" for shorter hole placement.
- Depending on which length is required, align to correct hole on front container support.
- ISO corner lock may have to be loosened and repositioned to install pins.

7. Position rail transport strut (13) between front container support (14) and ISO corner lock (6).

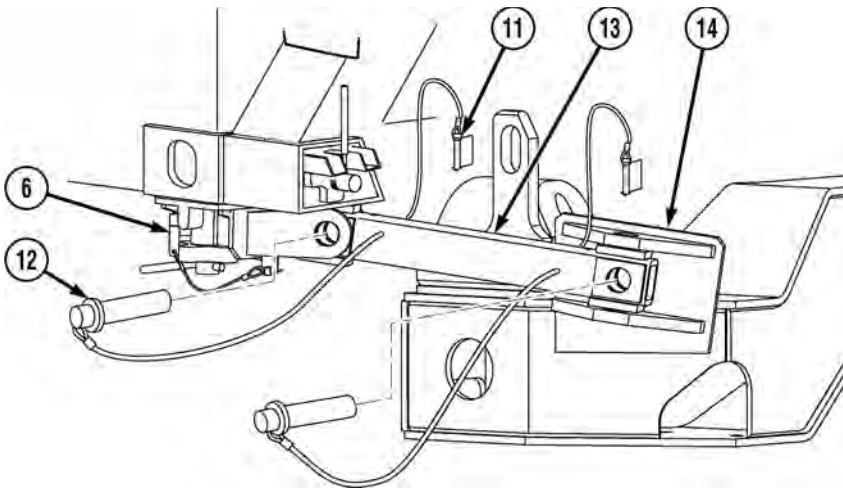


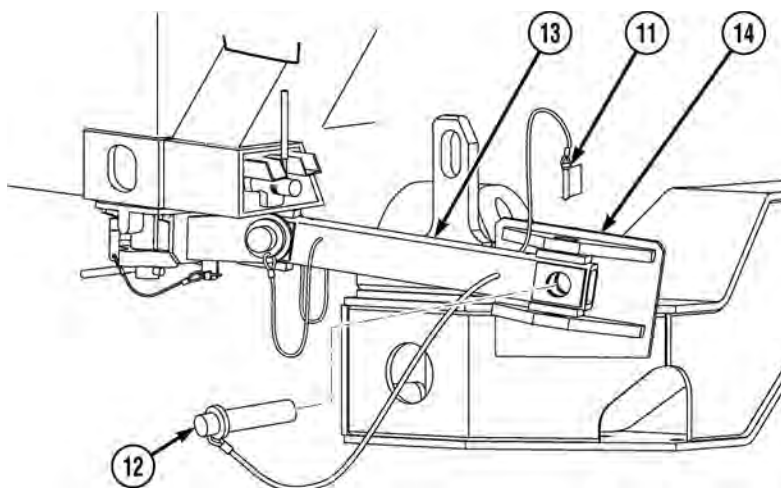
Figure 4.

8. Install rail transport strut (13) to ISO corner lock (6) with pin (12) and lock pin (11).

NOTE

It may be necessary to rotate rail transport strut 90 degrees to align holes.

9. Position rail transport strut (13) with either hole on front container support (14).

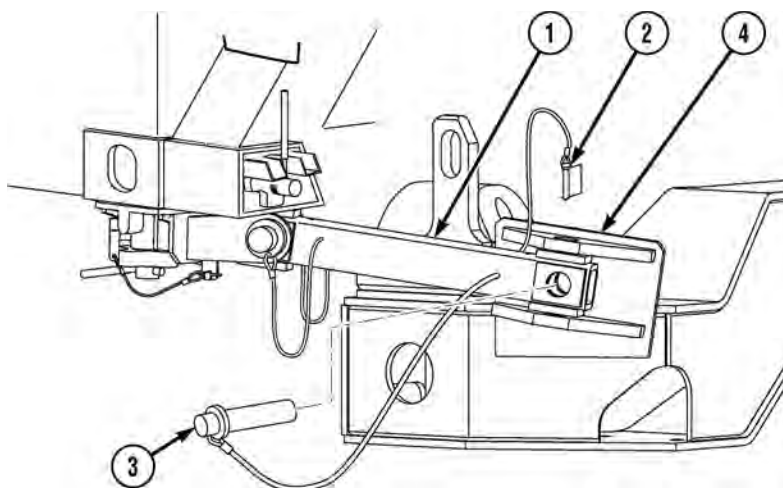
RAIL TRANSPORT STRUT INSTALLATION - Continued*Figure 5.*

10. Install pin (12) and lock pin (11) to rail transport strut (13) and front container support (14).
11. Repeat Steps (1) through (10) for driver side.

END OF TASK**RAIL TRANSPORT STRUT REMOVAL****NOTE**

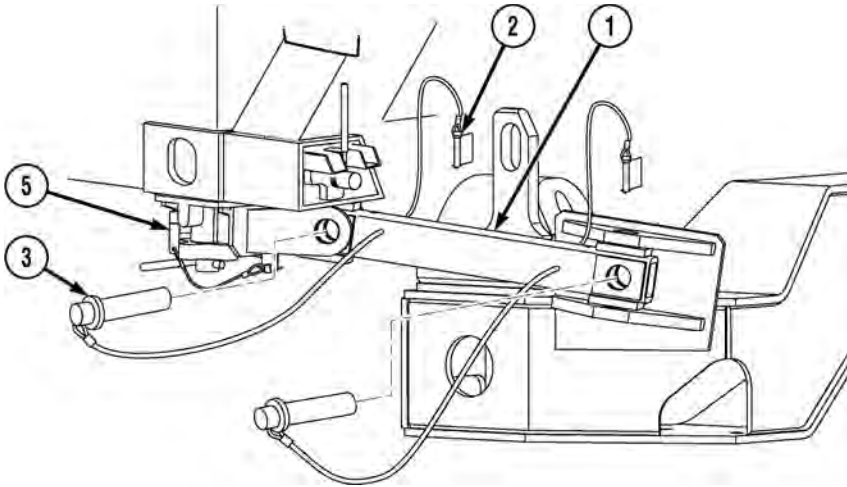
There are two rail transport struts and ISO corner locks. Both are removed the same way. Passenger side shown.

1. Support rail transport strut (1); remove lock pin (2) and pin (3).

RAIL TRANSPORT STRUT REMOVAL - Continued*Figure 6.***WARNING**

Rail transport struts weigh 60 lbs (27 kg). Do not attempt to lift or move rail transport struts without the aid of an assistant. Failure to comply may result in injury or death to personnel.

2. Remove lock pin (2), pin (3), and rail transport strut (1) from ISO corner lock (5).

RAIL TRANSPORT STRUT REMOVAL - Continued*Figure 7.***NOTE**

Rail transport struts are positioned on stowage tray in "S" (shorter) hole placement, with "S" facing outward.

3. Position rail transport strut (1) on stowage bracket (6). Install two pins (3) and lock pins (2).

RAIL TRANSPORT STRUT REMOVAL - Continued

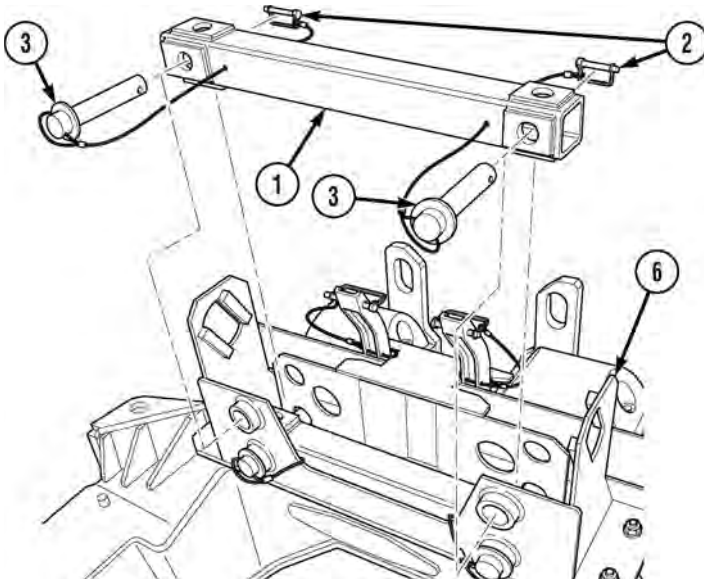


Figure 8.

4. Remove lock pin (7) from bracket (8) and rotate tab (9) up.

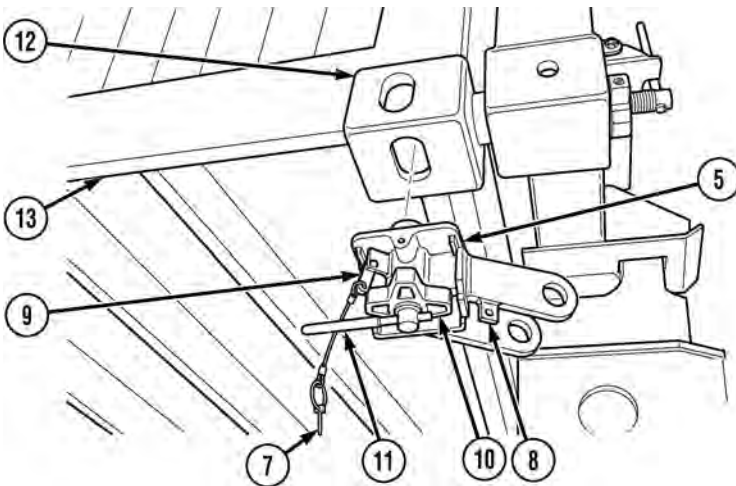


Figure 9.

RAIL TRANSPORT STRUT REMOVAL - Continued**NOTE**

ISO corner lock will become loose from front bottom corner casting of ISO container when performing Step (5).

5. Loosen handnut (10), rotate lock handle (11) 90 degrees, and remove ISO corner lock (5) from front bottom corner casting (12) of ISO container (13).

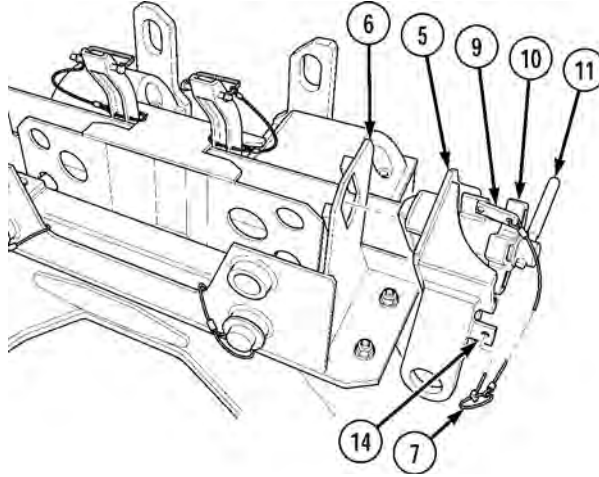


Figure 10.

6. Install ISO corner lock (5) on stowage bracket (6) and rotate lock handle (11) 90 degrees.
7. Tighten handnut (10), rotate tab (9) to lock handnut (10), and install lock pin (7) in bracket (14).
8. Repeat Steps (1) through (7) for driver side.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
INSTALLATION/REMOVAL OF FRONT LIFT ADAPTER (FLA)**

INITIAL SETUP:

Not Applicable

INSTALLATION ON VEHICLE

WARNING



Ensure front lift adapter is free of snow, ice, and mud when installing on LHS. Front lift adapter may be unbalanced. Failure to comply may result in injury or death to personnel.

WARNING



Front lift adapter weighs 1,600 lbs (727 kg). Do not attempt to lift or move front lift adapter without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

NOTE

For detailed instructions on how to operate the LHS refer to loading/unloading flatrack in AUTO mode. (WP 0064)

1. Start engine. (WP 0038)
2. Set PTO ENGAGE switch (1) to ON position. Indicator light (2) will illuminate.

INSTALLATION ON VEHICLE - Continued

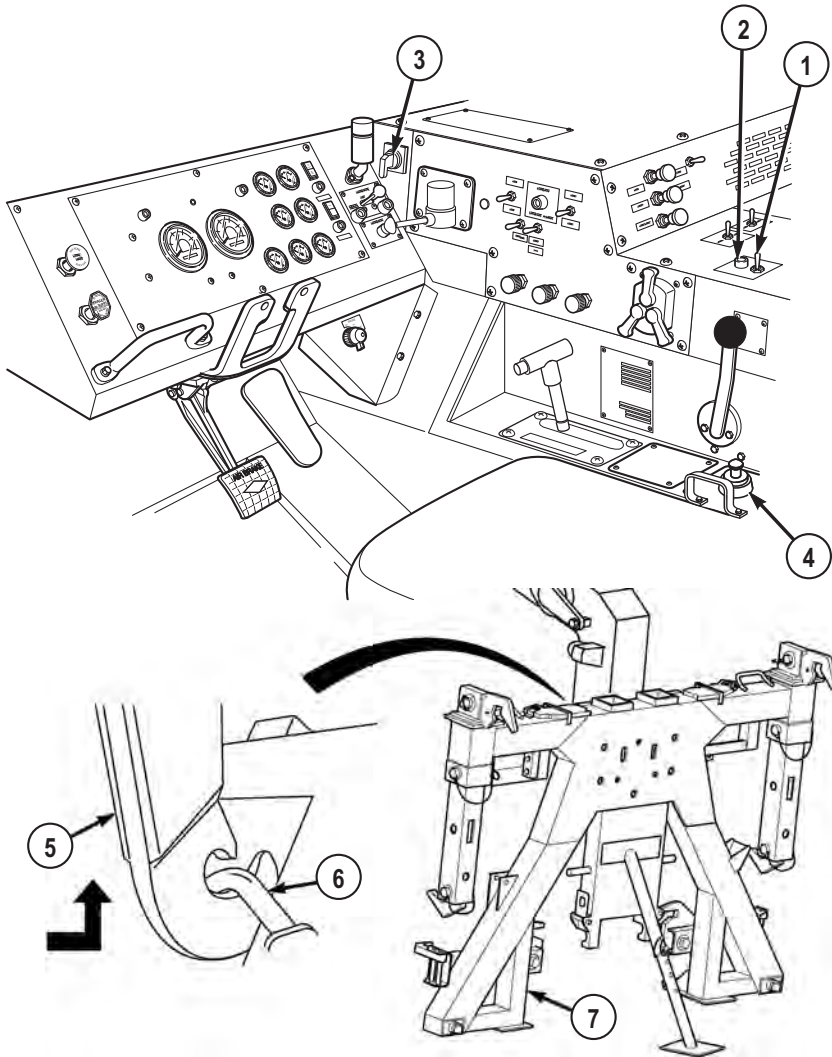


Figure 1.

CAUTION

Engine speed must be at idle before using hydraulic switch, or damage to equipment may result.

3. Turn hydraulic selector switch (3) to AUTO.
4. Move joystick (4) to LOAD until hook (5) is below front lift adapter hook bar (6).

INSTALLATION ON VEHICLE - Continued

5. Back truck up and engage hook bar (6) with hook (5).
6. Move joystick (4) to LOAD and raise front lift adapter (7) approximately 1 ft. (30 cm) off the ground.
7. Shut off engine. (WP 0051)
8. Remove lockpin (8), pin (9), and bail bar lock (10) from stowage bracket (11) on front lift adapter (7).

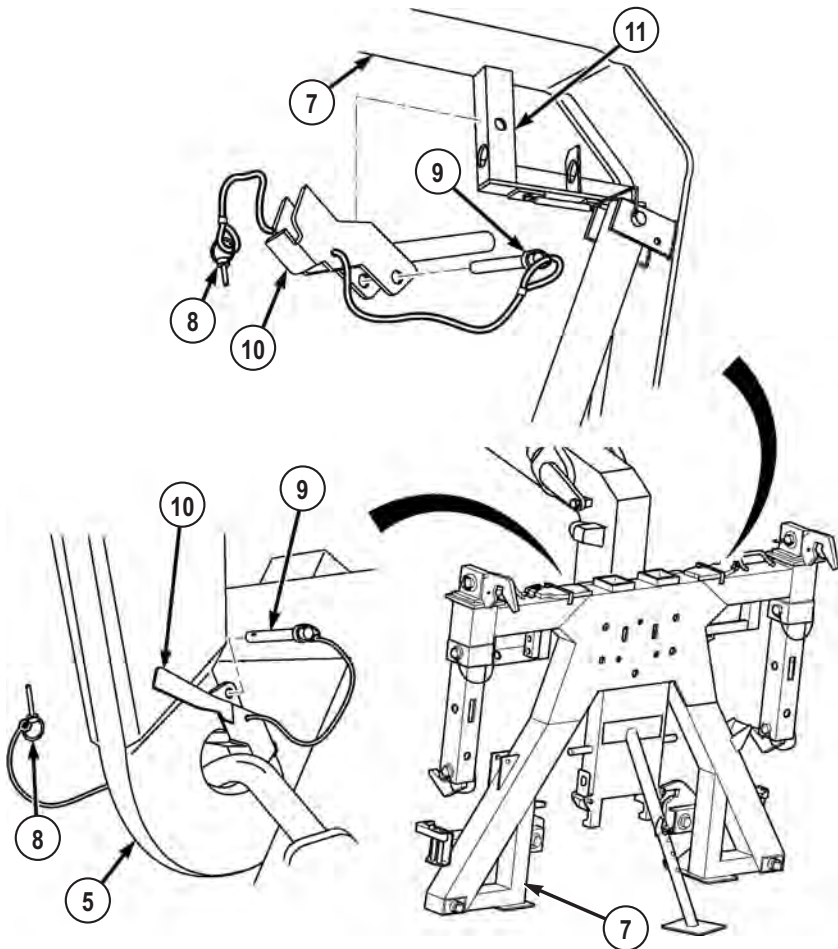


Figure 2.

9. Install bail bar lock (10) on hook (5) with pin (9) and lockpin (8).

INSTALLATION ON VEHICLE - Continued

10. Support lower support leg (12) and remove lockpin (13) and pin (14).

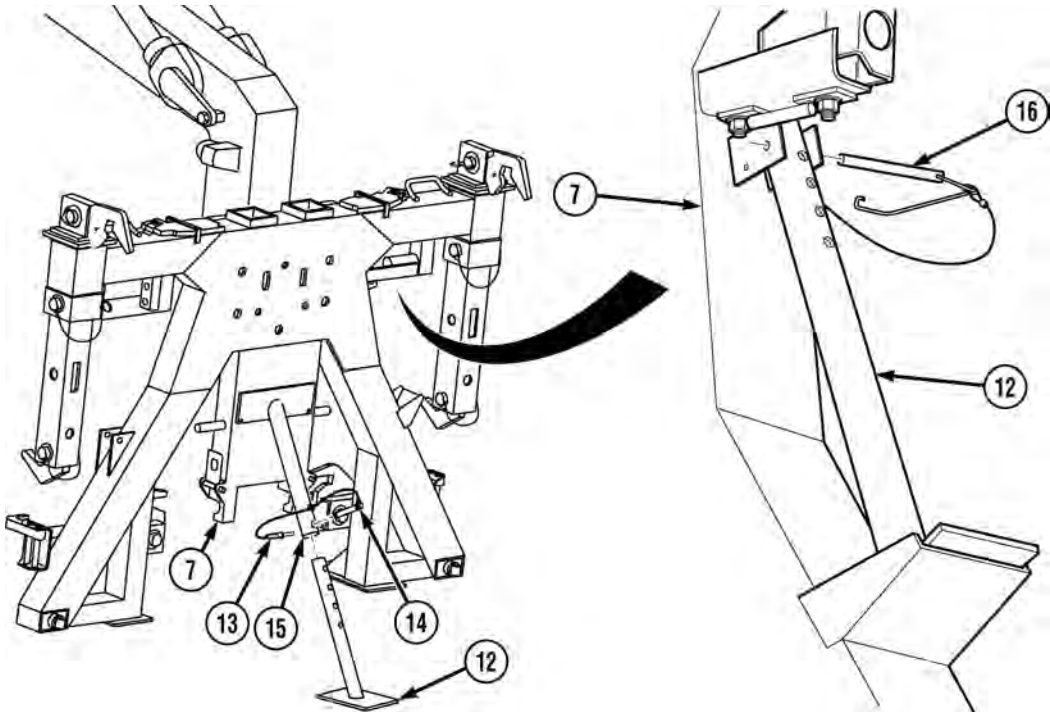


Figure 3.

11. Remove lower support leg (12) from upper support leg (15).
12. Remove lockpin (16) from stowage bracket front lift adapter (7).
13. Position lower support leg (12) in stowage bracket on front lift adapter (7) and install lockpin (16).
14. Support upper support leg (15), and remove two lockpins (17) from pins (18).

INSTALLATION ON VEHICLE - Continued

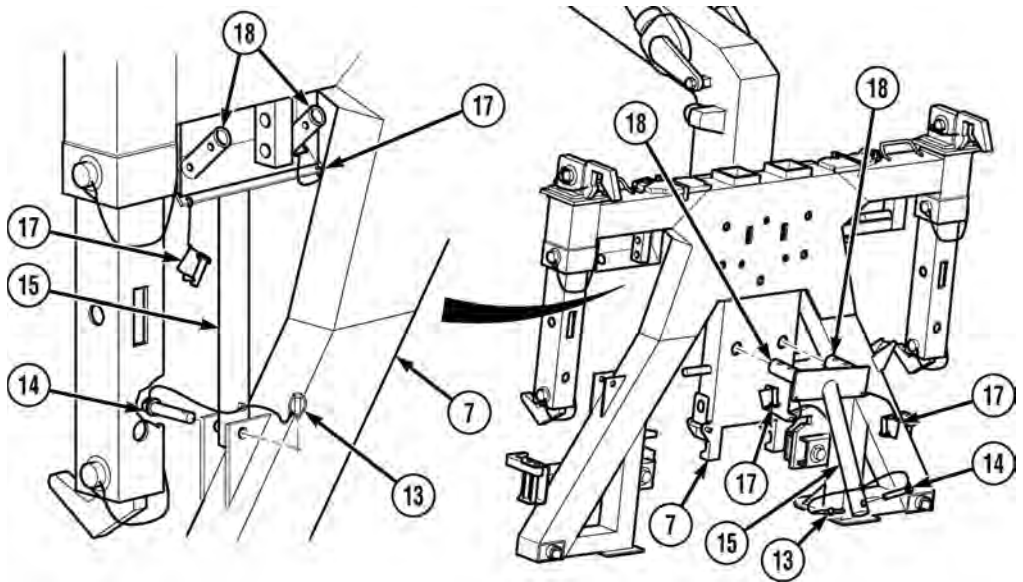


Figure 4.

15. Remove upper support leg (15) from front lift adapter (7).
16. Position upper support leg (15) in stowage bracket on front lift adapter (7) and install two lockpins (17) on pins (18).
17. Install pin (14), lockpin (13), and upper support leg (15) to stowage bracket on front lift adapter (7).
18. Start engine. (WP 0038)
19. Move joystick (4) to LOAD until LHS NO TRANSIT indicator (19) goes out, and front lift adapter (7) is positioned on bumper supports (20).

INSTALLATION ON VEHICLE - Continued

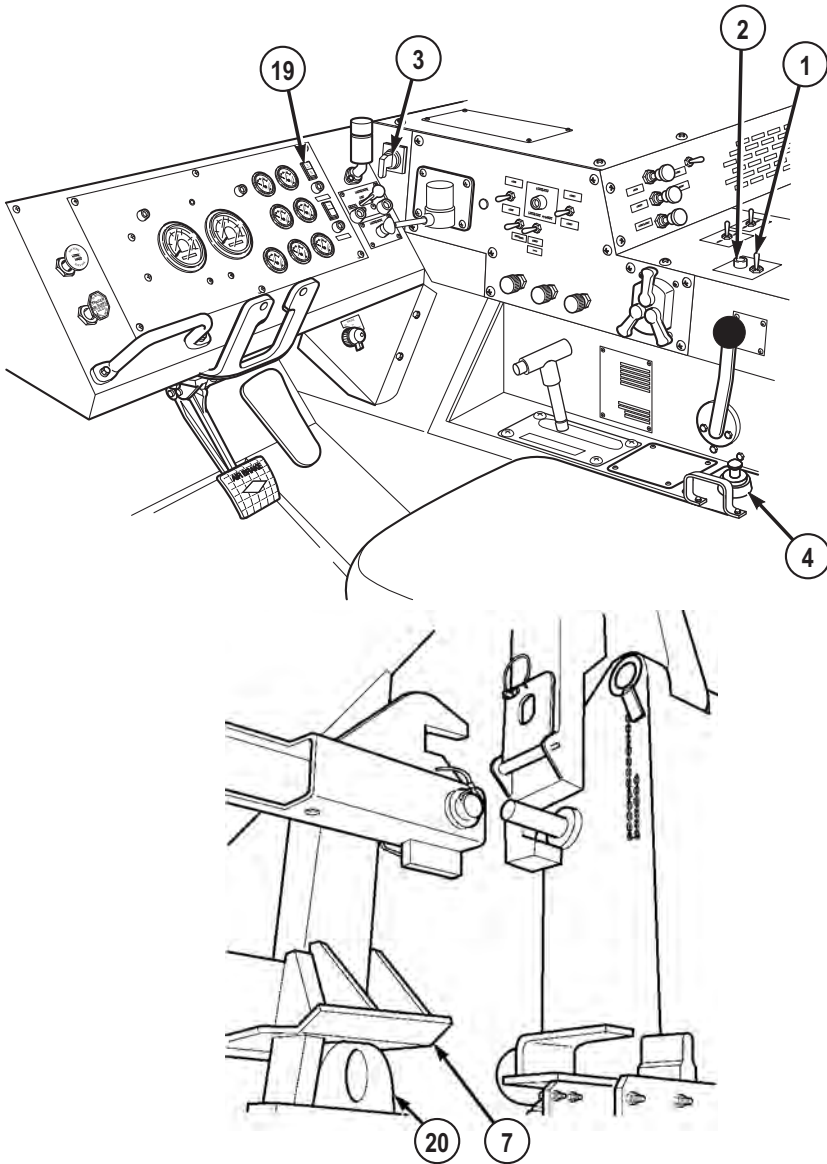


Figure 5.

CAUTION

Engine speed must be at idle before using hydraulic switch, or damage to equipment may result.

INSTALLATION ON VEHICLE - Continued

20. Turn hydraulic selector switch (3) to OFF.
21. Set PTO ENGAGE switch (1) to OFF position. Indicator light (2) will go out.

REMOVAL FROM VEHICLE**WARNING**

Front lift adapter must be unloaded on a flat, level surface. Failure to comply may result in injury or death to personnel.

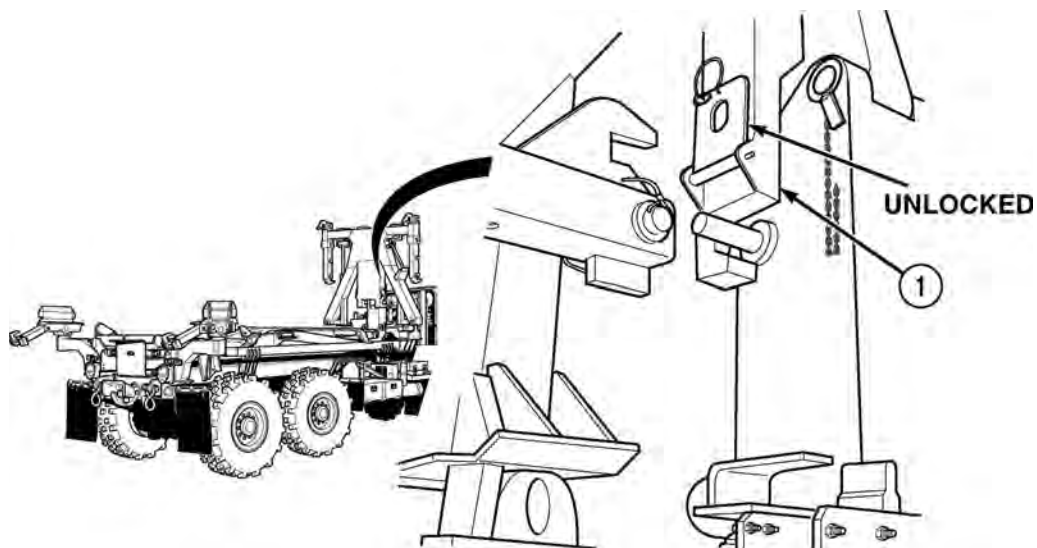
WARNING

Front lift adapter weighs 1,600 lbs (727 kg). Do not attempt to lift or move front lift adapter without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

NOTE

- Prepare an area to set front lift adapter. Ensure the area is accessible to the vehicle.
 - Perform Step (1) if front lift adapter is in locked position. If FLA is unlocked, skip to Step (2).
1. Position front lift adapter (1) in unlocked position. (WP 0057)

REMOVAL FROM VEHICLE - Continued

*Figure 6.*

2. Start engine (WP 0038).
3. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.

REMOVAL FROM VEHICLE - Continued

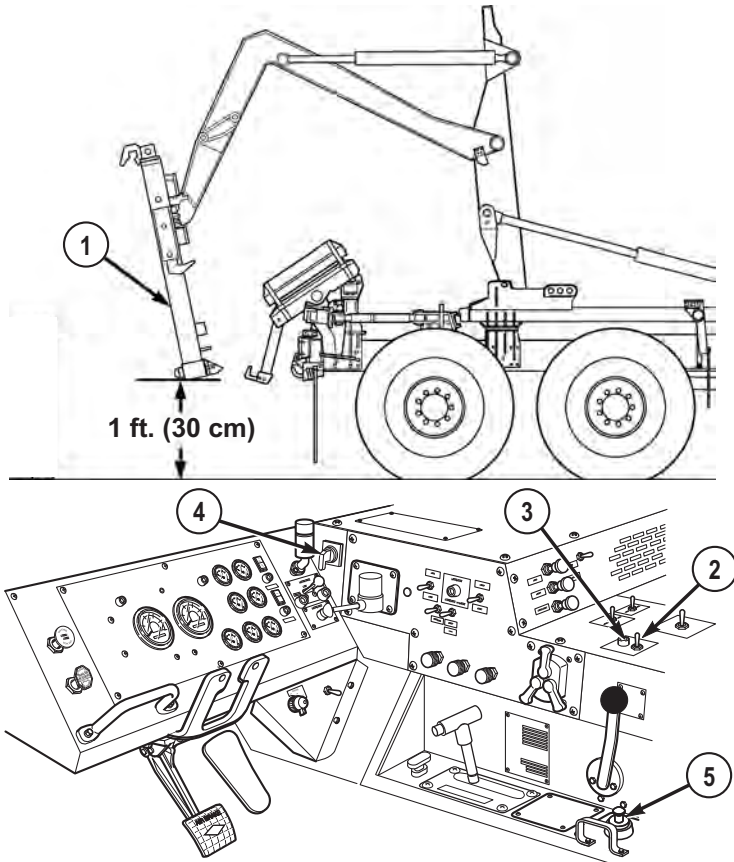


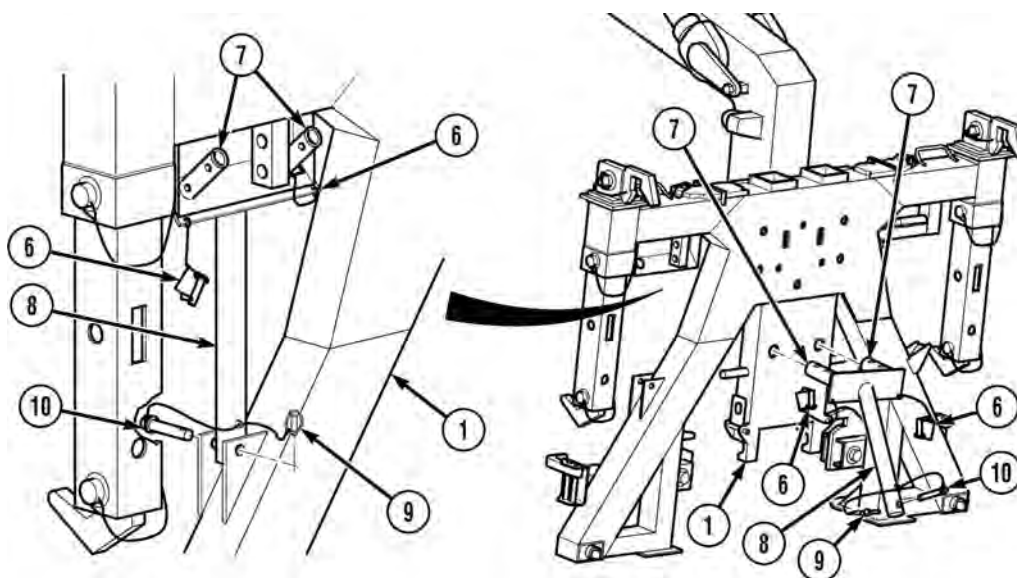
Figure 7.

CAUTION

Engine speed must be at idle before using hydraulic switch, or damage to equipment may result.

4. Turn hydraulic selector switch (4) to AUTO.
5. Move joystick (5) to UNLOAD until front lift adapter (1) is approximately 1 ft. (30 cm) from the ground.
6. Shut off engine. (WP 0051)
7. Remove two lockpins (6) from pins (7) and upper support leg (8).

REMOVAL FROM VEHICLE - Continued

*Figure 8.*

8. Remove lockpin (9), pin (10), and upper support leg (8) from stowage bracket on front lift adapter (1).
9. Position two pins (7) on upper support leg (8) through two lower holes on front lift adapter (1).
10. Install two lockpins (6) in pins (7) on upper support leg (8) and front side of front lift adapter (1).
11. Remove lockpin (11) and lower support leg (12) from stowage bracket on front lift adapter (1).

REMOVAL FROM VEHICLE - Continued

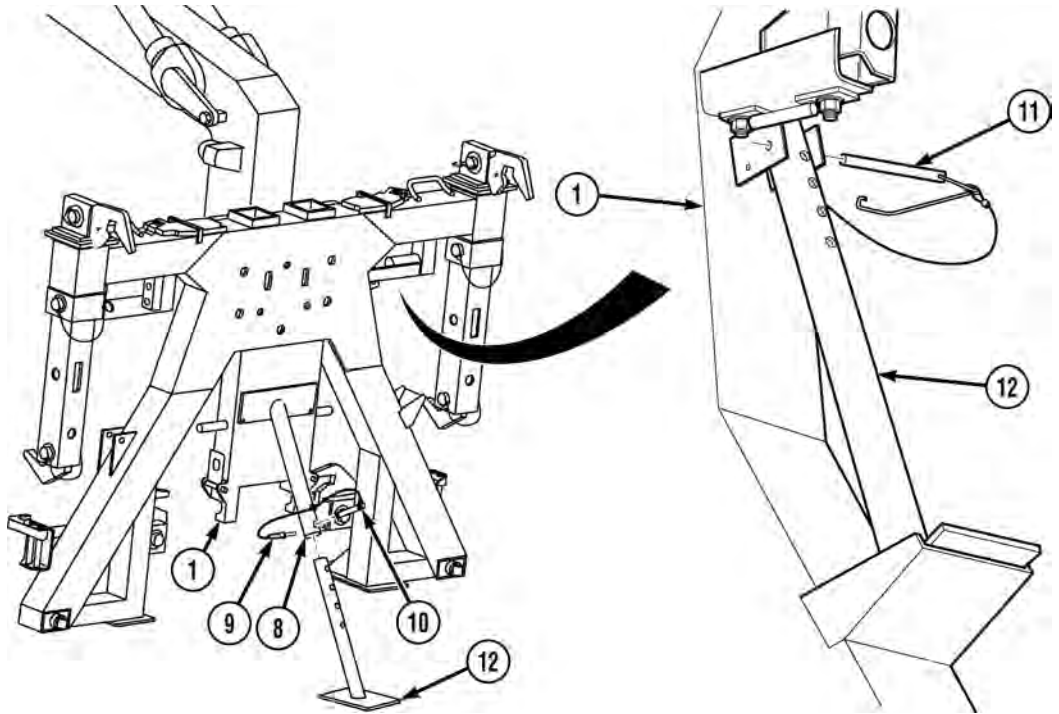


Figure 9.

12. Position lower support leg (12) in upper support leg (8).

NOTE

Other support leg pin hole positions may be used if ground is uneven.

13. Align hole in upper support leg (8) with second hole from bottom on lower support leg (12) and install pin (10) and lockpin (9).
14. Install lockpin (11) in stowage bracket on front lift adapter (1).
15. Remove lockpin (13), pin (14), and bail bar lock (15) from hook (16).

REMOVAL FROM VEHICLE - Continued

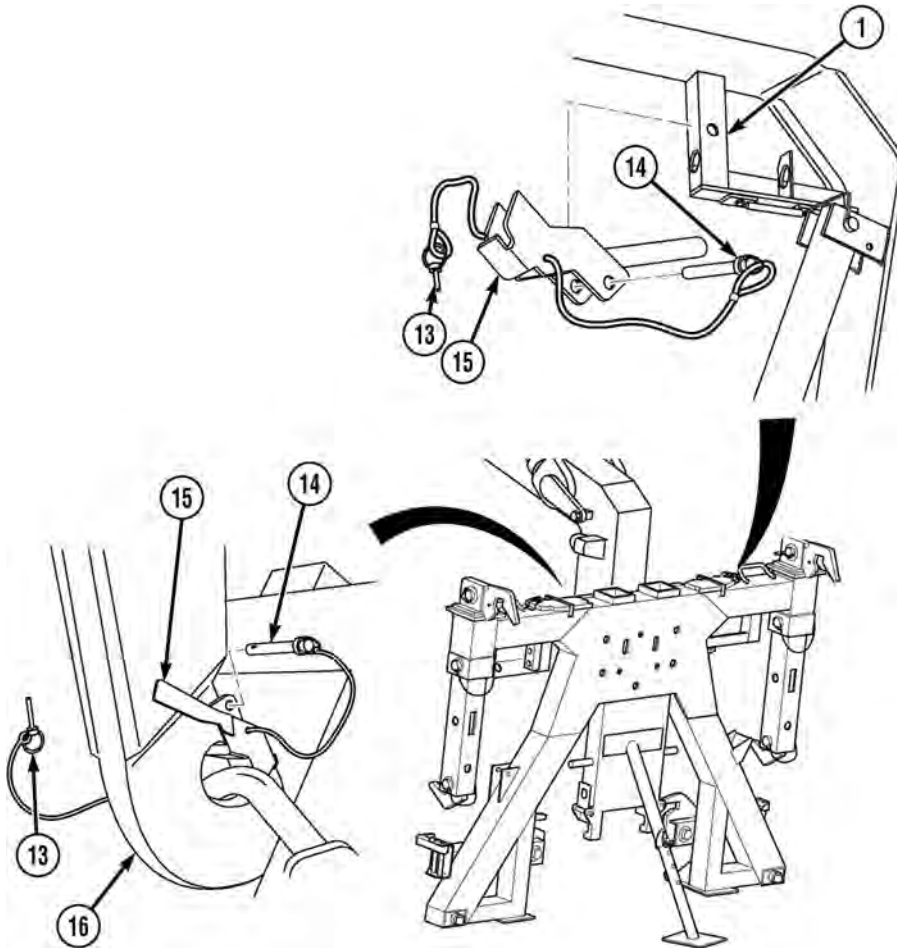


Figure 10.

16. Install bail bar lock (15), pin (14), and lockpin (13) in stowage bracket on front lift adapter (1).
17. Start engine. (WP 0038)

NOTE

- To disengage LHS hook arm from front lift adapter hook, it may be necessary to cycle LHS to unload after driving ahead slightly.

REMOVAL FROM VEHICLE - Continued

- If ground is soft, jacking plate from truck BII or similar item may be positioned under support leg pad to prevent front lift adapter from sinking in ground.
18. Move joystick (5) to UNLOAD until LHS stops and LHS lift hook (16) is below front lift adapter hook bar (17).

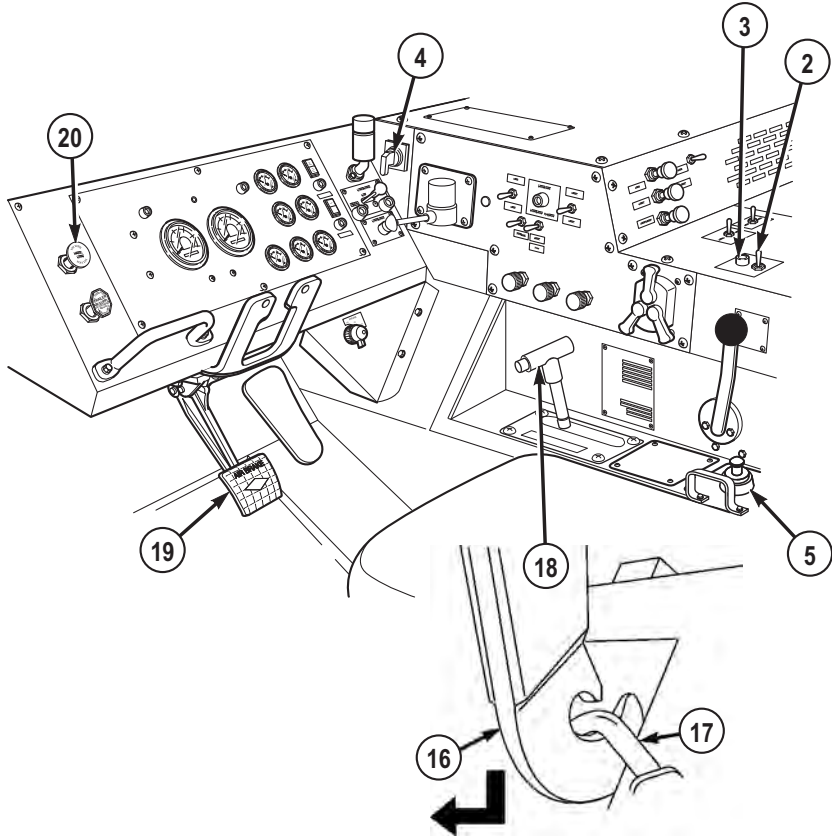


Figure 11.

19. Set transmission range selector (18) to D (drive) and move vehicle forward approximately 1 ft. (30 cm).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

20. Apply service brake pedal (19), set transmission range selector (18) to N (neutral), and pull out PARKING BRAKE control (20).

REMOVAL FROM VEHICLE - Continued**CAUTION**

Engine speed must be at idle before using hydraulic switch, or damage to equipment may result.

21. Turn hydraulic selector switch (4) to OFF.
22. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.
23. Shut off engine. (WP 0051)

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE SIMPLIFIED CONTAINER HANDLING UNIT (CHU) OPERATION

INITIAL SETUP:

Not Applicable

LOADING CONTAINER

WARNING



These simplified procedures are to be used only as a guide. Full procedures for operation of the Container Handling Unit (CHU) are to be followed as authored in:

- "Loading/Unloading Flatrack in AUTO Mode" (WP 0064)
- "Loading/Unloading Flatrack in MANUAL Mode" (WP 0065)
- "Normal Transfer of Flatrack from Vehicle to Trailer" (WP 0066)
- "Normal Transfer of Flatrack from Trailer to Vehicle" (WP 0067)
- "Transfer Flatrack from Vehicle to Trailer in MANUAL Mode" (WP 0068)
- "Transfer Flatrack from Trailer to Vehicle in MANUAL Mode" (WP 0069)
- "Loading/Unloading Flatrack (with or without rollers) From Dock Area or Bay (Not to Exceed Vehicle Chassis Height)" (WP 0070)
- "Container Handling Unit (CHU) Operation" (WP 0052)
- "Loading/Unloading Container (82 Inches [208 cm] or taller) to Vehicle Using Front Lift Adapter (FLA)" (WP 0053)
- "Loading/Unloading Container (72 Inches [183 cm] or taller) to Vehicle Using Front Lift Adapter (FLA)" (WP 0054)
- "Loading/Unloading Container (51 Inches [130 cm] or taller) to Vehicle Using Front Lift Adapter (FLA)" (WP 0055)

LOADING CONTAINER - Continued

- "Loading/Unloading Container (51 Inches [130 cm] or taller) to Vehicle Using Front Lift Adapter (FLA)" (WP 0055)
- "Loading/Unloading Container (48 Inches [122 cm] or taller) to Vehicle Using Front Lift Adapter (FLA)" (WP 0056)
- "Transport Front Lift Adapter (FLA) Without Container" (WP 0057)
- "Recover Container Sunk in Mud Using Lift Hooks" (WP 0058)
- "Loading/Unloading Stacked M3 CROP to/from Trailer" (WP 0059)
- "Loading/Unloading ISO Container with M3 CROP" (WP 0060)
- "Installation/Removal of Rail Transport Strut" (WP 0061)
- "Installation/Removal of Front Lift Adapter (FLA)" (WP 0062)

1. 82 in. (208 cm) or higher, (WP 0053) 72 in. (183 cm), (WP 0054) 51 in. (130 cm), (WP 0055) 48 in. (122 cm). (WP 0056) Check:
 - a. Lower locks are unlocked.
 - b. FLA properly configured for size container being loaded.

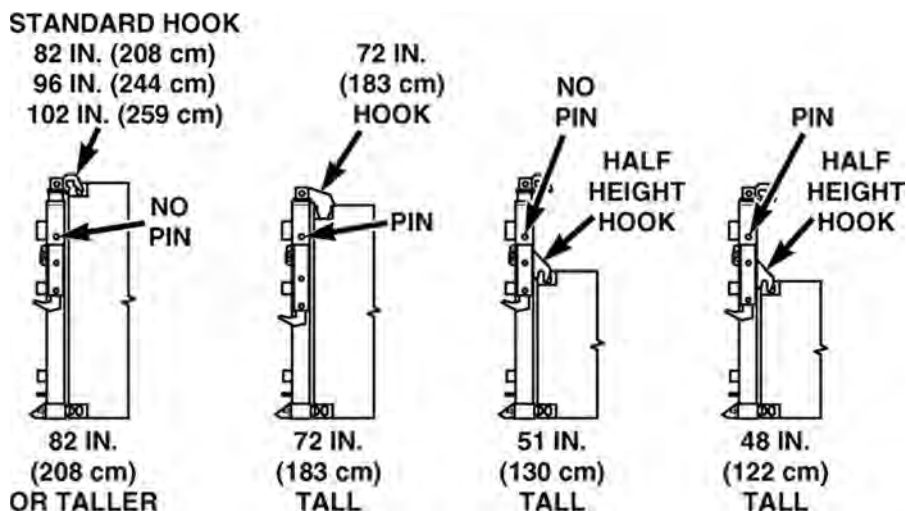


Figure 1.

- c. Bumper supports oriented rearward.
 - d. Slider and transit locks ready for loading operations.
2. Verify that FLA is not locked to HA and vehicle is in container mode.

LOADING CONTAINER - Continued

3. Back vehicle to within 9 ft. (2.7 m) and align with container.
4. Cycle LHS to unload until FLA upper hooks are visible just below top edge of container.
5. Ensure FLA configured for container:
 - a. Slide arms pinned if needed.
 - b. Lower container locks unlocked.
 - c. Correct hook in slide arm.
6. Back vehicle up until FLA contacts container, aligning hooks with container corner openings.
7. Cycle LHS to load until hooks are above container.
8. Continue backing up vehicle until hooks are positioned over container.
9. Cycle LHS to unload to engage hooks into container top corners.
10. Continue to cycle LHS until lower locks are low enough to engage container bottom corners.
11. Back up vehicle to engage FLA lower locks in container corners. Steer vehicle to align lower locks with container.
12. Check:
 - a. Upper hook thumb engaged.
 - b. Lower locks flush.
 - c. Sliders positioned straight ahead, and clean of debris.
13. Lock lower locks to container; handle straight up, lock plate over handle and handnut.
14. Lock other side.
15. Cycle LHS to LOAD to lift container onto vehicle.
16. Observe clearance between container and slider guides on both sides to ensure container is centered during loading.
17. Fully load container until LHS NOT TRANSIT light goes out.
18. Pin transit locks in locked position, RH and LH.
19. Verify container is properly loaded onto the vehicle.

END OF TASK

UNLOADING CONTAINER

1. 82 in. (208 cm) or higher, (WP 0053)72 in. (183 cm), (WP 0054)51 in. (130 cm), (WP 0055)48 in. (122 cm). (WP 0056)Verify sufficient room and ground conditions exist for unloading operations.
2. Disengage RH and LH transit locks, and lock RH and LH transit locks in ready position.
3. Cycle LHS to UNLOAD container.
4. Unlock lower container locks; handle inward, handnut tightened up, lock plate over handnut.
5. Unlock other side.
6. Drive forward approximately 6 in. (15 cm), to disengage lower locks.
7. Cycle LHS to load to disengage upper hooks from container.
8. Continue to cycle LHS fully to LOAD until LHS NO TRANSIT indicator goes out and CHU is in ready mode.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
LOADING/UNLOADING FLATRACK IN AUTO MODE**

INITIAL SETUP:

Not Applicable

LOADING

CAUTION

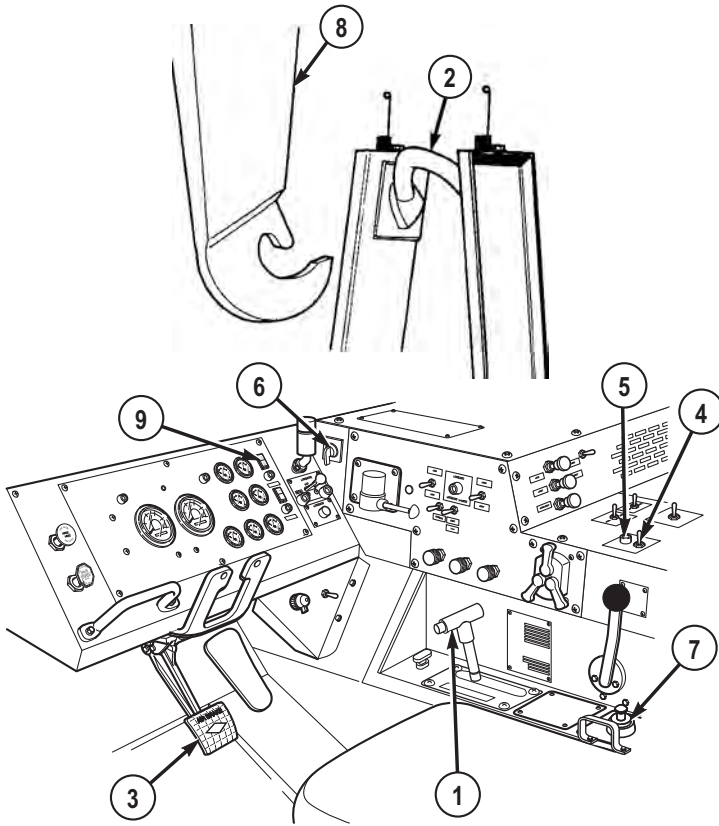
If LHS had previously been used in MANUAL mode and not completely stowed in AUTO mode, the hook arm cylinders must be completely extended or the LHS must be completely stowed using AUTO mode before the flatrack can be loaded. Failure to comply may result in damage to the vehicle and flatrack.

NOTE

Continued repetitive cycles, approximately nine at rated 26,000 lbs (11 804 kg) payload, of the load handling system (LHS) could cause overheating, and system failure to pick up the load. Allow the hydraulic system to cool. Wait approximately 1 1/2 hours or until the hydraulic reservoir is cool. The hydraulic reservoir is cool when you can hold your hand on the reservoir for more than 10 seconds.

1. Start engine. (WP 0038)
2. Set transmission range selector (1) to R (reverse) and back vehicle up to flatrack. Stop at approximately 5 ft. (1.5 m) from flatrack hook bar (2). Check for overhead obstructions and firmness of the ground.

LOADING - Continued

*Figure 1.***NOTE**

LHS will only operate when transmission range selector is in N (neutral).

3. Apply service brake pedal (3) and set transmission range selector (1) to N (neutral).
4. Set PTO ENGAGE switch (4) to ON position. Indicator light (5) will illuminate.

LOADING - Continued**WARNING**

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

5. Turn hydraulic selector switch (6) to AUTO.

NOTE

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to 1,500 to maximum rpm to reduce loading and unloading times.

6. Move joystick (7) to UNLOAD position. LHS lift hook (8) will raise and begin to move rearwards. LHS NO TRANSIT indicator (9) will illuminate to indicate hook arm is up and load lock has been cleared.

NOTE

To fully view LHS lift hook relation to flatrack hook bar, it may be necessary to observe position from outside the cab.

7. Continue to unload until LHS lift hook (8) has moved to below level of flatrack hook bar (2).
8. Release joystick (7).

LOADING - Continued

9. Set transmission range selector (1) to R (reverse) and back vehicle up to flatrack. Align vehicle and flatrack as straight as possible with LHS lift hook (8) to middle of flatrack hook bar (2) until LHS lift hook (8) contacts flatrack hook bar (2). Be sure LHS lift hook (8) tip is positioned below bottom of flatrack hook bar (2).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

10. Set transmission range selector (1) to N (neutral).

CAUTION

Do not use R (reverse) to back up vehicle while hook arm is attached to flatrack, or damage to equipment may occur.

11. Move joystick (7) to LOAD position to raise LHS lift hook (8) and engage flatrack hook bar (2).
12. If LHS lift hook (8) fails to engage the flatrack hook bar (2):
 - a. Release joystick (7).
 - b. Set transmission range selector (1) to D (drive), release service brake pedal (3) and move vehicle forward to clear flatrack. Set transmission range selector (1) to N (neutral).
 - c. Move joystick (7) to UNLOAD position until LHS lift hook (8) is below level of flatrack hook bar (2).
 - d. Repeat Steps (7) through (11).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

13. When correctly engaged, set the transmission range selector (1) to N (neutral) and release service brake pedal (3).

NOTE

- If NOT loading a forward repair system, skip to Step (15).
- No additional equipment can be stowed on or in FRS during loading. Additional equipment could OVER LOAD LHS due to weight of FRS.

14. If loading a forward repair system (FRS) complete the following steps:

LOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

- a. Turn hydraulic selector switch (6) to MAN H.A.

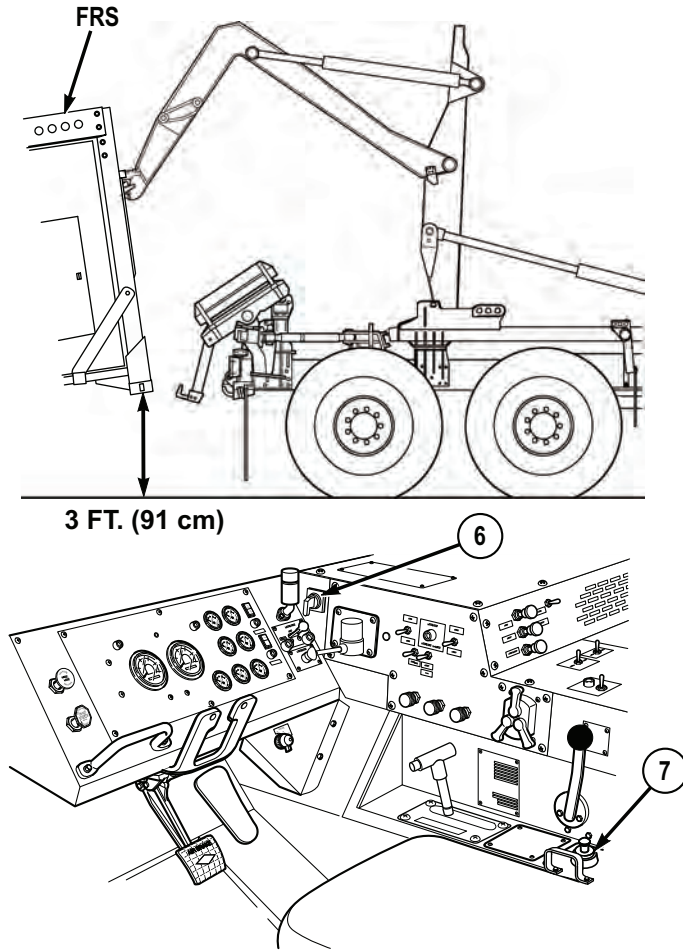


Figure 2.

NOTE

Engine speed must be at 1500 rpm when lifting FRS.

LOADING - Continued

- b. Move joystick (7) to LOAD position and lift FRS approximately 3 ft. (91 cm) off ground.
- c. Release joystick (7).

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

- d. Turn hydraulic selector switch (6) to AUTO.
- e. Continue with Step (15).

WARNING

When loading or unloading flatracks/FRS on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

CAUTION

- If LHS OVER LOAD indicator illuminates but loading operation continues, operator is cautioned that LHS is nearing maximum capacity. In this situation, operator should determine if payload is evenly distributed on flatrack or if flatrack load exceeds 25,000 lbs. (11 350 kg) for LHS or 24,000 lbs (10 896 kg) for LHS with CHU kit. If any of these conditions exist, operator must redistribute or reduce the payload, or damage to equipment may occur.
- Load must be evenly distributed on the pallet. Uneven load distribution may cause LHS OVER LOAD indicator to give false signals and cause LHS to operate incorrectly. Damage to equipment may result.
- If LHS OVER LOAD indicator illuminates and normal operation has stopped, return load to original position and redistribute or reduce payload weight, or equipment damage may occur.
- Ensure that parking brake is not applied before starting load sequence, or damage to equipment may occur.

LOADING - Continued**NOTE**

- No additional equipment can be stowed on or in FRS during loading. Additional equipment could OVER LOAD LHS due to weight of FRS.
- When loading FRS, engine speed must be at 1500 rpm.

15. Move joystick (7) to LOAD position, allowing vehicle to be pulled under flatrack.

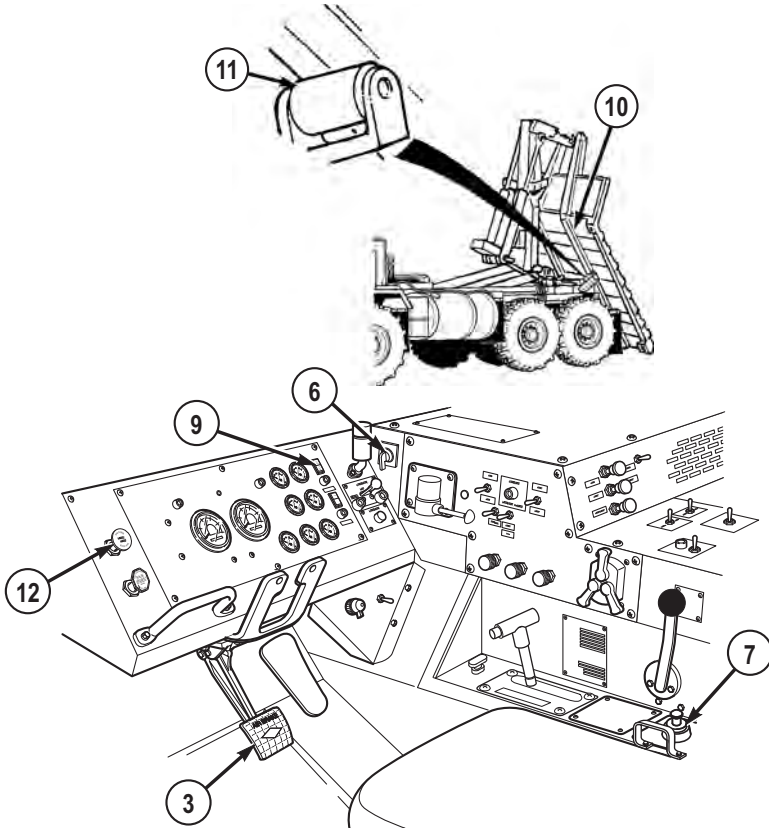


Figure 3.

LOADING - Continued**WARNING**

Ensure that flatrack/FRS runners contact LHS rear rollers correctly. Failure to comply may result in injury or death to personnel and damage to equipment.

NOTE

LHS OVER LOAD indicator may illuminate when lifting flatrack from unusual conditions.

16. As load is lifted, vehicle will be pulled under flatrack. Some steering wheel adjustment may have to be made to ensure that flatrack main rails (10) will contact rear rollers (11).

CAUTION

Reduce engine speed to idle before flatrack main rails contact rear rollers, or damage to flatrack may result.

17. Before flatrack contacts rear rollers (11), reduce engine speed.
18. Apply service brake pedal (3) after flatrack main rails (10) contact rear rollers (11):

NOTE

If flatrack is being loaded in soft soil conditions, complete Steps (a) through (f).

- a. Release joystick (7).
- b. Set hydraulic selector switch (6) to MAN H.A.
- c. Move joystick (7) to LOAD position until flatrack is approximately 2 ft. (0.61 m) off the ground.
- d. Release joystick (7).
- e. Turn hydraulic selector switch (6) to AUTO. Resume normal AUTO operations.
- f. Continue to Step (19).

NOTE

Steps (19) through (25) require the operator to vary (increase or decrease) engine speed.

LOADING - Continued

19. After flatrack contacts rear rollers (10), increase engine speed to 1,500 to maximum rpm until flatrack is nearly loaded. Reduce engine speed to idle.
20. Continue loading until engaged flatrack is fully loaded and LHS NO TRANSIT indicator (9) goes out.
21. Release joystick (7).
22. Pull out PARKING BRAKE control (12).

NOTE

If flatrack is not engaged in load locks, raise flatrack slightly and lower again. Flatrack should set completely and engage load locks.

23. Inspect that both load locks (13) have engaged and flatrack is completely loaded onto vehicle.

LOADING - Continued

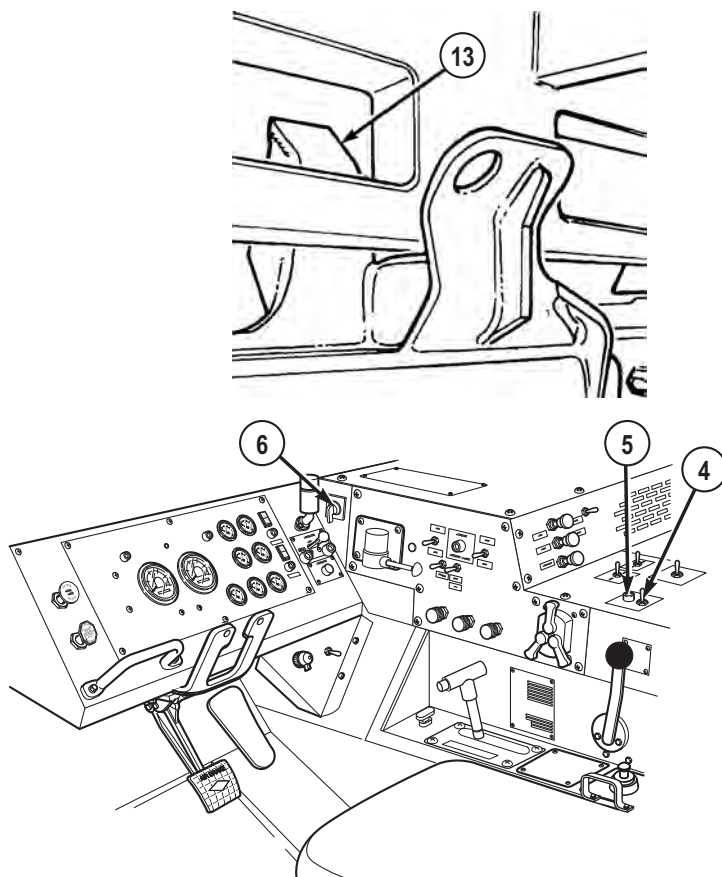


Figure 4.

24. Set PTO ENGAGE switch (4) to OFF position. Indicator light (5) will go out.

WARNING

When loaded with FRS or container, the center of gravity is moved up and toward rear of vehicle. Use extreme care when turning and ascending or descending on a grade. Failure to comply may result in injury or death to personnel.

LOADING - Continued**WARNING**

Maximum side slope when loaded with an FRS or container is 30%. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Do not reduce tire pressure when loaded with FRS or container. Highway tire pressure, 60 psi (414 kPa) front and 83 psi (572 kPa) rear, is required at all times when loaded with FRS or container. If equipped with armor kit, highway tire pressure 75 psi (517 kPa) front is required at all times. Failure to comply may result in injury or death to personnel and damage to equipment.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

25. Turn hydraulic selector switch (6) to OFF.

UNLOADING**NOTE**

Continued repetitive cycles (approximately nine) at rated 26,000 lbs (11 804 kg) for the load handling system (LHS) or 24,000 (10 896 kg) for the load handling system (LHS) with container handling unit (CHU) could cause overheating, and system failure to pick up the load. Allow the hydraulic system to cool for approximately 1 1/2 hours, or until you can hold your hand on the reservoir for more than 10 seconds.

1. Check area for sufficient operating room at front and rear of vehicle. Check overhead clearance and ground conditions.

UNLOADING - Continued**CAUTION**

Ensure parking brake is not applied during unload sequence, or damage to equipment may result.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

2. Apply service brake pedal (1) and set transmission range selector (2) to N (neutral).

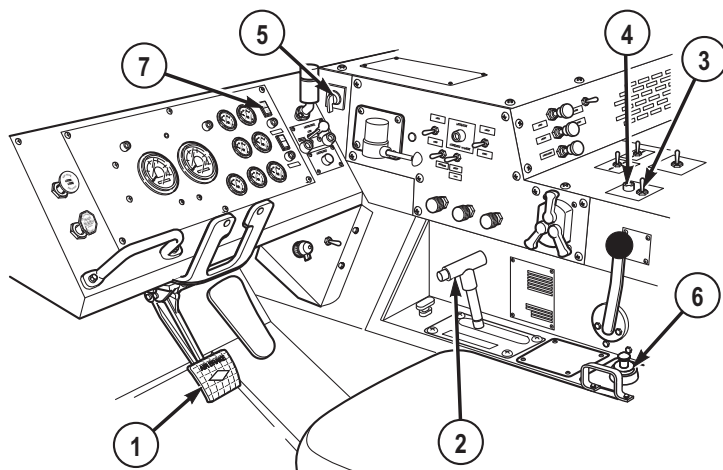


Figure 5.

3. Set PTO ENGAGE switch (3) to ON position. Indicator light (4) will illuminate.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

4. Turn hydraulic selector switch (5) to AUTO.

WARNING

When loading or unloading flatracks/FRS on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle

UNLOADING - Continued

service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

WARNING

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

WARNING

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

CAUTION

- Check that ground conditions where flatrack will be placed can support the flatrack weight, or damage to equipment may result.
- Ensure rail transport locking pins are disengaged before unloading flatrack. Rail transport locking pins are used for rail transport only. Failure to comply may result in damage to equipment.

UNLOADING - Continued**NOTE**

- No additional equipment can be stowed on or in FRS during loading/unloading. Additional equipment could OVER LOAD LHS due to weight of FRS.
 - When unloading FRS, engine speed must be at 1500 rpm.
 - LHS OVER LOAD indicator may illuminate when engine is at idle speed.
5. Move joystick (6) to UNLOAD position. Flatrack will start to move rearwards. LHS NO TRANSIT indicator (7) will illuminate. Maintain engine speed at idle until front of flatrack raises approximately 1 ft. (30 cm).

NOTE

The amount of time to load and unload is controlled by engine speed. Engine speed may be increased to 1,500 rpm to reduce loading and unloading times.

6. Continue to unload until rear suspension starts to lift and back edge of flatrack touches ground.
7. Release service brake pedal (1) and allow grounded flatrack to push the vehicle straight forward from under flatrack and clear.
8. As front of flatrack approaches within approximately 8 in. (20.32 cm) of ground, decrease engine speed to idle and apply service brake pedal (1).

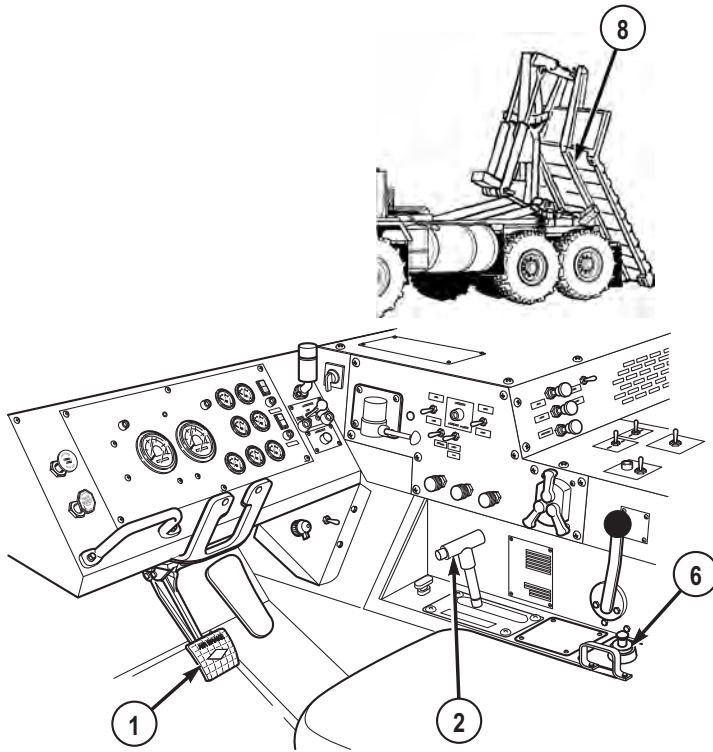
CAUTION

Once vehicle's rear suspension has been relieved of flatrack load, do not continue in UNLOAD position as possibility of jacking up rear of vehicle with hook arm may occur and damage to equipment may result.

NOTE

If flatrack is extremely light or empty, it may be necessary to place transmission range selector to D (drive) to allow vehicle to move out from under flatrack.

9. Continue off-loading until flatrack main rails (8) are on ground and rear suspension is unloaded.

UNLOADING - Continued*Figure 6.*

10. Release joystick (6) when flatrack main rails (8) are resting on ground.

CAUTION

Do not use R (reverse) to back up vehicle while hook arm is attached to flatrack or damage to LHS will occur.

NOTE

- Engine speed should be set at idle. However, slight increase in engine speed may be necessary depending on terrain.
- Complete Steps (11) through (14) to disengage LHS lift hook from flatrack hook bar..

11. Set transmission range selector (2) to D (drive) and release service brake pedal (1).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

UNLOADING - Continued

12. Set transmission range selector (2) to N (neutral).
13. Move joystick (6) to LOAD position momentarily, and then to UNLOAD position to disengage LHS lift hook (9) from flatrack hook bar (10).

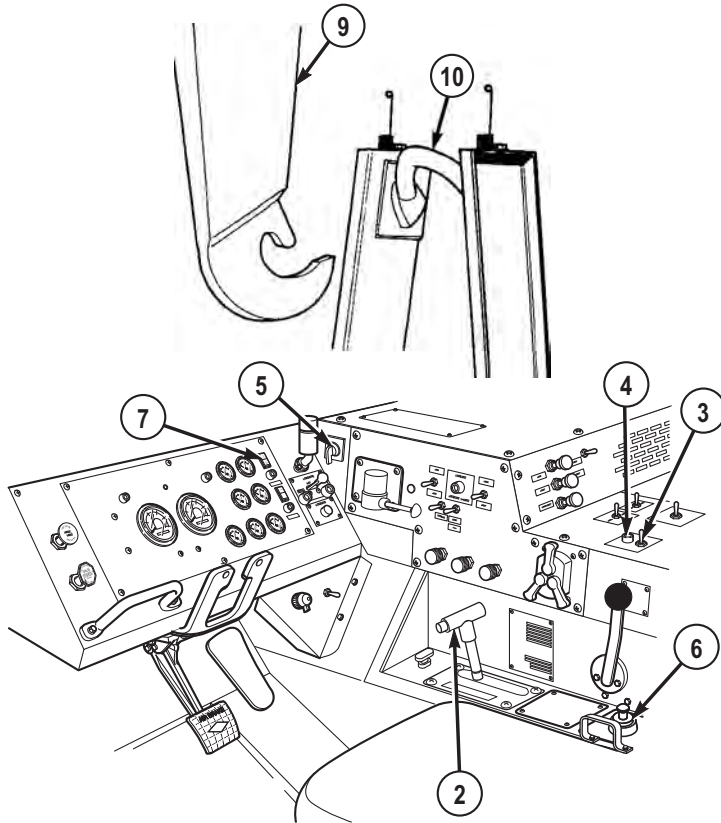


Figure 7.

14. Repeat Steps (11) through (13) until LHS lift hook (9) disengages from flatrack hook bar (10).
15. Set transmission range selector (2) to D (drive) and move vehicle forward approximately 5 ft. (1.5 m).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

16. Stop vehicle. Set transmission range selector (2) to N (neutral).

UNLOADING - Continued**CAUTION**

Never drive with LHS NO TRANSIT indicator illuminated. An illuminated indicator means load locks are not engaged and LHS is not fully stowed.

NOTE

Hook arm does not need to be fully stowed if more transfer operations are going to be made.

17. Move joystick (6) to LOAD position until LHS is in transport position. LHS NO TRANSIT indicator (7) will go out indicating LHS is in transport position.
18. Release joystick (6).

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

19. Turn hydraulic selector switch (5) to OFF.
20. Set PTO ENGAGE switch (3) to OFF position. Indicator light (4) will go out.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
LOADING/UNLOADING FLATRACK IN MANUAL MODE**

INITIAL SETUP:

Not Applicable

LOADING

1. Set transmission range selector (1) to R (reverse) and back vehicle up to the flatrack. Stop approximately 5 ft. (1.5 m) from hook bar (2). Check for overhead obstructions and firmness of ground.

LOADING - Continued

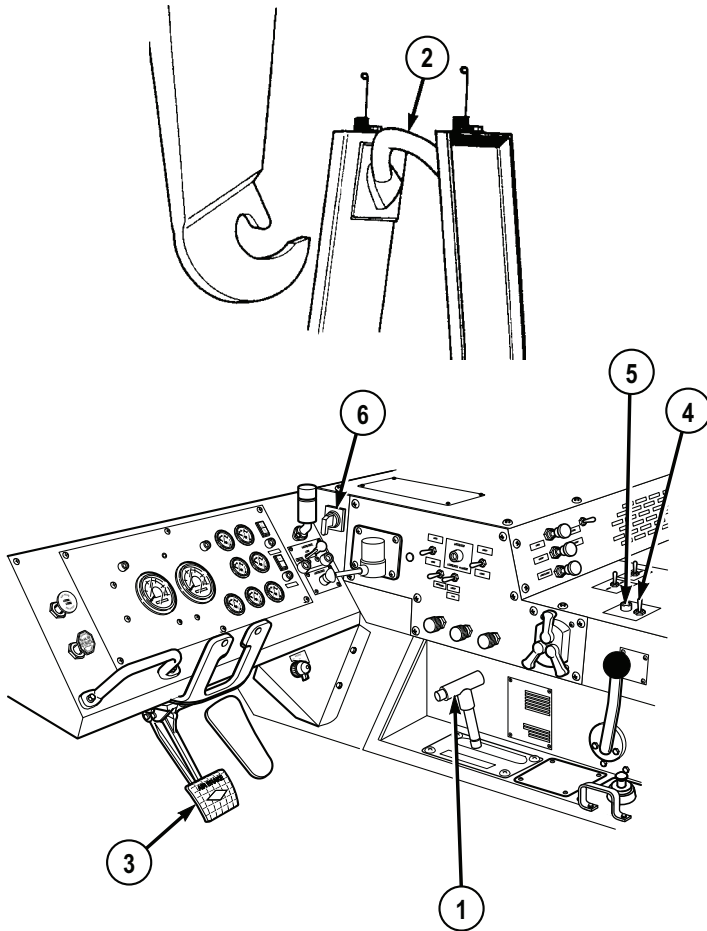


Figure 1.

NOTE

LHS will only operate when transmission range selector is in N (Neutral).

2. Apply service brake pedal (3) and set transmission range selector (1) to N (neutral).

CAUTION

- To avoid equipment damage, ensure that hook arm cylinders do not complete full extension while operating at engine speeds above idle.

LOADING - Continued

- Manual mode is used mainly in event of a failure of automatic control electrical system. Greater care must be exercised during operation of MANUAL mode for correct cycle of events to occur, or damage to equipment may result.
3. Set PTO ENGAGE switch (4) to ON position. Indicator light (5) will illuminate.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

4. Turn hydraulic selector switch (6) to MAN H.A.

WARNING

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

LOADING - Continued**NOTE**

- LHS OVER LOAD indicator will come on when hook arm cylinders are fully extended and joystick is activated.
- Loading and unloading times are controlled by engine speed. Engine speed can be increased to 1,500 to maximum rpm to reduce loading and unloading times.

5. Move joystick (7) to UNLOAD position and hold.

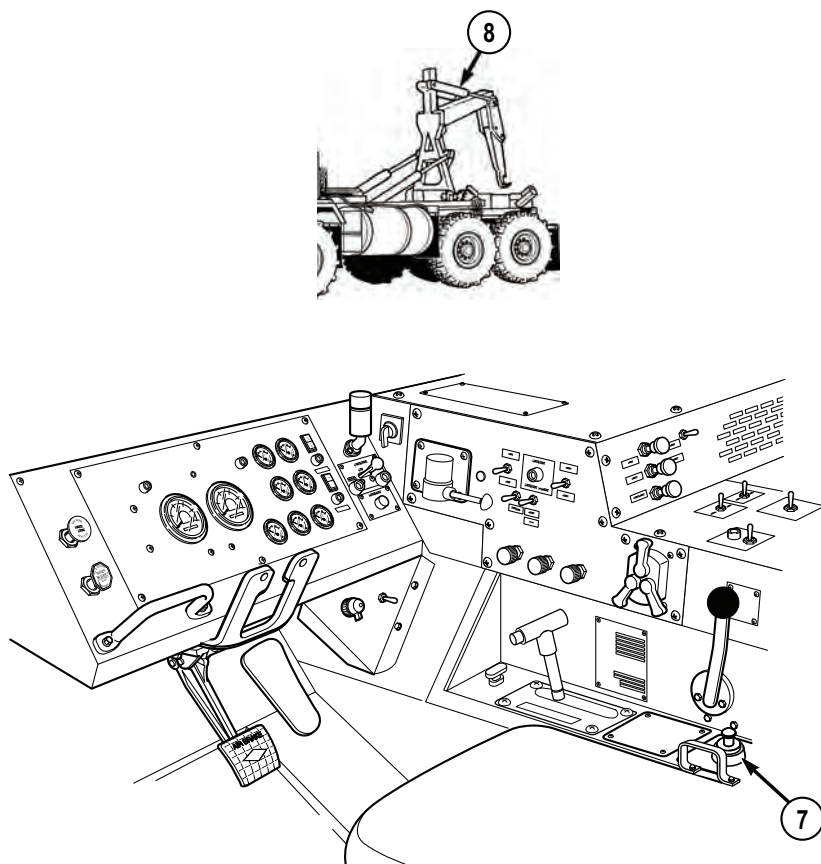


Figure 2.

6. Release joystick (7) when hook arm cylinders (8) are fully extended.

LOADING - Continued**CAUTION**

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
 - To avoid equipment damage, ensure that main frame cylinders do not complete full extension while operating at engine speeds above idle.
 - Manual mode is used mainly in event of a failure of automatic control electrical system. Greater care must be exercised during operation of MANUAL mode for correct cycle of events to occur or damage to equipment may result.
 - If LHS had previously been used in manual mode and not completely stowed in AUTO mode, the hook arm cylinders must be completely extended or the LHS must be completely stowed using AUTO mode before the flatrack can be loaded. Failure to comply may result in damage to equipment.
7. Turn hydraulic selector switch (6) to MAN M.F.

LOADING - Continued

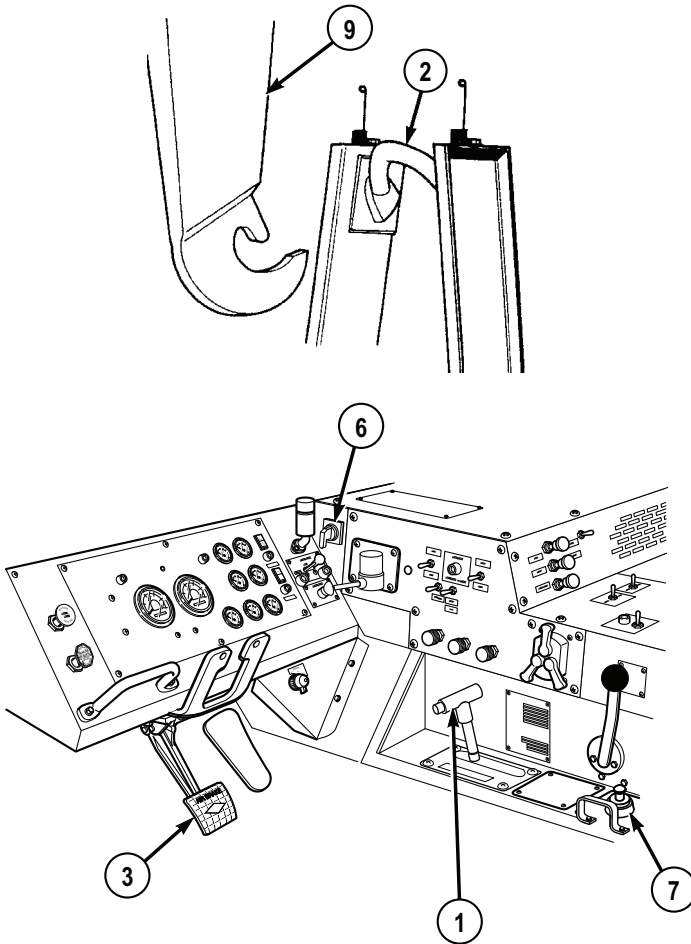


Figure 3.

8. Move joystick (7) to UNLOAD position and hold until lift hook (9) has moved below level of flatrack hook bar (2).
9. Apply service brake pedal (3) and set transmission range selector (1) to R (reverse). Back vehicle up to flatrack, aligning vehicle and flatrack as straight as possible, with lift hook (9) to middle of hook bar (2).
10. Stop vehicle when LHS lift hook (9) touches flatrack.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

LOADING - Continued

11. Set transmission range selector (1) to N (neutral).

CAUTION

- Ensure PARKING BRAKE control is pushed in (released) during load sequence, or damage to equipment may result.
- Do not use R (reverse) to back up vehicle while hook arm is attached to flatrack, or damage to LHS will occur.

NOTE

No additional equipment can be stowed on or in FRS during loading/unloading. Additional equipment could OVER LOAD LHS due to weight of FRS.

12. Move joystick (7) to LOAD position to engage LHS lift hook (9) and flatrack hook bar (2).
13. If LHS lift hook (9) fails to engage flatrack hook bar (2):
 - a. Release joystick (7).
 - b. Set transmission range selector (1) to D (drive), release service brake pedal (3), and move vehicle forward just clear of flatrack.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

- c. Set transmission range selector (1) to D (drive), release service brake pedal (3), and move vehicle forward just clear of flatrack.
 - d. Repeat Steps (9) through (12).

NOTE

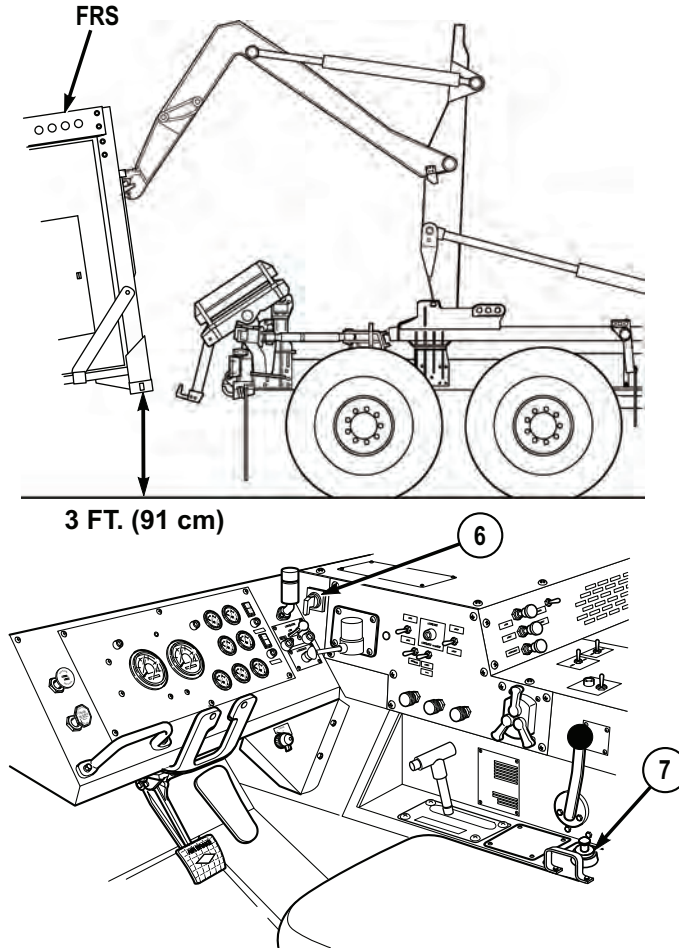
- If NOT loading a forward repair system, skip to Step (15).
 - No additional equipment can be stowed on or in FRS during loading. Additional equipment could OVER LOAD LHS due to weight of FRS.
14. If loading a forward repair system (FRS) complete the following steps:

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

- a. Turn hydraulic selector switch (6) to MAN H.A.

LOADING - Continued

*Figure 4.***NOTE**

Engine speed must be at 1500 rpm when lifting FRS.

- b. Move joystick (7) to LOAD position and lift FRS approximately 3 ft. (91 cm) off ground.
- c. Release joystick (7).

LOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

- d. Turn hydraulic selector switch (6) to MAN M.F.
- e. Continue with Step (15).

WARNING

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

When loading or unloading flatracks/FRS on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

CAUTION

- If LHS OVER LOAD indicator illuminates but loading operation continues, operator is cautioned that LHS is nearing maximum capacity. In this situation, operator should determine if payload is evenly distributed on flatrack or if flatrack load exceeds 25,000 lbs (11 350 kg) for LHS or 24,000 lbs (10 896 kg) for LHS with CHU kit. If any of these conditions exist, operator must redistribute or reduce payload or damage to equipment may result.
 - Ensure that PARKING BRAKE control is pushed in (released) before starting load sequence, or damage to equipment may result.
 - When loading or unloading FRS, engine speed must be at 1500 rpm.
15. Move joystick (7) to LOAD position, allowing vehicle to be pulled under flatrack.

LOADING - Continued**WARNING**

Ensure trailer air system is pressurized prior to beginning transfer or flatrack locks may not properly engage/disengage. Failure to comply may result in injury or death to personnel.

CAUTION

Reduce engine speed to idle before flatrack main rails contact rear rollers. Damage to flatrack may result.

NOTE

- As load is lifted, vehicle will be pulled under the flatrack. Some steering adjustment may have to be made to ensure that flatrack runners will contact rear rollers.
- If flatrack is being loaded in soft soil conditions, complete Steps (16) through (20). If flatrack is being loaded in normal conditions, skip to Step (21).

16. Before flatrack main rails (10) contact rear rollers (11), reduce engine speed and apply service brake pedal (3).

LOADING - Continued

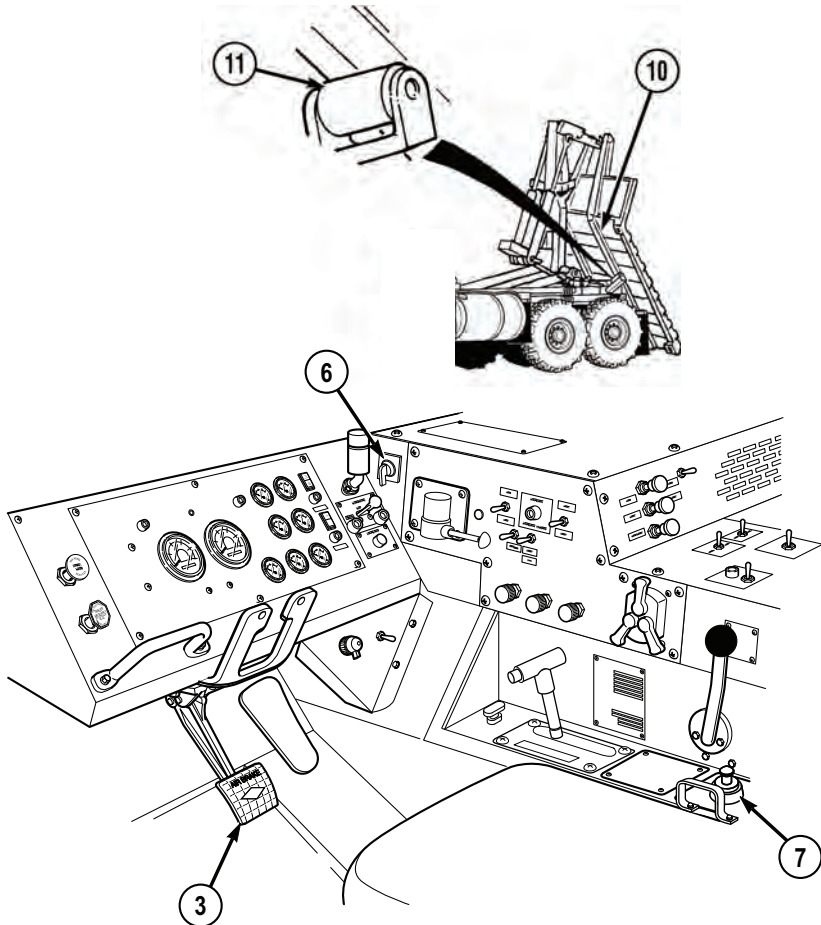


Figure 5.

17. Release joystick (7).

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

18. Turn hydraulic selector switch (6) to MAN H.A.
19. Move joystick (7) to LOAD position until flatrack is approximately 2 ft. (0.61 m) off the ground.
20. Release joystick (7).

LOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

21. Turn hydraulic selector switch (6) to MAN M.F.

CAUTION

To avoid equipment damage, visually check that main frame cylinders do not complete full retraction while operating at engine speeds above idle.

NOTE

Steps (22) through (26) require the operator to vary (increase or decrease) engine speed.

22. Move joystick (7) to LOAD position after flatrack (10) contacts rear rollers (11) and increase engine speed to approximately 1,500 rpm until main frame cylinders (12) have nearly completed full retraction.
23. Reduce engine speed to idle and continue loading until main frame cylinders (12) are fully retracted.

LOADING - Continued

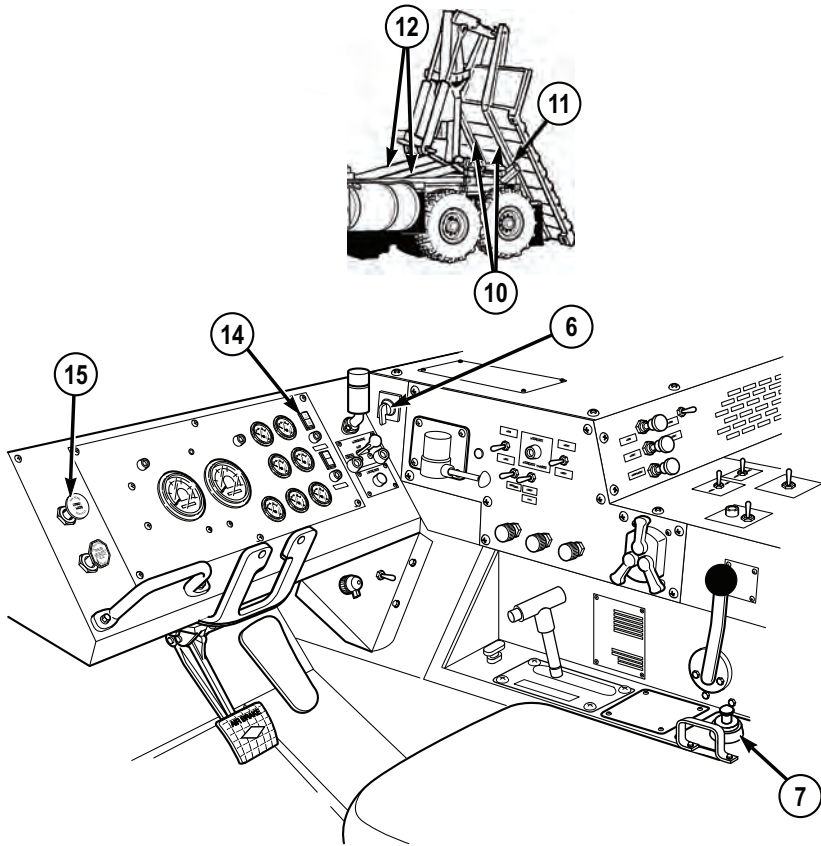


Figure 6.

NOTE

LHS OVER LOAD indicator will illuminate when main frame cylinders are fully retracted and joystick is activated.

24. Release joystick (7).

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Main frame cylinders must be completely retracted prior to loading the hook arm.

25. Turn hydraulic selector switch (6) to MAN H.A.

LOADING - Continued**CAUTION**

Failure to reduce engine speed to idle could result in severe damage to LHS components.

26. Move joystick (7) to LOAD position and increase engine speed until flatrack is nearly loaded, then reduce speed to idle.
27. Continue to load until LHS and flatrack are in transit position and LHS NO TRANSIT indicator (14) goes out.
28. Release joystick (7).
29. Pull out PARKING BRAKE control (15).
30. Ensure that load locks (13) have engaged and flatrack is fully down on vehicle.

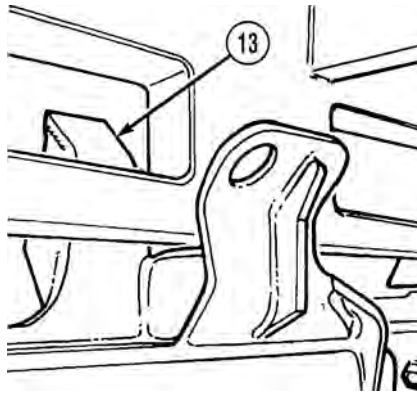
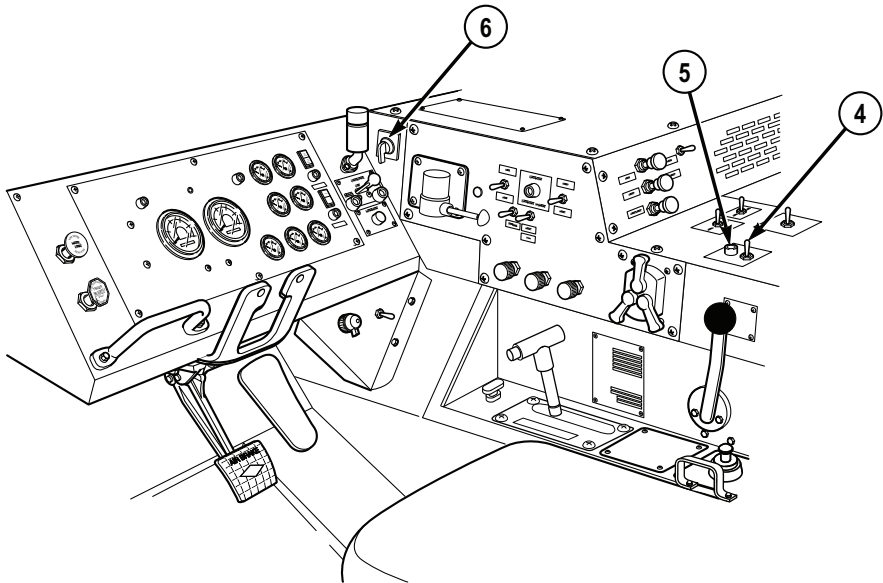


Figure 7.

CAUTION

- Hydraulic selector switch must remain in MAN TRANS position while vehicle is traveling, or damage to equipment may result.
 - Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
31. Turn hydraulic selector switch (6) to MAN TRANS.
 32. Set PTO ENGAGE switch (4) to OFF position. Indicator light (5) will go out.

LOADING - Continued

*Figure 8.***WARNING**

Do not reduce tire pressure when loaded with FRS or container. Highway tire pressure, 60 psi (414 kPa) front and 83 psi (572 kPa) rear, is required at all times when loaded with FRS or container. If equipped with armor kit, highway tire pressure 75 psi (517 kPa) front is required at all times. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Maximum side slope when loaded with an FRS or container is 30%. Failure to comply may result in injury or death to personnel and damage to equipment.

LOADING - Continued**WARNING**

When loaded with FRS or container, the center of gravity is moved up and toward rear of vehicle. Use extreme care when turning and ascending or descending on a grade. Failure to comply may result in injury or death to personnel.

33. Transport flatrack.

UNLOADING

1. Check for sufficient operating room at front and rear of vehicle. Check overhead clearance and ground conditions.
2. Apply service brake pedal (1) and set transmission range selector (2) to N (neutral).

UNLOADING - Continued

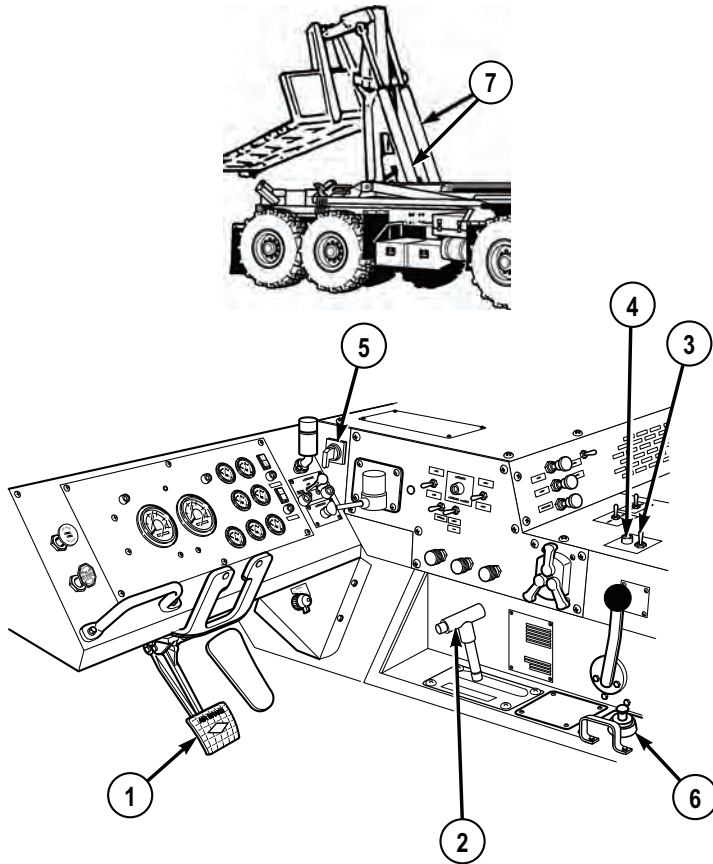


Figure 9.

3. Set PTO ENGAGE switch (3) to ON position. Indicator light (4) will illuminate.

CAUTION

- MANUAL mode is used mainly in event of a failure of automatic control electrical system. Greater care must be exercised during operation of MANUAL mode for correct cycle of events to occur, or damage to equipment may result.
 - Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
4. Turn hydraulic selector switch (5) to MAN H.A.

UNLOADING - Continued**WARNING**

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

CAUTION

- Reduce speed to idle for approximately the first 18 in. (46 cm) of travel and again when flatrack is 2 ft. (61 cm) above ground to prevent damage to cylinder.
- To avoid equipment damage, insure that hook arm cylinders do not complete full extension while operating at engine speeds above idle.
- Ensure rail transport locking pins are disengaged before unloading flatrack. Rail transport locking pins are used for rail transport only. Failure to comply may result in damage to equipment.

UNLOADING - Continued**NOTE**

- LHS OVER LOAD indicator may come on when engine is at idle speed.
 - Steps (5) through (18) require the operator to vary (increase or decrease) engine speed.
 - When unloading an FRS, engine speed must be at 1500 RPM.
5. Move joystick (6) to UNLOAD position until hook arm cylinders (7) have fully extended. Maintain engine speed at idle for approximately the first 18 in. (46 cm) and last 6 in. (15 cm) of movement.

NOTE

When hook arm cylinders are fully extended and joystick activated, LHS OVER LOAD indicator will illuminate.

6. Release joystick (6).

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
 - Ensure parking brake is released before starting the unload sequence, or damage to equipment may result.
7. Turn hydraulic selector switch (5) to MAN M.F.
8. Move joystick (6) to UNLOAD position.

WARNING

When loading or unloading flatracks/FRS on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

NOTE

If flatrack is extremely light or empty, it may be necessary to set transmission range selector to D (driver) to allow vehicle to move out from under flatrack.

UNLOADING - Continued

9. When back edge of flatrack touches ground, release service brake pedal (1), allowing vehicle to be pushed straight from under flatrack.
10. Continue off-loading until front of flatrack is within 8 in. (20.32 cm) of ground, decrease engine speed to idle, and apply service brake pedal (1).

CAUTION

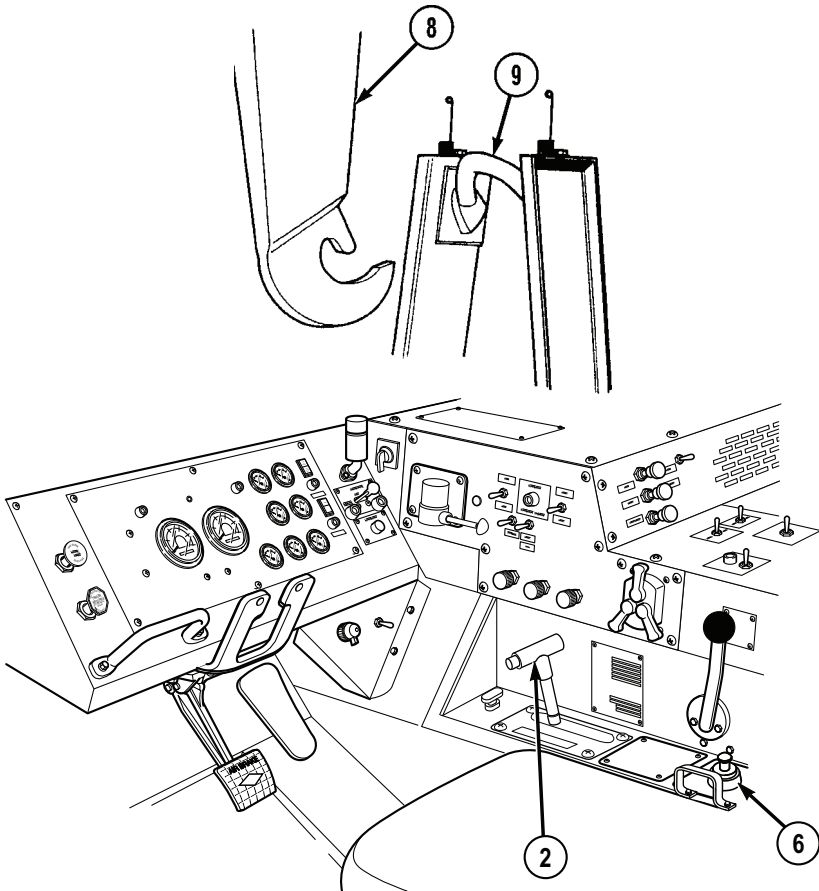
Once suspension has been relieved of flatrack load, do not continue in UNLOAD position or rear of vehicle could jack up with hook arm and equipment damage may result.

11. Continue off-loading until flatrack is on ground and rear suspension is unloaded.
12. Release joystick (6).

NOTE

- Engine speed should be set at idle. However, slight increase in engine speed may be necessary depending on terrain.
- LHS will only operate when transmission range selector is in N (neutral).

13. Set transmission range selector (2) to D (drive) and release service brake pedal (1). Set transmission range selector (2) to N (neutral).
14. Move joystick (6) to LOAD position momentarily, and then to UNLOAD position to let LHS lift hook (8) disengage from flatrack hook bar (9). Repeat Step (14) until LHS lift hook (8) disengages from flatrack hook bar (9).

UNLOADING - Continued*Figure 10.*

15. Move vehicle forward approximately 5 ft. (1.5 m).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

16. Stop vehicle and set transmission range selector (2) to N (neutral).

CAUTION

- To avoid equipment damage, visually check that main frame cylinders have completed full retraction.
- Reduce speed to idle in last 1 ft. (30 cm) of travel to prevent damage to cylinders.

UNLOADING - Continued

17. Move joystick (6) to LOAD position and hold in this position until main frame cylinders (10) are fully retracted.

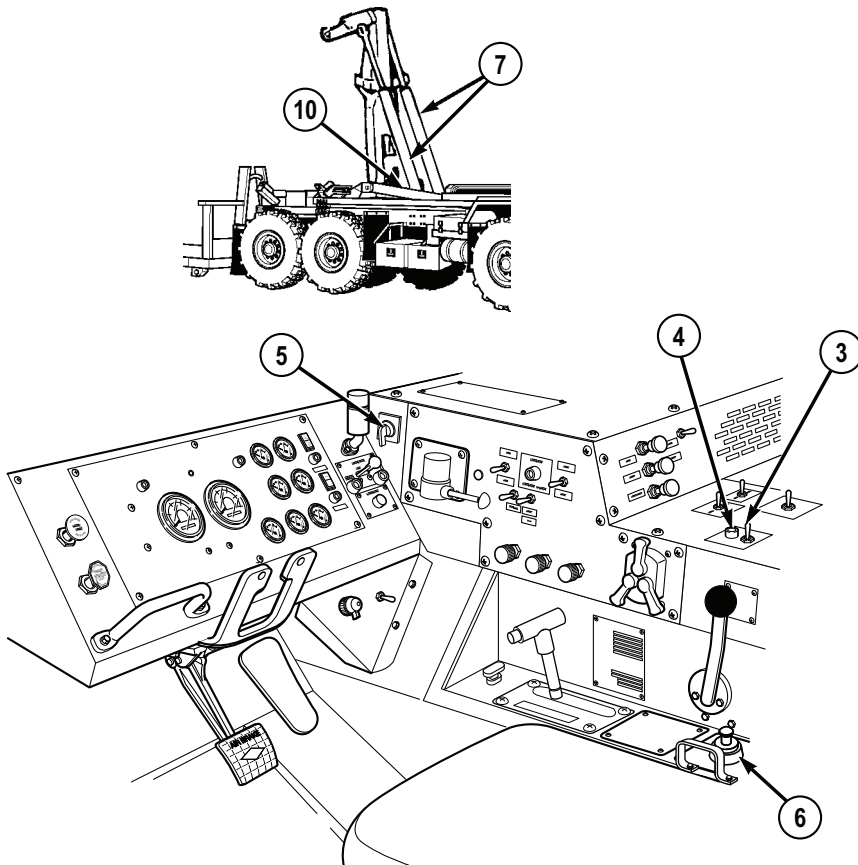


Figure 11.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

18. Turn hydraulic selector switch (5) to MAN H.A.
 19. Hold joystick (6) in LOAD position until the hook arm cylinders (7) are fully retracted.
 20. Release joystick (6).

UNLOADING - Continued**WARNING**

Never drive with LHS NO TRANSIT indicator illuminated. An illuminated indicator means LHS is not fully stowed. Failure to comply may result in injury or death to personnel.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

21. Turn hydraulic selector switch (5) to MAN TRANS.
22. Set PTO ENGAGE switch (3) to OFF position. Indicator light (4) will go out.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE
NORMAL TRANSFER OF FLATRACK FROM VEHICLE TO TRAILER

INITIAL SETUP:

Not Applicable

OPERATION

WARNING



Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING



Trailer wheels must be chocked during transfer operations. Failure to comply may result in injury or death to personnel.

CAUTION

- Ensure that trailer drawbar is down against the ground during transfer operations, or damage to equipment may result.
- Ensure air lines and cables are properly stowed to prevent damage to equipment (refer to TM 9-2330-385-14).
- Both trailer bumper points must be under the vehicle bumper stop flange and at least one of the bumper points must contact the bumper stop. The trailer bumper point not contacting the vehicle bumper stop cannot exceed 0.5 in. (12.7 mm) or flatrack will miss main rail guides and equipment damage may result.

OPERATION - Continued

1. Back up vehicle so that trailer bumper (1) is under flange and contacts vehicle bumper stop (2).

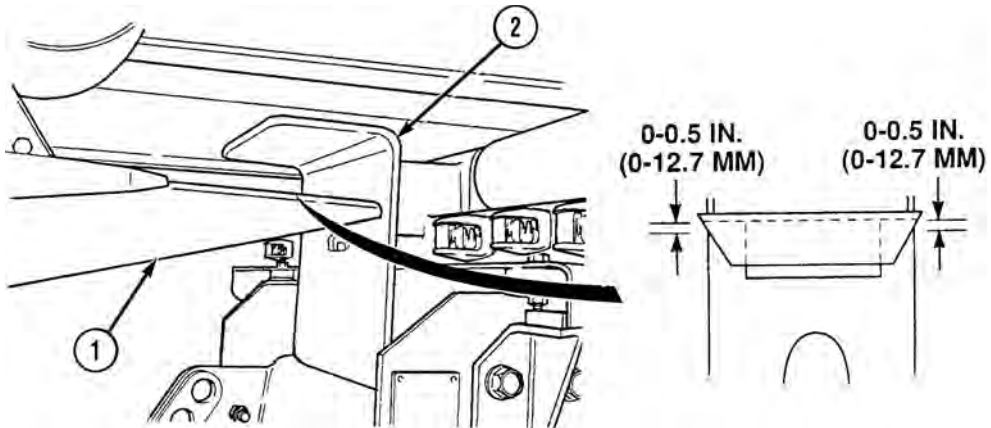


Figure 1.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

2. Pull out PARKING BRAKE control (3) and set transmission range selector (4) to N (neutral).

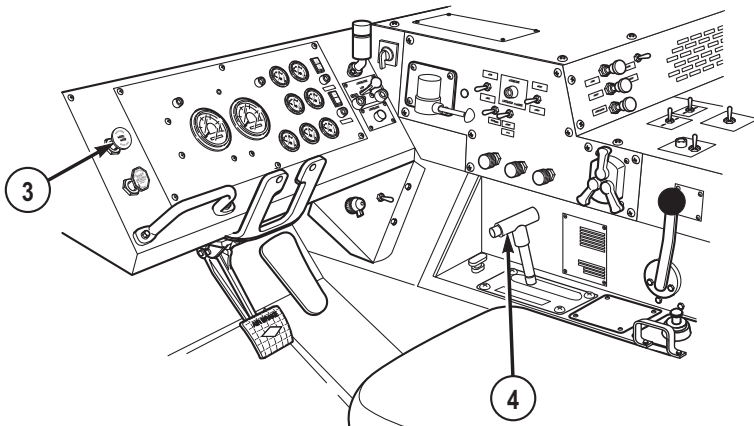


Figure 2.

OPERATION - Continued**WARNING**

When operating M1120 vehicle with M1076 trailer, the heaviest loaded flatrack must always be placed on the vehicle, otherwise adverse handling and/or braking may result. Failure to comply may result in injury or death to personnel.

WARNING

Ensure trailer air system is pressurized prior to beginning transfer or flatrack locks may not properly engage/disengage. Failure to comply may result in injury or death to personnel.

CAUTION

There must be sufficient air pressure in trailer air system to retract flatrack locks or damage to flatrack lock can occur while attempting to remove flatrack from trailer. If not, use vehicle to charge trailer air system using trailer air charging hose. If air system cannot retract flatrack locks, use manual flatrack lock retract procedure (refer to TM 9-2330-385-14). (WP 0173)

3. Push in knob (5) and retract flatrack locks (6) on trailer.

OPERATION - Continued

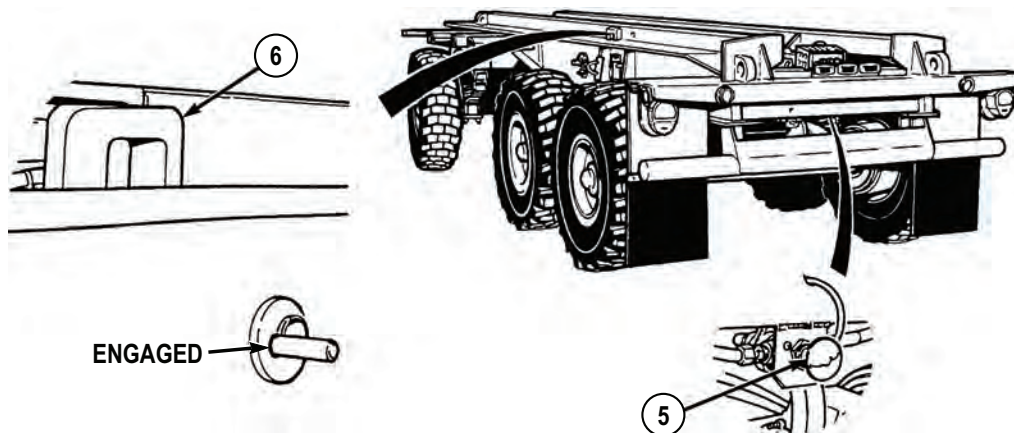


Figure 3.

CAUTION

Ensure both flatrack locks are fully retracted, or damage to equipment may result.

4. Inspect that both flatrack locks (6) are fully retracted.
5. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

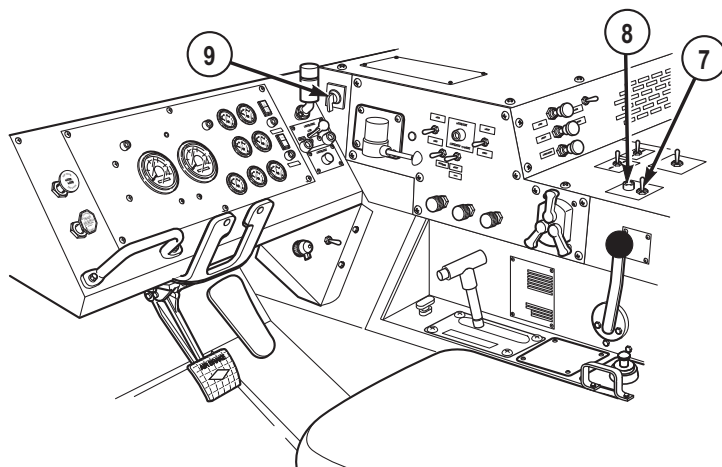


Figure 4.

OPERATION - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

6. Turn hydraulic selector switch (9) to AUTO.

WARNING

When loading or unloading flatracks/FRS on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

WARNING

Trailer wheels must be chocked during transfer operations. Failure to comply may result in injury or death to personnel.

CAUTION

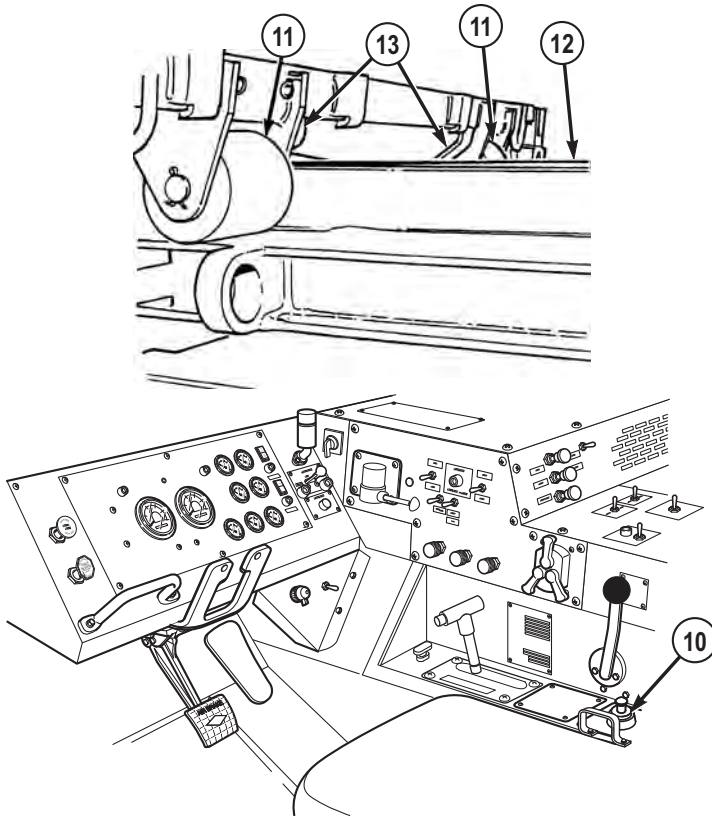
- Load must be evenly distributed on flatrack. Uneven load distribution may cause LHS OVER LOAD indicator to give false signals and cause LHS to operate incorrectly.

OPERATION - Continued

- Ensure rail transport locking pins are disengaged before unloading flatrack. Rail transport locking pins are used for rail transport only. Failure to comply may result in damage to equipment.

NOTE

- The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to 1,500 to maximum rpm to reduce loading and unloading times.
 - LHS will only operate when transmission range selector is in N (neutral).
7. Move joystick (10) to UNLOAD position until flatrack rollers (11) contact trailer.
 8. Release joystick (10).

*Figure 5.*

OPERATION - Continued

9. Inspect and verify trailer guides (12) are lined up between flatrack main rails (13).

NOTE

If trailer guides are not aligned, perform Step (10). If trailer guides are aligned, skip to Step (11).

10. If trailer guides (12) are not aligned:
 - a. Move joystick (10) to LOAD position.
 - b. When flatrack is fully reloaded, release joystick (10).
 - c. Repeat Steps (7) through (9).
11. Move joystick (10) to UNLOAD position until hook arm cylinders (14) have fully extended and main frame cylinders (15) have extended 6 to 12 in. (15 to 30 cm).
12. Release joystick (10).

OPERATION - Continued

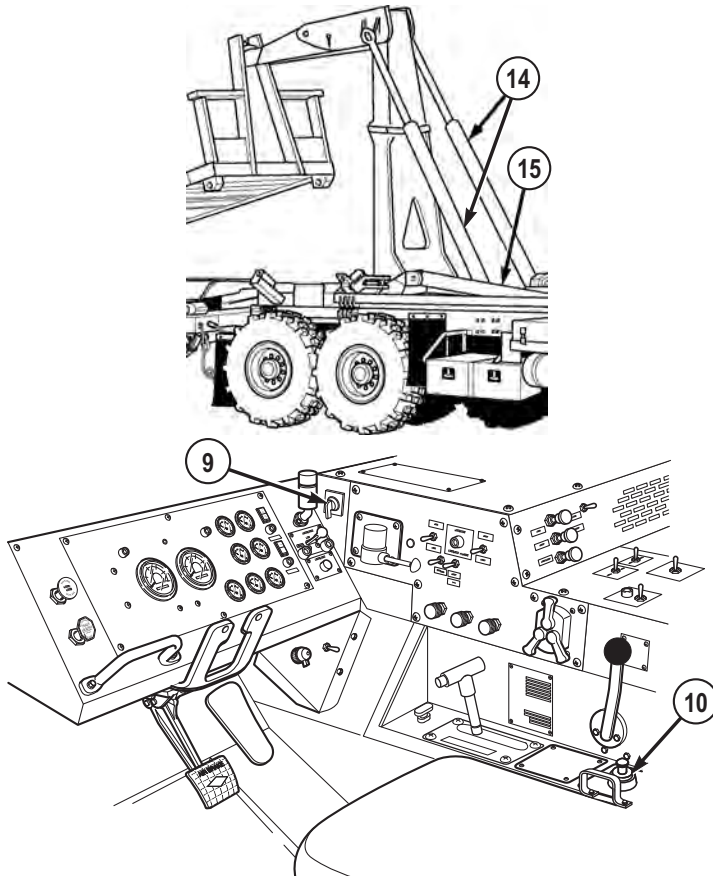
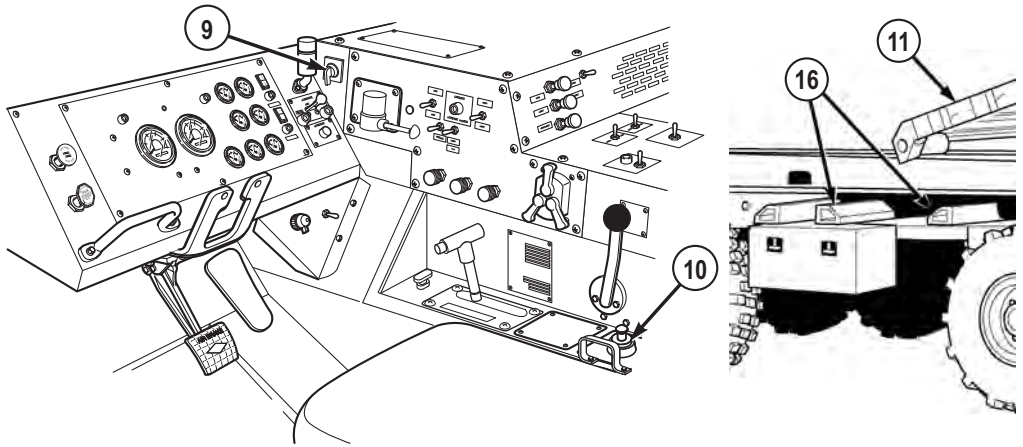


Figure 6.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

13. Turn hydraulic selector switch (9) to MAN H.A.
14. Move joystick (10) to LOAD until flatrack rear rollers (11) are centered between trailer stacking brackets (16).
15. Release joystick (10).

OPERATION - Continued*Figure 7.***CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

16. Turn hydraulic selector switch (9) to MAN M.F.
17. Move joystick (10) to UNLOAD position until flatrack rollers (11) contact rear trailer stops (17).

OPERATION - Continued

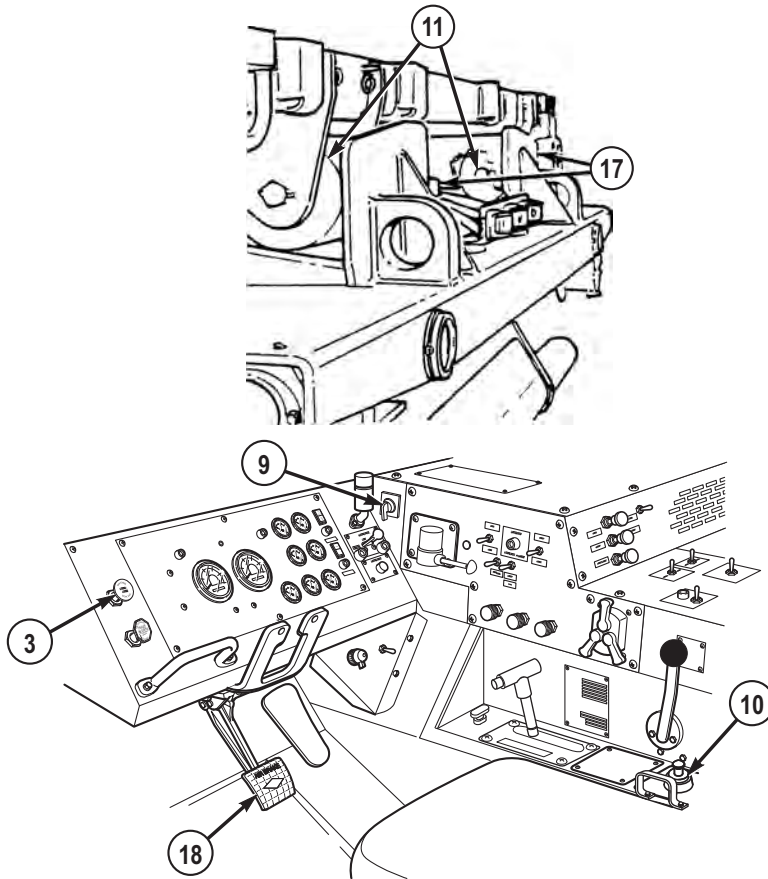


Figure 8.

18. Release joystick (10).
19. Inspect that rear rollers (11) on flatrack have contacted rear trailer stops (17).
20. Apply service brake pedal (18).
21. Push in PARKING BRAKE control (3).

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

22. Turn hydraulic selector switch (9) to MAN H.A.
23. Move joystick (10) to UNLOAD position until flatrack is fully seated on trailer.

OPERATION - Continued**NOTE**

It may be necessary to repeat Steps (24) through (27) several times to clear hook arm from hook bar.

24. Move joystick (10) to LOAD position to allow top of LHS lift hook (19) to clear flatrack hook bar (20).

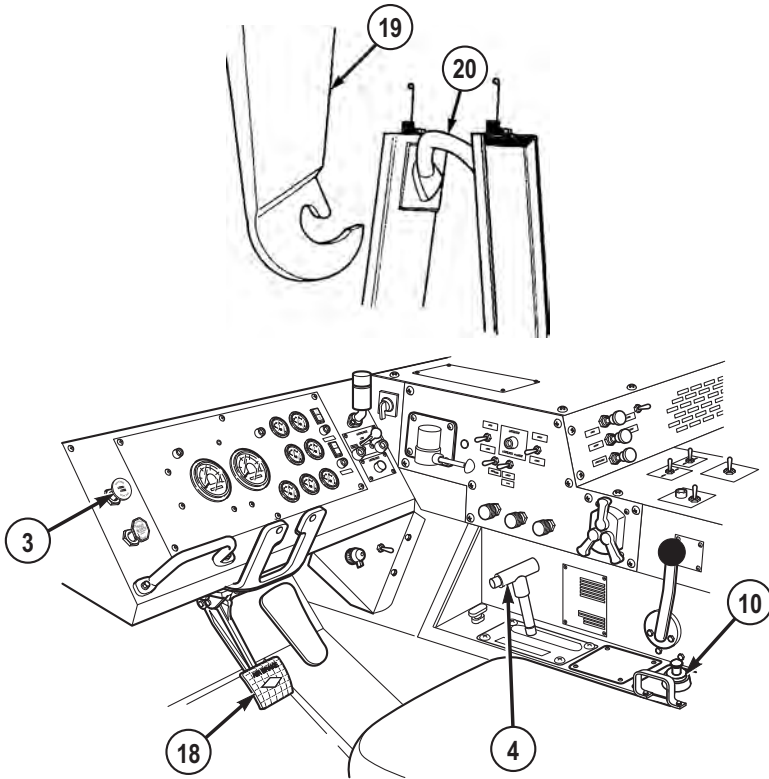


Figure 9.

NOTE

Do not move vehicle forward more than 3 in. (76.2 mm) to prevent flatrack from pulling away from rear trailer stops.

25. Place transmission range selector (4) in D (drive). Release service brake pedal (18) and move vehicle forward approximately 3 in. (76.2 mm). Apply service brake pedal (18).

OPERATION - Continued**NOTE**

LHS will only operate when transmission range selector is in N (neutral).

26. Stop vehicle and set transmission range selector (4) to N (neutral).
27. Move the joystick (10) to UNLOAD position to disengage LHS lift hook (19) from flatrack hook bar (20).
28. Pull out PARKING BRAKE control (3).
29. Inspect that rear flatrack rollers (11) have contacted trailer stops (17).

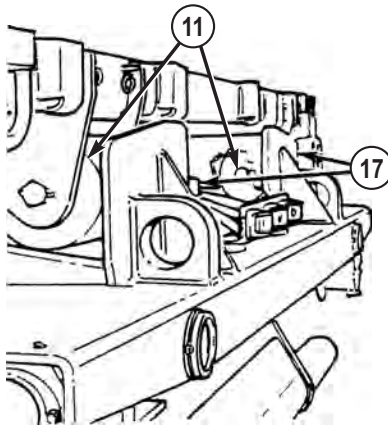


Figure 10.

30. Pull knob (5), and engage flatrack locks (6).

OPERATION - Continued

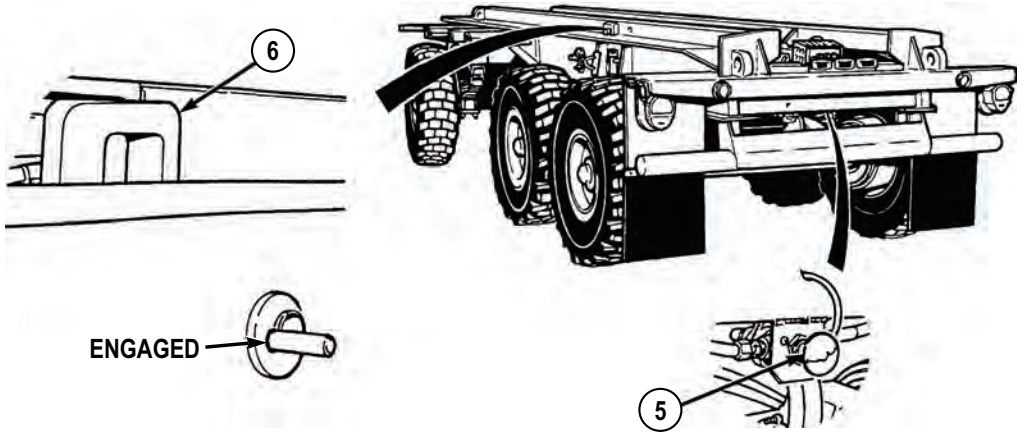


Figure 11.

31. Inspect that flatrack locks (6) are engaged.
32. Push in PARKING BRAKE control (3).

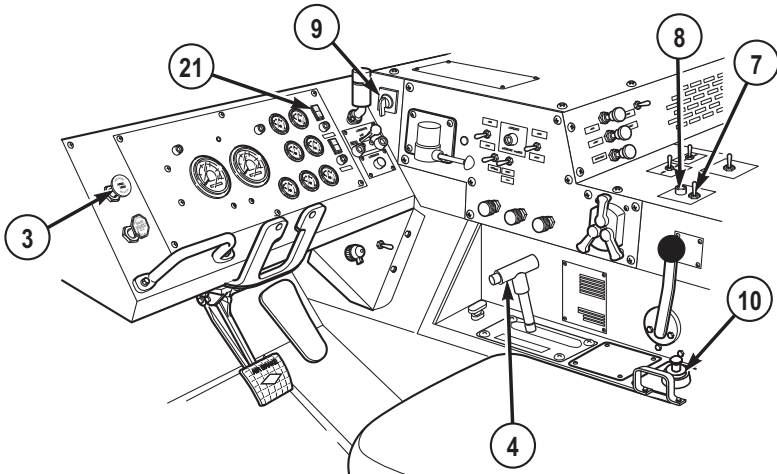


Figure 12.

33. Set transmission range selector (4) to D (drive).
34. Move vehicle forward approximately 5 ft. (1.5 m).
35. Pull out PARKING BRAKE control (3).

OPERATION - Continued**NOTE**

LHS will only operate when transmission range selector is in N (neutral).

36. Set transmission range selector (4) to N (neutral).

WARNING

Never drive with LHS NO TRANSIT indicator illuminated. An illuminated indicator means LHS is not fully stowed. Failure to comply may result in injury or death to personnel.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

NOTE

LHS hook arm does not need to be fully stowed if more transfer operations are going to be made.

37. Turn hydraulic selector switch (9) to AUTO.
38. Move joystick (10) to LOAD position and retract LHS until LHS NO TRANSIT indicator (21) goes out.
39. Turn hydraulic selector switch (9) to OFF.
40. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE
NORMAL TRANSFER OF FLATRACK FROM TRAILER TO VEHICLE

INITIAL SETUP:

Not Applicable

OPERATION**WARNING**

Trailer wheels must be chocked during transfer operations. Failure to comply may result in injury or death to personnel.

WARNING

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

CAUTION

- Ensure that trailer drawbar is down against the ground during transfer operations, or damage to equipment may result.
 - Ensure air lines and cables are properly stowed to prevent damage to equipment (refer to TM 9-2330-385-14). (WP 0173)
 - Both trailer bumper points must be under the vehicle bumper stop flange and at least one of the bumper points must contact the bumper stop. The trailer bumper point not contacting the vehicle bumper stop cannot exceed 0.5 in. (12.7 mm) or flatrack will miss main rail guides and equipment damage may result.
1. Back up vehicle in line with trailer and stop approximately 5 ft. (1.5 m) from trailer.

OPERATION - Continued

2. Pull out PARKING BRAKE control (1).

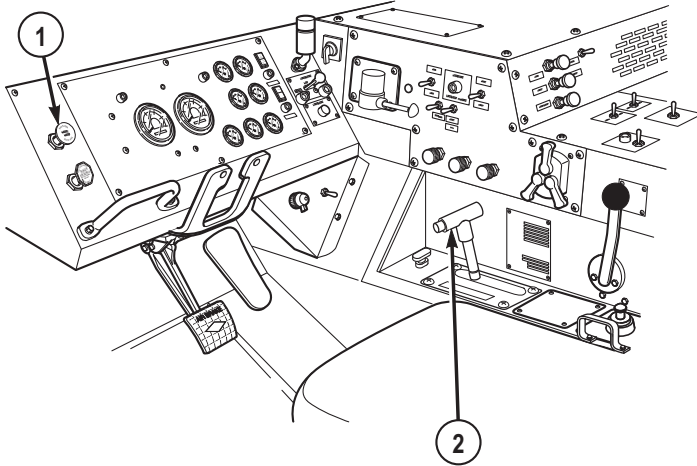


Figure 1.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

3. Set transmission range selector (2) to N (neutral).

CAUTION

- There must be sufficient air pressure in trailer air system to retract flatrack locks or damage to flatrack lock can occur while attempting to remove flatrack from trailer. If not, use vehicle to charge trailer air system using trailer air charging hose. If air system cannot retract flatrack locks, use manual flatrack lock retract procedure (refer to TM 9-2330-385-14). (WP 0173)
- Ensure air lines and cables are properly stowed to prevent damage to equipment (refer to TM 9-2330-385-14). (WP 0173)
- Ensure that trailer drawbar is down against the ground during transfer operations, or damage to equipment may result.

4. Push in knob (3) on trailer to retract flatrack locks (4).

OPERATION - Continued

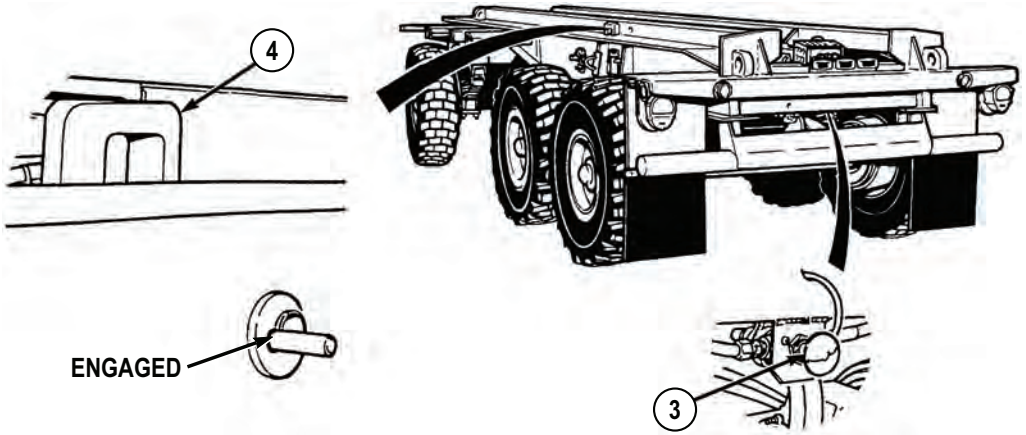


Figure 2.

CAUTION

Ensure both flatrack locks are fully retracted, or damage to equipment may result.

5. Inspect that both flatrack locks (4) are fully retracted.

WARNING



Trailer wheels must be chocked during transfer operations. Failure to comply may result in injury or death to personnel.

WARNING



Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

OPERATION - Continued**WARNING**

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

CAUTION

Ensure rail transport locking pins are disengaged before unloading flatrack. Rail transport locking pins are used for rail transport only. Failure to comply may result in damage to equipment.

6. Set PTO ENGAGE switch (5) to ON position. Indicator light (6) will illuminate.

OPERATION - Continued

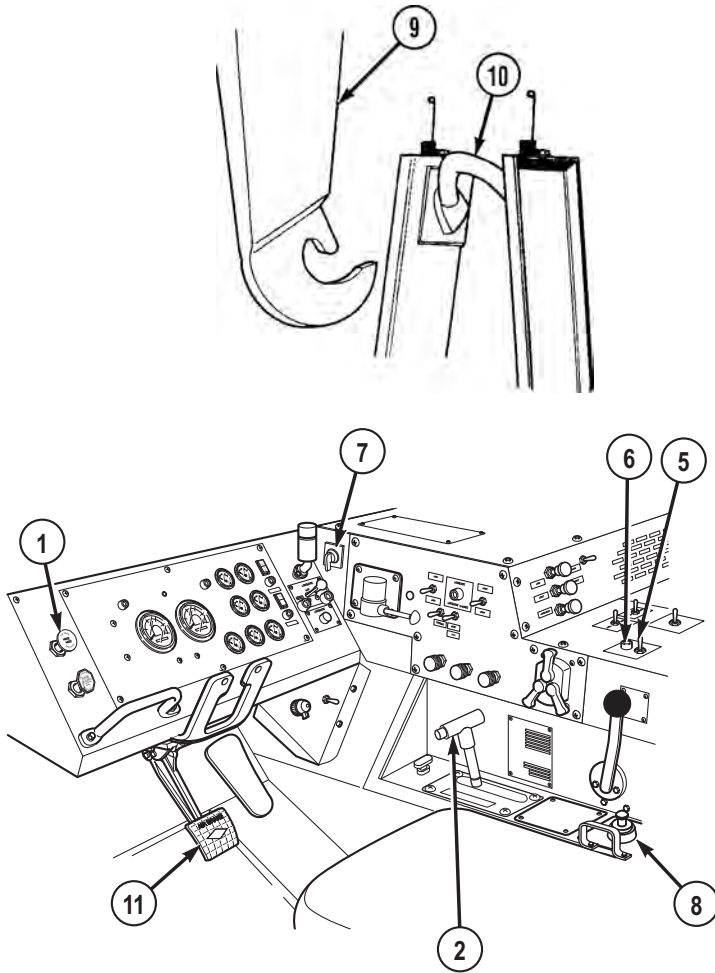


Figure 3.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

7. Turn hydraulic selector switch (7) to AUTO.
8. Move joystick (8) to UNLOAD position until LHS lift hook (9) has moved just below level of flatrack hook bar (10).
9. Apply service brake pedal (11) and push in PARKING BRAKE control (1).

OPERATION - Continued

10. Set transmission range selector (2) to R (reverse), release service brake pedal (11), and back vehicle up until LHS lift hook (9) contacts flatrack hook bar (10).

WARNING

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

When loading or unloading flatracks/FRS on uneven ground (side slope or downgrades up to 5 degrees), it may be necessary to apply vehicle service brakes to prevent vehicle rollaway. Failure to comply may result in injury or death to personnel.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

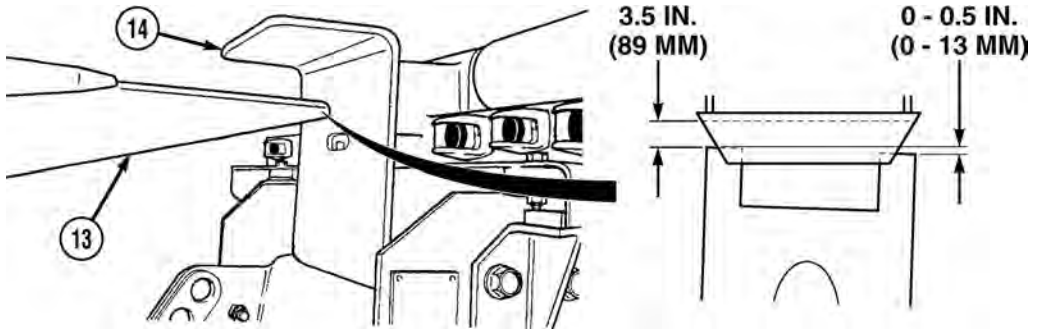
11. Set transmission range selector (2) to N (neutral) and apply service brake pedal (11).

NOTE

The amount of time to load and unload is controlled by engine speed. Engine speed may be increased to approximately 1,500 rpm to reduce loading and unloading times.

12. Move joystick (8) to UNLOAD position and engage LHS lift hook (9) into flatrack hook bar (10).
13. Pull out PARKING BRAKE control (1).
14. Check that trailer bumper (13) is under flange and within 3.5 in. (89 mm) from vehicle bumper stop (14).

OPERATION - Continued

*Figure 4.*

15. Push in PARKING BRAKE control (1) and continue loading flatrack onto vehicle until the LHS NO TRANSIT indicator (12) goes out, indicating LHS is in transport position.

OPERATION - Continued

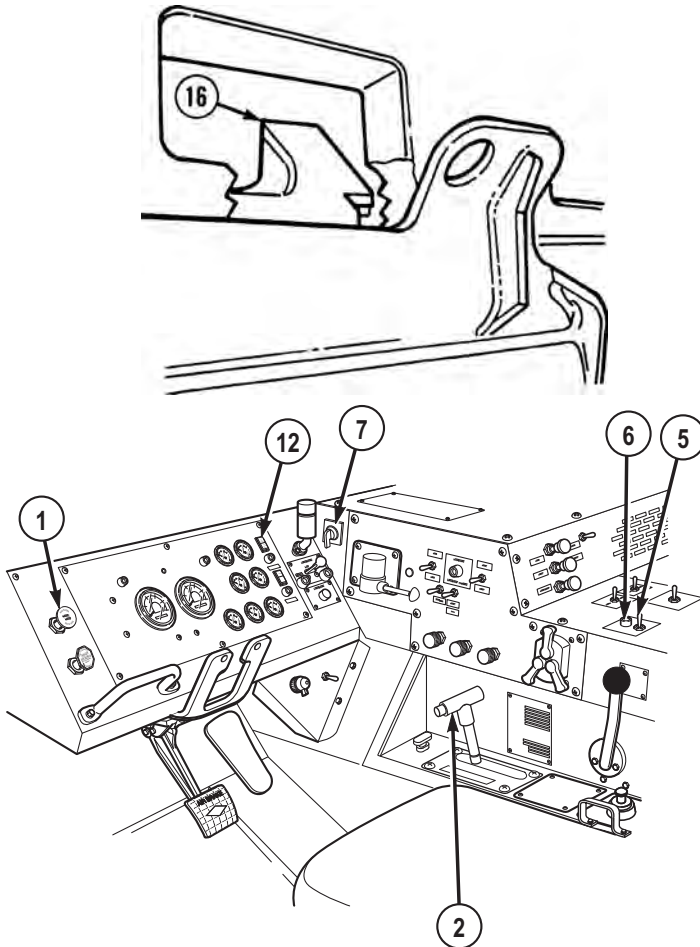


Figure 5.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

16. Pull out PARKING BRAKE control (1) and set transmission range selector (2) to N (neutral).

NOTE

If load locks do not engage, raise flatrack slightly and lower again. Flatrack should seat completely and engage load locks.

OPERATION - Continued

17. Inspect that the load locks (16) are engaged and flatrack is completely loaded onto vehicle.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

18. Turn hydraulic selector switch (7) to OFF.
19. Set PTO ENGAGE switch (5) to OFF position. Indicator light (6) will go out.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE
TRANSFER FLATRACK FROM VEHICLE TO TRAILER IN MANUAL MODE

INITIAL SETUP:

Not Applicable

OPERATION

WARNING

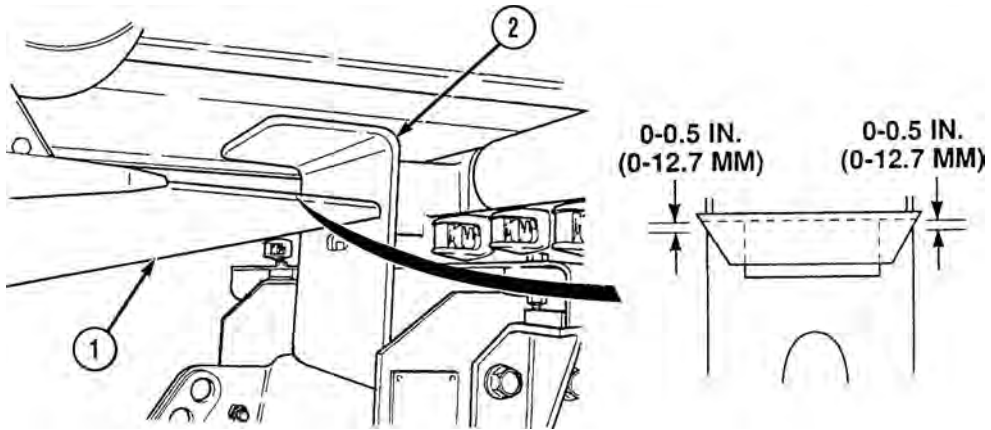


Trailer wheels must be chocked during transfer operations. Failure to comply may result in injury or death to personnel.

CAUTION

- Ensure that trailer drawbar is down against the ground during transfer operations, or damage to equipment may result.
 - Ensure all air lines and cables are properly stowed to prevent damage to equipment.
 - Both of the trailer bumper points must be under the vehicle bumper stop flange and at least one of the bumper points must contact the bumper stop. The trailer bumper point not contacting the vehicle bumper stop cannot exceed 0.5 in. (12.7 mm) or flatrack will miss main rail guides and equipment damage may result.
1. Back up the vehicle so that trailer bumper (1) is under flange and contacts vehicle bumper stop (2).

OPERATION - Continued

*Figure 1.*

2. Pull out PARKING BRAKE control (3).

OPERATION - Continued

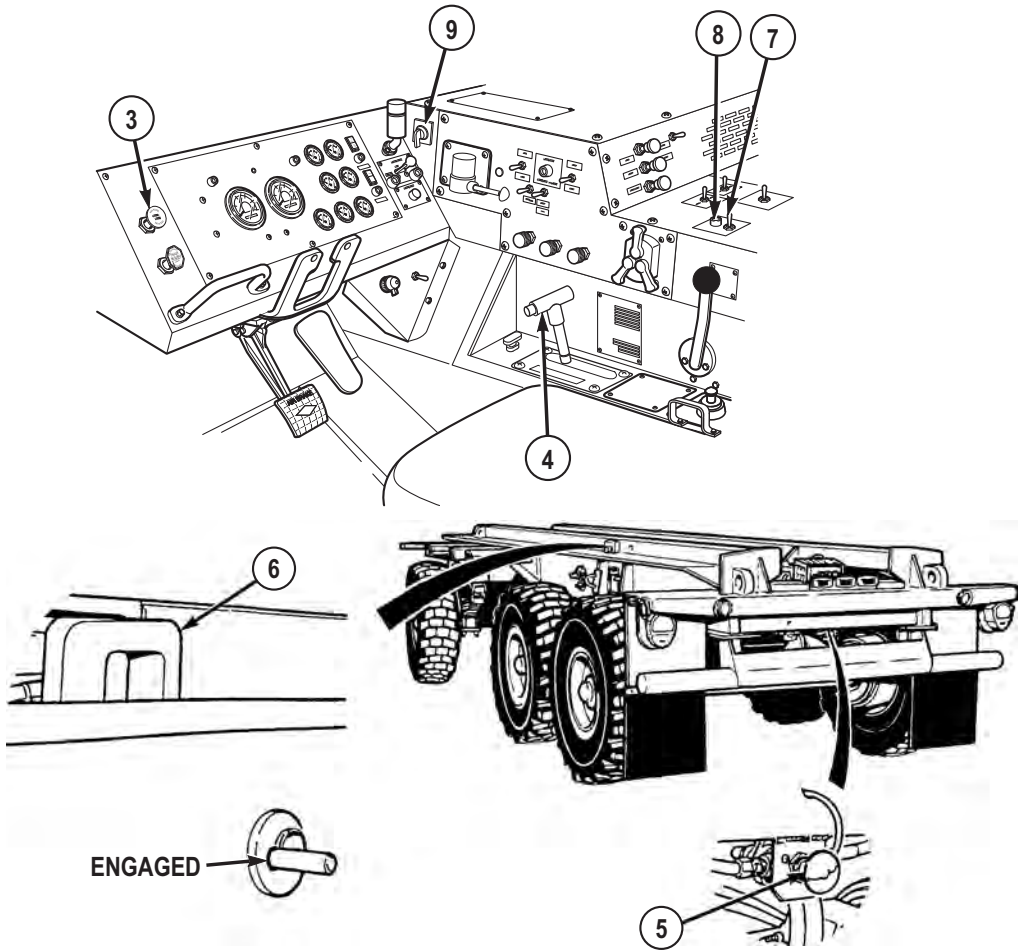


Figure 2.

NOTE

LHS will only operate when transmission range selector (4) in N (neutral).

3. Set transmission range selector (4) to N (neutral).

OPERATION - Continued**WARNING**

Ensure trailer air system is pressurized prior to beginning transfer or flatrack locks may not properly engage/disengage. Failure to comply may result in injury or death to personnel.

4. Push in knob (5) and retract flatrack locks (6).
5. Set PTO ENGAGE switch (7) to ON position. Indicator light (8) will illuminate.

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Load must be evenly distributed on flatrack pallet. Uneven load distribution may cause LHS OVER LOAD indicator to give false signals and cause LHS to operate incorrectly.

NOTE

The amount of time to load and unload is controlled by engine speed. Engine speed may be increased to approximately 1,500 rpm to reduce loading and unloading times.

6. Turn hydraulic selector switch (9) to MAN H.A.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

OPERATION - Continued**WARNING**

Ensure rail transport locking pins are disengaged prior to unloading flatrack. Rail transport locking pins are used for rail transport only. Failure to comply may result in injury or death to personnel and damage to equipment.

WARNING

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

7. Move joystick (10) to UNLOAD position until flatrack rollers (11) contact trailer.
8. Release joystick (10).

OPERATION - Continued

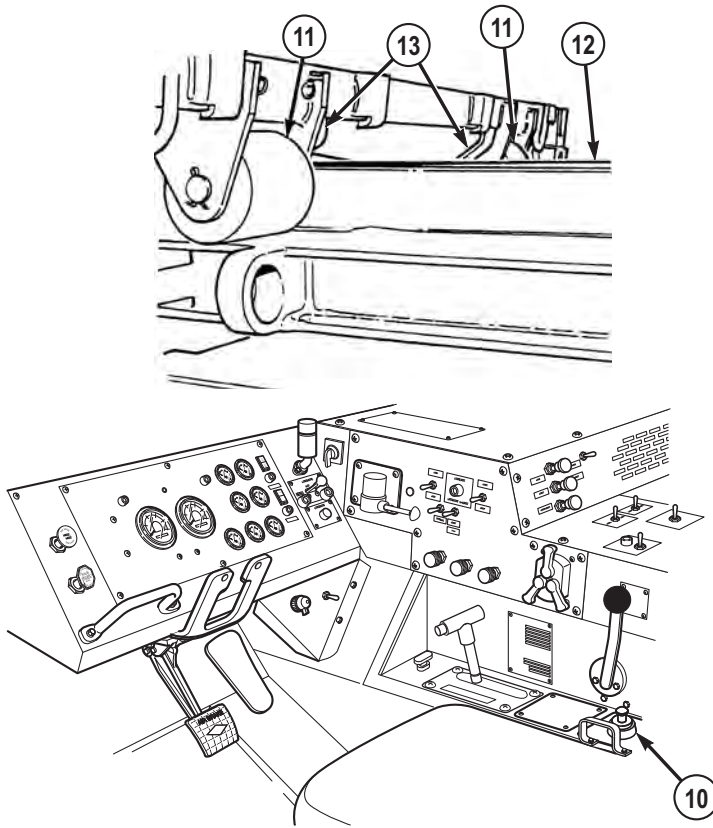


Figure 3.

9. Inspect and verify that trailer guides (12) are between flatrack main rails (13).

NOTE

If trailer guides are aligned, Skip to Step (11).

10. If trailer guides (12) are not aligned:
 - a. Move joystick (10) to LOAD position.
 - b. Release joystick (10) when flatrack is completely reloaded onto vehicle.
 - c. Repeat Steps (7) through (9).

CAUTION

- To avoid equipment damage, visually check that hook arm cylinders have fully extended.

OPERATION - Continued

- To avoid equipment damage, ensure that hook arm cylinders do not complete full extension while operating at engine speeds above idle.

NOTE

LHS OVER LOAD indicator will come on when hook arm cylinders are fully extended and joystick is activated.

11. Move joystick (10) to UNLOAD position and hold until hook arm cylinders (14) are fully extended.
12. Release joystick (10).

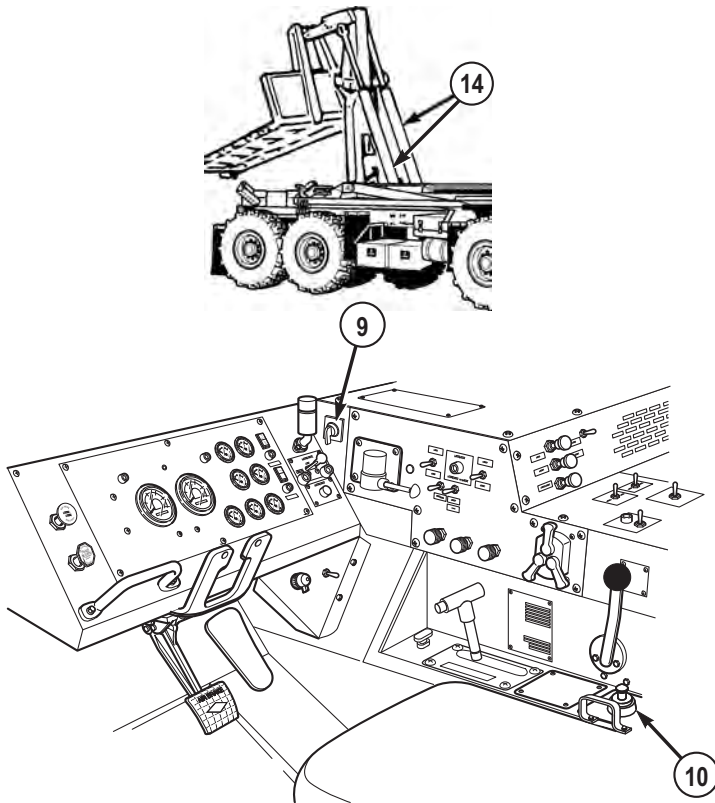


Figure 4.

13. Turn hydraulic selector switch (9) to MAN M.F.
14. Move joystick (10) to UNLOAD position until front of flatrack is completely seated on trailer.

OPERATION - Continued

15. Release joystick (10).

CAUTION

- Do not use R (reverse) to back up vehicle while hook arm is attached to flatrack or damage to LHS will occur.
 - Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
16. Turn hydraulic selector switch (9) to MAN H.A.
 17. Move joystick (10) to LOAD position until front of flatrack is raised approximately 12 to 18 in. (30 to 46 cm) above trailer deck height.

OPERATION - Continued

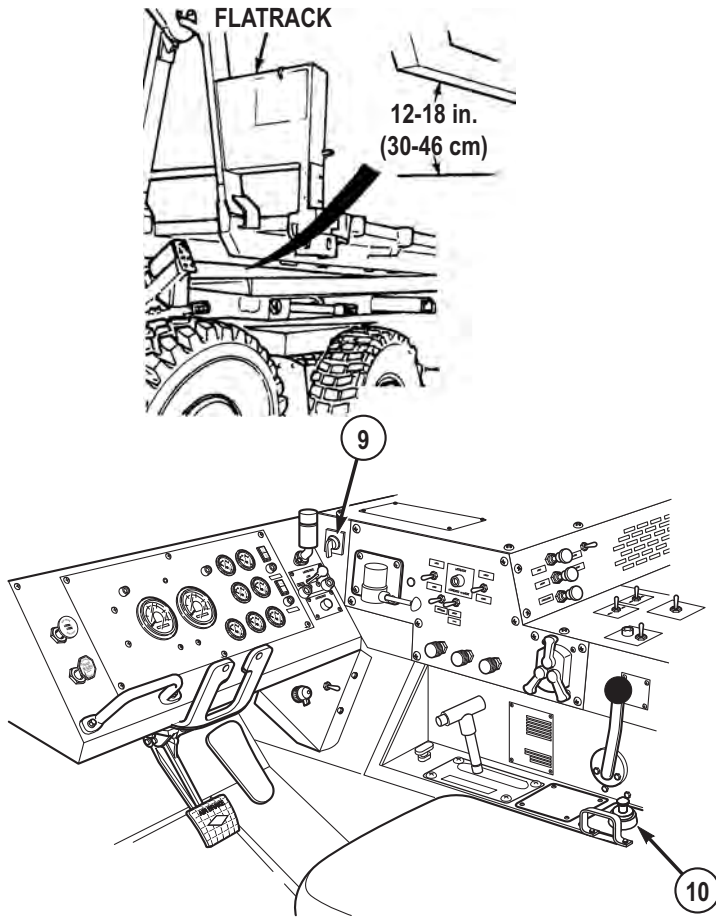


Figure 5.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

18. Turn hydraulic selector switch (9) to MAN M.F.
19. Move joystick (10) to UNLOAD position until flatrack rollers (11) contact trailer stops (17) and front of flatrack guides are seated on trailer.
20. Release joystick (10).

OPERATION - Continued

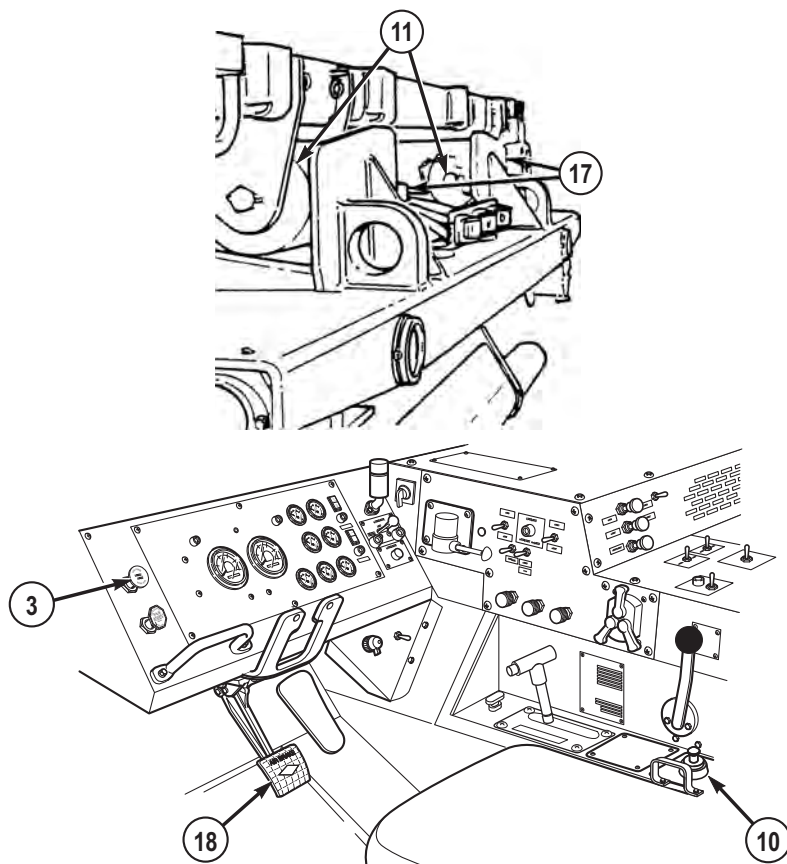


Figure 6.

21. Inspect that rear flatrack rollers (11) on flatrack have contacted trailer stops (17).
22. Apply service brake pedal (18).
23. Push in PARKING BRAKE control (3).

NOTE

It may be necessary to repeat Steps (24) through (26) several times to clear LHS lift hook from flatrack hook bar.

24. Move joystick (10) to UNLOAD position to allow top of LHS lift hook (15) to clear flatrack hook bar (16).

OPERATION - Continued

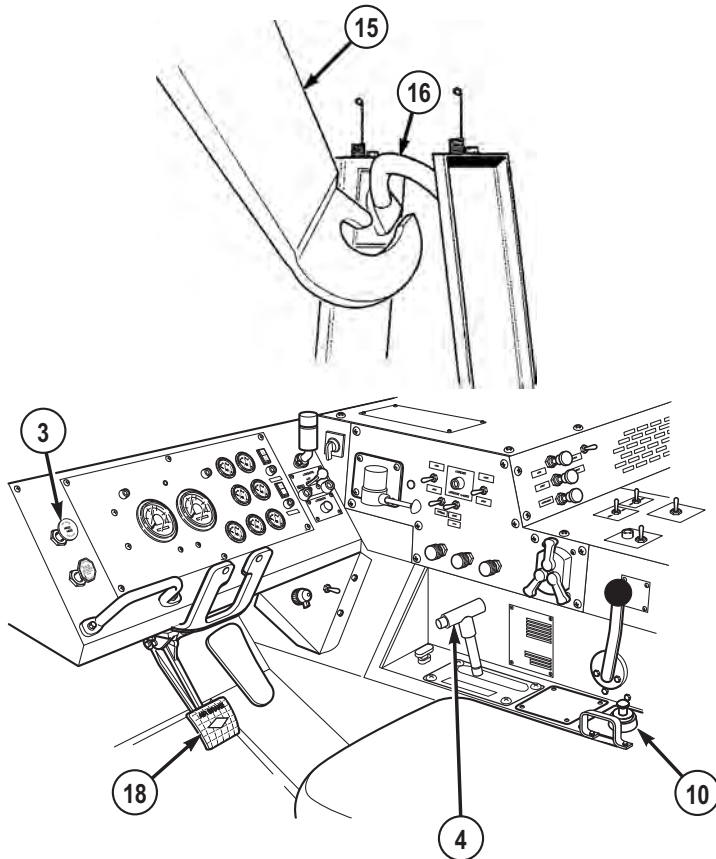


Figure 7.

NOTE

To prevent flatrack from pulling away from stops, do not move vehicle forward more than 3 in. (76.2 mm).

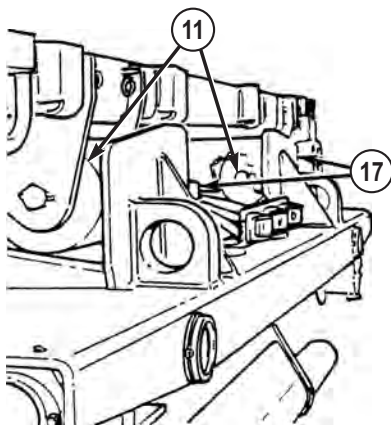
25. Release service brake pedal (18), set transmission range selector (4) in D (drive), and move vehicle forward approximately 3 in. (76.2 mm). Apply service brake pedal (18).
26. Move joystick (10) to UNLOAD position to disengage LHS lift hook (15) from flatrack hook bar (16).

NOTE

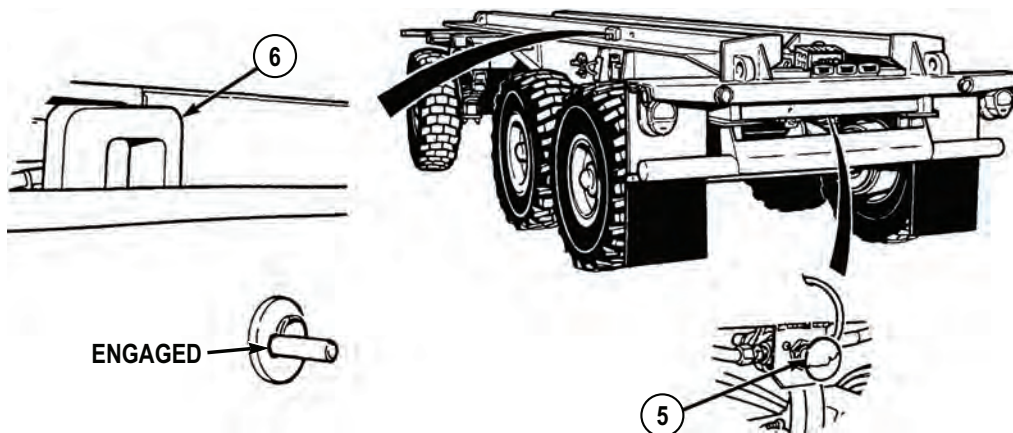
LHS will only operate when transmission range selector is in N (neutral).

OPERATION - Continued

27. Set transmission range selector (4) to N (neutral).
28. Pull out PARKING BRAKE control (3).
29. Inspect that rear flatrack rollers (11) have contacted trailer stops (17).

*Figure 8.*

30. Pull knob (5) to engage flatrack locks (6).

*Figure 9.*

31. Inspect that flatrack locks (6) are engaged.
32. Push in PARKING BRAKE control (3).

OPERATION - Continued

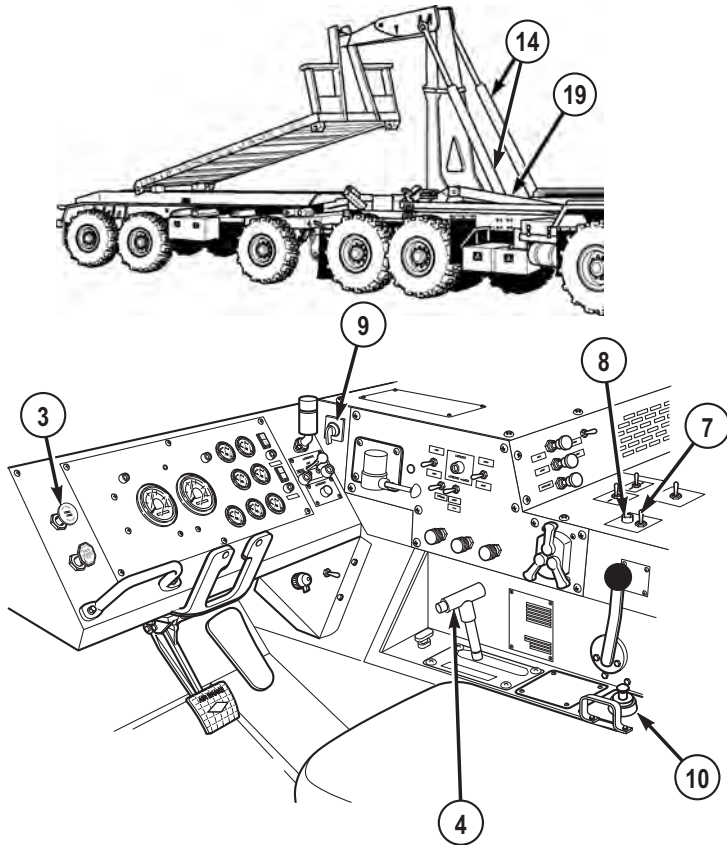


Figure 10.

33. Set transmission range selector (4) to D (drive).
34. Move vehicle forward approximately 5 ft. (1.5 m).
35. Pull out PARKING BRAKE control (3).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

36. Set transmission range selector (4) to N (neutral).

OPERATION - Continued**WARNING**

Never drive with LHS NO TRANSIT indicator illuminated. An illuminated indicator means LHS is not fully stowed. Failure to comply may result in injury or death to personnel.

NOTE

LHS OVER LOAD indicator will come on when main frame cylinders are fully extended, or fully retracted and joystick is being activated.

37. Move joystick (10) to LOAD position and hold in this position until main frame cylinders (19) are fully retracted.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

38. Turn hydraulic selector switch (9) to MAN H.A.

NOTE

LHS OVER LOAD indicator will come on when hook arm cylinders are fully extended, or retracted and joystick is being activated.

39. Hold joystick (10) in LOAD position until hook arm cylinders (14) are fully retracted.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

40. Turn hydraulic selector switch (9) to MAN TRANS.
41. Set PTO ENGAGE switch (7) to OFF position. Indicator light (8) will go out.
42. Inspect that flatrack is completely seated and load locks (6) are engaged.

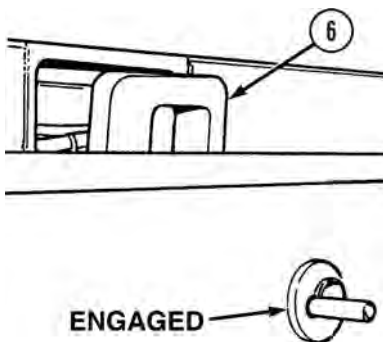
OPERATION - Continued

Figure 11.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE

TRANSFER FLATRACK FROM TRAILER TO VEHICLE IN MANUAL MODE

INITIAL SETUP:

Not Applicable

OPERATION

CAUTION

There must be sufficient air pressure in trailer air system to retract flatrack locks, or damage to flatrack lock can occur while attempting to remove flatrack from trailer. If not, use vehicle to charge trailer air system using trailer air charging hose. If air system cannot retract flatrack locks, use manual flatrack lock retract procedure (refer to TM 9-2330-385-14). (WP 0173)

Ensure air lines and cables are properly stowed to prevent damage to equipment (refer to TM 9-2330-385-14). (WP 0173)

Ensure that trailer drawbar is down against the ground during transfer operations, or damage to equipment may result.

1. Push the knob (1) on trailer to retract flatrack locks (2).

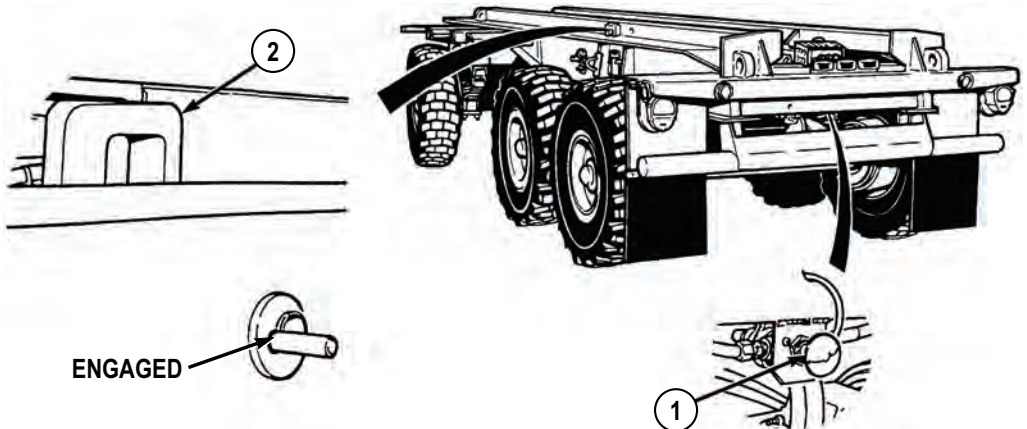


Figure 1.

OPERATION - Continued**CAUTION**

Ensure both flatrack locks are fully retracted, or damage to equipment may result.

2. Inspect that both flatrack locks (2) are fully retracted.
3. Back vehicle up in line with trailer and stop approximately 5 ft. (1.5 m) from trailer.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

4. Apply service brake pedal (3) and set transmission range selector (4) to N (neutral).

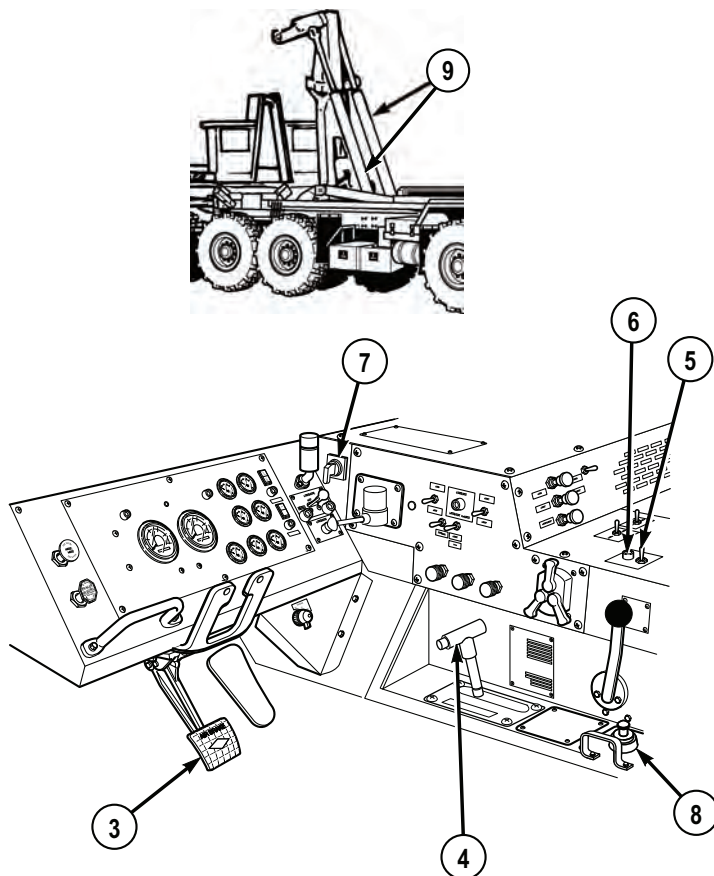


Figure 2.

OPERATION - Continued**WARNING**

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check ground conditions for firmness and extreme sideways inclination prior to picking up or off-loading a flatrack or container. Any ground instability beneath road wheels may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

5. Set PTO ENGAGE switch (5) to ON position. Indicator light (6) will illuminate.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

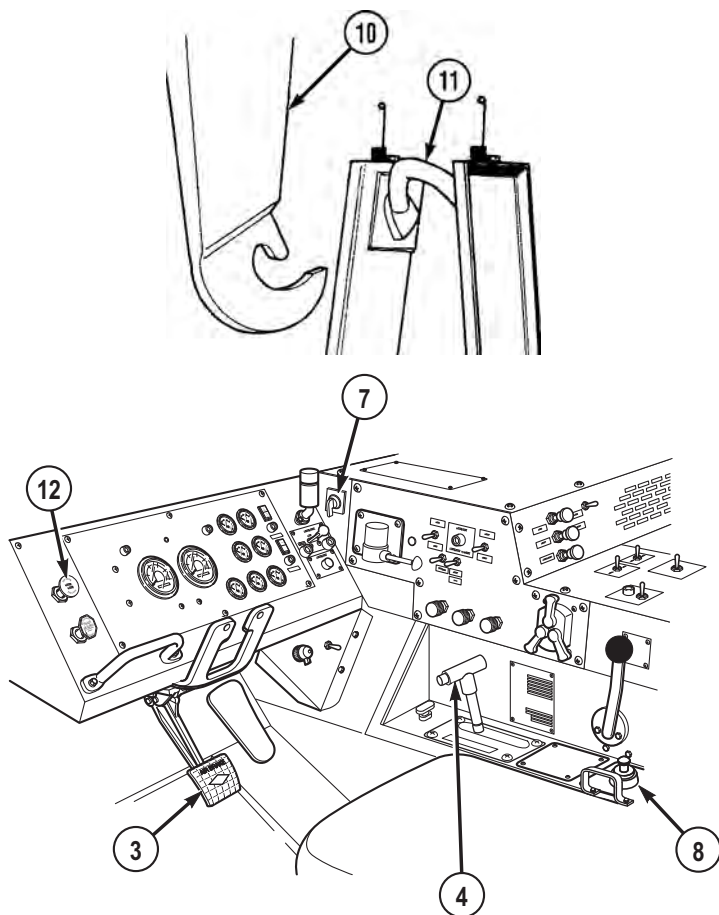
6. Turn hydraulic selector switch (7) to MAN H.A.

CAUTION

- To avoid equipment damage, visually check that hook arm cylinders have completed full extension.
- To avoid equipment damage, ensure that hook arm cylinders do not complete full extension while operating at engine speeds above idle.

OPERATION - Continued

- Ensure rail transport locking pins are disengaged before unloading flatrack. Rail transport locking pins are used for rail transport only. Failure to comply may result in damage to equipment.
7. Move joystick (8) to UNLOAD position and hold until hook arm cylinders (9) are fully extended.
 8. Release joystick (8).

*Figure 3.***CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

OPERATION - Continued

9. Turn hydraulic selector switch (7) to MAN M.F.
10. Hold joystick (8) to UNLOAD position until LHS lift hook (10) has moved below level at flatrack hook bar (11).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

11. Set transmission range selector (4) to R (reverse) and release service brake pedal (3). Back vehicle up until LHS lift hook (10) contacts flatrack hook bar (11). Set transmission range selector (4) to N (neutral).
12. Pull out PARKING BRAKE control (12).

CAUTION

- Ensure that trailer drawbar is down against the ground, or damage to equipment may result.
 - Both of the trailer bumper points must be under the vehicle bumper stop flange, and at least one of the bumper points must be within 3.5 in. (89 mm) of the bumper stop and the other trailer bumper point must be within .5 in. (13 mm) of the opposite bumper point distance to bumper stop, or flatrack will miss main rail guides and equipment damage may result.
13. Check that trailer bumper (13) is under flange of vehicle bumper stop (14).

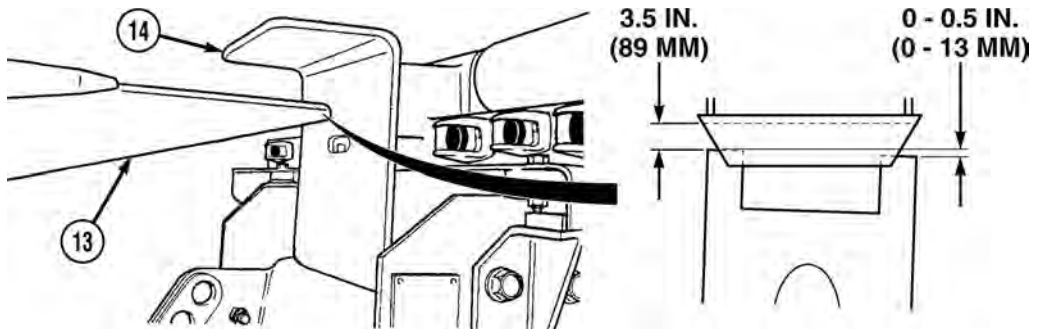


Figure 4.

14. Push in PARKING BRAKE control (12).

OPERATION - Continued

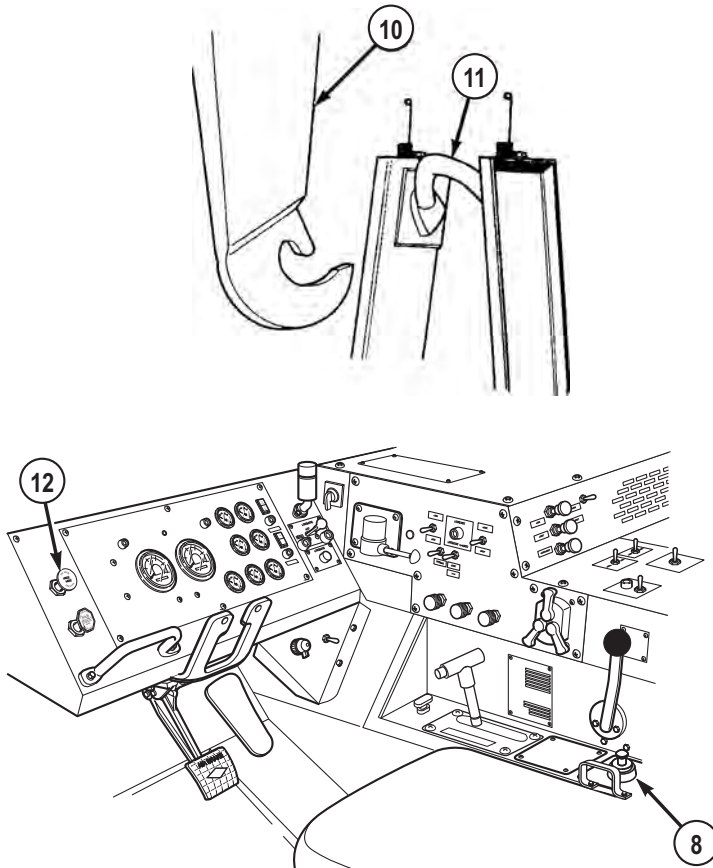


Figure 5.

15. Move joystick (8) to LOAD position and engage flatrack hook bar (11) with LHS lift hook (10).

CAUTION

- To avoid equipment damage, visually check that hook arm cylinders have completed full extension.
- To avoid equipment damage, ensure that hook arm cylinders do not complete full extension while operating at engine speeds above idle.
- Ensure rail transport locking pins are disengaged before unloading flatrack. Rail transport locking pins are used for rail transport only. Failure to comply may result in damage to equipment.

OPERATION - Continued**NOTE**

LHS OVER LOAD indicator will illuminate when main frame cylinders are fully retracted and joystick is being activated.

16. Continue to load with hydraulic selector switch (7) in MAN M.F. until main frame cylinders (15) are fully retracted.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

17. Turn the hydraulic selector switch (7) to MAN H.A.

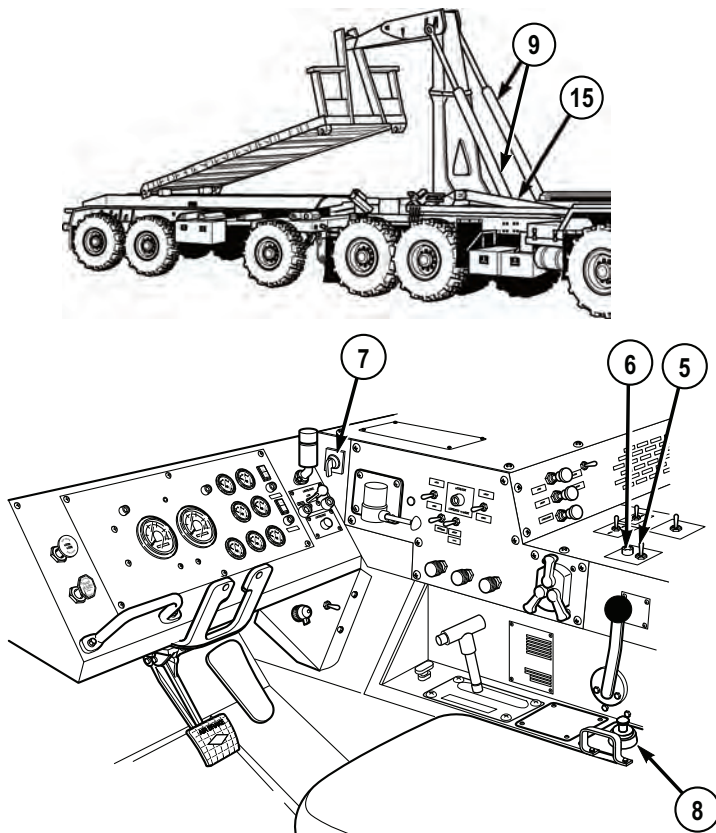


Figure 6.

OPERATION - Continued**WARNING**

Never drive with LHS NO TRANSIT indicator illuminated. An illuminated indicator means LHS is not fully stowed. Failure to comply may result in injury or death to personnel.

NOTE

LHS OVER LOAD indicator will illuminate when main frame cylinders are fully retracted and joystick is being activated.

18. Hold joystick (8) to LOAD position until hook arm cylinders (9) are fully retracted.

CAUTION

- Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.
- Hydraulic selector switch must remain in MAN TRANS while vehicle is traveling or damage to equipment may result.

19. Turn hydraulic selector switch (7) to MAN TRANS.
20. Set PTO ENGAGE switch (5) to OFF position. Indicator light (6) will go out.

NOTE

If load locks do not engage, raise flatrack slightly and lower again. Flatrack should seat completely and engage load locks.

21. Inspect that load locks (16) are engaged and flatrack is fully loaded on vehicle.

OPERATION - Continued

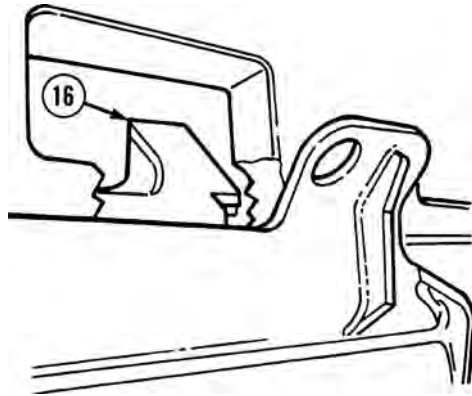


Figure 7.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
LOADING/UNLOADING FLATRACK (WITH OR WITHOUT ROLLERS) FROM/TO DOCK
AREA OR BAY (NOT EXCEEDING VEHICLE CHASSIS HEIGHT)**

INITIAL SETUP:

Not Applicable

LOADING**CAUTION**

Do not back up to loading docks in which the height of the dock exceeds the height of bottom of the flatrack on the vehicle, or damage to equipment may result.

1. Position vehicle approximately 5 ft. (1.5 m) from front of flatrack.
2. Apply service brake pedal (1).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

3. Set transmission range selector (2) to N (neutral).

LOADING - Continued

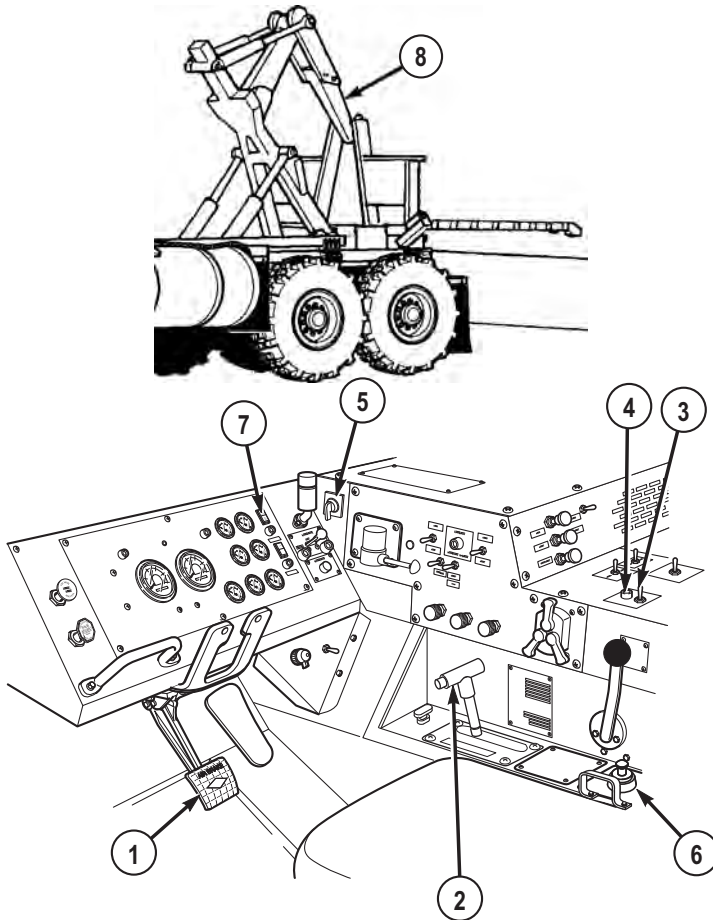


Figure 1.

NOTE

When loading or unloading flatrack from dock or bay area, presence of rollers on rear of flatrack will aid in operation. Procedure can be accomplished using hydraulic selector switch in AUTO or MAN H.A. and MAN M.F. Refer to loading/unloading flatrack in MANUAL mode (WP 0065) for movement of LHS in MANUAL mode.

4. Set PTO ENGAGE switch (3) to ON position. Indicator light (4) will illuminate.

LOADING - Continued**CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

5. Turn hydraulic selector switch (5) to MAN M.F., MAN H.A., or AUTO (as required).

WARNING

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

6. Move the joystick (6) to UNLOAD. LHS lift hook (8) will raise and begin to move rearwards. LHS NO TRANSIT indicator (7) will illuminate to indicate load locks have been cleared.
7. When LHS lift hook (8) has moved below level of flatrack hook bar (9), set transmission range selector (2) to R (reverse).

LOADING - Continued

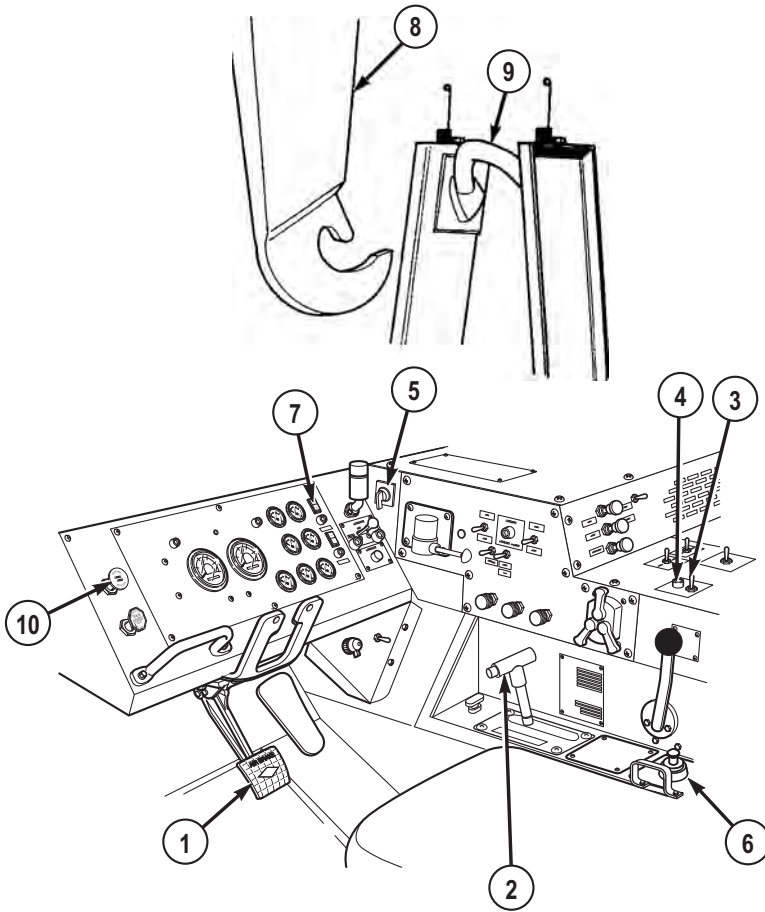


Figure 2.

8. Back vehicle to flatrack while aligning vehicle to flatrack as straight as possible (± 10 degrees) with lift hook (8) in middle of flatrack hook bar (9) until LHS lift hook contacts flatrack hook bar.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

9. Set transmission range selector (2) to N (neutral).

LOADING - Continued**CAUTION**

Load must be evenly distributed on the pallet. Uneven load distribution may cause LHS OVER LOAD indicator to give false signals and cause LHS to operate incorrectly. Damage to equipment may result.

NOTE

Slight misalignment (up to 10 degrees) will not prevent LHS lift hook from engaging flatrack hook bar.

10. Move the joystick (6) to LOAD, engaging LHS lift hook (8) in flatrack hook bar (9) and lift slightly.

CAUTION

Flatrack must be in contact with rear roller assembly on rear of vehicle before flatrack rear edge comes off loading bay or dock. Failure to contact rear roller assembly will OVER LOAD LHS components and may damage vehicle.

11. Release service brake pedal (1) and allow vehicle to be pulled toward dock or bay until approximately 6 in. (15 cm) away.
12. Apply service brake pedal (1) and move joystick (6) to LOAD position.

CAUTION

If LHS OVER LOAD indicator illuminates but loading operation continues, operator is cautioned that LHS is nearing its maximum capacity. In this situation, operator should determine if payload is evenly distributed on flatrack or if flatrack load exceeds 25,000 lbs. (11 350 kg). If any of these conditions exist, operator must redistribute or reduce payload, or damage to equipment may result.

If LHS OVER LOAD indicator illuminates, normal operation has stopped. Return load to original position and redistribute or reduce payload weight, or damage to equipment may result.

Load must be evenly distributed on the pallet. Uneven load distribution may cause LHS OVER LOAD indicator to give false signals and cause LHS to operate incorrectly. Damage to equipment may result.

13. Continue loading until LHS NO TRANSIT indicator (7) goes out, indicating LHS load locks have engaged.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

LOADING - Continued

14. Turn hydraulic selector switch (5) to OFF or MAN TRANS as required.
15. Pull out PARKING BRAKE control (10).
16. Set PTO ENGAGE switch (3) to OFF position. Indicator light (4) will go out.

NOTE

If load locks do not engage, raise flatrack slightly and lower again.
Flatrack should seat fully and engage load locks.

17. Inspect that load locks (11) are engaged and flatrack is fully seated on vehicle.

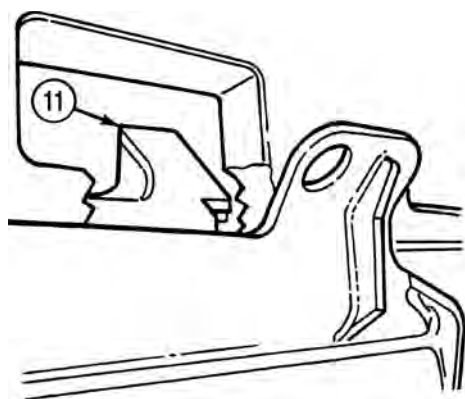


Figure 3.

UNLOADING**CAUTION**

Do not back up to loading docks in which the height of the dock exceeds the height of bottom of the flatrack on the vehicle, or damage to equipment may result.

NOTE

When loading or unloading flatrack from dock or bay area, presence of rollers on rear of flatrack will aid in operation. Procedure can be accomplished using hydraulic selector switch in AUTO or MAN H.A. and MAN M.F. Refer to loading/unloading flatrack in MANUAL mode (WP 0065) for movement of LHS in MANUAL mode.

1. Set the transmission range selector (1) to R (reverse) and back vehicle to dock (2).

UNLOADING - Continued

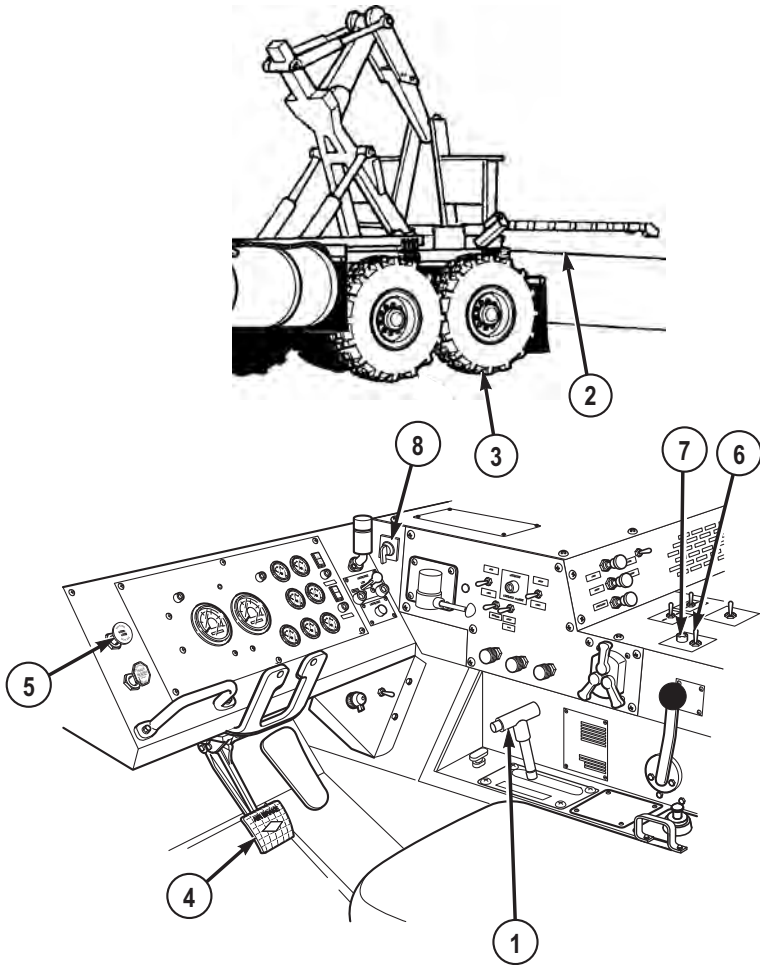


Figure 4.

2. Stop vehicle when rear tires (3) are approximately 6 in. (15 cm) from dock (2).

UNLOADING - Continued**WARNING**

Prior to and during any load or unload cycle, all personnel should stay clear of LHS, flatrack, front lift adapter, and container. Failure to comply may result in injury or death to personnel.

WARNING

Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of 22 ft. 2 in. (6.7 m). Failure to comply may result in injury or death to personnel.

NOTE

LHS will only operate when transmission range selector is in N (neutral).

3. Apply service brake pedal (4) and set transmission range selector (1) to N (neutral).
4. Pull out PARKING BRAKE control (5).

CAUTION

Ensure rail transport locking pins are disengaged before unloading flatrack. Rail transport locking pins are used for rail transport only. Failure to comply may result in damage to equipment.

5. Set PTO ENGAGE switch (6) to ON position. Indicator light (7) will illuminate.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

6. Turn the hydraulic selector switch (8) to AUTO or MAN H.A. (as required).

UNLOADING - Continued**NOTE**

The amount of time to load and unload is controlled by engine speed. Engine speed can be increased to 1,500 to maximum rpm to reduce loading and unloading times.

7. Move joystick (9) to UNLOAD position. Flatrack will raise and begin to move rearwards. LHS NO TRANSIT indicator (10) will illuminate to indicate load locks (11) have been cleared.

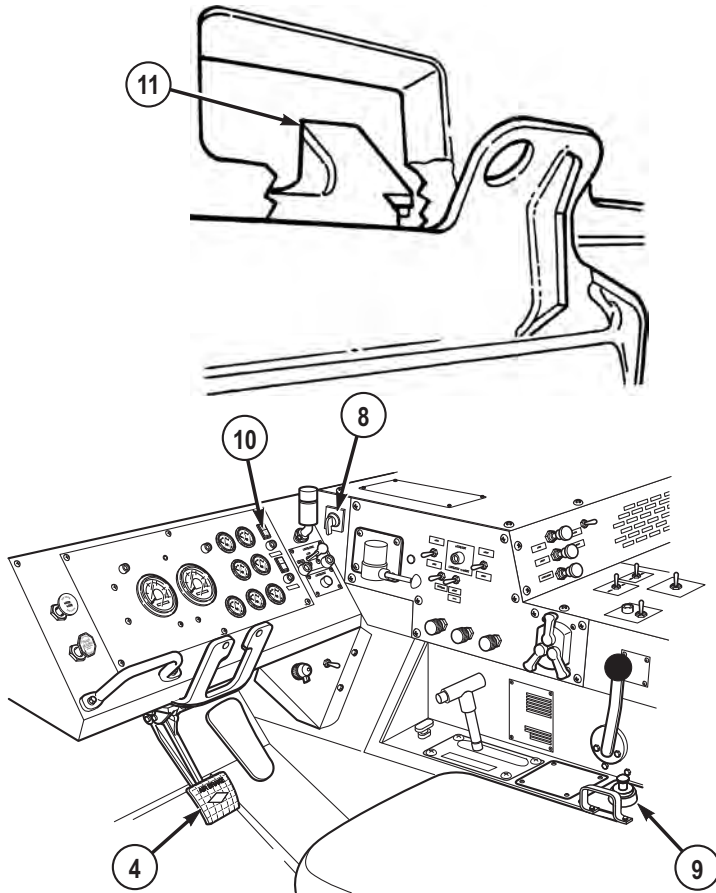


Figure 5.

UNLOADING - Continued**CAUTION**

- Do not back vehicle to push flatrack onto dock or bay. Damage to equipment will result.
- Do not use R (reverse) to back up vehicle while hook arm is attached to flatrack, or damage to LHS will occur.

8. As load continues rearward, flatrack will contact dock and flatrack will be pushed rearward onto dock or bay.
9. Release the joystick (9).

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

10. Turn the hydraulic selector switch (8) to MAN H.A.
11. Move joystick (9) to LOAD position until front of flatrack is raised approximately 15 in. (38 cm) above dock or bay.
12. Turn the hydraulic selector switch (8) to MAN M.F.
13. Move the joystick (9) to UNLOAD position until flatrack is positioned on dock or bay.
14. Release the joystick (9).

CAUTION

Before moving vehicle, ensure hook is not engaged to hook bar, or damage to equipment may result.

15. Apply the service brake pedal (4).

NOTE

It may be necessary to repeat Steps (15) through (19) several times to clear hook arm from flatrack hook bar.

16. Move joystick (9) to LOAD position to allow top of LHS lift hook (12) to clear flatrack hook bar (13).

UNLOADING - Continued

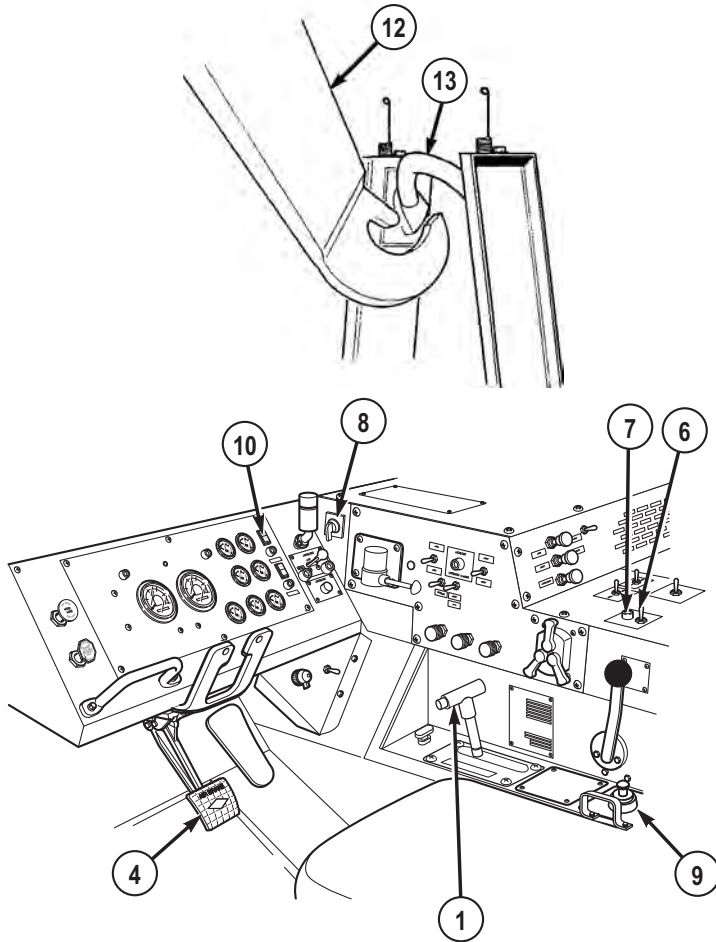


Figure 6.

NOTE

To prevent flatrack from pulling over edge of dock, do not move vehicle forward more than 3 in. (76.2 mm).

17. Release the service brake pedal (4) and set transmission range selector (1) to D (drive).
18. Move vehicle forward approximately 3 in. (76.2 mm) and apply service brake pedal (4).

UNLOADING - Continued**NOTE**

LHS will only operate when transmission range selector is in N (neutral).

19. Set transmission range selector (1) to N (neutral).
20. Move the joystick (9) to UNLOAD position to disengage LHS lift hook (12) from flatrack hook bar (13).
21. Set transmission range selector (1) to D (drive), release the service brake pedal (3), and move the vehicle forward approximately 5 ft. (1.5 m).
22. Apply service brake pedal (4).

NOTE

LHS will only operate when transmission range selector is in N (neutral).

23. Set transmission range selector (1) to N (neutral).
24. Move joystick (9) to LOAD position until LHS NO TRANSIT indicator (10) goes out, indicating LHS is completely stowed.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

25. Turn hydraulic selector switch (8) to OFF.
26. Set PTO ENGAGE switch (6) to OFF position. Indicator light (7) will go out.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE OPERATE ARCTIC ENGINE HEATER

INITIAL SETUP:

Not Applicable

WARNING



CARBON MONOXIDE (EXHAUST GAS) CAN CAUSE DEATH.

- Carbon monoxide is a colorless, odorless, **DEADLY POISONOUS** gas that, when breathed, deprives body or oxygen and causes **SUFFOCATION**. Breathing air with carbon monoxide produces symptoms of headache, dizziness, loss of muscular control, a sleepy feeling, and coma. Permanent **BRAIN DAMAGE** or death can result from heavy exposure. Carbon monoxide occurs in the exhaust fumes of fuel-burning heaters and internal combustion engines. Carbon monoxide can become dangerously concentrated under conditions of no ventilation. Precautions **MUST** be followed to ensure personnel are safe whenever personnel heaters or engine is operated for any purpose. Failure to comply may result in injury or death to personnel.
- **DO NOT** operate engine in a closed place without proper ventilation. Failure to comply may result in injury or death to personnel.
- Do not drive vehicle with inspection plates, cover plates, or engine compartment covers removed unless necessary for maintenance purposes. Failure to comply may result in injury or death to personnel.
- **BE ALERT** at all times during vehicle operation for exhaust odors and exposure symptoms. If either is present, **IMMEDIATELY VENTILATE** personnel compartments. If symptoms persist, remove affected personnel to fresh air and keep warm. **DO NOT PERMIT PHYSICAL EXERCISE**. If necessary, give artificial respiration and get immediate medical attention. For artificial respiration, refer to FM 4-25.11 . Failure to comply may result in injury or death to personnel.

- BE AWARE that the gas particulate filter unit or field protection mask for nuclear-biological-chemical protection WILL NOT offer safety from carbon monoxide poisoning.
- THE BEST DEFENSE AGAINST CARBON MONOXIDE POISONING IS GOOD VENTILATION.

WARNING



Attempting to operate heater with frozen or slushy coolant could cause coolant hose to burst or separate from heater. Make sure proper mixture of water and anti-freeze (refer to lubrication table) is maintained at all times. Failure to comply may result in damage to engine and/or injury to personnel.

WARNING



- The arctic engine heater must be off when filling any fuel tanks on vehicle. Failure to comply may result in injury or death to personnel.
- Do not operate arctic engine heater in garages or enclosed areas without proper ventilation. Failure to comply may result in injury or death to personnel.

CAUTION

- Do not attempt to operate arctic engine heater if arctic engine heater fails to start during normal startup, or shutdown occurs during normal operation. System shutdown may indicate an arctic engine heater system fault. Failure to comply may cause system lockout.
- Do not operate arctic engine heater if arctic engine heater light flashes intermittently during normal operations. Arctic engine heater indicator light flashing indicates an arctic engine heater system fault. Failure to comply may cause system lockout.

NOTE

- The arctic engine heater will attempt to start two times per start cycle. After the second failed start attempt, the arctic engine heater will not

operate until the arctic engine heater on/off switch is turned OFF and back ON.

- If arctic engine heater flame out occurs during operation, arctic engine heater will attempt one restart. If unsuccessful, arctic engine heater will shutdown.
 - During operation, arctic engine heater continually monitors input voltage. If the arctic engine heater input voltage decreases below (20 V) or increases above (30 V), arctic engine heater will automatically shutdown.
1. Set arctic engine heater switch (1) to ON position. Observe arctic engine heater indicator light (2) for steady illumination.

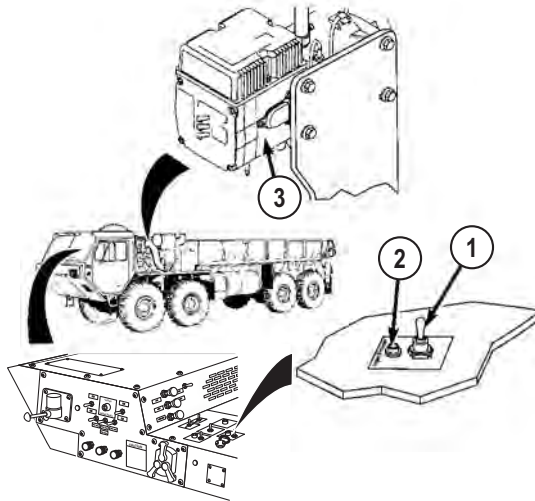


Figure 1.

2. Observe arctic engine heater (3) for proper operation.
3. Operate arctic engine heater (3) for 35 minutes to warm engine.
4. After 35 minutes, start engine. (WP 0038)
5. After engine is started, set arctic engine heater switch (1) in OFF position. Indicator light (2) will go out.

END OF TASK

END OF WORK PACKAGE

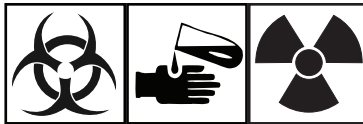
OPERATOR MAINTENANCE OPERATE GAS PARTICULATE FILTER UNIT (GPFU)

INITIAL SETUP:

Not Applicable

OPERATE GPFU

WARNING



- BE AWARE that the gas particulate filter unit or the field protective mask for nuclear-biological-chemical protection WILL NOT offer safety from carbon monoxide poisoning.
- If NBC exposure is suspected, all air filter media should be handled by personnel wearing protective equipment. Consult your unit NBC Officer or NBC NCO for appropriate handling or disposal procedures.
- If required to remain inside the vehicle during extreme heat, occupants should follow the water intake, work/rest cycle, and other heat stress preventive medicine measures contained in FM 21-10, Field Hygiene and Sanitation. Failure to comply may result in injury or death to personnel.

NOTE

- Do Steps (1) through (8) only when under Nuclear, Biological, or Chemical (NBC) attack and/or when ordered to do so.
 - For detailed information concerning protective mask, refer to TM 3-4240-280-10.
 - Both crew stations have M-3 heater, hose, and air duct sockets.
1. Remove two protective masks (1) and canisters (2) from pouches (3).

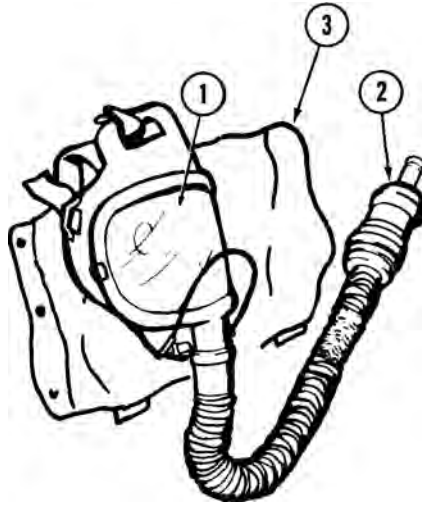
OPERATE GPFU - Continued

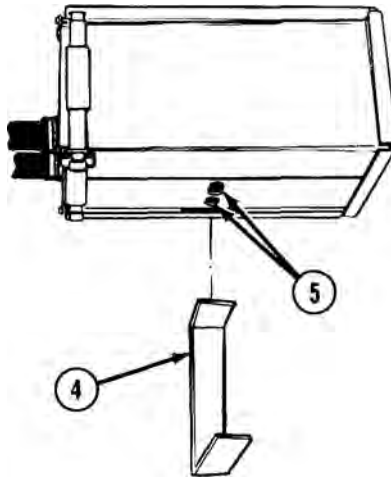
Figure 1.

2. Put on protective masks (1).
3. Clear and seal protective masks (1).

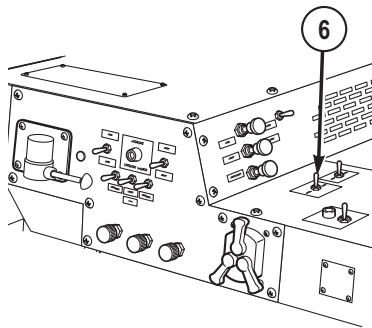
NOTE

Spring clip must be repositioned on filter assembly air intake so intake holes are open for gas particulate filter system to work. Clip is repositioned through bottom of bracket.

4. Pull down on spring clip (4) to uncover intake holes (5).

OPERATE GPFU - Continued*Figure 2.*

5. Set GAS PARTICULATE FILTER switch (6) to ON.

*Figure 3.*

OPERATE GPFU - Continued**NOTE**

One mount is located to left of drivers seat at roof brace. Second mount is located on middle cab roof brace to left of passenger seat.

6. Disconnect two air duct hose breakaway sockets (7) from mounts (8).

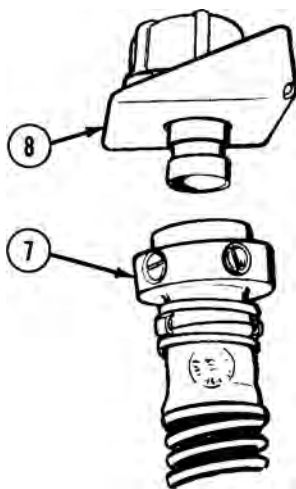
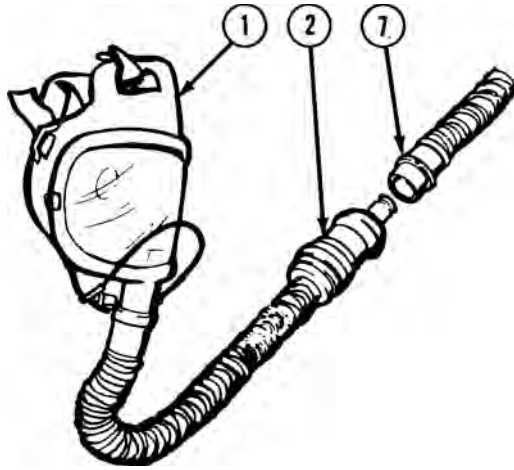


Figure 4.

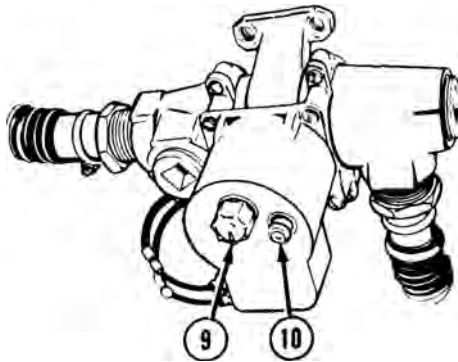
WARNING

Under arctic conditions, danger of frostbite exists. Mask can be put on, but air duct hose socket shall not be connected to mask canister until M-3 heater has been on for 15 minutes. Failure to comply may result in injury or death to personnel.

7. Connect two air duct hose breakaway sockets (7) to canisters (2) of protective masks (1) and breathe through masks.

OPERATE GPFU - Continued*Figure 5.***NOTE**

- There are two M-3 heaters. Both are the same.
 - Heater indicator light will go off and on during normal heater operation.
8. If air is too cold to breathe comfortably, turn knob (9) clockwise until heater indicator (10) lights. To adjust temperature:

*Figure 6.*

- a. Turn knob (9) clockwise for warmer air.
- b. Turn knob (9) counterclockwise for cooler air.

OPERATE GPFU - Continued

9. When heater is no longer needed, turn control knob (9) counterclockwise to OFF position.

NOTE

Do Steps (1) through (5) only when Nuclear, Biological, or Chemical (NBC) attack is over and/or when ordered to do so.

1. When protective masks (1) are no longer needed, disconnect air duct hose breakaway sockets (2) from canisters (3).

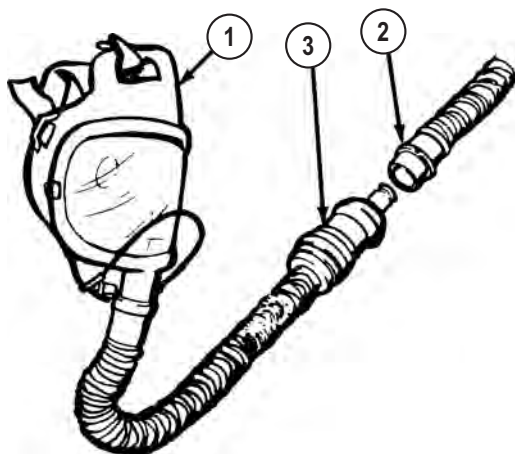


Figure 7.

2. Connect two air duct hose breakaway sockets (2) to mounts (4).

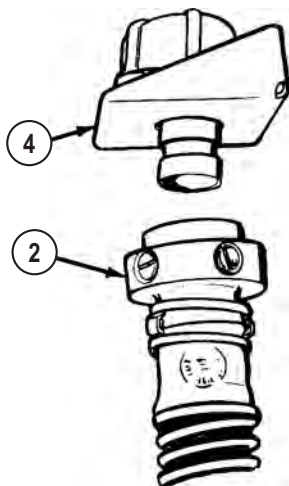


Figure 8.

3. Set GAS PARTICULATE FILTER switch (5) to OFF.

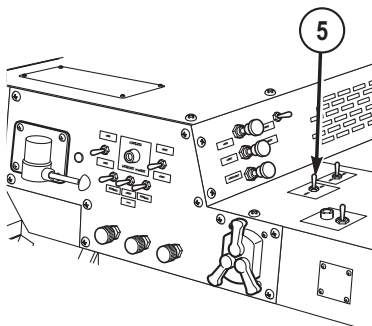


Figure 9.

4. Push up on spring clip (6) to cover intake holes (7).

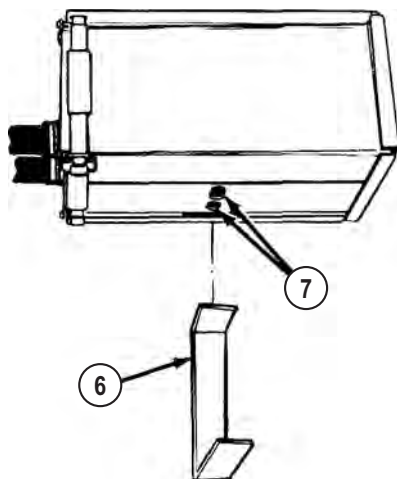


Figure 10.

5. Remove and stow two protective masks (1).

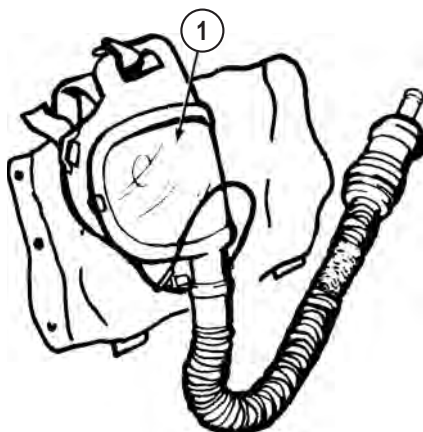


Figure 11.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE RIFLE STOWAGE MOUNT**

INITIAL SETUP:

Not Applicable

STOW RIFLE IN STOWAGE MOUNT

1. Position butt (1) of M-16 rifle (2) in lower mount (3) with trigger guard (4) toward rear of vehicle.

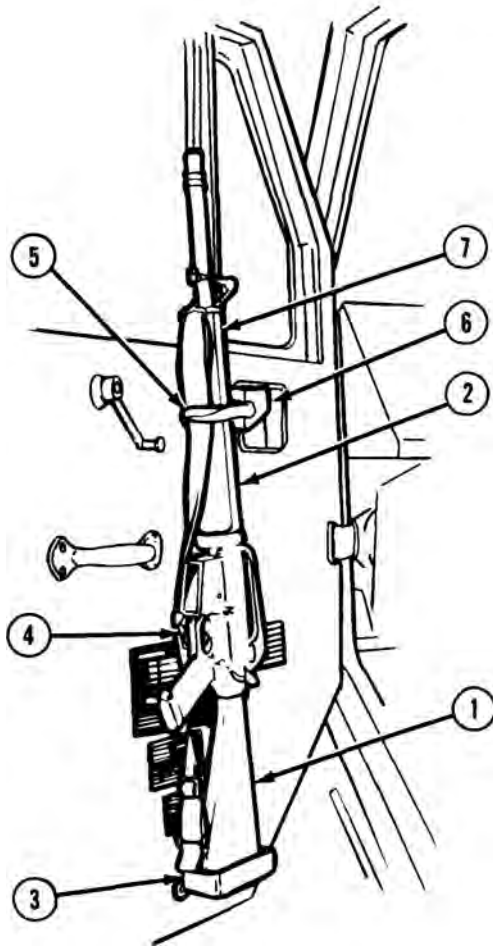
STOW RIFLE IN STOWAGE MOUNT - Continued

Figure 1.

2. Pull handle (5) of top mount (6) toward middle of cab.
3. Place heat guard (7) of M-16 rifle (2) in top mount (6).
4. Push handle (5) across heat guard (7).
5. Check that M-16 rifle (2) is held tightly.

REMOVE RIFLE FROM STOWAGE MOUNT

1. Pull handle (1) of top mount (2) down and toward middle of cab.

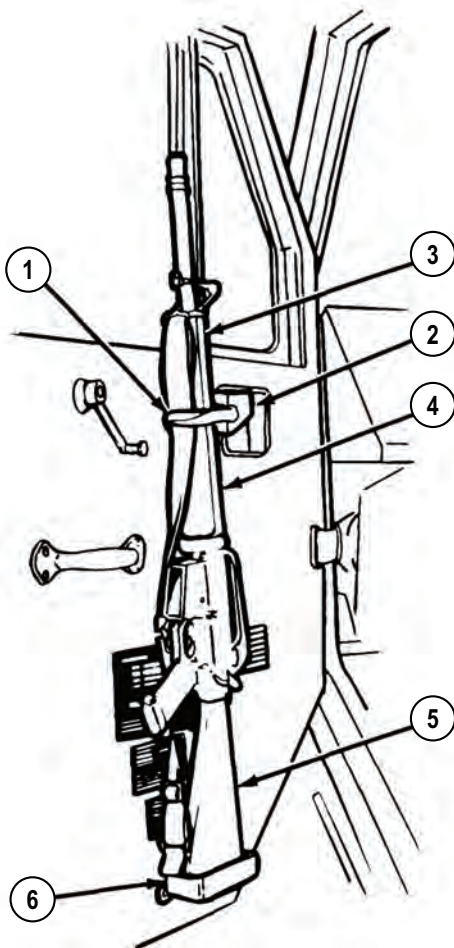
REMOVE RIFLE FROM STOWAGE MOUNT - Continued

Figure 2.

2. Remove heat guard (3) of M-16 rifle (4) from top mount (2).
3. Remove butt (5) of M-16 rifle (4) from lower mount (6).

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE MACHINE GUN MOUNT**

INITIAL SETUP:

Not Applicable

REFERENCE

For operation of the machine gun mount, refer to TM 9-1005-245-13&P. (WP 0173)

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE M-8 CHEMICAL ALARM**

INITIAL SETUP:

Not Applicable

REFERENCE

For operation of the M-8 Chemical Alarm, refer to TM 3-6665-225-12. (WP 0173)

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE M-13 DECONTAMINATION KIT**

INITIAL SETUP:

Not Applicable

REFERENCE

For operation of the M-13 Decontamination Kit, refer to TM 3-4230-214-12&P. (WP 0173)

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE RADIO**

INITIAL SETUP:

Not Applicable

REFERENCE

For operation of the radio, refer to TM 11-5820-498-12. (WP 0173)

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE PORTABLE WORK LAMP OPERATION

INITIAL SETUP:

Not Applicable

INSTALL/OPERATE/REMOVE PORTABLE WORK LAMP

1. Remove work lamp (1) and work lamp harness (2) from stowage.

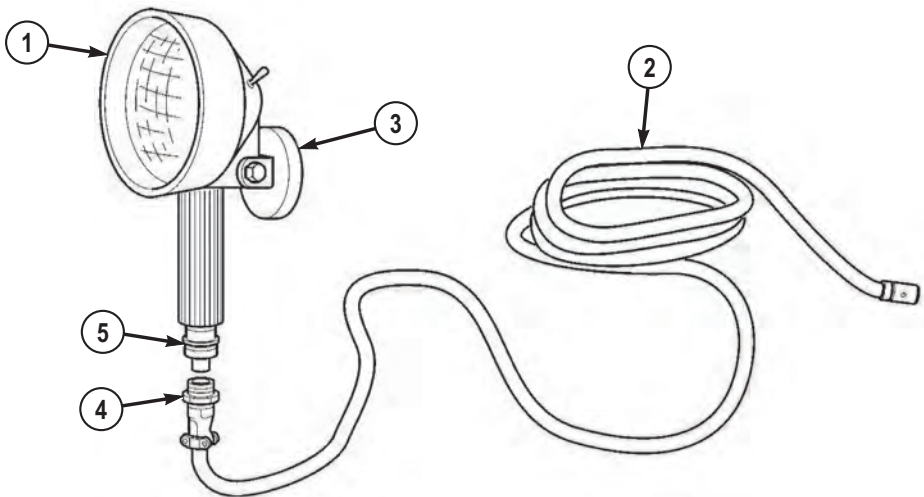


Figure 1.

2. Mount lamp (1) on vehicle using magnet (3).
3. Install work lamp harness plug (4) on work lamp terminal (5).
4. Route work lamp harness (2) through driver side door opening (6), between inside of cab roof (7) and air horn valve hoses (8).

INSTALL/OPERATE/REMOVE PORTABLE WORK LAMP - Continued

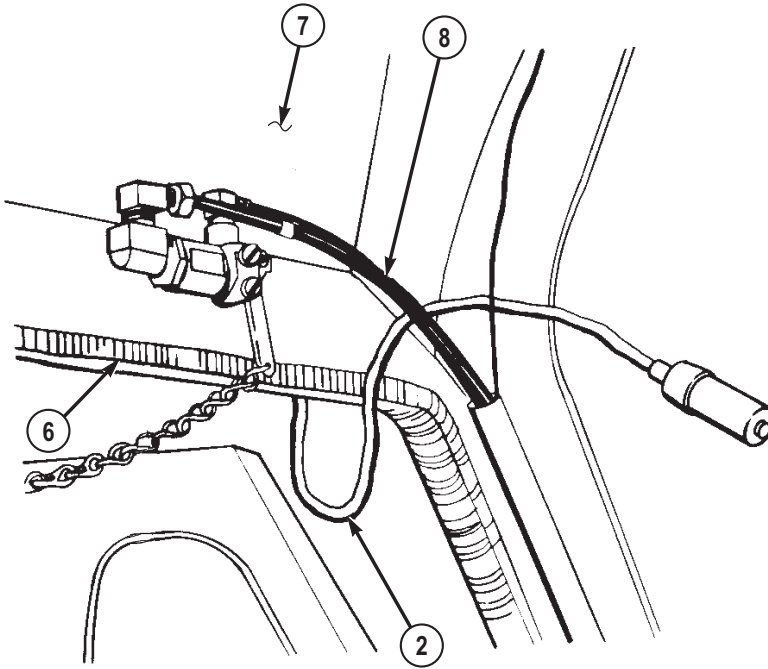


Figure 2.

5. Route work lamp harness (2) across driver side defroster (9) and across center console (10) to utility outlet (11).

INSTALL/OPERATE/REMOVE PORTABLE WORK LAMP - Continued

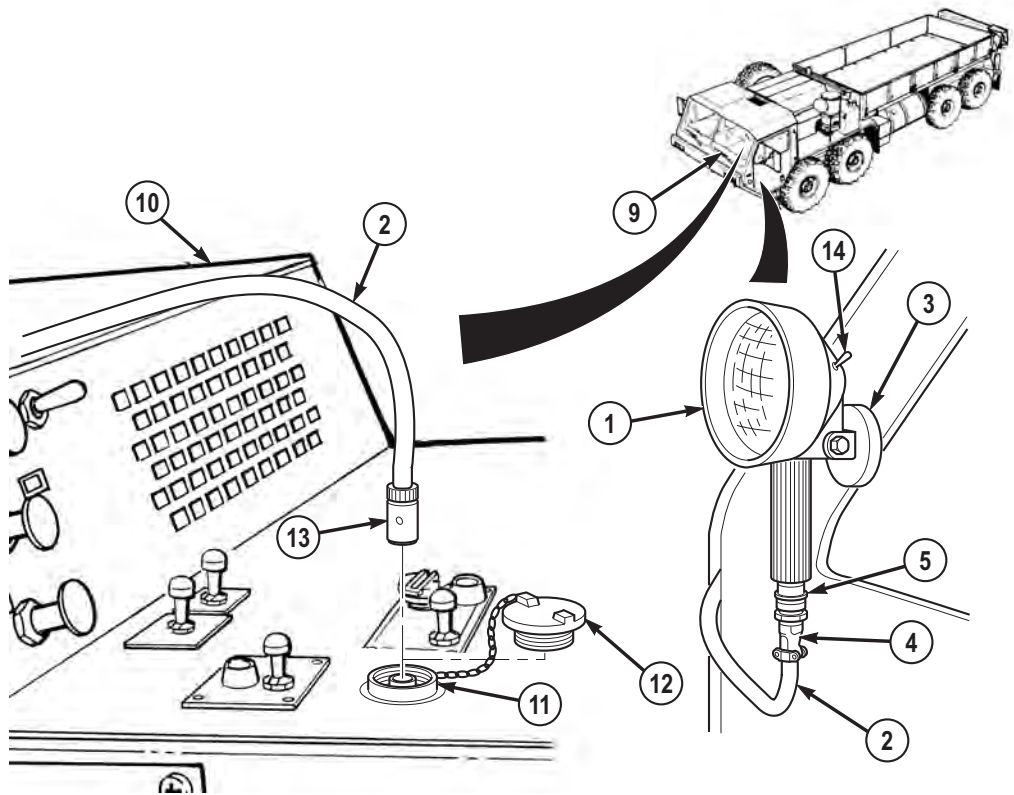


Figure 3.

6. Remove utility outlet cover (12). Insert work lamp harness plug (13) into utility outlet (11).
7. Turn on work lamp (1) using toggle switch (14).

NOTE

Perform Steps (8) through (13) when use of the portable work lamp is no longer required.

8. Turn off work lamp (1) using toggle switch (14).
9. Remove work lamp harness plug (13) from utility outlet (11). Install utility outlet cover (12).
10. Remove work lamp harness (2) from interior of cab.
11. Remove work lamp harness plug (4) from work lamp terminal (5).

INSTALL/OPERATE/REMOVE PORTABLE WORK LAMP - Continued

12. Disengage magnet (3) from vehicle.
13. Return work lamp (1) and work lamp harness (2) to stowage.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE DOME LIGHT**

INITIAL SETUP:

Not Applicable

TURN DOME LIGHT ON/OFF**CAUTION**

Failure to place light switches in off position when vehicle is not in use may cause battery and/or vehicle damage.

NOTE

- Dome light is located on very rear of cabin overhead centered between operator and crew seats.
- Dome light switch is a 2-position switch; down is off, up is on.
- Dome light is disabled whenever blackout lights are selected on the light control.

1. Lift up and hold UNLOCK lever (1).

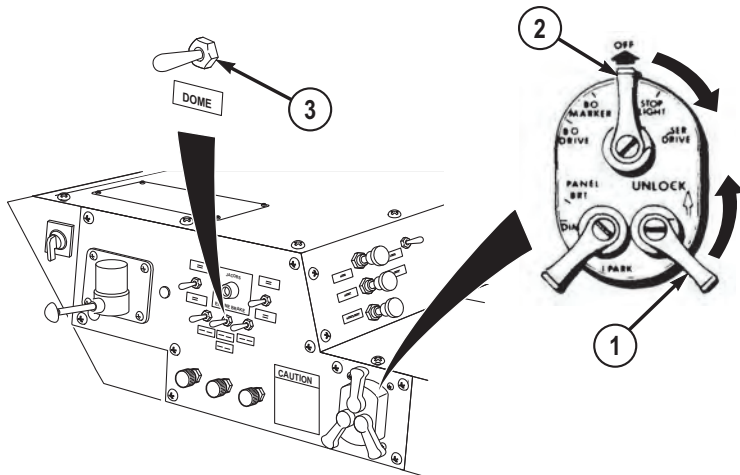


Figure 1.

TURN DOME LIGHT ON/OFF - Continued

2. Set lighting control lever (2) to STOP LIGHT or SER DRIVE position.
3. Release UNLOCK lever (1).
4. Set DOME switch (3) to ON position.

NOTE

Complete Steps (5) and (6) when dome light is no longer required.

5. Set DOME switch (3) to OFF position.
6. Set lighting control lever (2) to OFF position.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
OPERATE PANEL LIGHTS**

INITIAL SETUP:

Not Applicable

TURN PANEL LIGHTS ON/OFF**CAUTION**

Failure to place light switches in the off position when vehicle is not in use may cause battery and/or vehicle damage.

1. Lift up and hold UNLOCK lever (1).

TURN PANEL LIGHTS ON/OFF - Continued

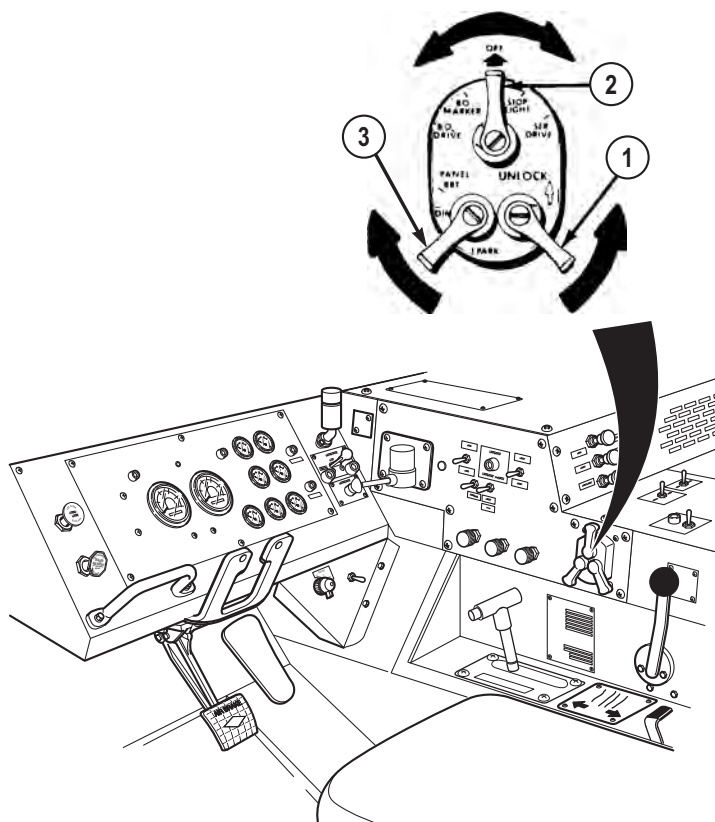


Figure 1.

NOTE

Panel lights will not function if lighting control lever is in OFF position.

2. Set lighting control lever (2) to desired position.
3. Release UNLOCK lever (1).
4. Set PANEL lever (3) to DIM or BRT (bright) as needed.

NOTE

Complete Steps (5) and (6) when panel lights are no longer required.

5. Set PANEL lever (3) to OFF position.

TURN PANEL LIGHTS ON/OFF - Continued

6. Set lighting control lever (2) to OFF position.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE PARKING LIGHTS**

INITIAL SETUP:

Not Applicable

TURN PARKING LIGHTS ON/OFF**CAUTION**

Failure to place light switches in the off position when vehicle is not in use may cause battery and/or vehicle damage.

1. Lift up and hold UNLOCK lever (1).

TURN PARKING LIGHTS ON/OFF - Continued

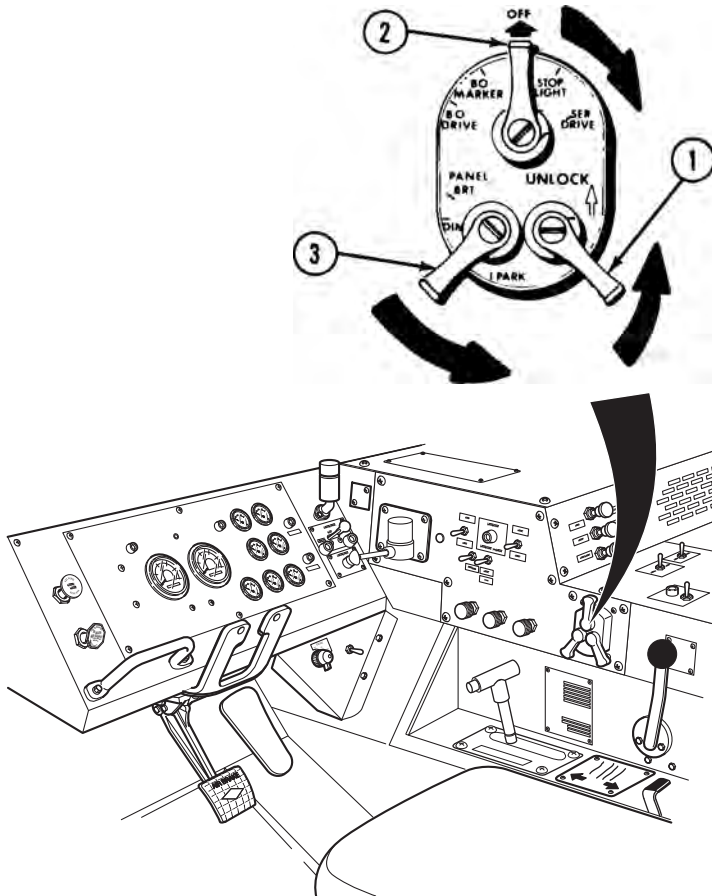


Figure 1.

2. Set lighting control lever (2) to SER DRIVE position.
3. Set PANEL lever (3) to PARK position.
4. Release UNLOCK lever (1).

NOTE

Complete Steps (5) and (6) when parking lights are no longer required.

5. Set PANEL lever (3) to OFF position.

TURN PARKING LIGHTS ON/OFF - Continued

6. Set lighting control lever (2) to OFF position.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPERATE SERVICE DRIVE LIGHTS

INITIAL SETUP:

Not Applicable

TURN SERVICE DRIVE LIGHTS ON/OFF

CAUTION

Failure to place light switches in the off position when vehicle is not in use may cause battery and/or vehicle damage.

1. Lift up and hold UNLOCK lever (1).

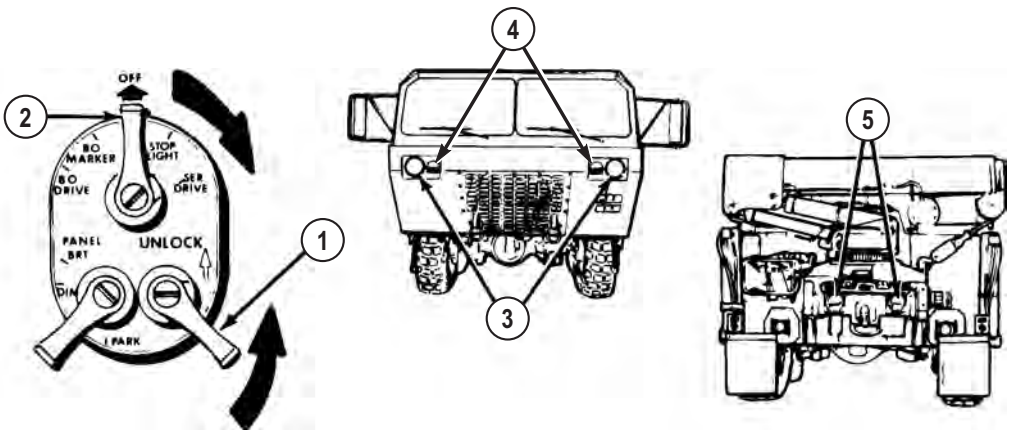


Figure 1.

2. Set lighting control lever (2) to SER DRIVE position.

NOTE

Service stop lights (incorporated in taillights) will illuminate when service brake pedal is applied.

3. Release UNLOCK lever (1). Service headlights (3), composite lights (4), and taillights (5) will illuminate.

TURN SERVICE DRIVE LIGHTS ON/OFF - Continued

- Press dimmer switch (6) with foot to cycle between high and low headlight beams. High beam indicator (7) will illuminate (red) when high beams are selected.

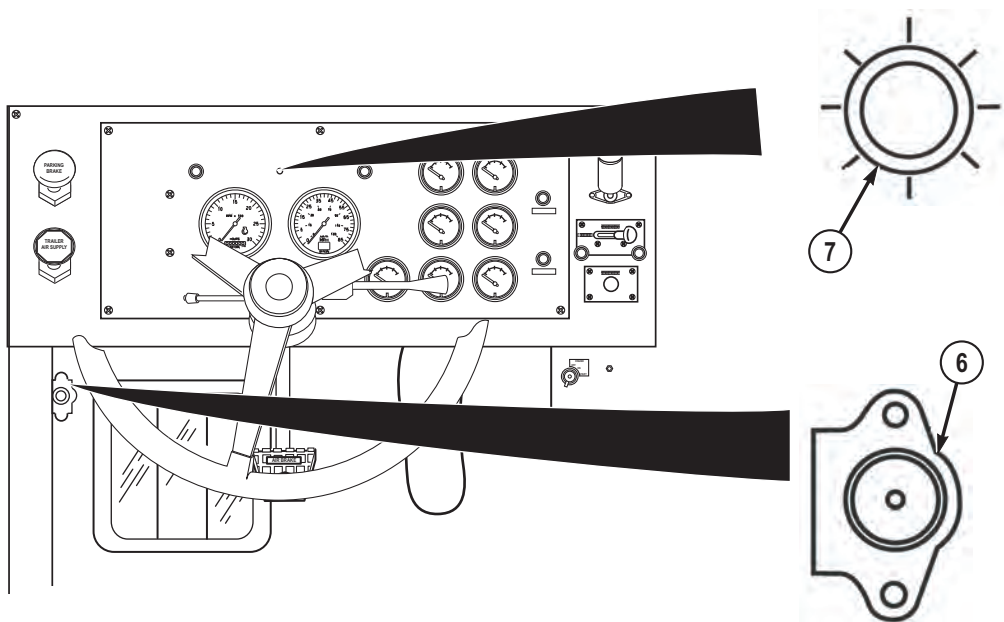


Figure 2.

NOTE

Complete Step (5) when service drive lights are no longer required.

- Set lighting control lever (2) to OFF position. Service headlights (3), composite lights (4), and taillights (5) will go out.

TURN SERVICE DRIVE LIGHTS ON/OFF - Continued

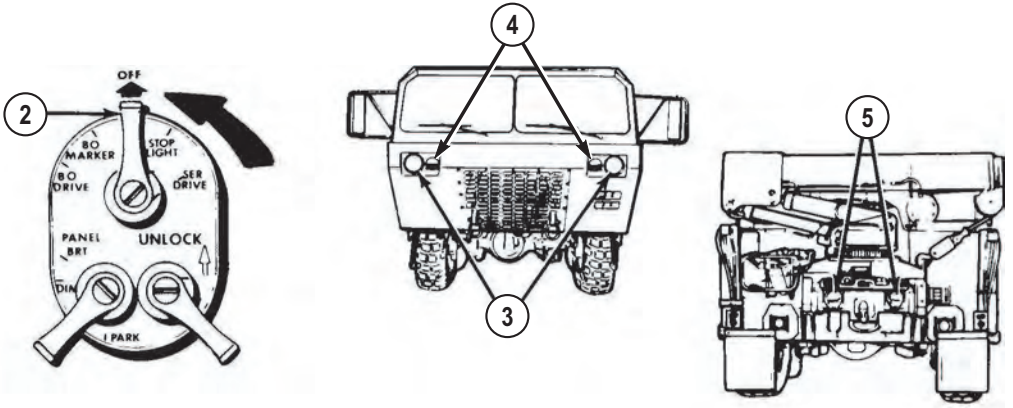


Figure 3.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE STOPLIGHTS**

INITIAL SETUP:

Not Applicable

TURN STOPLIGHTS ON/OFF**CAUTION**

Failure to place light switches in the OFF position when vehicle is not in use may cause battery and/or vehicle damage.

NOTE

Ensure service stoplights are turned on prior to driving vehicle.

1. Lift up and hold UNLOCK lever (1).

TURN STOPLIGHTS ON/OFF - Continued

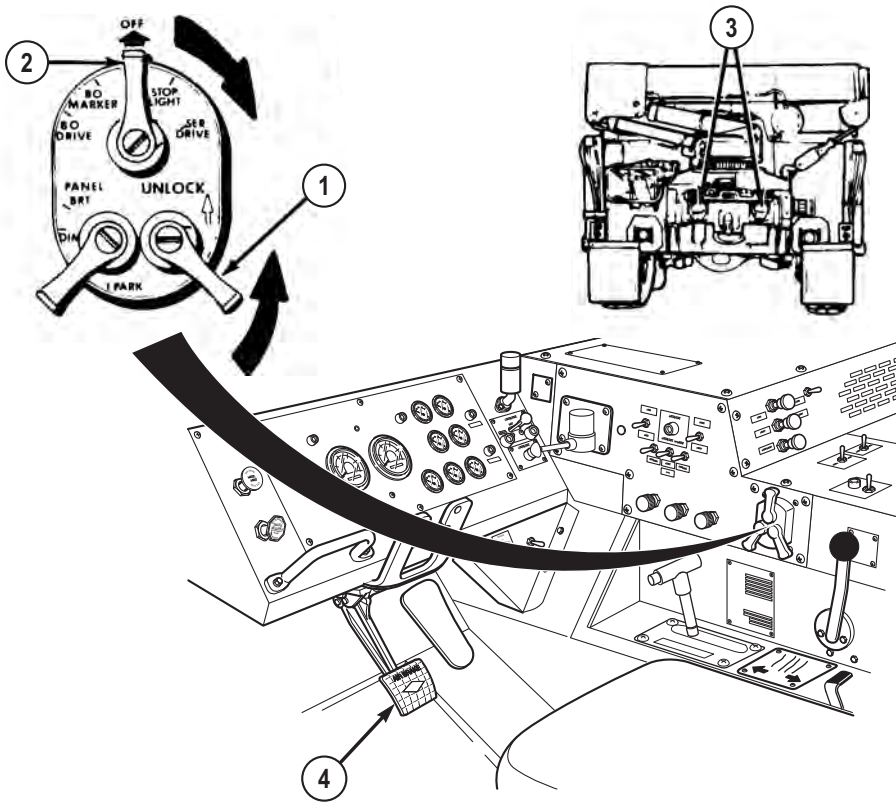


Figure 1.

2. Set lighting control lever (2) to STOP LIGHT position.
3. Release UNLOCK lever (1). Stoplights (3) will illuminate when service brake pedal (4) is applied.

NOTE

Complete Step (4) when stoplights are no longer required.

4. Set lighting control lever (2) to OFF position. Stoplights will no longer function.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE OPERATE CLEARANCE LIGHTS

INITIAL SETUP:

Not Applicable

TURN CLEARANCE LIGHTS ON/OFF

CAUTION

Failure to place light switches in the OFF position when vehicle is not in use may cause battery and/or vehicle damage.

1. Lift up and hold UNLOCK lever (1).

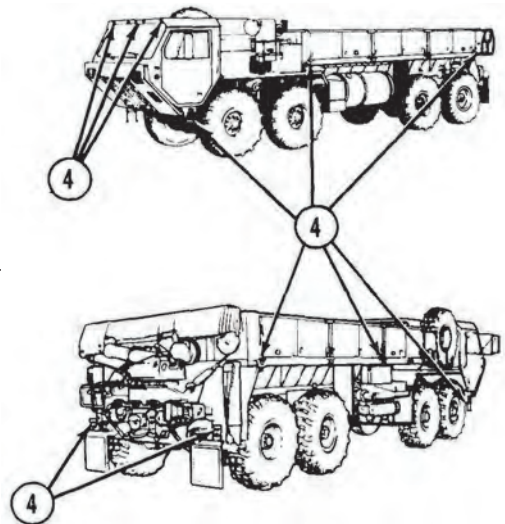
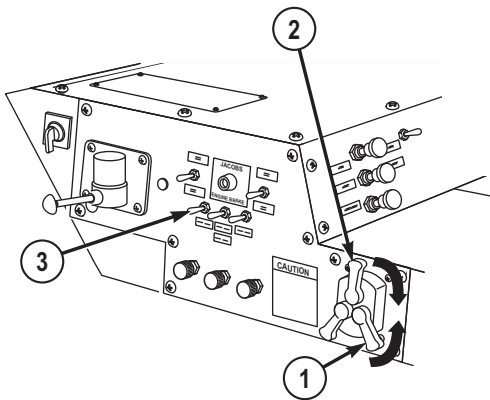


Figure 1.

2. Set lighting control lever (2) to either STOP LIGHT or SER DRIVE position.
3. Release UNLOCK lever (1).
4. Set CL LPS switch (3) to on position. Clearance lights (4) will illuminate.

TURN CLEARANCE LIGHTS ON/OFF - Continued**NOTE**

Complete Steps (5) and (6) when clearance lights are no longer required.

5. Set CL LPS switch (3) to off position. Clearance lights (4) will go out.
6. Set lighting control lever (2) to OFF position.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE OPERATE BLACKOUT DRIVE LIGHT

INITIAL SETUP:

Not Applicable

TURN BLACKOUT DRIVE LIGHT ON/OFF

CAUTION

Failure to place light switches in the OFF position when vehicle is not in use may cause battery and/or vehicle damage.

NOTE

- Use blackout drive light for night driving under blackout conditions.
 - Cabin dome light/switch, vehicle mounted work lights/switch (M983, M984A1, M1977), rear beacon lights/switch (M984A only), electric horn (on steering column), and reverse alarm are disabled when lighting control lever is positioned to either blackout lighting position.
1. Lift up and hold UNLOCK lever (1).

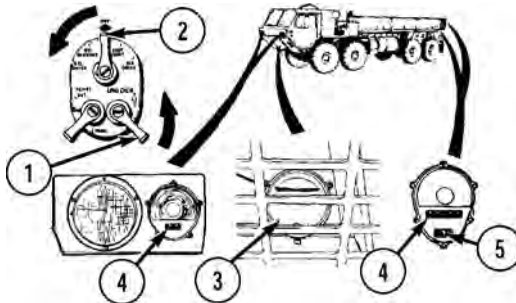


Figure 1.

2. Set lighting control lever (2) to B.O. DRIVE position.
3. Release UNLOCK lever (1); blackout drive light (3) and blackout markers (4) will illuminate.
4. Blackout stoplights (5) will illuminate when service brake pedal is applied.

TURN BLACKOUT DRIVE LIGHT ON/OFF - Continued**NOTE**

Complete Step (5) when blackout lights are no longer required.

5. Set lighting control lever (2) to OFF position; blackout drive light (3) and blackout markers (4) will go out.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
OPERATE BLACKOUT MARKERS**

INITIAL SETUP:

Not Applicable

TURN BLACKOUT MARKERS ON/OFF

CAUTION

Failure to place light switches in the OFF position when vehicle is not in use may cause battery and/or vehicle damage.

NOTE

Cabin dome light/switch, vehicle mounted work lights/switch (M983, M984A1, M1977), rear beacon lights/switch (M984A only), electric horn (on steering column), and reverse alarm are disabled when lighting control lever is positioned to either blackout lighting position.

1. Lift up and hold UNLOCK lever (1).

TURN BLACKOUT MARKERS ON/OFF - Continued

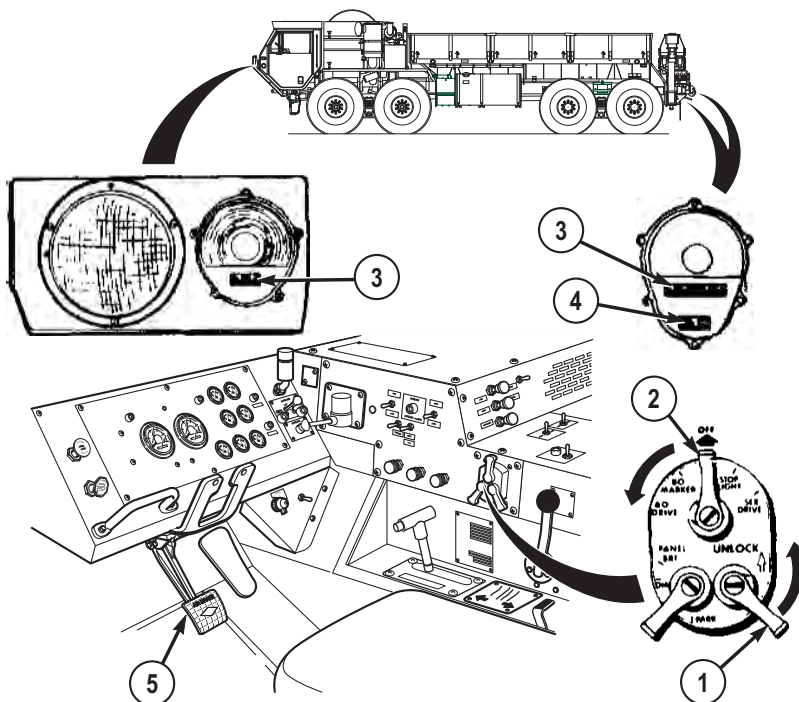


Figure 1.

2. Set lighting control lever (2) to B.O. MARKER position. Blackout markers (3) will illuminate.
3. Blackout stoplight markers (4), which are located on vehicle taillights, will illuminate when service brake pedal (5) is applied.

NOTE

Complete Step (4) when blackout markers are no longer required.

4. Set lighting control lever (1) to OFF. Blackout markers (3) will go out.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE PORTABLE BEACON LIGHT OPERATION

INITIAL SETUP:

Not Applicable

INSTALL/REMOVE PORTABLE BEACON LIGHT

1. Remove beacon light (1) from stowage and unwind cord (2).

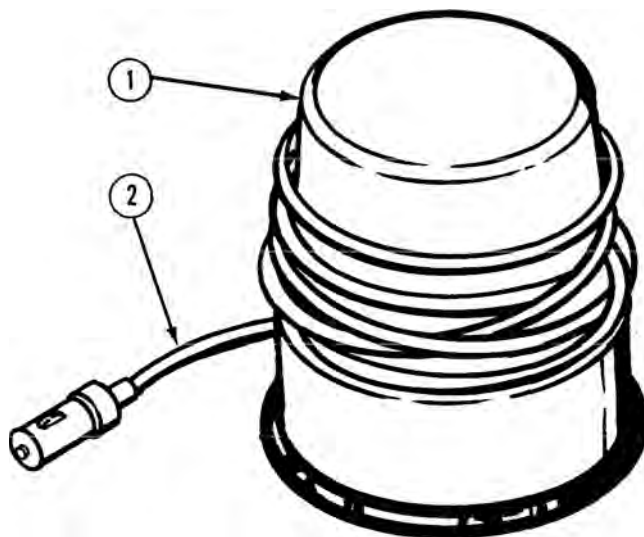
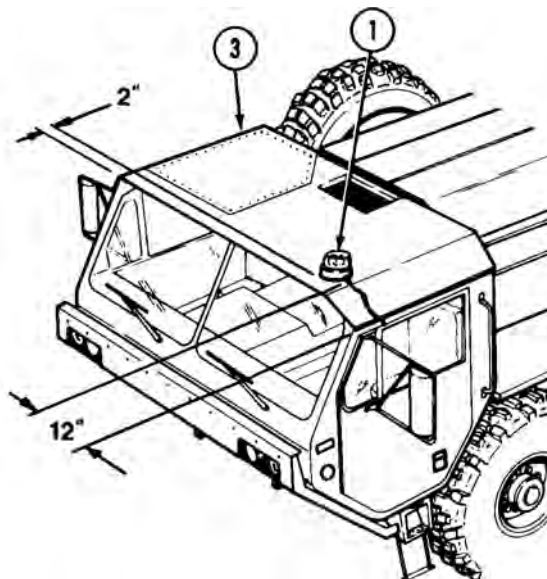


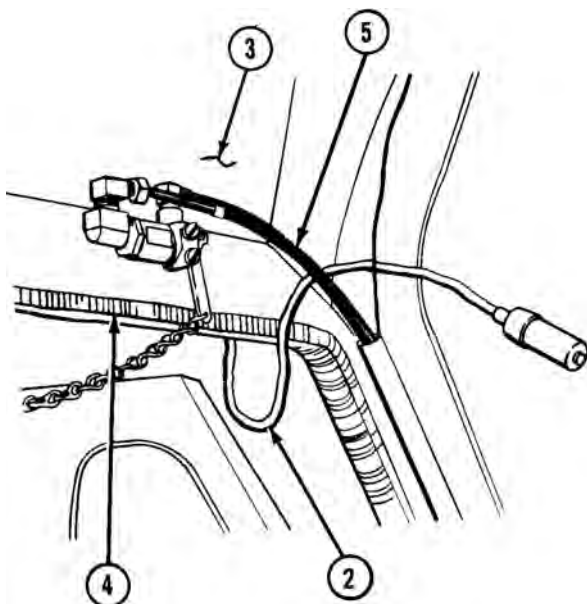
Figure 1.

2. Place beacon light (1) on driver side front corner of cab roof (3) approximately 12 in. (30 cm) from driver side cab, and approximately 2 in. (5 cm) from front edge of cab roof.

INSTALL/REMOVE PORTABLE BEACON LIGHT - Continued

*Figure 2.*

3. Route beacon cord (2) through driver side door opening (4) and between inside of cab roof (3) and air horn valve hoses (5).

INSTALL/REMOVE PORTABLE BEACON LIGHT - Continued*Figure 3.*

4. Route beacon cord (2) down left side of driver's windshield (6), across driver side defroster (7), and across center console (8) to utility outlet (9).

INSTALL/REMOVE PORTABLE BEACON LIGHT - Continued

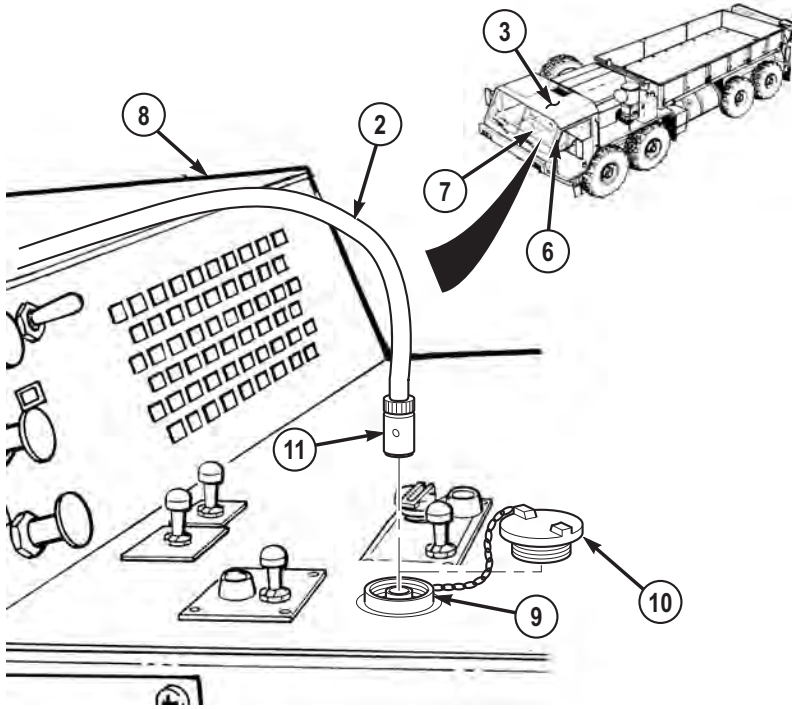


Figure 4.

5. Remove utility outlet cover (10).

NOTE

ENGINE switch must be positioned to ON for portable beacon light to operate.

6. Insert beacon cord plug (11) into utility outlet (9).

INSTALL/REMOVE PORTABLE BEACON LIGHT - Continued**NOTE**

Perform Steps (7) through (11) when use of portable beacon light is no longer required.

7. Remove beacon cord plug (11) from utility outlet (9).
8. Install utility outlet cover (10).
9. Remove beacon cord (2) from interior of cab.
10. Remove beacon light from cab roof (3).
11. Rewind cord (2) and return beacon light (1) to appropriate stowage.

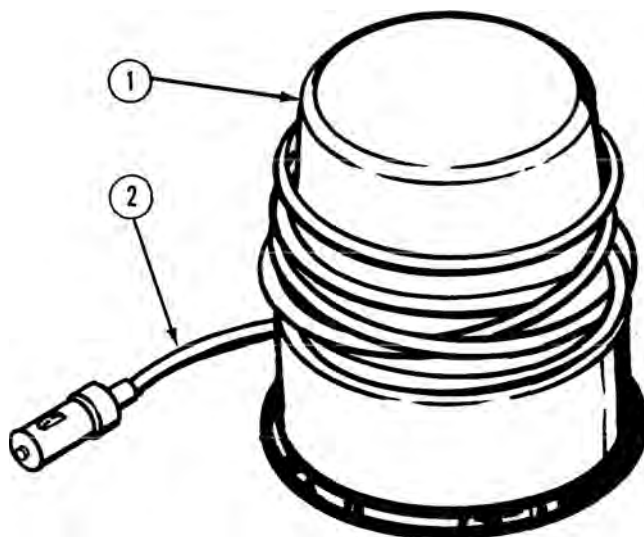


Figure 5.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE TURN SIGNALS**

INITIAL SETUP:

Not Applicable

SET TURN SIGNAL ON/OFF

1. Lift up and hold UNLOCK lever (1).

SET TURN SIGNAL ON/OFF - Continued

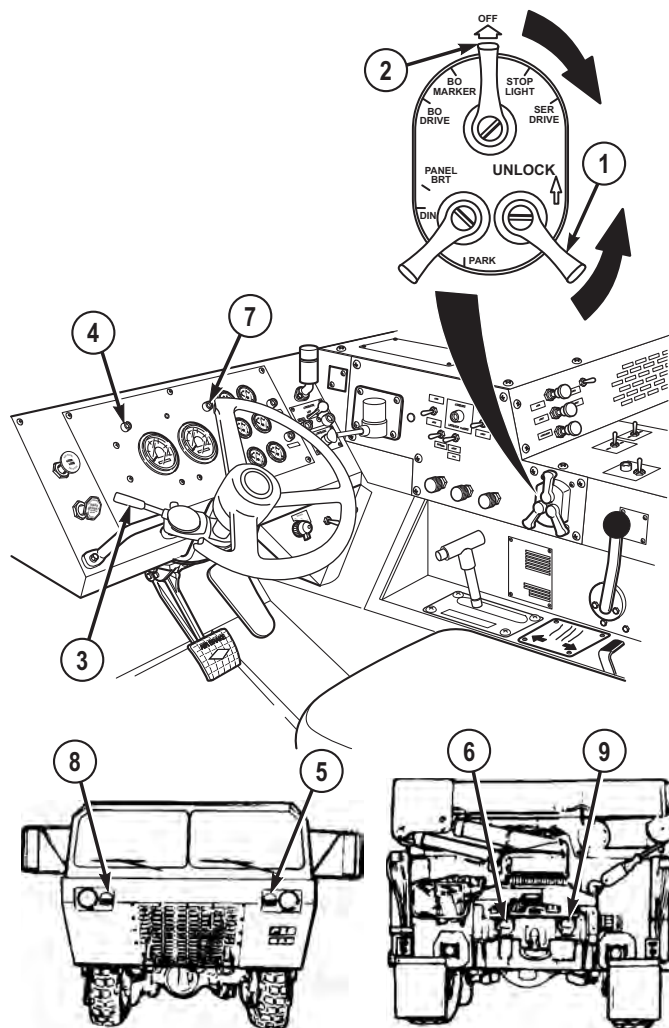


Figure 1.

2. Set lighting control lever (2) to SER DRIVE position.

NOTE

If left turn is desired, complete Step (3). If right turn is desired, skip to Step (4).

SET TURN SIGNAL ON/OFF - Continued

3. Set turn signal lever (3) down to left turn position. Left turn indicator (4), and driver side front (5) and rear (6) composite lights will flash (approximately once per second) simultaneously.

NOTE

If right turn is desired, complete Step (4).

4. Set turn signal lever (3) up to right turn position. Right turn indicator (7), and passenger side front (8) and rear (9) composite lights will flash (approximately once per second) simultaneously.

NOTE

Turn signal level may return to off (center) position automatically once turn is complete, if this is not the case and/or turn signal is no longer desired, complete Step (5).

5. Set turn signal lever (3) to center (off) position. Appropriate turn indicator and composite lights will go out.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE EMERGENCY FLASHERS**

INITIAL SETUP:

Not Applicable

TURN EMERGENCY FLASHERS ON/OFF**NOTE**

Highway Emergency Marker Kit (WP 0112) should be used to mark location and caution oncoming traffic whenever vehicle is disabled or must park in areas where there is other traffic.

1. Lift up and hold UNLOCK lever (1).

TURN EMERGENCY FLASHERS ON/OFF - Continued

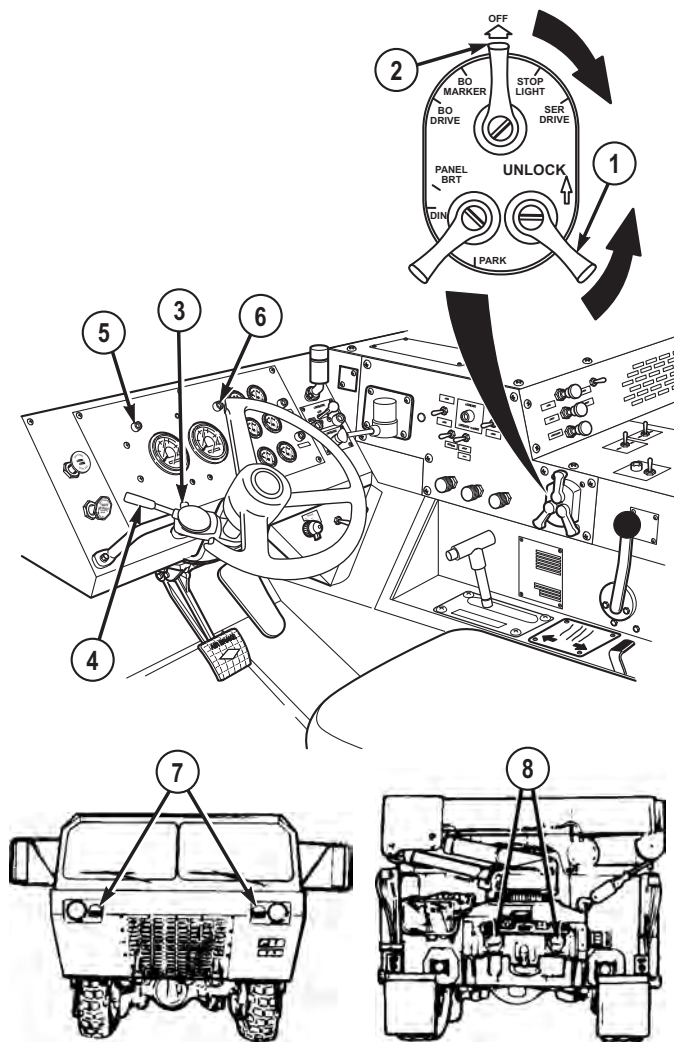


Figure 1.

2. Set lighting control lever (2) to SER DRIVE position.
3. Set turn signal lever (3) to right turn position.
4. Push down emergency flasher control (4) and push turn signal lever (3) up as far as it will go. Both left (5) and right (6) turn indicators, and front (7) and rear (8) composite lights will flash simultaneously at approximately once per second.

TURN EMERGENCY FLASHERS ON/OFF - Continued**NOTE**

Perform Step (5) when emergency flashers are no longer desired.

5. Pull turn signal lever (3) down to center position.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE INSTALL/REMOVE WHEEL CHOCKS

INITIAL SETUP:

Not Applicable

INSTALL WHEEL CHOCKS

NOTE

- Vehicle is equipped with four wheel chocks.
- Always chock tires if vehicle is shut down on uneven terrain.
- Always chock tires if vehicle parking brake is inoperative.
- Ensure local policy for chocking vehicle tires is followed.

1. Remove two wheel chocks (1) from stowage.

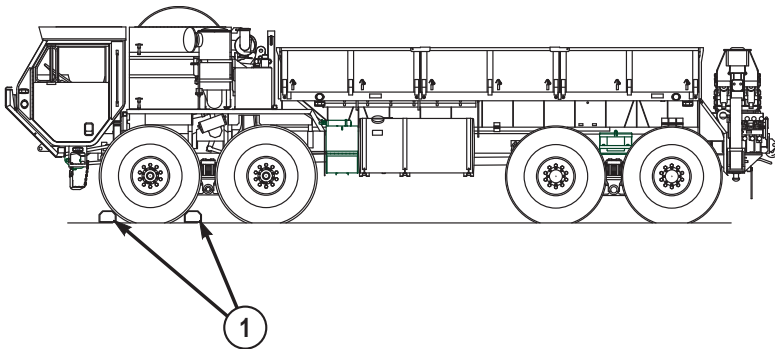


Figure 1.

2. Place one wheel chock (1) snugly against both front and rear of tire (No. 1 axle driver side tire shown).

REMOVE WHEEL CHOCKS

NOTE

- Vehicle is equipped with four wheel chocks.
- Ensure local policy for removing wheel chocks is followed.

REMOVE WHEEL CHOCKS - Continued

1. Remove wheel chocks (1) from both front and rear of tire (No. 1 axle driver side tire shown).

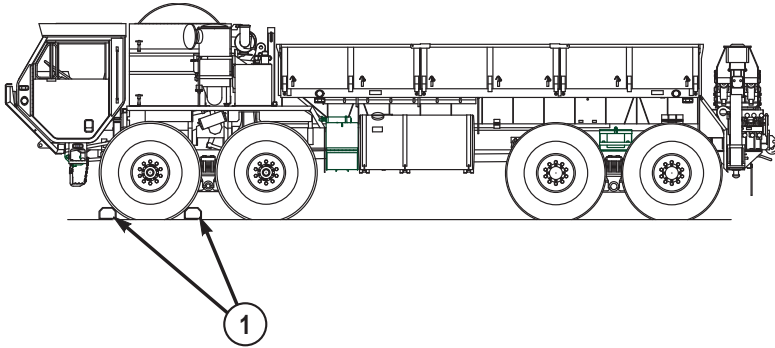


Figure 2.

2. Return wheel chocks (1) to stowage.
3. Repeat Steps (1) and (2) if more than one wheel is chocked.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE CHANGE VEHICLE WEIGHT INDICATOR

INITIAL SETUP:

Not Applicable

CHANGE VEHICLE WEIGHT INDICATOR

NOTE

Refer to load classification table for appropriate vehicle weight.

1. Press in bottom of lockplate (1).

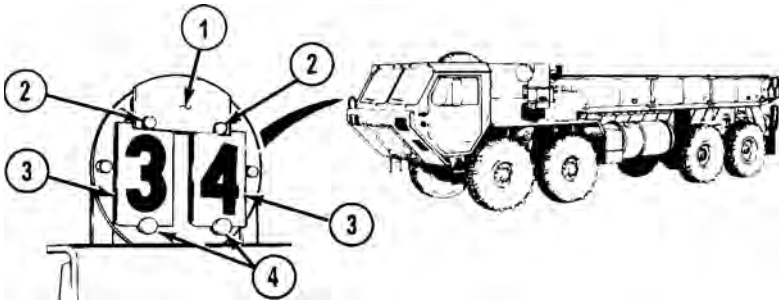


Figure 1.

2. Push lockplate (1) up and off one lockpin (2).
3. Remove number plates (3).
4. Place new number on top of number plates (3).
5. Install number plates (3) on lockpin (4).
6. Push down number plates (3). Slide lockplate (1) on lockpin (2).
7. Repeat Steps (1) through (7) to change other number.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE ADJUST SEAT

INITIAL SETUP:

Not Applicable

INSTALL FOOTREST

1. Remove safety pin (1) and yoke pin (2).

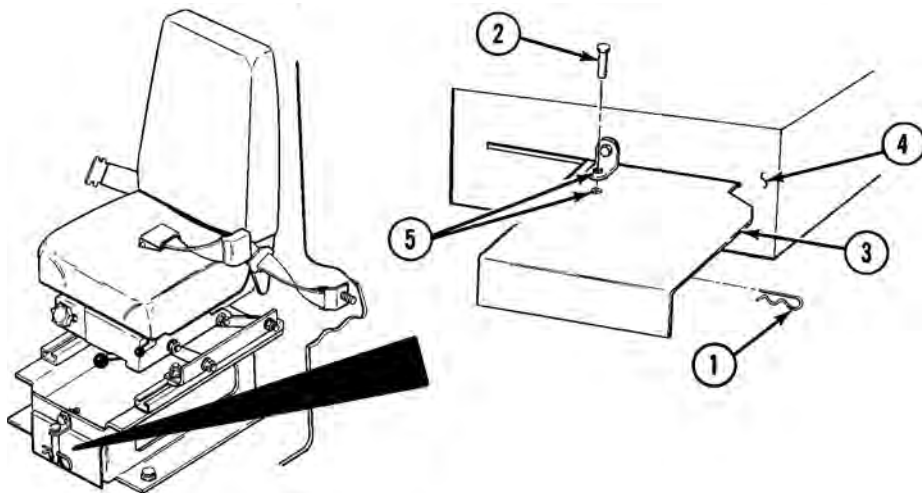
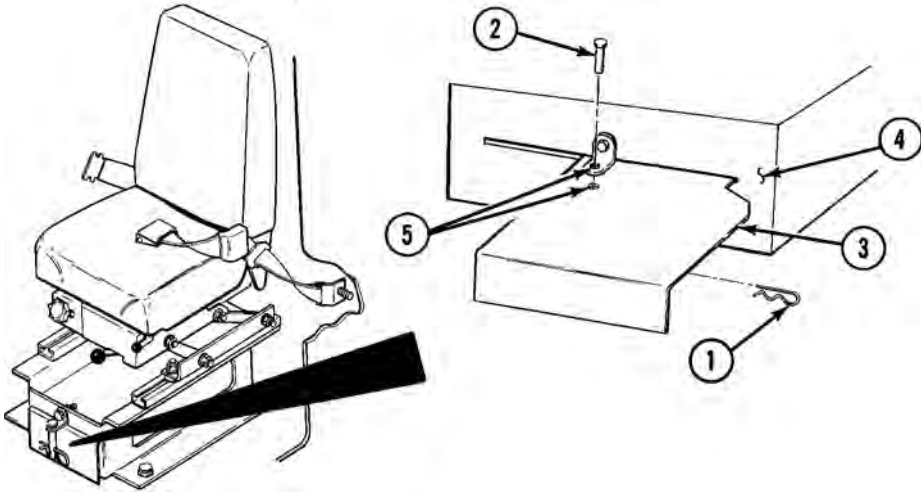


Figure 1.

2. Pull out footrest (3).
3. Slide footrest (3) toward seat brace (4) so holes (5) are aligned.
4. Install yoke pin (2) and safety pin (1).

STOW FOOTREST

1. Remove safety pin (1) and yoke pin (2).

STOW FOOTREST - Continued*Figure 2.*

2. Slide footrest (3) under seat brace (4).
3. Install yoke pin (2) and safety pin (1).

ADJUST SEAT**WARNING**

Use care when adjusting knob. Seat collapses when knob screw is adjusted. Do not place hand between seat mount and low neck. Failure to comply may result in injury or death to personnel.

NOTE

- Sit in seat and perform Steps (1) through (8) as necessary.
 - Driver and crew (passenger side) side seats are adjusted the same way.
1. Turn knob (1) to control cushion firmness.

ADJUST SEAT - Continued**NOTE**

Retaining straps may need to be loosened before moving seat forward.

2. Push lever (2) to left and slide seat (3) forward or backward.
3. Let go of lever (2) to lock seat (3) in place.

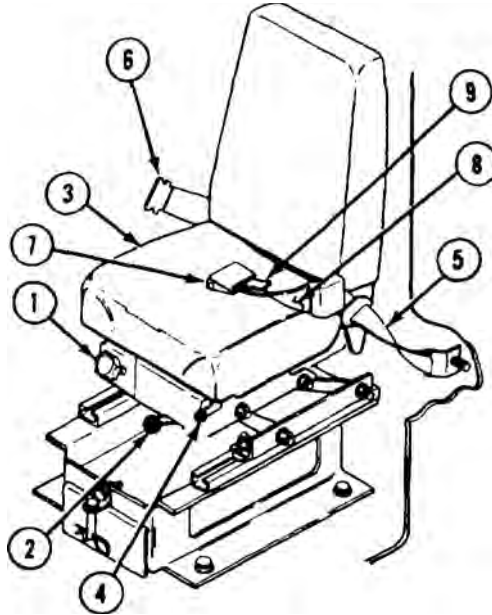


Figure 3.

4. Pull up lever (4) and lift self off seat (3) to raise seat (3).
5. Pull up lever (4) and push down on seat (3) to lower seat (3).
6. Let go of lever (4) to lock seat (3) in place.
7. Tighten seat retaining straps (5).
8. Adjust all vehicle mirrors as necessary once driver's seat is properly adjusted.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPERATE THREE-POINT SEATBELT

INITIAL SETUP:

Not Applicable

OPERATE THREE-POINT SEATBELT

1. Put seatbelt flat metal end (1) into interconnect (2) until click is heard.

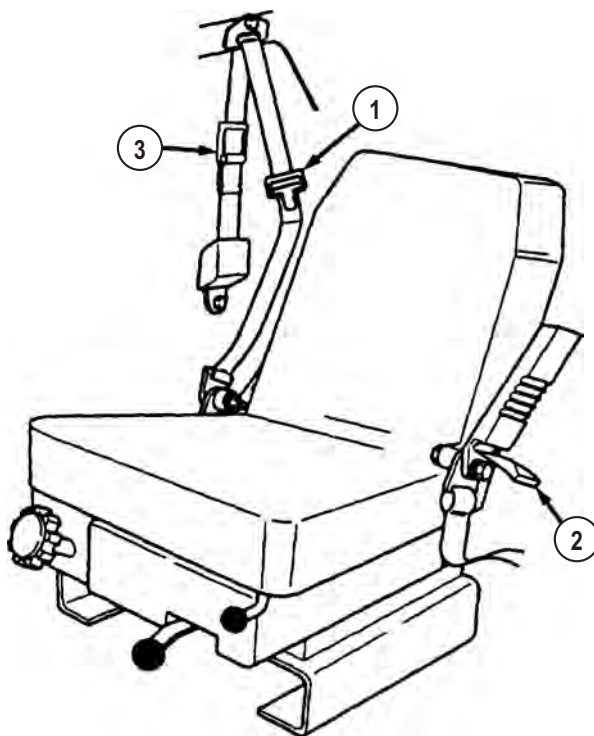


Figure 1.

2. Pull out on comfort latch (3) locking handle and move comfort latch up and down strap until snug (but not tight) fit at shoulder is achieved.

OPERATE THREE-POINT SEATBELT - Continued

3. To release seatbelt, push in button on interconnect (2).

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
ADJUST AIR-RIDE SEAT**

INITIAL SETUP:

Not Applicable

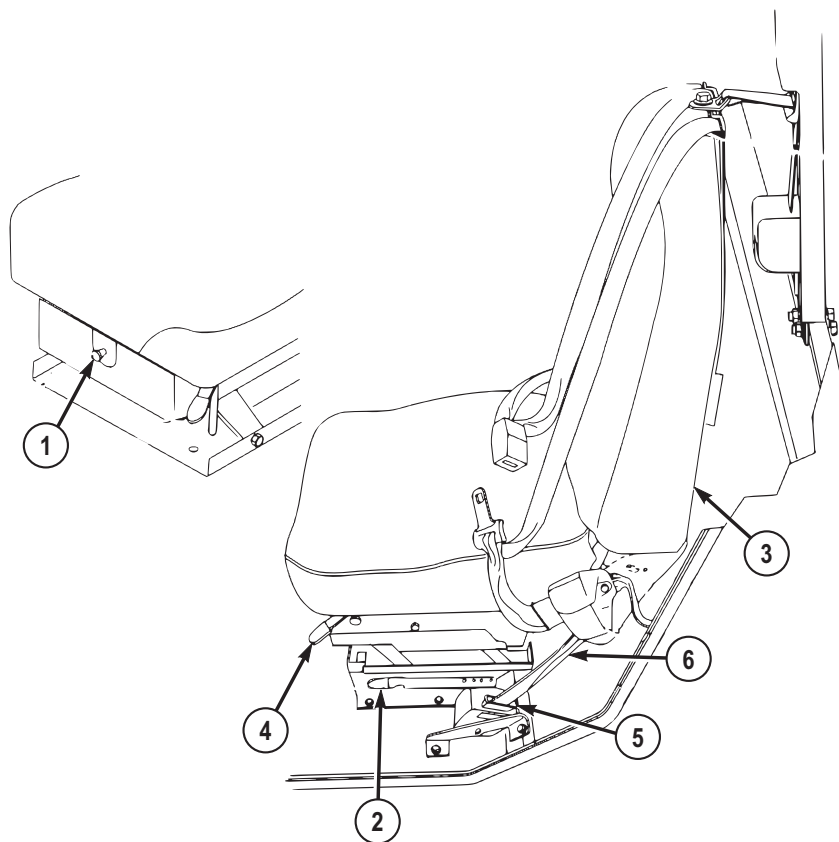
ADJUST AIR-RIDE SEAT**WARNING**

When adjusting seat ride firmness, keep fingers out from under seat. Failure to comply may result in injury or death to personnel.

NOTE

- Sit in seat and perform Steps (1) through (6) as necessary.
 - Driver and crew (passenger side) side seats are adjusted the same way.
1. Pull out (increase) or push in (decrease) knob (1) to adjust seat ride firmness.

ADJUST AIR-RIDE SEAT - Continued

*Figure 1.*

2. Move lever (2) away from seat (3) and slide seat (3) forward or backwards.
3. Move lever (2) towards seat (3) to lock seat (3) in place.
4. Pull up lever (4) and lift self off seat (3) to raise, or pull up lever (4) and push down on seat (3) to lower.
5. Release lever (4) to lock seat (3) in place.
6. Adjust all vehicle mirrors as necessary once driver's seat is properly adjusted.

NOTE

If vehicle is bounced too hard, seat tether may lock seat in down position.
Park vehicle (WP 0050) and perform Steps (7) through (10) to free seat.

7. Push in knob (1) to decrease seat ride firmness.

ADJUST AIR-RIDE SEAT - Continued

8. Move lever (2) away from seat (3), and slide seat (3) backwards to relieve tension on retractor (5).
9. Feed some seat tether (6) into retractor (5) until it releases.
10. Perform Steps (1) through (5) as required to reset seat (3) to desired position.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE OPERATE FOUR-POINT SEATBELT

INITIAL SETUP:

Not Applicable

OPERATE FOUR-POINT SEATBELT

1. Insert seatbelt flat metal end (1) into buckle (2) until click is heard.

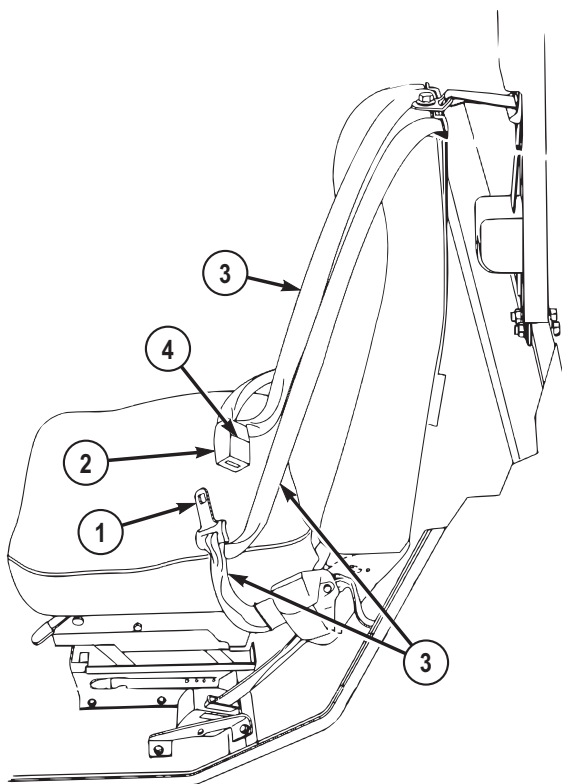


Figure 1.

OPERATE FOUR-POINT SEATBELT - Continued

2. To release seatbelt (3), push in button (4) on buckle (2).

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE INSTALL/REMOVE TIRE CHAINS

INITIAL SETUP:

Personnel Required

Operator and Assistant - - - (2)

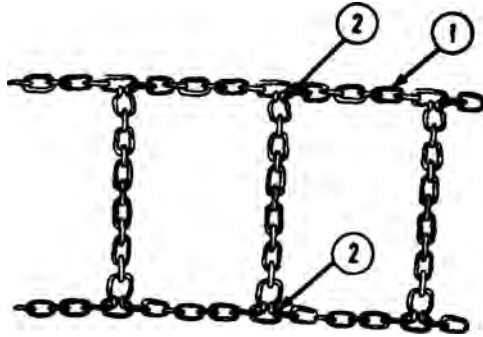
INSTALL TIRE CHAINS

CAUTION

When tire chains are used, they must be used on all four rear wheels. Chains must not be used when driving on hard surfaces where there is no wheel slippage. Improper use of tire chains may result in equipment damage.

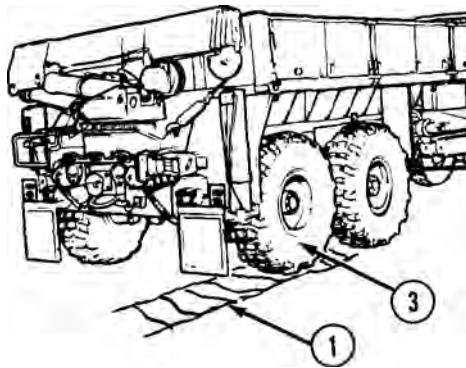
NOTE

- This procedure is a two soldier task.
 - Tire chains on No. 3 and No. 4 axle tires are all installed the same. Passenger side No. 4 axle shown.
 - Maximum speed limit for vehicles driving with chains in city or on highway is 10 mph (16 km/h).
 - Maximum speed limit for vehicles driving with chains off-road is 15 mph (24 km/h).
1. With aid of an assistant, place tire chain (1) on ground with cross chain connecting links (2) facing down.

INSTALL TIRE CHAINS - Continued*Figure 1.***NOTE**

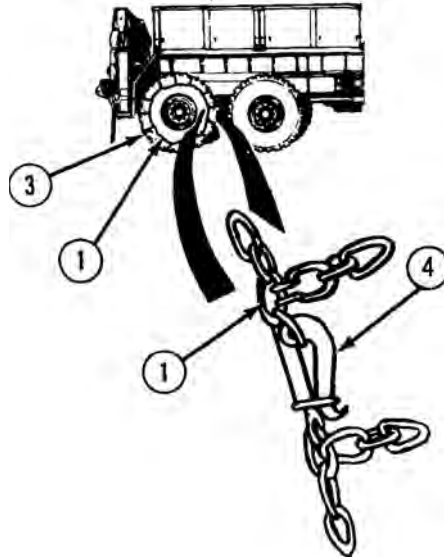
Assistant shall ensure vehicle is stopped when only tire in contact with tire chains is tire being equipped.

2. Move vehicle onto tire chain (1) while assistant guides vehicle so tire (3) is about one-third of way on tire chain.

*Figure 2.***NOTE**

Ensure only tire in contact with tire chains is tire being equipped.

3. Park vehicle. (WP 0050)
4. With aid of an assistant, wrap tire chain (1) around tire (3).

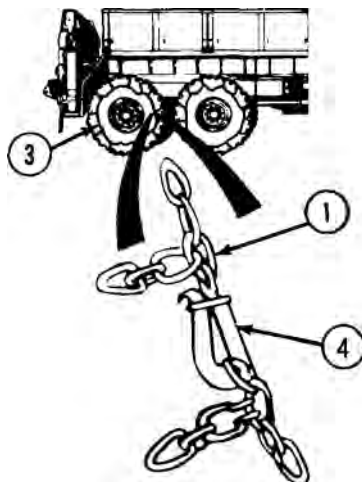
INSTALL TIRE CHAINS - Continued*Figure 3.*

5. With aid of an assistant, connect and secure inside and outside clamps (4) so tire chain (1) is as tight as possible.
6. With aid of an assistant, repeat Steps (1) through (5) on remaining tires of No. 3 and No. 4 axles.
7. Drive vehicle forward (WP 0044) about 15 ft. (4.6 m) and then drive vehicle in reverse (WP 0045) about 15 ft. (4.6 m) as guided by assistant.
8. Park vehicle. (WP 0050)

NOTE

Tire chains on No. 3 and No. 4 axle tires are all tightened up the same.
 Passenger side No. 4 axle shown.

9. With aid of an assistant, disconnect inside clamp (4) of tire chain (1) on tire (3).

INSTALL TIRE CHAINS - Continued*Figure 4.*

10. With aid of an assistant, take up slack in tire chain (1).
11. With aid of an assistant, connect inside clamp (4).
12. With aid of an assistant, disconnect outside clamp (4) of tire chain (1) on tire (3).
13. With aid of an assistant, take up slack in tire chain (1).
14. With aid of an assistant, connect outside clamp (4).
15. With aid of an assistant, take up slack in tire chains on other three rear tires by repeating Steps (10) through (15).

REMOVE TIRE CHAINS**NOTE**

- This procedure is a two soldier task.
- Tire chains on No. 4 axle tires are both removed the same. Passenger side shown.

1. Move vehicle into position so tire chain (1) and clamps (2) on tire (3) are at 4 o'clock position while assistant guides vehicle.

REMOVE TIRE CHAINS - Continued

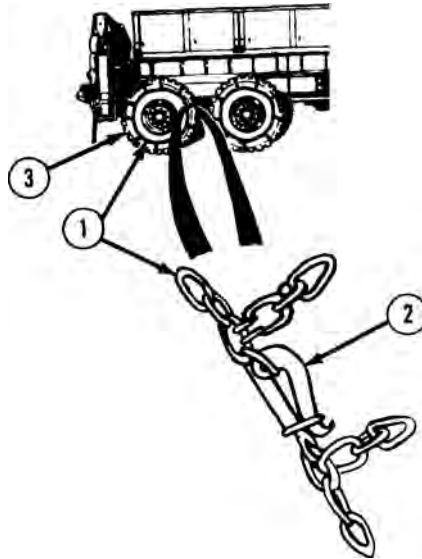


Figure 5.

2. Park vehicle. (WP 0050)
3. With aid of an assistant, disconnect inside and outside clamps (2) of tire chain (1).

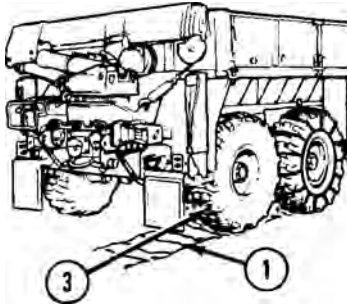


Figure 6.

4. With aid of an assistant, unwrap tire chain (1) from tire (3) and spread tire chain out on ground behind vehicle.
5. Drive vehicle forward (WP 0044) off tire chain (1) while assistant guides vehicle.
6. With aid of an assistant, repeat Steps (2) through (5) for opposite side tire.

REMOVE TIRE CHAINS - Continued**NOTE**

Tire chains on No. 3 axle tires are both removed the same. Passenger side shown.

7. Move vehicle into position so tire chain (4) and clamps (5) on tire (6) are at 8 o'clock position while assistant guides vehicle.

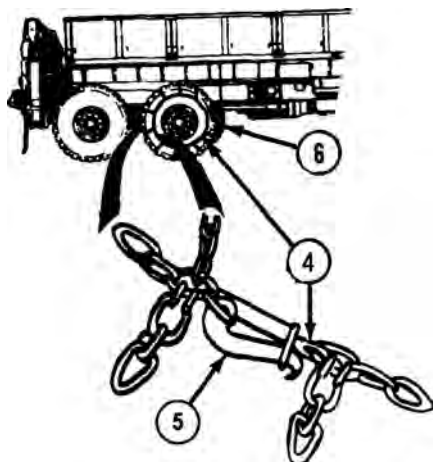


Figure 7.

8. Park vehicle. (WP 0050)
9. With aid of an assistant, disconnect inside and outside clamps (5) of tire chain (4).
10. With aid of an assistant, unwrap tire chain (4) from tire (6) and spread tire chain out on ground in front of tire.

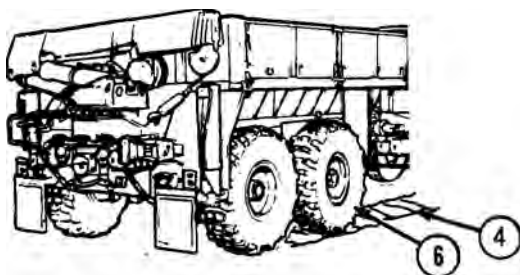


Figure 8.

11. Drive vehicle forward (WP 0044) off tire chain (4) while assistant guides vehicle.

REMOVE TIRE CHAINS - Continued

12. With aid of an assistant, repeat Steps (7) through (11) for opposite side tire.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
FORD WATER OBSTACLE**

INITIAL SETUP:

Not Applicable

WARNING

Do not ford water unless depth is known. Water deeper than 4 ft. (1.2 m) may enter vehicle. Failure to comply may result in injury or death to personnel.

NOTE

After vehicle fords water obstacle, service all lubrication points below fording depth and check submerged gearboxes for presence of water upon return from mission (refer to lubrication instructions (WP 0163) for more information).

CAUTION

Towing a trailer may affect maximum fording depth (refer to applicable trailer operators manual). Do not ford water obstacle deeper than maximum depth allowed by either vehicle or trailer (whichever depth is less). Failure to comply may result in damage to equipment.

1. Ensure depth of fording site is not more than 4 ft. (1.2 m).
2. Ensure bottom at fording site is firm enough that 4 ft. (1.2 m) maximum fording depth will not be exceeded and vehicle will not become mired.
3. Stop vehicle at edge of water.
4. If brakes have been used heavily and are hot, allow drums and shoes to cool before entering water if possible.
5. Ensure engine is operating correctly before entering water.
6. Set TRANSFER CASE shift lever (1) to LO, 8X8 DRIVE indicator (2) will illuminate.

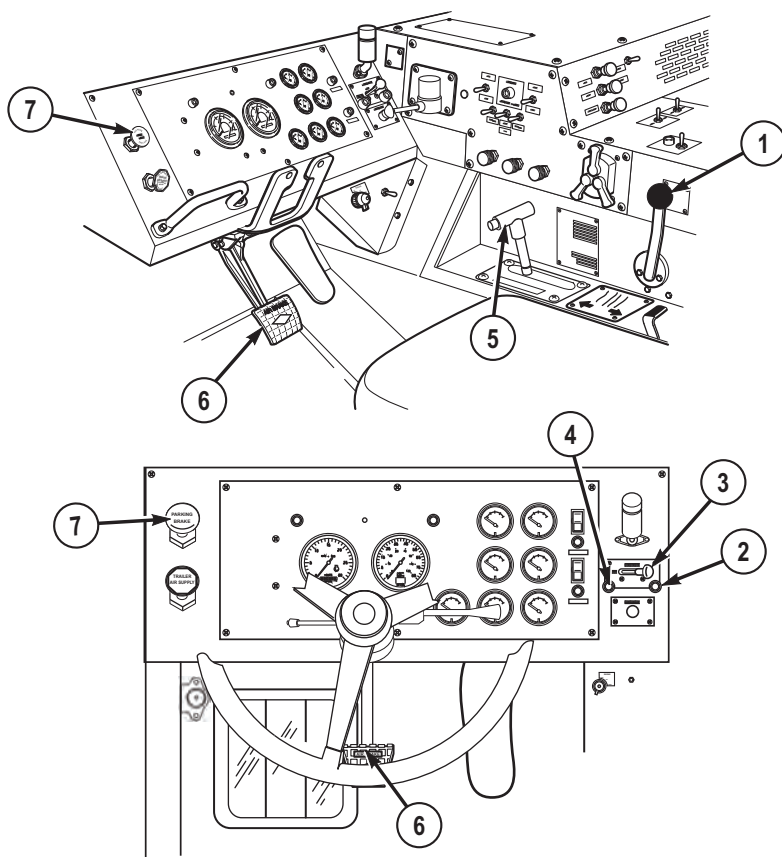


Figure 1.

7. Set TRACTION CONTROL lever (3) to INTER-AXLE DIFF. LOCK for added traction, INTER-AXLE LOCK indicator light (4) will come on.
8. Set transmission range selector (5) to 1 (1st gear range).
9. Drive vehicle slowly into water.
10. If engine stops, immediately attempt to restart engine. If engine will not start, tow or winch vehicle from water with another vehicle as soon as possible.
11. Drive vehicle at 3 to 4 mph (5 to 6 km/h) or less, through water.
12. Unless absolutely necessary, do not stop while in water.
13. If vehicle accidentally enters water deeper than 4 ft. (1.2 m), do the following:
 - a. Apply service brake pedal (6) and hold to stop vehicle.
 - b. Set transmission range selector (5) to R (reverse).

- c. Release service brake pedal (6).
 - d. Slowly back vehicle out of deep water.
14. After leaving water, lightly press service brake pedal (6) and hold while driving slowly to dry out brake linings.
 15. When clear of fording area, stop vehicle.
 16. Apply and release PARKING BRAKE control (WP 0039) (7) several times to remove water from brake components.
 17. Remove water and clean deposits from all vehicle parts as soon as possible.
 18. Deliver vehicle to field level maintenance as soon as possible.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
INTERIM NUCLEAR, BIOLOGICAL, AND CHEMICAL (NBC) DECONTAMINATION
PROCEDURES**

INITIAL SETUP:

Not Applicable

INTRODUCTION AND PROCEDURES

NOTE

To reduce the effects of contamination in an NBC-contaminated environment, the HEMTT series vehicle should be operated with all windows, doors, and stowage boxes closed.

1. The HEMTT series vehicle is capable of being operated by personnel wearing nuclear, biological, or chemical (NBC) protective clothing without special tools or supporting equipment. Refer to FM 3-11.5 (WP 0173) for information on decontamination procedures. Specific procedures for the HEMTT series vehicle are as follows:
 - a. Rubber sleeves and other rubber items, rope, and gaskets will absorb and retain chemical agents. Replacement of these items is the recommended method of decontamination.
 - b. Lubricants or fluids may be present on the external surfaces of the HEMTT series vehicle or its components due to leaks or normal operation. These fluids will absorb NBC agents. The preferred method of decontamination is removal of these fluids using conventional decontamination methods in accordance with FM 3-11.5. (WP 0173)
 - c. Continued decontamination of the external HEMTT series vehicle surfaces with supertropical bleach (STB)/decontamination solution number 2 (DS2) will degrade clear plastic (e.g., hydraulic fluid reservoir sight glass) to the point where looking through it will become impossible. This problem will become more evident for soldiers wearing protective masks. Therefore, the use of STB or DS2 decontamination in the area of clear plastic should be minimized. Clear plastic should be decontaminated with warm, soapy water.
 - d. External surfaces of the HEMTT series vehicle and related equipment such as the remote control units that are marked with painted or stamped lettering will not withstand repeated decontamination with STB or DS2 without degradation of this lettering. Therefore, the recommended method of decontamination for these areas is washing with warm, soapy water.

INTRODUCTION AND PROCEDURES - Continued**NOTE**

Replacement of hardware, as well as conventional methods of decontamination, are the preferred methods of decontamination for the areas listed below.

2. Areas that will entrap contaminants, making efficient decontamination extremely difficult include the following:
 - a. Exposed heads of screws.
 - b. Areas adjacent to and behind exposed hydraulic lines.
 - c. Hinged areas or access doors on the stowage boxes.
 - d. Retaining chains for lynchpins and lockpins.
 - e. Areas around the tie downs, lifting rings, crevices around access doors, external valves and drains, and exposed hydraulic connectors.
 - f. Areas behind knobs, levers, externally-mounted equipment, specification and advisory data plates, and roller and locking mechanisms.
 - g. Winch cable and winch hook assembly.
3. Conventional methods of decontamination should be used on all areas listed in Steps (1) and (2), while stressing the importance of thoroughness, and the probability of some degree of continuing contact, including vapor hazard.
4. For additional NBC information, refer to FM 3-11.3 (WP 0173) and FM 3-11.4. (WP 0173)

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE SELF-RECOVER VEHICLE USING SELF-RECOVERY WINCH

INITIAL SETUP:

Personnel Required

Operator and Assistant - - - (2)

WINCH MIRED VEHICLE FORWARD

NOTE

- For additional information on vehicle self-recovery, refer to FM 4-30.31. (WP 0173)
 - Vehicle self-recovery is a two soldier task. Soldiers must communicate by hand signals.
1. Shut off engine. (WP 0051)
 2. Adjust mirror (1) so assistant can be clearly seen during procedure.

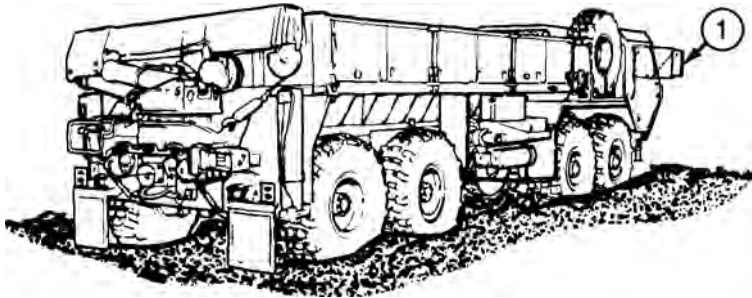


Figure 1.

CAUTION

PTO ENGAGE switch must be in OFF position before moving hydraulic selector valve control to prevent equipment damage.

3. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.

WINCH MIRED VEHICLE FORWARD - Continued

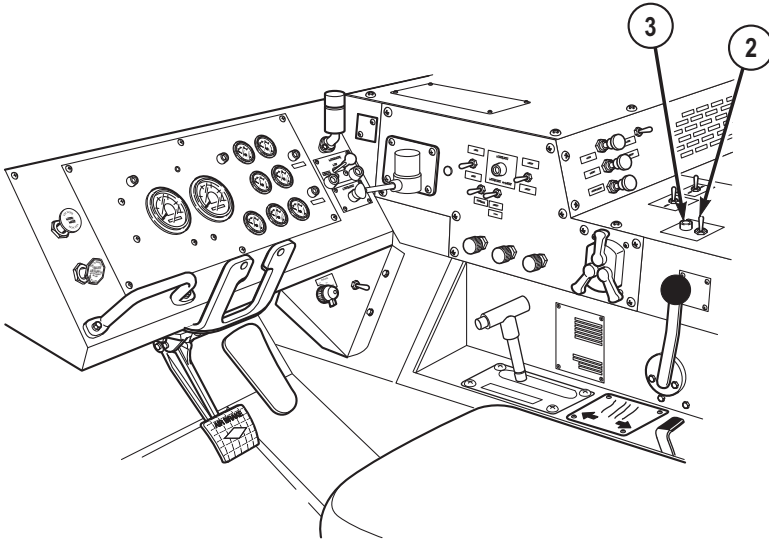
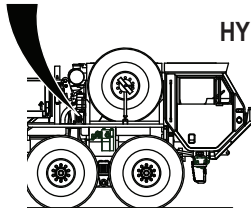
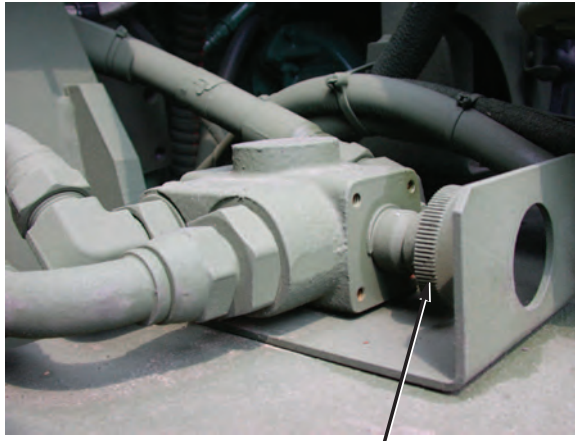


Figure 2.

4. Pull out hydraulic selector valve control.

WINCH MIRED VEHICLE FORWARD - Continued

**HYDRAULIC SELECTOR
VALVE CONTROL**

Figure 3.

5. Start engine. (WP 0038)
6. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.

WINCH MIRED VEHICLE FORWARD - Continued

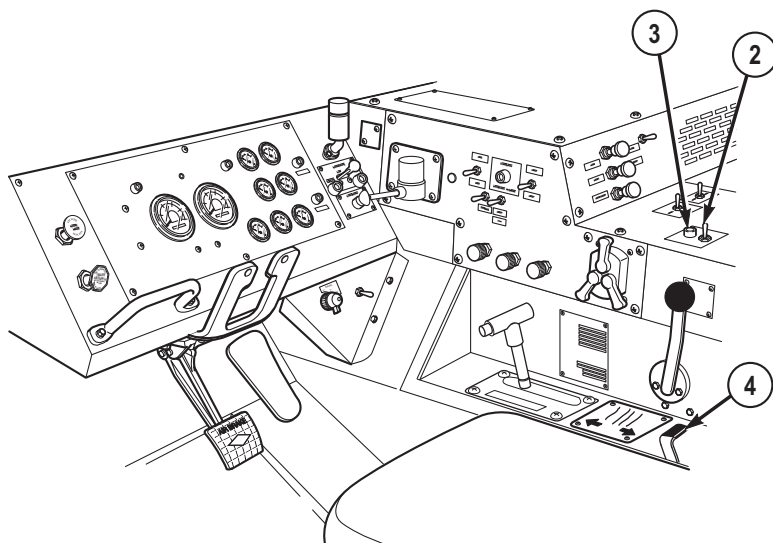


Figure 4.

7. Move winch shift lever (4) to OUT position to pay out small amount of cable.
8. Release winch shift lever (4) to center position.
9. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.
10. Remove cotter pin (5) from pin (6).

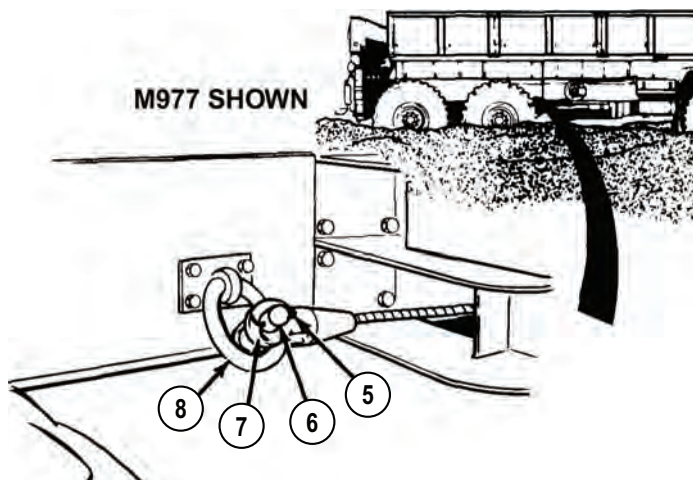


Figure 5.

WINCH MIRED VEHICLE FORWARD - Continued

11. Remove pin (6) from clevis (7) and disconnect clevis (7) from tie down ring (8).

WARNING

- Always wear protective gloves when handling winch cable. Never let cable run through hands. Frayed cables can cut severely. Failure to comply may result in injury or death to personnel.
 - Never operate winch with less than five wraps of cable on winch drum. Failure to comply may result in injury or death to personnel.
12. Route winch cable (9) around, and over top of winch (10) toward front of vehicle (as shown).

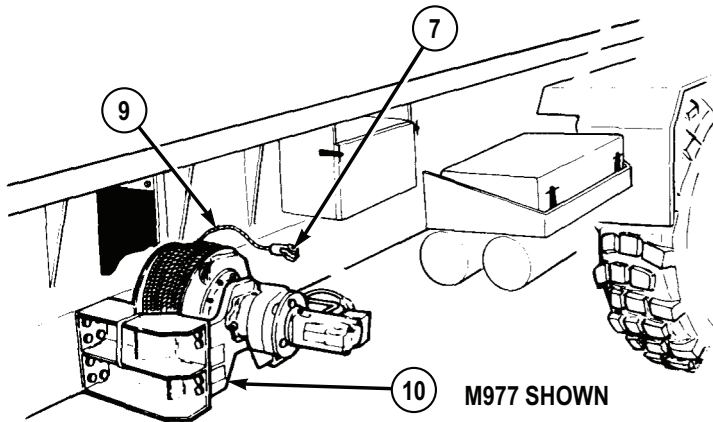


Figure 6.

13. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.

WINCH MIRED VEHICLE FORWARD - Continued

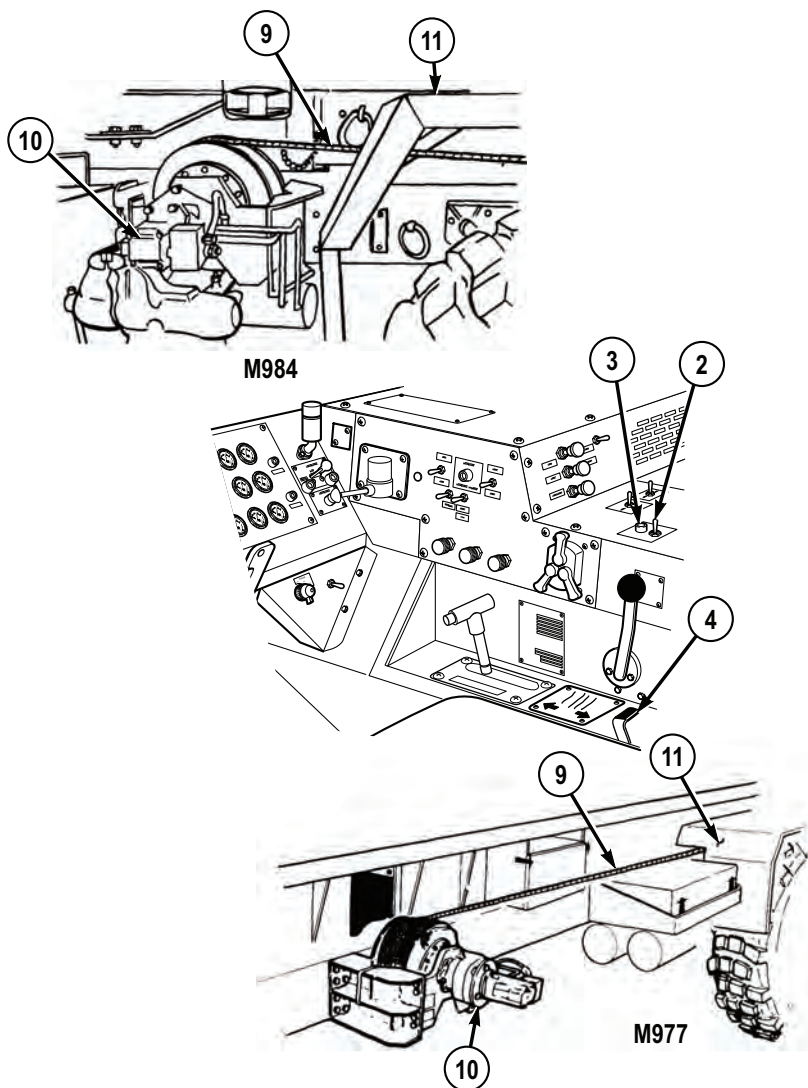


Figure 7.

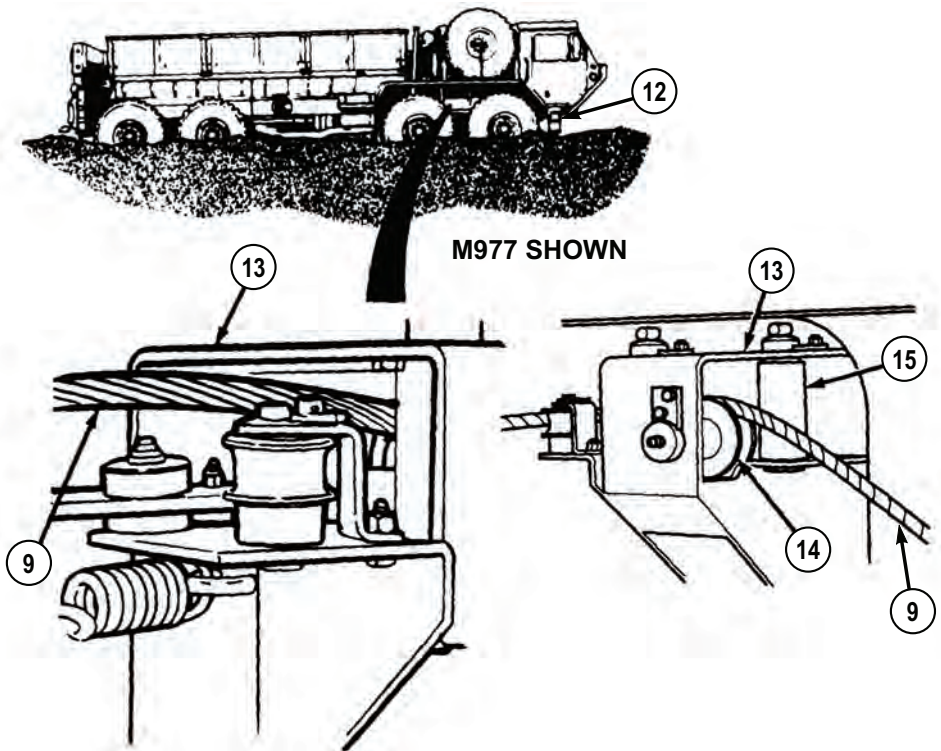
14. Move winch shift lever (4) to OUT and pay out winch cable (9), while assistant routes cable (9) through notch in fender (11).

NOTE

- Do not place cable between tensioning device pulleys at this time.

WINCH MIRED VEHICLE FORWARD - Continued

- When pulling cable through tensioning device, push sheave towards frame rail to allow clevis to pass through.
15. Pay out cable (9) while assistant pulls cable (9) until it is 6 in. to 1 ft. (15 cm to 30 cm) past the front roller guide (12).

*Figure 8.*

16. Stop paying out cable (9).
17. Assistant routes cable (9) through cable guide (13), over sheave (14), between roller (15), and side of cable guide (13).
18. Pay out winch cable (9) as assistant routes cable over first axle and 1 ft. (30 cm) past front roller guide assembly (12).

WINCH MIRED VEHICLE FORWARD - Continued

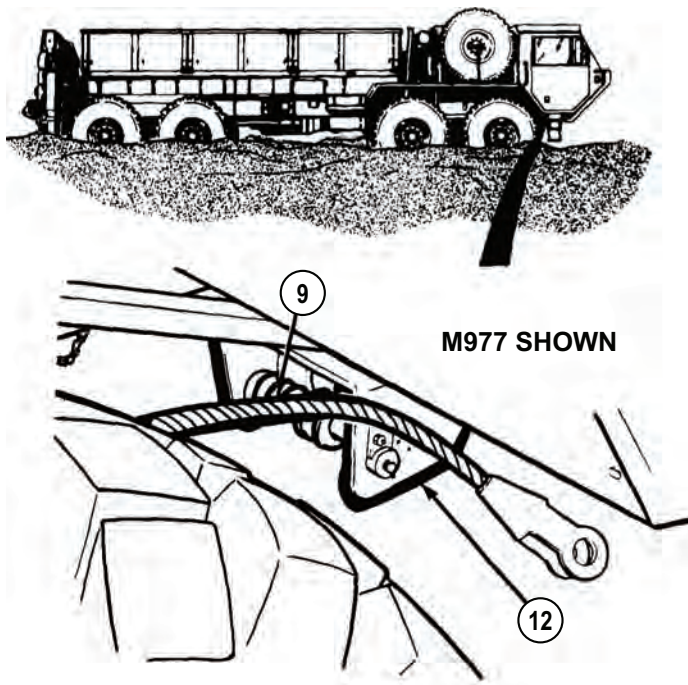


Figure 9.

19. Release winch shift lever (4) to center position.

WINCH MIRED VEHICLE FORWARD - Continued

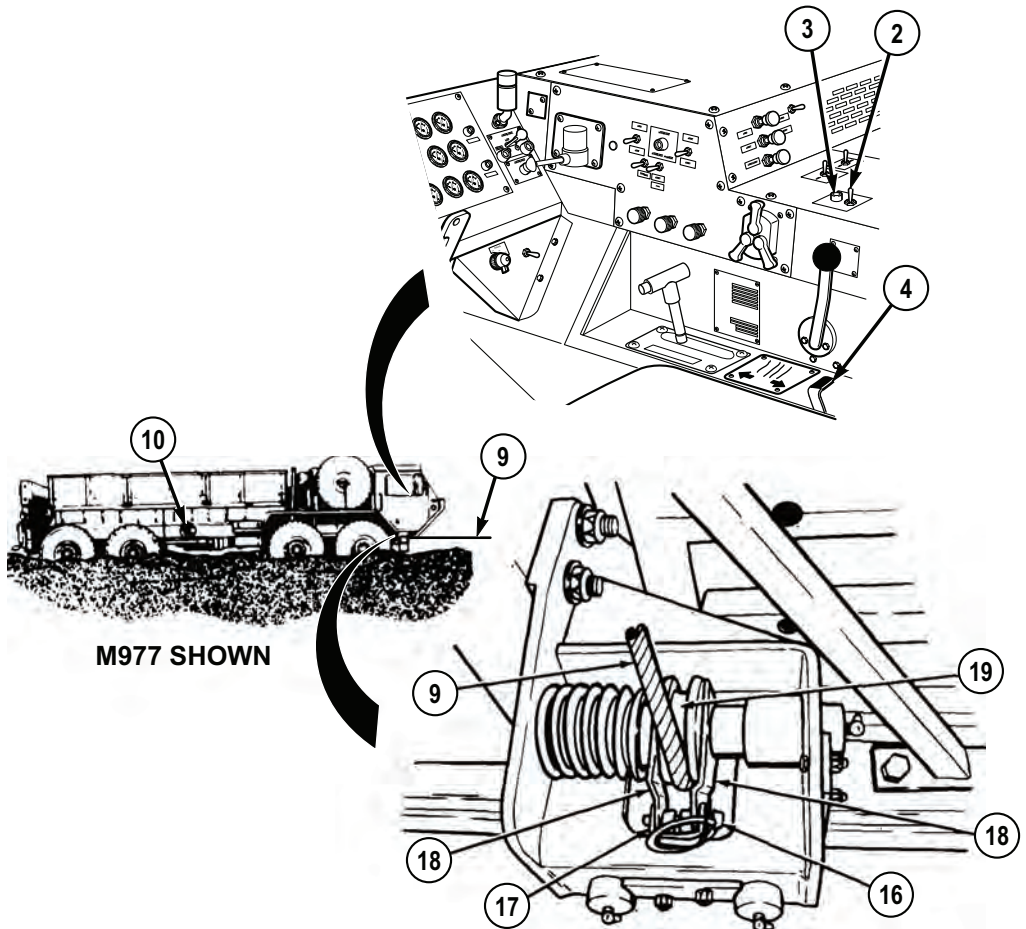


Figure 10.

20. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.
21. Remove quick release pin (16) and guide bracket (17). Move cable guide brackets (18) apart so cable (9) can be placed against bottom of sheave (19).
22. Move cable guide brackets (18) together and install guide bracket (17) and quick release pin (16).
23. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.
24. Move winch shift lever (4) to OUT and pay out winch cable (9) while assistant pulls cable to tree, another heavy vehicle (WP 0101), or another heavy object refer to FM 4-30.31. (WP 0173)

WINCH MIRED VEHICLE FORWARD - Continued

25. When winch cable (9) is let out to heavy object, release winch shift lever (4) to center position.
26. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.
27. If snatch block must be used for self-recovery operation, attach self-recovery winch cable (9) to snatch block (WP 0100) and connect end of self-recovery winch cable to mired vehicle left front towing eye. (WP 0101) Attach snatch block to tree, another vehicle, or heavy object refer to FM 4-30.31. (WP 0173)

CAUTION

There must always be at least five wraps of cable on winch. If load is applied with less than five wraps of cable on winch, cable may come loose on drum.

28. Check that there are at least five wraps of winch cable (9) left on winch (10). If there are not at least five wraps of winch cable left on self-recovery winch, stop using self-recovery winch and continue with Step (54) of this procedure.

CAUTION

Do not go over winch pull capacity or winch may be damaged.

29. Ensure weight of mired vehicle and amount of winch cable (9) left on self-recovery winch (10) does not go over pull capacity (refer to FM 4-30.31 (WP 0173) and Self-Recovery Winch Pull Capacity table below). If pull will go over capacity, stop using self-recovery winch and continue with Step (54) of this procedure.

Table 1. Self-Recovery Winch Pull Capacity.

| Cable Layer | Maximum Line Pull |
|------------------------|--------------------------|
| 1st layer (five wraps) | 20,000 lbs (9 080 kg) |
| 2nd layer | 18,173 lbs (8 251 kg) |
| 3rd layer | 16,663 lbs (7 565 kg) |
| 4th layer | 15,361 lbs (6 974 kg) |
| 5th layer | 14,254 lbs (6 471 kg) |

NOTE

If winch cable will be connected to another vehicle acting as a stationary anchor, refer to FM 4-30.31 (WP 0173) or Connect/Disconnect Self-

WINCH MIRED VEHICLE FORWARD - Continued

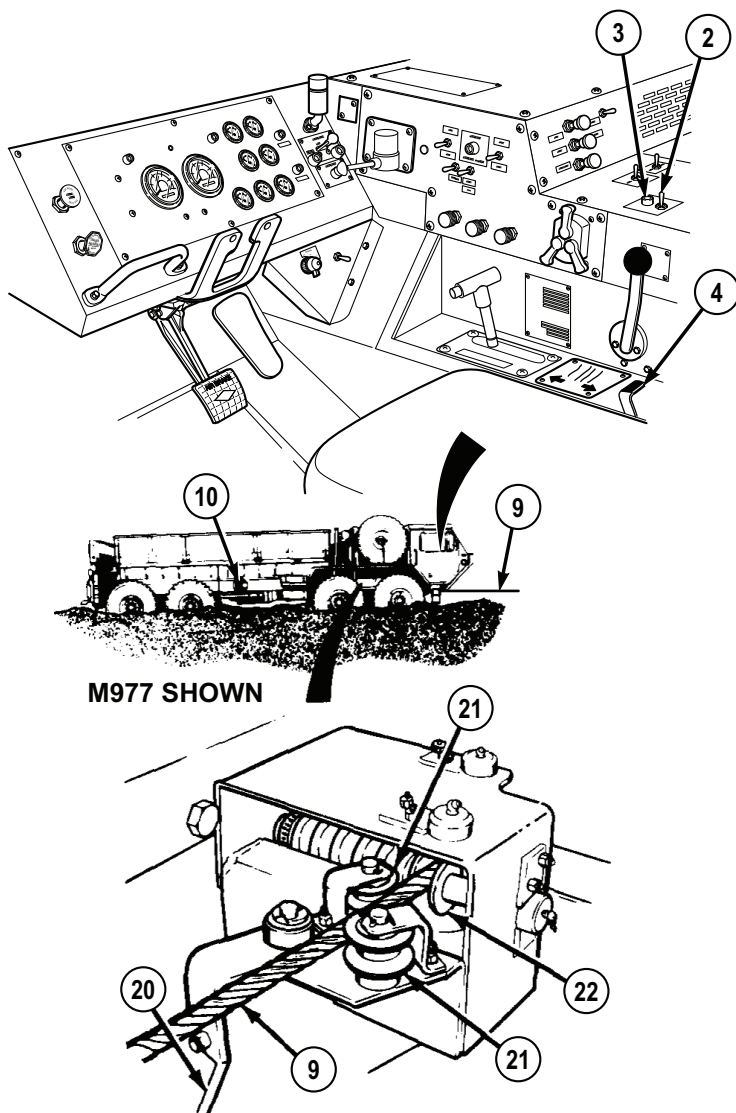
Recovery Winch Cable to Another Vehicle (WP 0101) for connecting procedures.

30. If it is determined using self-recovery winch (10) will not go over winch pull capacity, connect winch cable (9) to heavy object.
31. Ensure winch shift lever (4) is at center position.
32. Ensure PTO ENGAGE switch (2) is set to OFF position. Indicator light (3) will go out.

WARNING

- Always wear protective gloves when handling winch cable. Never let cable run through hands. Frayed cables can cut severely. Failure to comply may result in injury or death to personnel.
 - Never operate winch with less than five wraps of cable on winch drum. Failure to comply may result in injury or death to personnel.
33. Pull back and hold tension pulley lever (20).

WINCH MIRED VEHICLE FORWARD - Continued



M977 SHOWN

Figure 11.

34. Put winch cable (9) between tensioning device pulleys (21).
35. Release tension pulley lever (20).
36. Check that winch cable (9) rests inside grooves of both tensioning device pulleys (21) and sheave (22).

WINCH MIRED VEHICLE FORWARD - Continued

37. Check that winch cable (9) is not caught on vehicle or any other objects.

WARNING

Keep all personnel clear of area near winch cable when tension is on cable. Failure to comply may result in injury or death to personnel.

38. Ensure all personnel are clear of self-recovery winch (10) and winch cable (9).
39. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.
40. Move winch shift lever (4) to IN until slack is out of cable.
41. Release winch shift lever (4) to center position.

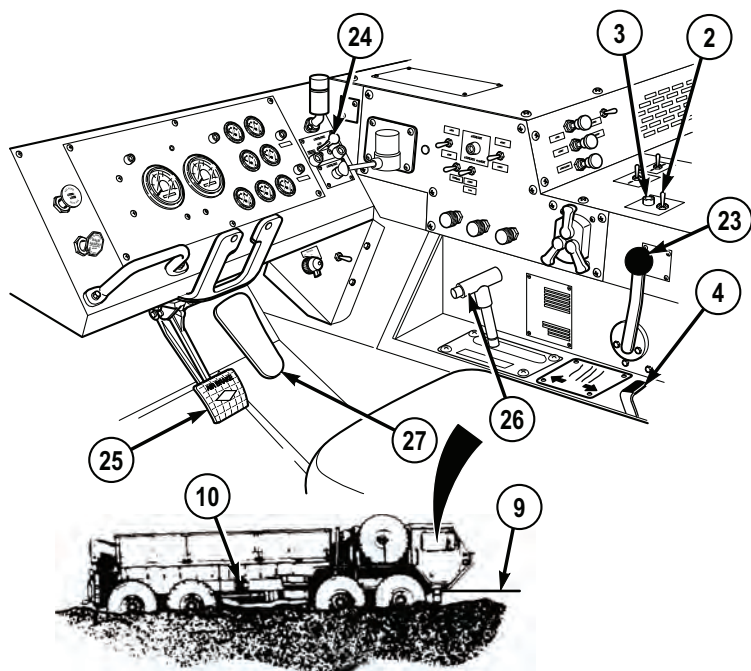
WARNING

Keep all personnel clear of area near winch cable when tension is on cable. Failure to comply may result in injury or death to personnel.

CAUTION

- Self-recovery winch is not designed to winch mired vehicle by itself. Mired vehicle drive system power must always be used with winch to self-recover vehicle, or damage to equipment can result.
 - If winch does not move mired vehicle, stop using winch, overheat damage may result.
42. Ensure TRANSFER CASE shift lever (23) is set to LO.

WINCH MIRED VEHICLE FORWARD - Continued



M977 SHOWN

Figure 12.

43. Ensure TRACTION CONTROL lever (24) is set to INTER-AXLE DIFF. LOCK.
44. Apply service brake pedal (25).
45. Set transmission range selector (26) to 1 (1st gear range).
46. Release service brake pedal (25).
47. Move winch shift lever (4) to IN and apply slight pressure to throttle pedal (27).

NOTE

Keep winch cable tight at all times so cable does not get tangled with vehicle.

48. Adjust position of throttle pedal (27) to change engine speed as needed to keep winch cable (9) tight and vehicle moving.
49. When mired vehicle is on solid ground, release winch shift lever (4) to center position.
50. Park vehicle. (WP 0050)

WINCH MIRED VEHICLE FORWARD - Continued

51. Set winch shift lever (4) to OUT and pay out winch cable (9) until all tension is off cable.
52. When all tension is off winch cable (9), release winch shift lever (4) to center position.
53. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.

NOTE

If winch cable is connected to another vehicle, refer to Connect/ Disconnect Self-Recovery Winch Cable to Another Vehicle (WP 0101) for disconnecting procedures.

54. Disconnect winch cable (9) from heavy object.
55. If snatch block was used, disconnect end of winch cable (10) from vehicle and remove snatch block from winch cable and from tree, other vehicle, or heavy object refer to FM 4-30.31. (WP 0173)

CAUTION

Do not reel clevis end of winch cable through roller guides. Clevis may catch on roller guide and cause cable or roller guide to break.

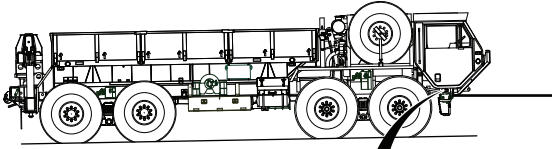
56. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.
57. Move winch shift lever (4) to IN.

WARNING

- Always wear protective gloves when handling winch cable. Never let cable run through hands. Frayed cables can cut severely. Failure to comply may result in injury or death to personnel.
 - Never operate winch with less than five wraps of cable on winch drum. Failure to comply may result in injury or death to personnel.
58. Reel in winch cable (9) while assistant uses tire iron extension handle to guide cable (9) onto self-recovery winch (10) so cable wraps are level across face of self-recovery winch (10).
 59. When end of cable (9) is near front of vehicle, release winch shift lever (4) to center position.
 60. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.

WINCH MIRED VEHICLE FORWARD - Continued

61. Remove quick release pin (16) and guide bracket (17). Move cable guide brackets (18) apart so winch cable (9) can be removed from sheave (19).



M977 SHOWN

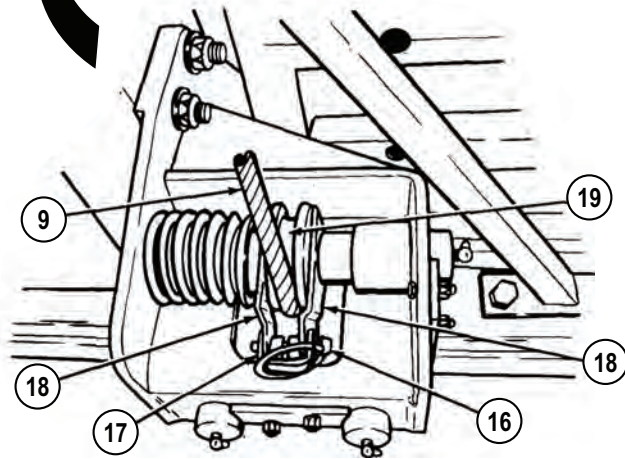


Figure 13.

62. Move cable guide bracket (18) together. Install guide bracket (17) and quick release pin (16).
63. Pull back and hold tension pulley lever (20).

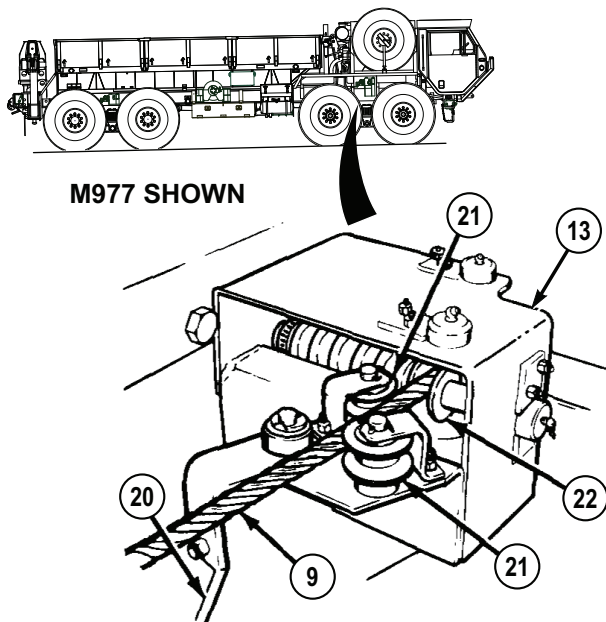
WINCH MIRED VEHICLE FORWARD - Continued

Figure 14.

64. Lift winch cable (9) out of tensioning device pulleys (21).
65. Release tension pulley lever (20).
66. Pull winch cable (9) back and out of cable guide (13).
67. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.

WINCH MIRED VEHICLE FORWARD - Continued

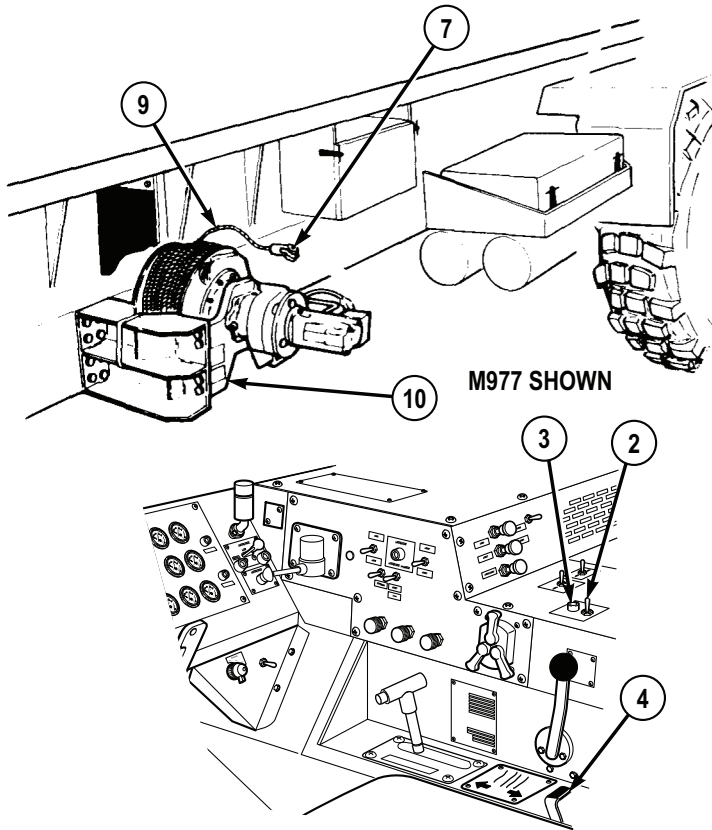
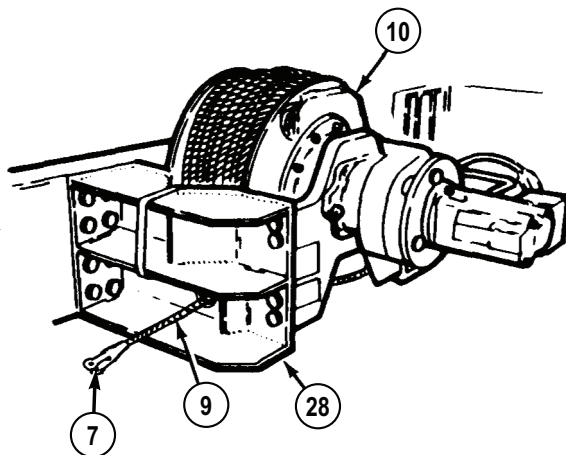


Figure 15.

68. While assistant guides winch cable (9), move winch shift lever (4) to IN.
69. When clevis (7) is approximately 2 ft. (61 cm) from winch (10), release winch shift lever (4) to center position.
70. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.
71. Assistant routes end of winch cable (9) down along front face of winch (10).

WINCH MIRED VEHICLE FORWARD - Continued

*Figure 16.*

72. Assistant routes end of winch cable (9) under winch (10) and out through hole in bottom of rear winch frame (28).
73. Assistant connects clevis (7) at end of winch cable (9) to tie down ring (8) with pin (6) and cotter pin (5).

WINCH MIRED VEHICLE FORWARD - Continued

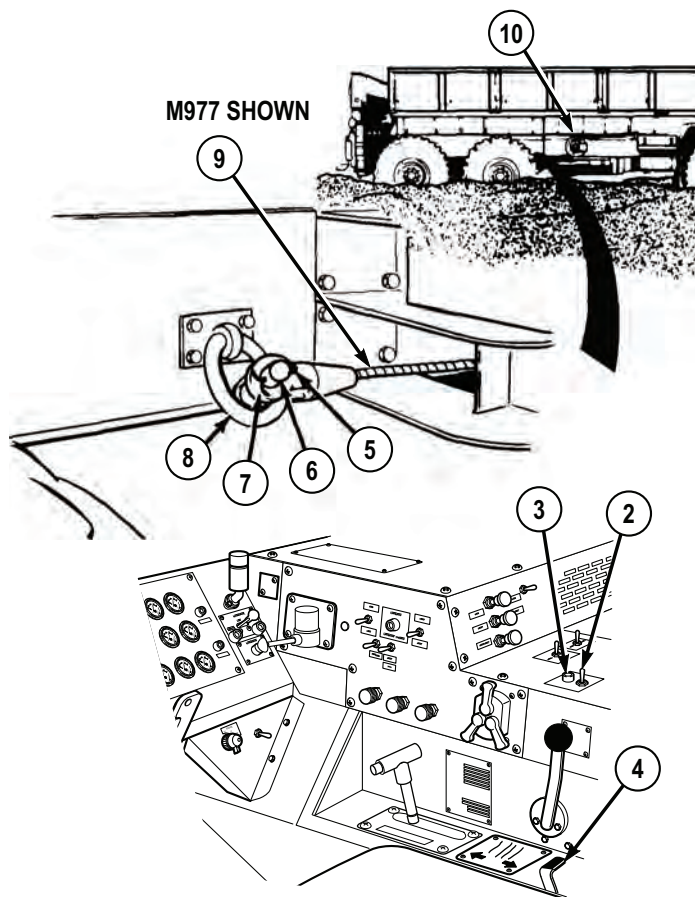


Figure 17.

74. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.

WARNING

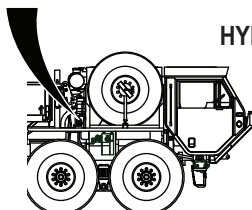
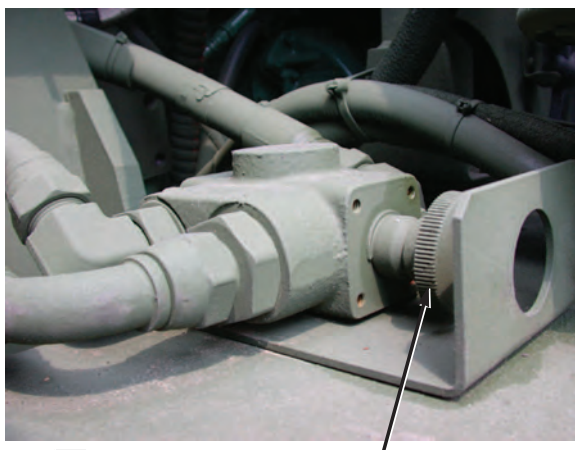
Keep all personnel clear of area near winch cable when tension is on cable. Failure to comply may result in injury or death to personnel.

75. Order all personnel to stand clear of area near winch (10).

WINCH MIRED VEHICLE FORWARD - Continued**CAUTION**

Do not reel in winch cable too tightly. If too much tension is applied, cable or tie down ring can break, or winch may be damaged.

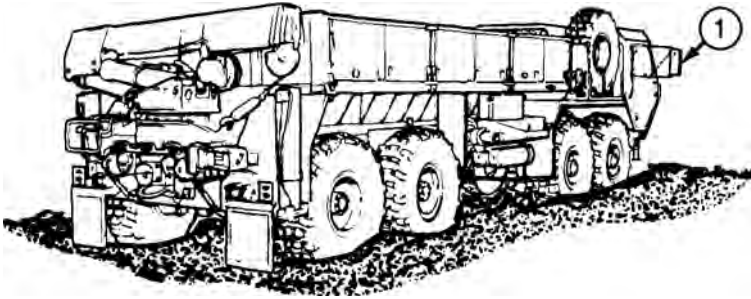
76. Once assistant and all other personnel are clear of area, move winch shift lever (4) to IN and take all slack out of winch cable (9).
77. When winch cable (9) is tight, release winch shift lever (4) to center position.
78. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.
79. Shut off engine. (WP 0051)
80. Push in hydraulic selector valve control.



**HYDRAULIC SELECTOR
VALVE CONTROL**

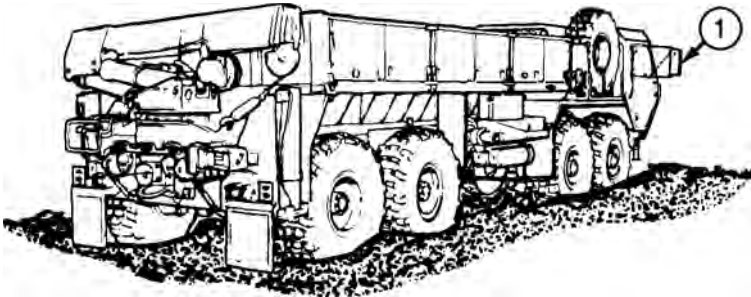
Figure 18.

81. Adjust mirror (1) for driving.

WINCH MIRED VEHICLE FORWARD - Continued*Figure 19.***WINCH MIRED VEHICLE TO THE REAR****NOTE**

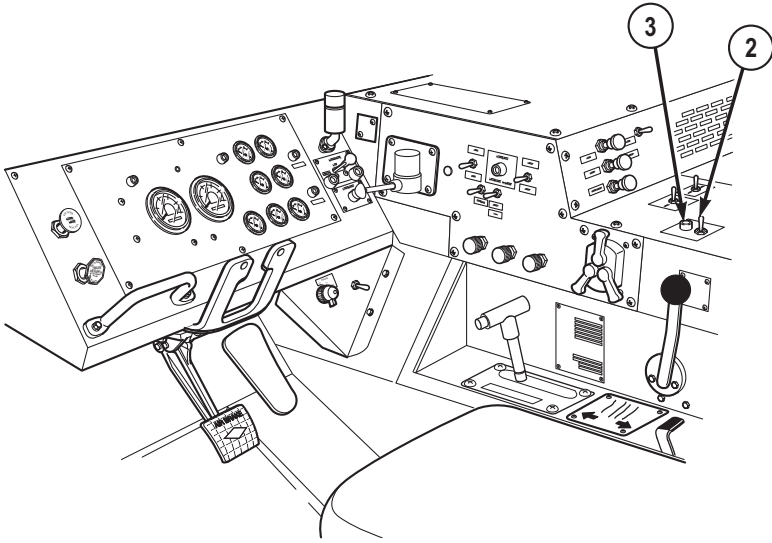
- For additional information on vehicle self-recovery refer to FM 4-30.31. (WP 0173)
- Vehicle self-recovery is a two soldier task. Soldiers must communicate by hand signals.

1. Shut off engine. (WP 0051)
2. Adjust mirror (1) so assistant can be clearly seen during procedure.

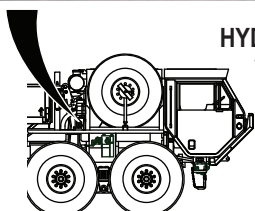
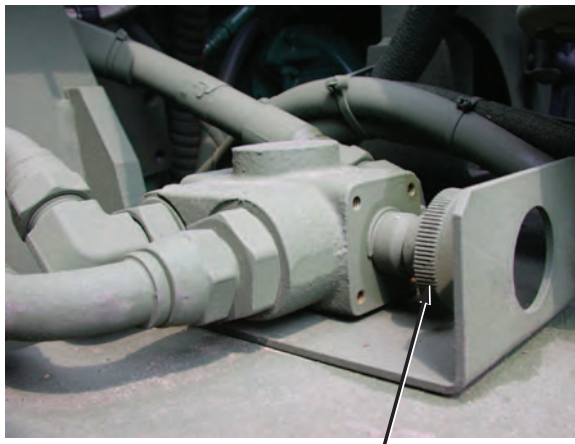
*Figure 20.***CAUTION**

PTO ENGAGE switch must be in OFF position before moving hydraulic selector valve to prevent equipment damage.

3. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.

WINCH MIRED VEHICLE TO THE REAR - Continued*Figure 21.*

4. Pull out hydraulic selector valve control.

WINCH MIRED VEHICLE TO THE REAR - Continued

**HYDRAULIC SELECTOR
VALVE CONTROL**

Figure 22.

5. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.

WINCH MIRED VEHICLE TO THE REAR - Continued

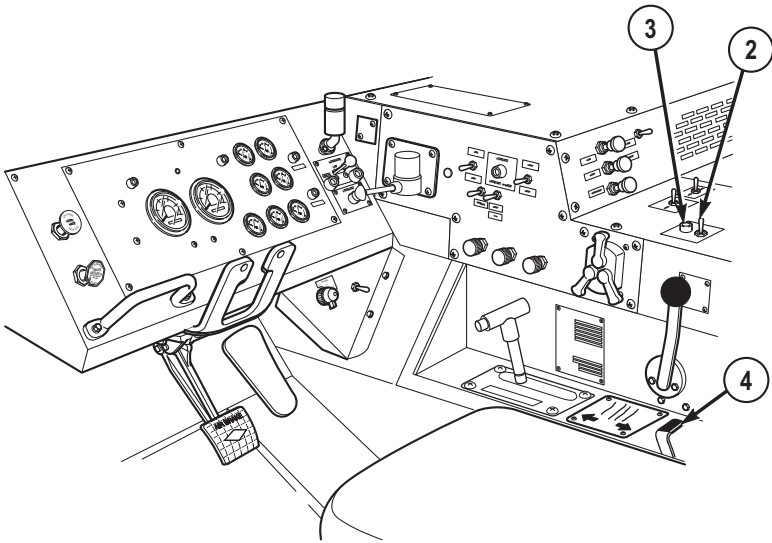


Figure 23.

6. Move winch shift lever (4) to OUT position to pay out small amount of cable.
7. Release winch shift lever (4) to center position.
8. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.
9. Remove cotter pin (5) from pin (6).

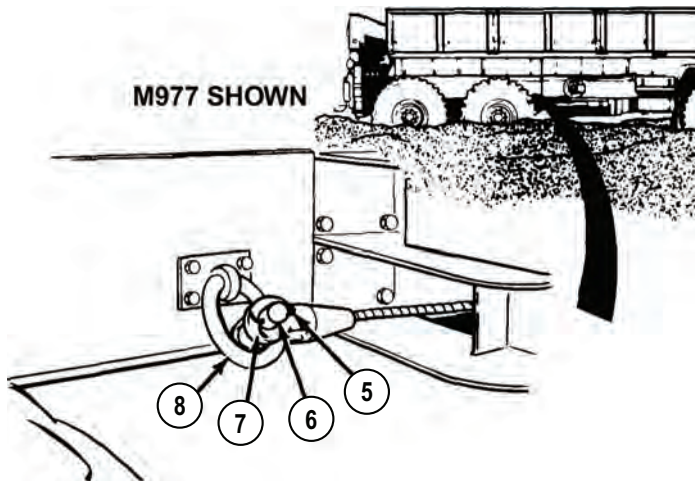


Figure 24.

WINCH MIRED VEHICLE TO THE REAR - Continued

10. Remove pin (6) from clevis (7) and disconnect clevis from tie down ring (8).
11. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.

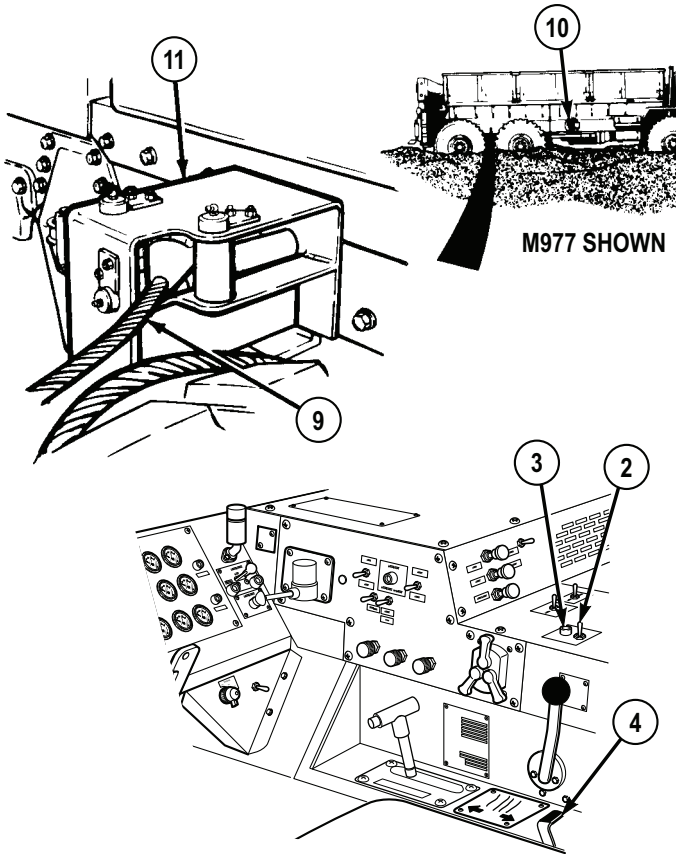


Figure 25.

WINCH MIRED VEHICLE TO THE REAR - Continued**WARNING**

- Always wear protective gloves when handling winch cable. Never let cable run through hands. Frayed cables can cut severely. Failure to comply may result in injury or death to personnel.
 - Never operate winch with less than five wraps of cable on winch drum. Failure to comply may result in injury or death to personnel.
12. Move winch shift lever (4) to OUT while assistant pulls winch cable (9) from self-recovery winch (10) toward rear of vehicle.

NOTE

- Do not place cable between tensioning device pulleys at this time.
 - When pulling cable through tensioning device, push sheave towards frame rail to allow clevis to pass through.
13. Continue to pay out winch cable (9) while assistant routes cable through cable guide (11).
14. Continue to pay out winch cable (9) while assistant routes cable roller guide (13).

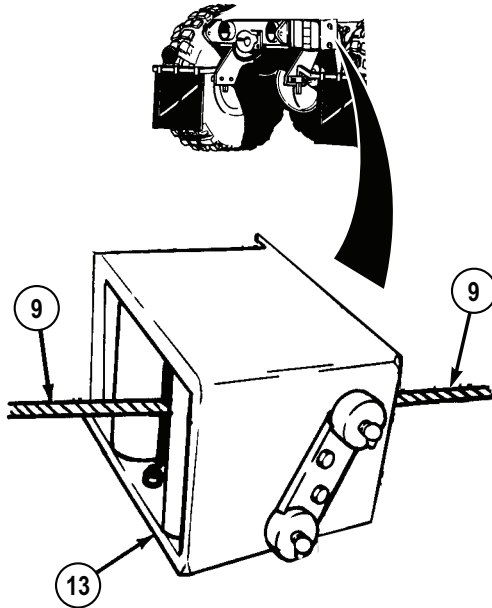
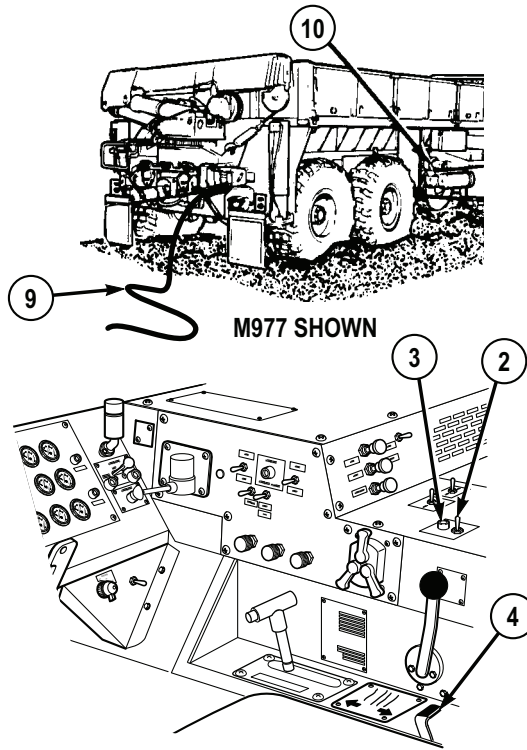
WINCH MIRED VEHICLE TO THE REAR - Continued

Figure 26.

15. Pay out winch cable (9) while assistant pulls cable to tree, another vehicle, or heavy object refer to FM 4-30.31. (WP 0173)
16. When winch cable (9) is let out to tree, another vehicle, heavy object, release winch shift lever (4) to center position.
17. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.

WINCH MIRED VEHICLE TO THE REAR - Continued*Figure 27.*

18. If snatch block must be used for self-recovery operation, attach self-recovery winch cable (9) to snatch block (WP 0100) and connect end of self-recovery winch cable to mired vehicle left rear towing eye. (WP 0101) Attach snatch block to a tree, another vehicle, or heavy object refer to FM 4-30.31. (WP 0173)

CAUTION

There must be at least five wraps of cable on winch. If load is applied with less than five wraps of cable on winch, cable may come loose on drum.

19. Check that there are at least five wraps of winch cable (9) left on winch (10). If there are not at least five wraps of winch cable left on winch (10), stop using self-recovery winch (10) and continue with Step (46) of this procedure.

CAUTION

Do not go over winch pull capacity or winch could be damaged.

WINCH MIRED VEHICLE TO THE REAR - Continued

20. Ensure weight of mired vehicle and amount of winch cable (9) left on winch (10) does not go over pull capacity refer to FM 4-30.31 (WP 0173) and Self-Recovery Winch Pull Capacity table below). If pull will go over capacity, stop using self-recovery winch and continue with Step (46) of this procedure.

Table 2. Self-Recovery Winch Pull Capacity.

| Cable Layer | Maximum Line Pull |
|------------------------|--------------------------|
| 1st layer (five wraps) | 20,000 lbs (9 080 kg) |
| 2nd layer | 18,173 lbs (8 251 kg) |
| 3rd layer | 16,663 lbs (7 565 kg) |
| 4th layer | 15,361 lbs (6 974 kg) |
| 5th layer | 14,254 lbs (6 471 kg) |

NOTE

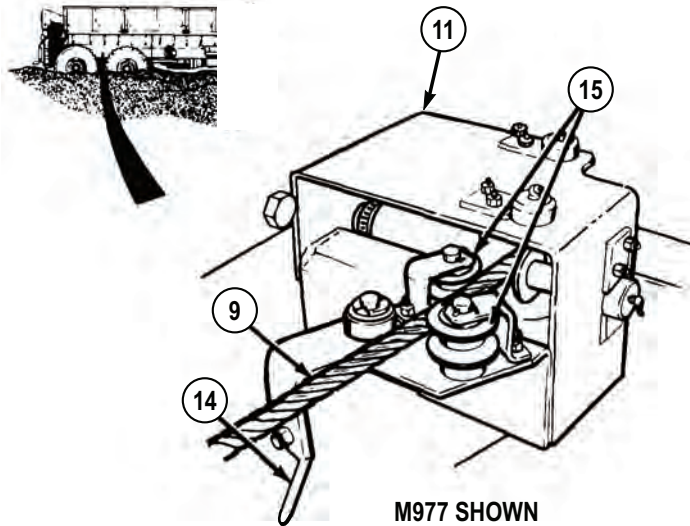
If winch cable will be connected to another vehicle acting as a stationary anchor, refer to FM 4-30.31 (WP 0173) or Connect/Disconnect Self-Recovery Winch Cable to Another Vehicle (WP 0101) for connecting procedures.

21. If it is determined using self-recovery winch (10) will not go over winch pull capacity, connect winch cable (9) to heavy object.
22. Ensure winch shift lever (4) is at center position.
23. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.

WARNING

Do not operate winch while personnel are working on or around tensioning device. Failure to comply may result in injury or death to personnel.

24. Pull back and hold tension pulley lever (14).

WINCH MIRED VEHICLE TO THE REAR - Continued*Figure 28.*

25. Route winch cable (9) between pulleys (15).
26. Release tension pulley lever (14).
27. Ensure winch cable (9) rests inside grooves of both pulleys (15).
28. Ensure winch cable (9) is not caught on vehicle or any other objects.

WARNING

Keep all personnel clear of area near winch cable when tension is on cable. Failure to comply may result in injury or death to personnel.

29. Ensure all personnel are clear of winch (10) and winch cable (9).

WINCH MIRED VEHICLE TO THE REAR - Continued

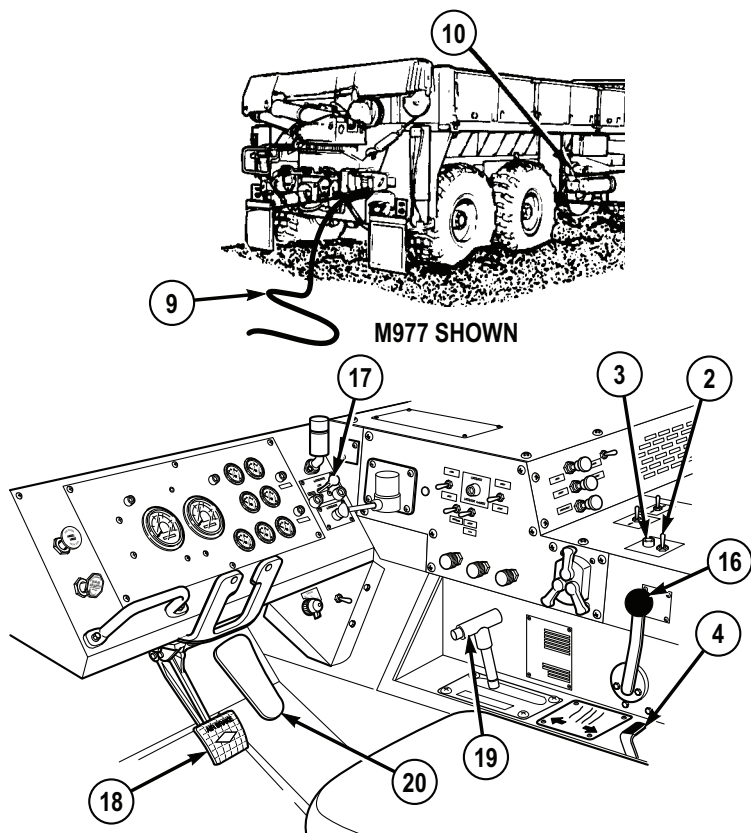


Figure 29.

30. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.
31. Move winch shift lever (4) to IN until slack is out of winch cable (9).
32. Release winch shift lever (4) to center position.

WARNING

Keep all personnel clear of area near winch cable when tension is on cable. Failure to comply may result in injury or death to personnel.

WINCH MIRED VEHICLE TO THE REAR - Continued**CAUTION**

- Self-recovery winch is not designed to winch mired vehicle by itself. Mired vehicle drive system power must always be used with winch to self-recover vehicle, or damage to equipment can result.
 - If winch does not move mired vehicle, stop using winch, overheat damage may result.
33. Ensure that TRANSFER CASE shift lever (16) is set to LO.
 34. Ensure TRACTION CONTROL lever (17) is set to INTER-AXLE DIFF. LOCK.
 35. Apply service brake pedal (18).
 36. Set transmission range selector (19) to R (reverse).
 37. Release service brake pedal (18).
 38. Slightly press throttle pedal (20) and move winch shift lever (4) to IN.

NOTE

Keep winch cable tight at all times so cable does not get tangled with vehicle.

39. Adjust position of throttle pedal (20) to change engine speed as needed to keep winch cable (9) tight and mired vehicle moving.
40. When mired vehicle is on solid ground, release winch shift lever (4) to center position.
41. Park vehicle. (WP 0050)
42. Set winch shift lever (4) to OUT and pay out winch cable (9) until all tension is released.
43. When all tension is off winch cable (9), release winch shift lever (4) to center position.
44. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.

NOTE

If winch cable is connected to another vehicle, refer to Connect/ Disconnect Self-Recovery Winch Cable to Another Vehicle (WP 0101) for disconnecting procedures.

45. Disconnect winch cable (9) from heavy object.
46. If snatch block was used, disconnect end of winch cable (9) from vehicle. (WP 0101) Remove snatch block from winch cable (WP 0100) and tree, another vehicle, or heavy object refer to FM 4-30.31. (WP 0173)

WINCH MIRED VEHICLE TO THE REAR - Continued**CAUTION**

Do not reel clevis end of winch cable through roller guides. Clevis may catch on roller guide and cause cable or roller guide to break.

47. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.
48. Set winch shift lever (4) to IN.
49. When end of cable is near rear of vehicle, release winch shift lever (4) to center position.
50. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.

WARNING

- Always wear protective gloves when handling winch cable. Never let cable run through hands. Frayed cables can cut severely. Failure to comply may result in injury or death to personnel.
 - Never operate winch with less than five wraps of cable on winch drum. Failure to comply may result in injury or death to personnel.
51. Pull clevis (7) end of winch cable (9) forward through roller guide (13).

WINCH MIRED VEHICLE TO THE REAR - Continued

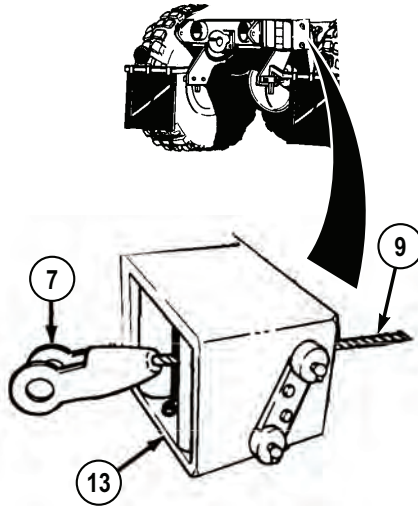


Figure 30.

52. Pull back and hold tension pulley lever (14).

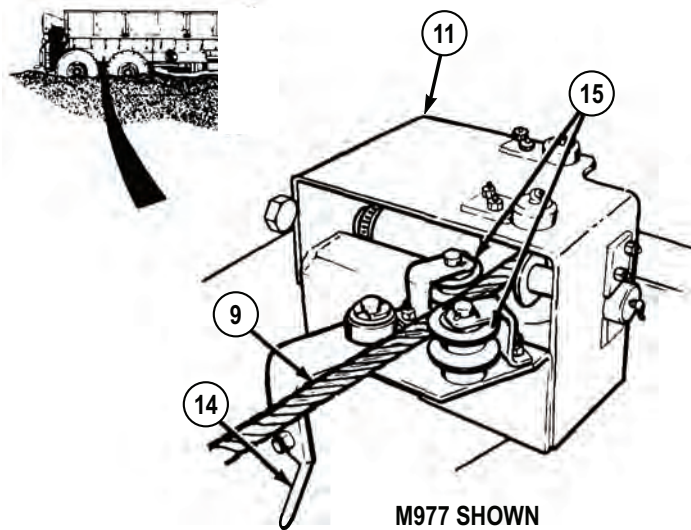


Figure 31.

53. Lift winch cable (9) out of pulleys (15).

WINCH MIRED VEHICLE TO THE REAR - Continued

54. Release tension pulley lever (14).
55. Pull winch cable (9) forward and out of cable guide (11).
56. Set PTO ENGAGE switch (2) to ON position. Indicator light (3) will illuminate.

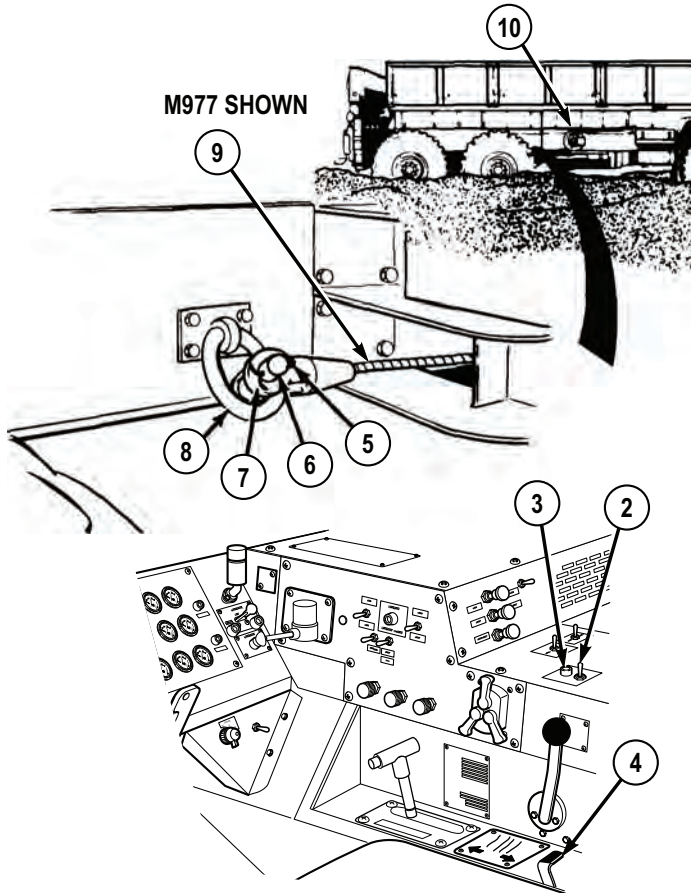


Figure 32.

57. Move winch shift lever (4) to IN position to reel in cable while assistant guides winch cable (9) to tie down ring (8).
58. When clevis (7) is approximately 2 ft. (61 cm) from winch (10), release winch shift lever (4) to center position.
59. Assistant connects clevis (7) to tie down ring (8) with pin (6) and cotter pin (5).

WINCH MIRED VEHICLE TO THE REAR - Continued**WARNING**

Keep all personnel clear of area near winch cable when tension is on cable. Failure to comply may result in injury or death to personnel.

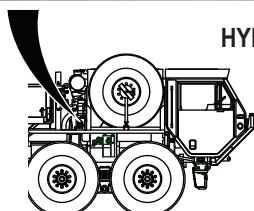
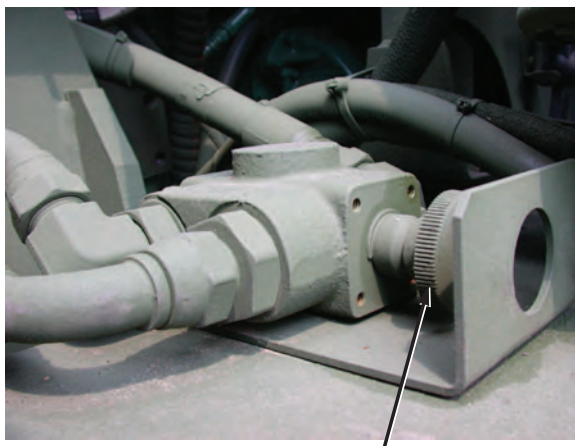
60. Order all personnel to stand clear of area near winch (10).

CAUTION

Do not reel in winch cable too tightly. If too much tension is applied, cable or tie down ring can break, or winch may be damaged.

61. Once assistant and all other personnel are clear of area, move winch shift lever (4) to IN and take all slack out of winch cable (9).
62. When cable is tight, release winch shift lever (4) to center position.
63. Set PTO ENGAGE switch (2) to OFF position. Indicator light (3) will go out.
64. Shut off engine. (WP 0051)
65. Push in hydraulic selector valve control.

WINCH MIRED VEHICLE TO THE REAR - Continued



HYDRAULIC SELECTOR
VALVE CONTROL

Figure 33.

66. Adjust mirror (1) for driving.

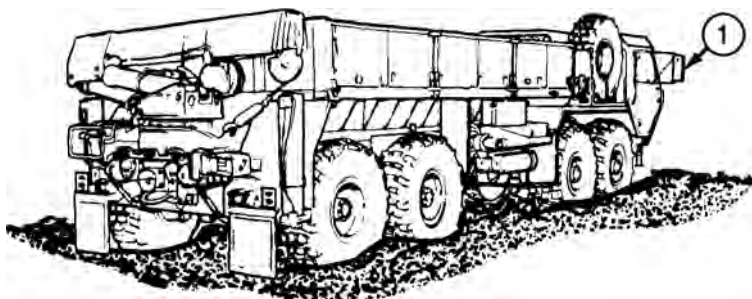


Figure 34.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE SNATCH BLOCK INSTALLATION/REMOVAL

INITIAL SETUP:

Not Applicable

ATTACH SNATCH BLOCK TO SELF-RECOVERY WINCH CABLE

1. Remove snatch block (1) from stowage.

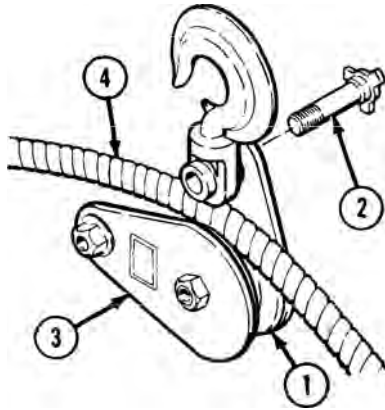


Figure 1.

2. Remove screw (2).
3. Move plate (3) to side to open snatch block (1).
4. Place winch cable (4) in snatch block (1).
5. Close plate (3) and align holes.
6. Install screw (2).
7. Ensure screw (2) is tight and winch cable (4) can be moved freely through snatch block (1).
8. Continue with self-recovery operation (WP 0099).

REMOVE SNATCH BLOCK FROM SELF-RECOVERY WINCH CABLE

1. Check that there is enough slack in winch cable (1).

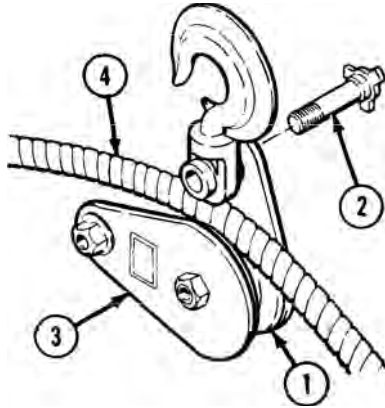


Figure 2.

2. Remove screw (2).
3. Move plate (3) to side to open snatch block (4).
4. Take winch cable (1) out of snatch block (4).
5. Close plate (3) and align holes.
6. Install screw (2).
7. Stow snatch block (4) in stowage box.
8. Continue with self-recovery operation (WP 0099).

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE
CONNECT/DISCONNECT SELF-RECOVERY WINCH CABLE TO ANOTHER VEHICLE

INITIAL SETUP:

Not Applicable

CONNECT CABLE TO VEHICLE

CAUTION

When attaching self-recovery winch cable to another vehicle, that vehicle must be used only as an anchor point or damage to equipment can result.

NOTE

There are three tie down rings on each side of vehicle.

1. Unscrew one tie down ring (1) from mounting plate (2).

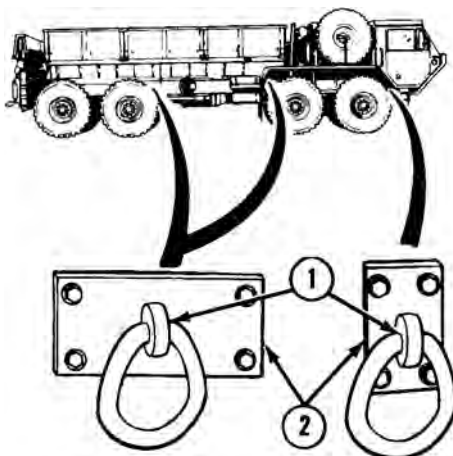
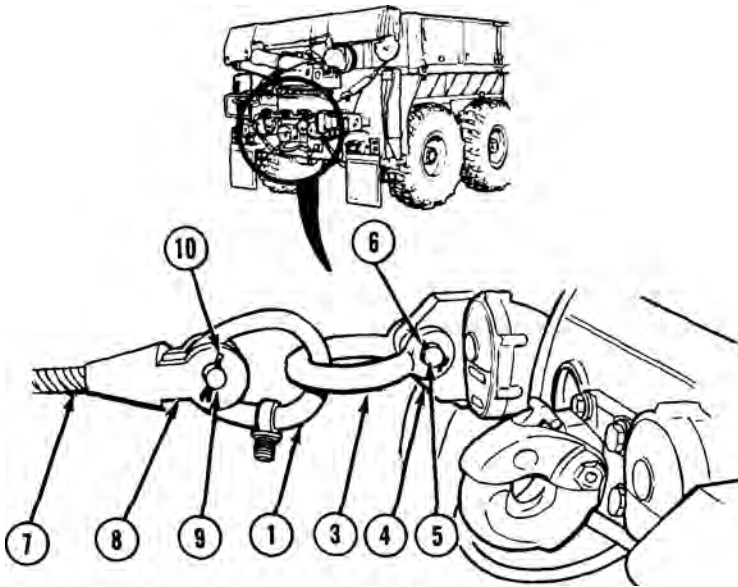


Figure 1.

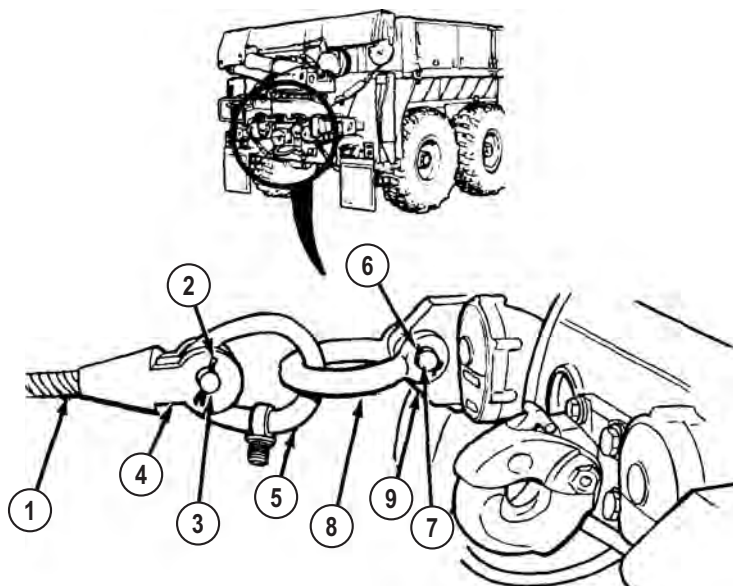
2. Remove lifting shackle (3) from stowage.

CONNECT CABLE TO VEHICLE - Continued*Figure 2.*

3. Insert lifting shackle (3) through tie down ring (1).
4. Connect lifting shackle (3) to left front of left rear tow eye (4) with pin (5).
5. Install cotter pin (6).
6. Connect self-recovery winch cable (7) with clevis (8) to tie down ring (1) with pin (9).
7. Install cotter pin (10).
8. Continue with self-recovery winch operation. (WP 0099)

DISCONNECT CABLE FROM VEHICLE

1. Ensure there is enough slack in winch cable (1).

DISCONNECT CABLE FROM VEHICLE - Continued*Figure 3.*

2. Remove cotter pin (2).
3. Remove pin (3) and disconnect clevis (4) from tie down ring (5).
4. Remove cotter pin (6).
5. Remove pin (7) and disconnect lifting shackle (8) from tow eye (9).
6. Remove tie down ring (5) from lifting shackle (8).
7. Stow lifting shackle (8).

NOTE

There are three tie down rings on each side of vehicle.

8. Install tie down ring (5) into mounting plate (10).

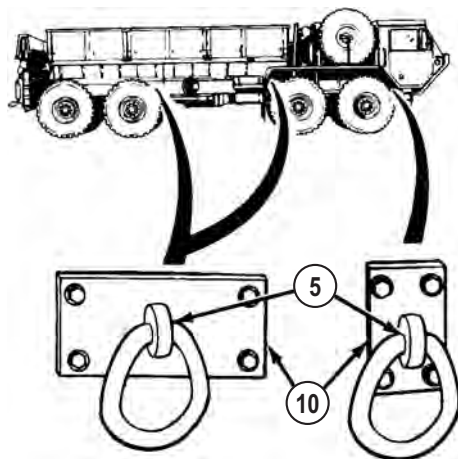
DISCONNECT CABLE FROM VEHICLE - Continued

Figure 4.

9. Continue with self-recovery winch operation. (WP 0099)

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
TOW DISABLED VEHICLE**

INITIAL SETUP:

Not Applicable

TOW DISABLED VEHICLE**CAUTION**

- When towing another vehicle, do not go over GCWR given in equipment data (WP 0006). Failure to comply may result in damage to equipment.
- Propeller shaft must be removed by field level maintenance before towing disabled vehicle or equipment may be damaged.

NOTE

Disabled vehicles must be prepared and moved in accordance with FM 21-305 . If instructed to do so, manually release spring brakes (WP 0113) as part of preparing disabled vehicle for towing.

1. Install and operate portable beacon lights. (WP 0087)
2. Set TRANSFER CASE shift lever (1) to NEUT (neutral) position.
3. Set TRACTION CONTROL lever (2) to OFF.

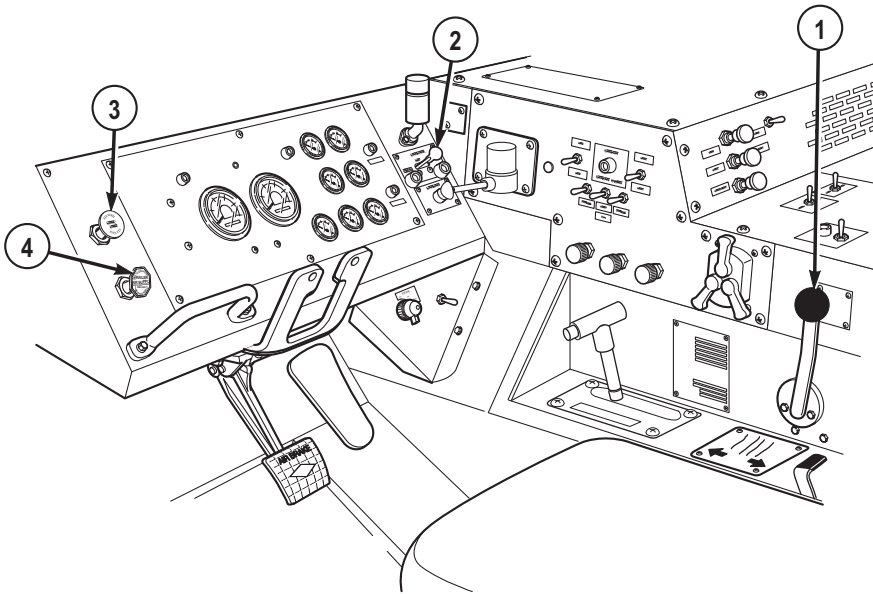
TOW DISABLED VEHICLE - Continued

Figure 1.

4. Push in PARKING BRAKE control on disabled vehicle (refer to operator's manual).
5. Push in TRAILER AIR SUPPLY control (4) on recovery vehicle.
6. Transport disabled vehicle.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE CONNECT/DISCONNECT TOW BAR

INITIAL SETUP:

Personnel Required

Operator and Assistant(s) - - - (3)

CONNECT TOW BAR

WARNING



Do not use 10-ton tow bar with self-guided coupler (normally found on some M1120 LHS and M1977 CBT models). Self-guided coupler is not compatible with 10-ton tow bar. Failure to comply may result in injury or death to personnel

WARNING



Tow bar is heavy. Do not attempt to lift or move tow bar without the aid of two assistants and a lifting device. Failure to comply may result in injury or death to personnel.

NOTE

- This procedure is a three soldier task.
 - The 10-ton tow bar should always be used in conjunction with two 16 ft. (5 m) safety chains.
 - Allow ample distance between towing vehicle and disabled vehicle to connect 10-ton tow bar.
1. Align rear of towing vehicle near front of disabled vehicle.

CONNECT TOW BAR - Continued**WARNING**

Tow bar is heavy. Do not attempt to lift or move tow bar without the aid of two assistants and a lifting device. Failure to comply may result in injury or death to personnel.

2. With aid of two assistants and a lifting device, remove tow bar (1) from stowage.

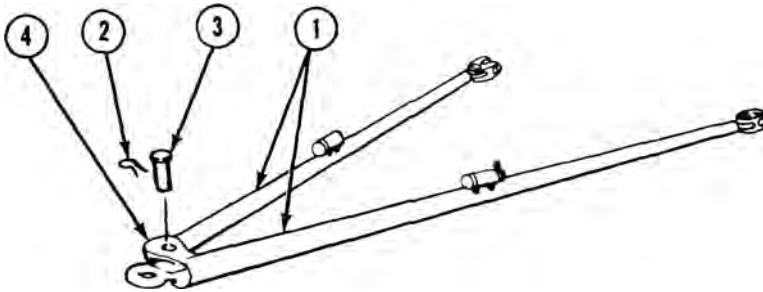


Figure 1.

3. Remove cotter hairpin (2) and pin (3) from tow bar (1).
4. Separate tow bar (1) at pivot point (4).

NOTE

Towing eyes on all models of HEMTT series vehicles are same in appearance, operation, and location. HEMTT M977 shown.

5. Position legs of tow bar (1) in front of disabled vehicle with spare pins (5) facing up.

CONNECT TOW BAR - Continued

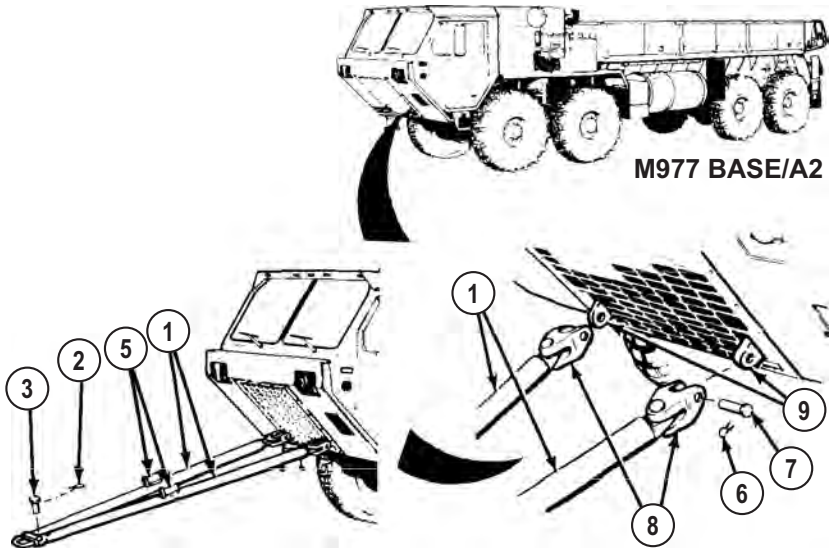


Figure 2.

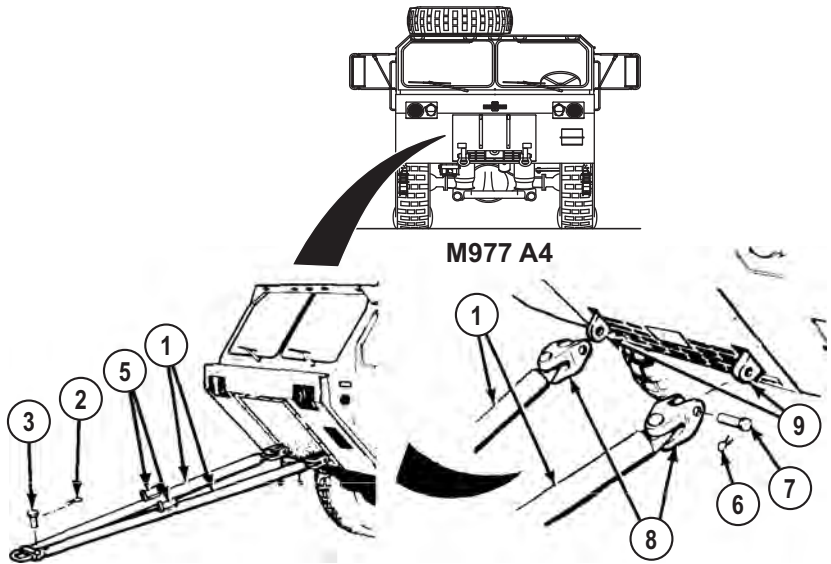


Figure 3.

6. Remove two cotter hairpins (6) and pins (7) from tow bar shackles (8).

CONNECT TOW BAR - Continued**WARNING**

Tow bar is heavy. Do not attempt to lift or move tow bar without the aid of two assistants and a lifting device. Failure to comply may result in injury or death to personnel.

7. While two assistants hold one leg of tow bar (1) and align shackle (8) with towing eye (9), install pin (7) and cotter hairpin (6).
8. Repeat Step (7) for other leg of tow bar (1).
9. Align legs of tow bar (1) at pivot point (4) and install pin (3) and cotter hairpin (2).

WARNING

Do not use 10-ton tow bar with self-guided coupler (normally found on some M1120 LHS and M1977 CBT models). Self-guided coupler is not compatible with 10-ton tow bar. Failure to comply may result in injury or death to personnel

NOTE

Pintle hook on all models of HEMTT series vehicles are same in appearance, operation, and location. HEMTT M977 shown.

10. Position the towing vehicle so pintle hook is aligned with tow bar lunette eye.
11. Remove cotter pin (10) from pintle hook (11).

CONNECT TOW BAR - Continued

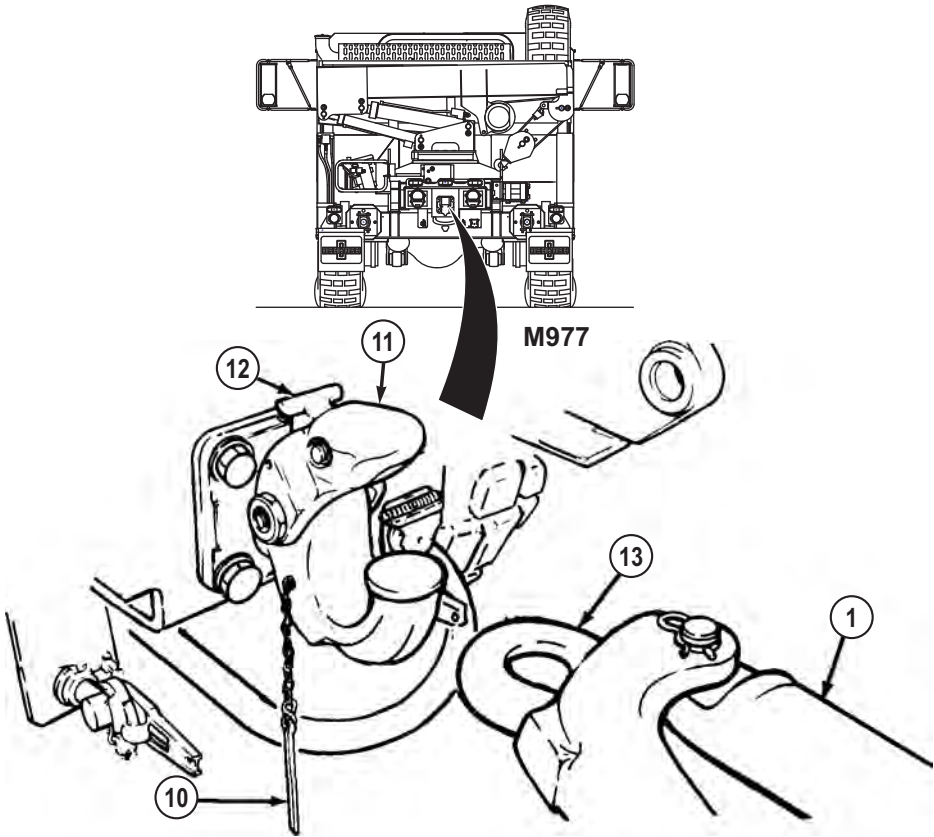


Figure 4.

12. Pull latch (12) away from vehicle and hold.
13. Lift top of pintle hook (11) and let go of latch (12). Pintle hook (11) will be locked open.

WARNING

Tow bar is heavy. Do not attempt to lift or move tow bar without the aid of two assistants and a lifting device. Failure to comply may result in injury or death to personnel.

CONNECT TOW BAR - Continued**WARNING**

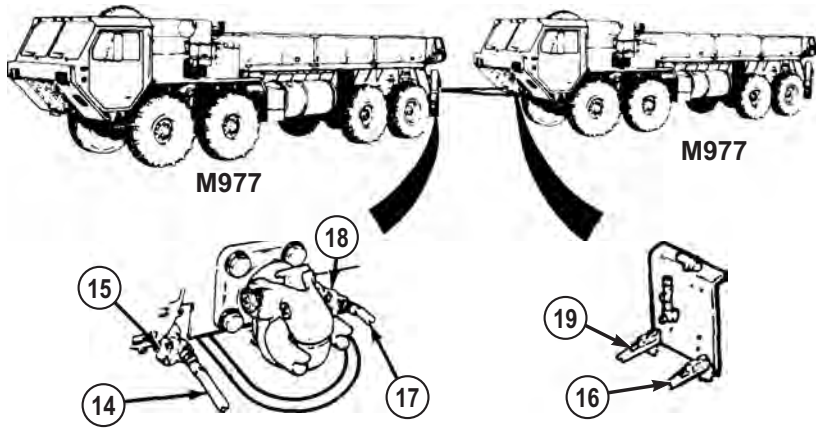
Do not put hands near pintle hook while aligning lunette eye with pintle hook. Failure to comply may result in injury or death to personnel.

14. While two assistants lift tow bar (1), slowly back up towing vehicle until tow bar lunette eye (13) connects to pintle hook (11).
15. Pull latch (12) and close top half of pintle hook (11).
16. Install cotter pin (10) in pintle hook (11).

NOTE

If air system of disabled vehicle is damaged, manually release spring brakes (WP 0113).

17. Remove two inter-vehicular air lines (14) from stowage.

CONNECT TOW BAR - Continued*Figure 5.***NOTE**

Gladhands on all models of HEMTT series vehicles are same in appearance, operation, and location. HEMTT M977 shown.

18. Connect first intervehicular air line (14) to driver side rear gladhand (15) of towing vehicle and driver side front gladhand (16) of disabled vehicle.
19. Connect second intervehicular air line (17) to passenger side rear gladhand (18) of towing vehicle and passenger side front gladhand (19) of disabled vehicle.
20. Remove two 16 ft. (5 m) safety chains (20) from stowage.

NOTE

- Both driver side and passenger side walking beams are same. Driver side shown.
- If disabled vehicle is either a BASE or A2 model HEMTT series vehicle (refer to data plate on inside of drivers door), complete Step

CONNECT TOW BAR - Continued

(21). If disabled vehicle is an A4 model HEMTT series vehicle (refer to data plate on inside of drivers door), skip to Step (22).

21. Route one 16 ft. (5 m) safety chain (20) over walking beam (21) behind No. 1 axle (22) on disabled vehicle, and hook 16 ft. (5 m) safety chain (20) back into itself under walking beam (21) as shown.

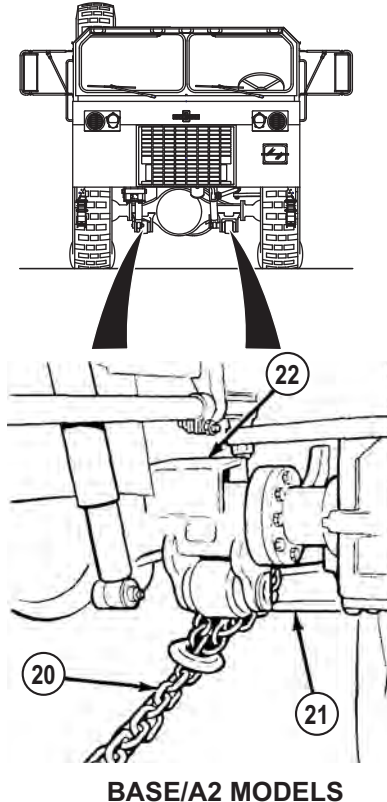


Figure 6.

CAUTION

Special care should be taken when connecting 16 ft. (5 m) safety chain to tie down ring. The procedure listed below routes the 16 ft. (5 m) safety chain in such a way as to minimize excessive contact with vehicle air suspension air springs during towing. Failure to comply may result in damage to equipment.

CONNECT TOW BAR - Continued**NOTE**

Both driver side and passenger side tie down rings are same. Driver side shown.

22. Connect 16 ft. (5 m) safety chain (20) to disabled vehicle tie down ring (23):
 - a. Route end (without safety shackle) of 16 ft. (5 m) safety chain (20) through tie down ring (23) from inboard to outboard until grab hook (24) hangs just below bottom of air spring (25).

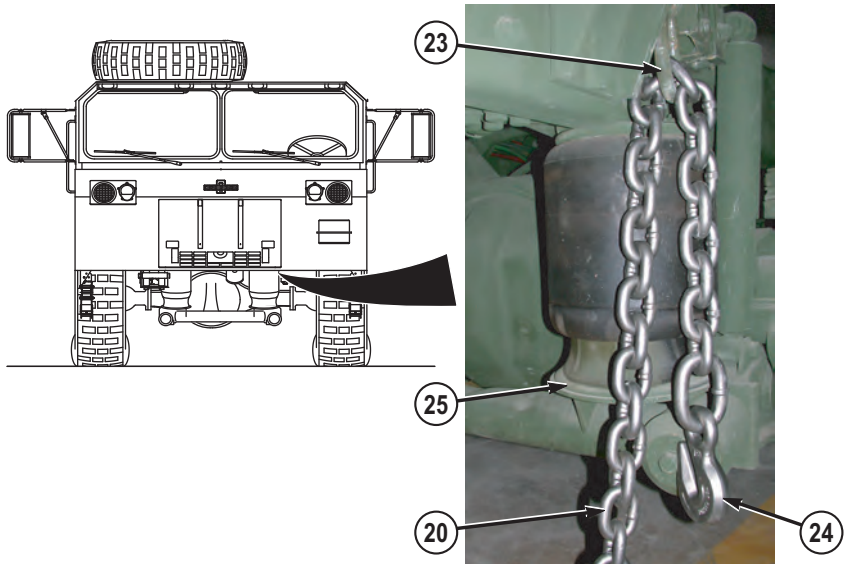


Figure 7.

- b. Hook 16 ft. (5 m) safety chain (20) back to itself. Grab hook (24) should open towards ground (shown) when tension is applied to 16 ft. (5 m) safety chain (20).

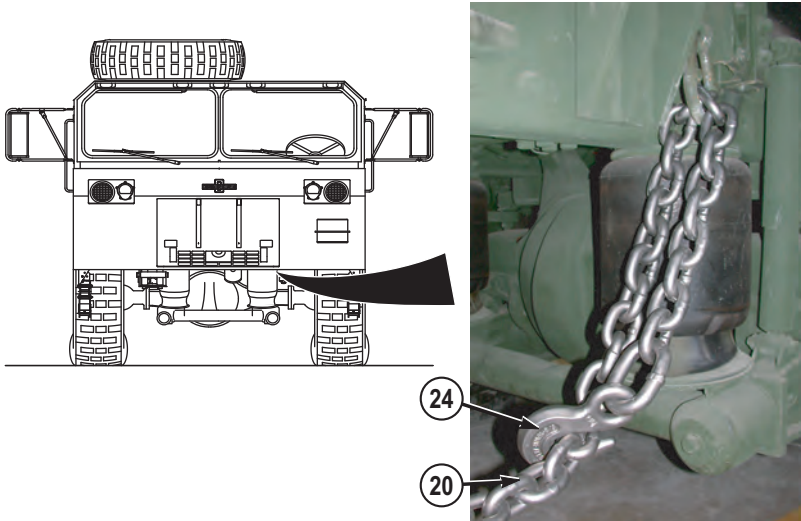
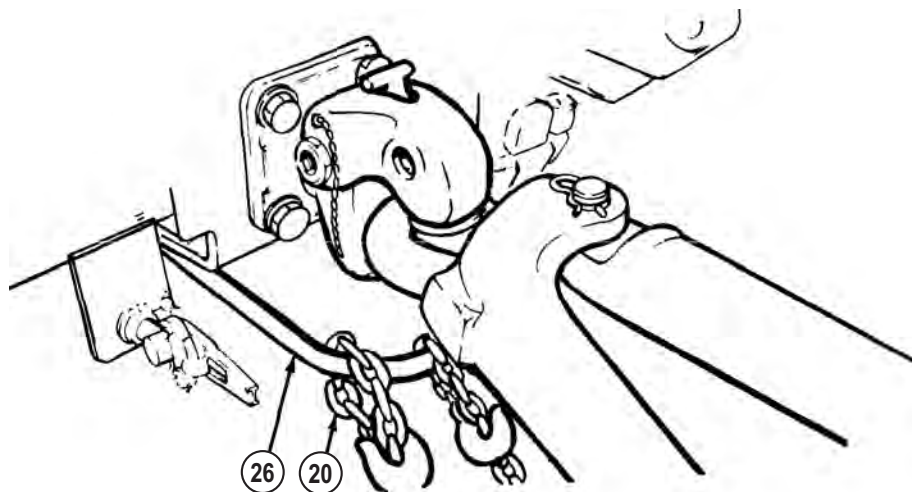
CONNECT TOW BAR - Continued

Figure 8.

23. Repeat Steps (21) or (22) for other side of disabled vehicle.

NOTE

- 16 ft. (5 m) safety chain may be attached to either safety chain loop or towing shackles.
 - 16 ft. (5 m) safety chain should be attached so they are just above, but not in contact with the ground.
24. Route free ends of two 16 ft. (5 m) safety chain (20) through safety chain loop (26) on towing vehicle and attach each 16 ft. (5 m) safety chain (20) back into itself as shown.

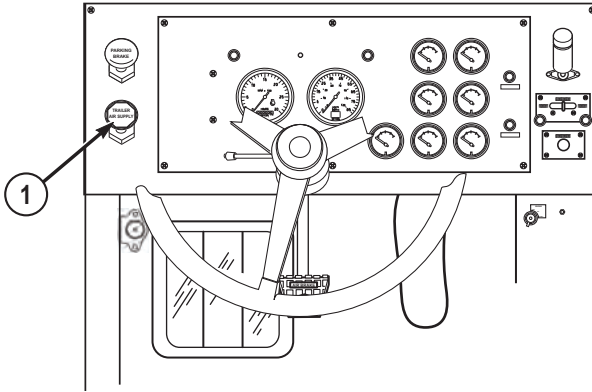
CONNECT TOW BAR - Continued*Figure 9.*

25. Tow disabled vehicle. (WP 0102)

DISCONNECT TOW BAR**NOTE**

- This procedure is a three soldier task.
- Vehicle should be parked and disconnected on level ground.

1. Park towing vehicle. (WP 0050)
2. Pull out TRAILER AIR SUPPLY control (1) on towing vehicle.

DISCONNECT TOW BAR - Continued*Figure 10.***NOTE**

If disabled vehicle parking brake is inoperable and/or spring brakes on disabled vehicle were manually released, install wheel chocks (refer to operator's manual).

3. Engage parking brake on disabled vehicle (refer to operator's manual).
4. Disconnect two 16 ft. (5 m) safety chains (2) from towing vehicle and disabled vehicle. Return 16 ft. (5 m) safety chains (2) to stowage.

DISCONNECT TOW BAR - Continued

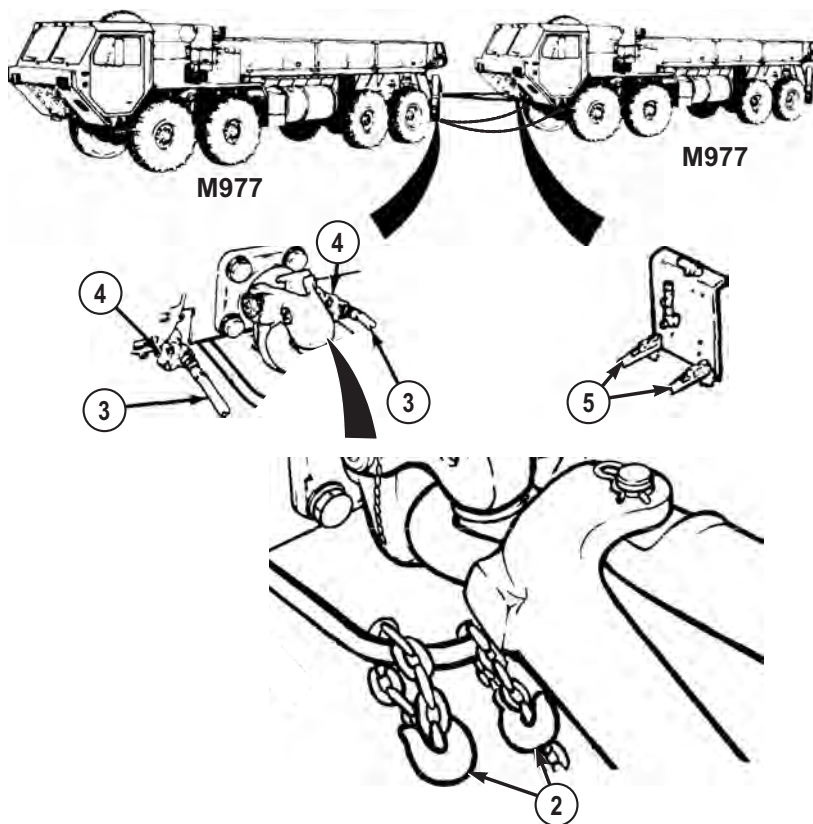
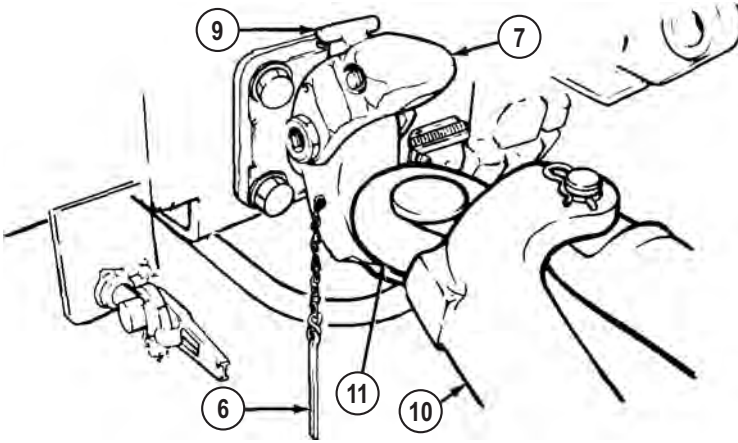


Figure 11.

NOTE

If spring brakes on disabled vehicle were manually released before towing, skip to Step (6).

5. Disconnect two intervehicular air lines (3) from towing vehicle rear gladhands (4) and from disabled vehicle front gladhands (5). Return intervehicular air lines (5) to stowage.
6. Remove cotter pin (6) from towing vehicle pintle hook (7).

DISCONNECT TOW BAR - Continued*Figure 12.*

7. Pull latch (9) away from vehicle and hold.
8. Lift top of pintle hook (7) and let go of latch (9). Pintle hook (7) will be locked open.
9. As two assistants lift tow bar (10) until lunette eye (11) is clear of pintle hook (10), drive towing vehicle forward approximately 15 ft. (4.6 m).
10. As assistants lower tow bar (10) to the ground, park towing vehicle.
11. Pull latch (9) to close towing vehicle pintle hook (7) and install cotter pin (6) in pintle hook (7).
12. Remove cotter hairpin (12) and pin (13) and separate tow bar (10) at pivot point (14).

DISCONNECT TOW BAR - Continued

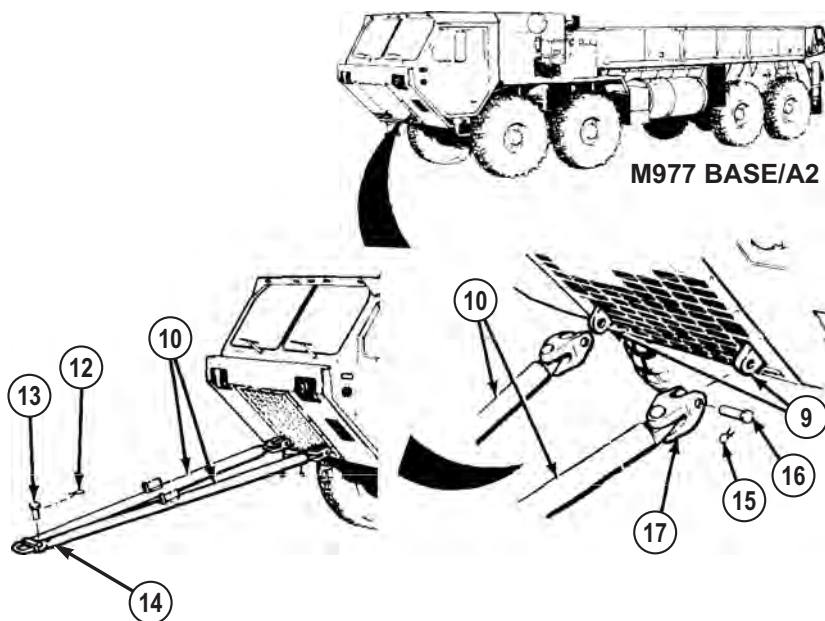


Figure 13.

DISCONNECT TOW BAR - Continued

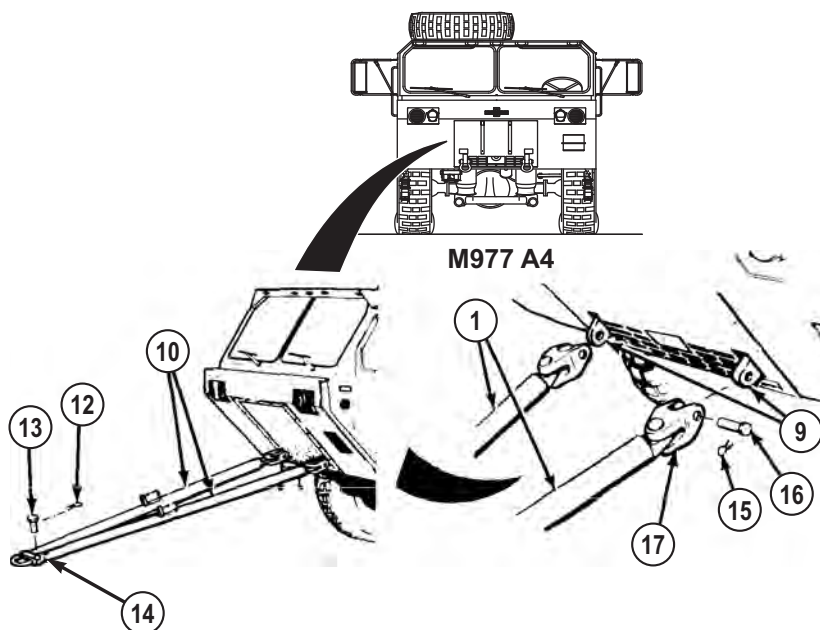


Figure 14.

13. With aid of an assistant, hold one leg of tow bar (10) while another assistant removes cotter hairpin (15) and pin (16) from shackle (17).
14. Repeat Step (13) for other leg of tow bar (10).
15. With aid of two assistants, lower tow bar (10) to the ground.
16. Install two pins (16) and cotter hairpins (15) in shackles (17).
17. Align legs of tow bar (10) at pivot point (14) and install pin (13) and cotter hairpin (12).

WARNING

Tow bar is heavy. Do not attempt to lift or move tow bar without the aid of two assistants and a lifting device. Failure to comply may result in injury or death to personnel.

DISCONNECT TOW BAR - Continued

18. With aid of two assistants and lifting device, return tow bar (10) to stowage.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPERATE VEHICLE IN EXTREME HEAT

INITIAL SETUP:

Not Applicable

EXTREME HEAT OPERATION

CAUTION

- When operating vehicle in very hot temperatures of above 100°F (38°C), extra care must be taken to prevent overheating engine (temperatures over 230°F (110°C) and transmission (temperatures over 250°F, 121°C). Watch water and transmission temperature gauges closely. Failure to comply may result in damage to equipment.
- Check oil levels often and keep operating strain as low as possible. Vehicle cooling and lubrication systems support each other. Failure of one system will rapidly cause failure of other systems.

NOTE

- Close heater valves to improve the efficiency of cabin air conditioning kit.
 - Closing the heater valves disables cabin heat.
1. Keep operating temperatures as low as possible:
 - a. Set transmission range selector (1) to N (neutral) while engine is running and not required to move.
 - b. Use low gear ranges only when necessary.
 - c. Stop vehicle for cooling off periods, and idle engine as often as possible. Let engine idle for approximately 3 minutes before shutting down. Idling will cool engine faster than quick shutdown and may prevent damage from remaining engine heat.
 - d. Check oil levels often. Oil seals are more likely to leak in extreme hot weather.
 - e. Check air filter restriction indicator (2) frequently. If indicator shows red:
 - (1) Park vehicle. (WP 0050)

EXTREME HEAT OPERATION - Continued

- (2) Shut off engine. (WP 0051)
- (3) Notify field level maintenance.

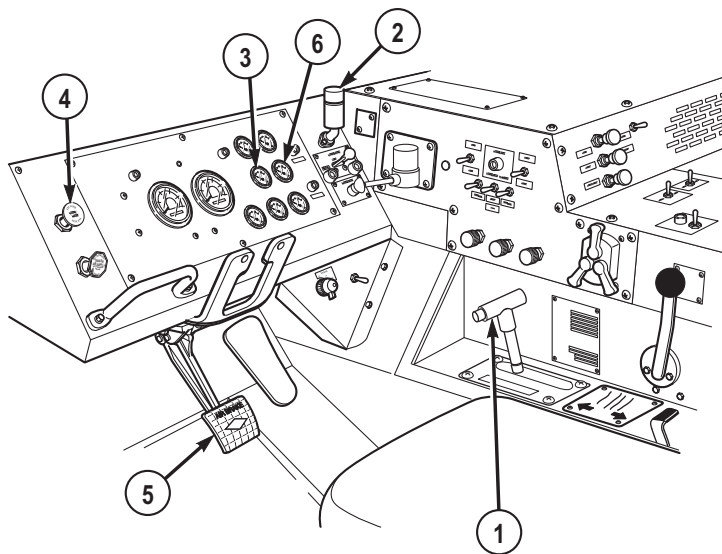


Figure 1.

2. If TRANS TEMP gauge (3) reads 250°F (121°C) or above, perform the following steps:
 - a. Slow vehicle.
 - b. Set transmission range selector (1) to next lower gear range.
 - c. Continue operation.
 - d. When TRANS TEMP gauge (3) reads normal range:
 - (1) Set transmission range selector (1) to normal gear range.
 - (2) Continue operation.
 - e. If TRANS TEMP gauge (3) does not return to normal range:
 - (1) Stop vehicle.
 - (2) Set transmission range selector (1) to N (neutral).
 - (3) Pull out PARKING BRAKE control (4).
 - (4) Allow transmission to cool.
 - f. When TRANS TEMP gauge (3) reads normal range:

EXTREME HEAT OPERATION - Continued

- (1) Apply service brake pedal (5).
 - (2) Push in PARKING BRAKE control (4).
 - (3) Set transmission range selector (1) to normal gear range.
 - (4) Continue operation.
3. If WATER TEMP gauge (6) indicates coolant temperature is near overheating, perform the following steps:
 - a. Slow vehicle.
 - b. Set transmission range selector (1) to next lower gear range.
 - c. Continue operation.
 - d. When WATER TEMP gauge (6) reads normal range:
 - (1) Set transmission range selector (1) to normal gear range.
 - (2) Continue operation.
 - e. If WATER TEMP gauge (6) does not return to normal range:
 - (1) Stop vehicle.
 - (2) Set transmission range selector (1) to N (neutral).
 - (3) Pull out PARKING BRAKE control (4).
 - (4) Allow engine to cool.
 - f. When WATER TEMP gauge (6) reads normal range:
 - (1) Apply service brake pedal (5).
 - (2) Push in PARKING BRAKE control (4).
 - (3) Set transmission range selector (1) to normal gear range.
 - (4) Continue operation.
4. Check cooling system often and notify field level maintenance if any of the following are found:
 - a. Low coolant level in radiator.
 - b. Leaking hose connections which have been tightened but still leak.
 - c. Cracked or leaking hoses.
 - d. Radiator or charge air cooler fins/grill plugged with mud, debris, etc.

NOTE

- Batteries do not hold charge well in extreme heat.

EXTREME HEAT OPERATION - Continued

- Battery will be tagged (white circle printed on top) for use in extreme heat conditions as specific gravity must be changed to adjust for heat (refer to TM 9-6140-200-14).
5. Keep batteries full, but do not overfill. Check battery electrolyte daily.
 6. In hot, damp climates check body and chassis often and notify field level maintenance if any of the following are found:
 - a. Signs of pitting or paint blistering on metal surfaces.
 - b. Signs of mildew, mold, or fungus on fabrics and rubber.
 7. Adjust lubrication intervals as specified in applicable lubrication instructions (refer to PMCS).
 8. Park vehicle (WP 0050) in sheltered area, out of wind if possible. If no shelter is available, park so vehicle does not face into wind.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE OPERATION IN EXTREME DUST

INITIAL SETUP:

Not Applicable

OPERATE VEHICLE IN EXTREME DUST

CAUTION

Clouds of dust can scratch glass surfaces. Keep glass surfaces covered as much as possible in these conditions to prevent scratching.

1. Leave glass surfaces covered if not needed for operations. Take extra care when cleaning glass to prevent scratching surfaces.
2. Keep close watch on air filter restriction indicator (1) located on top right side of driver's instrument panel.

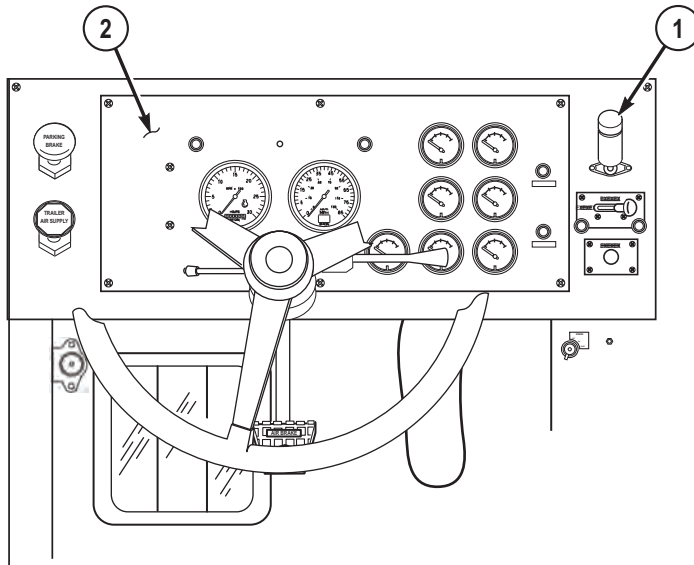


Figure 1.

3. Continuously scan gauges and indicators on driver's instrument panel (2) to be sure dust does not affect equipment.

OPERATE VEHICLE IN EXTREME DUST - Continued

4. Allow as much distance as possible between vehicles and operate at low speeds.
5. At stops, check and drain fuel/water separator (3).

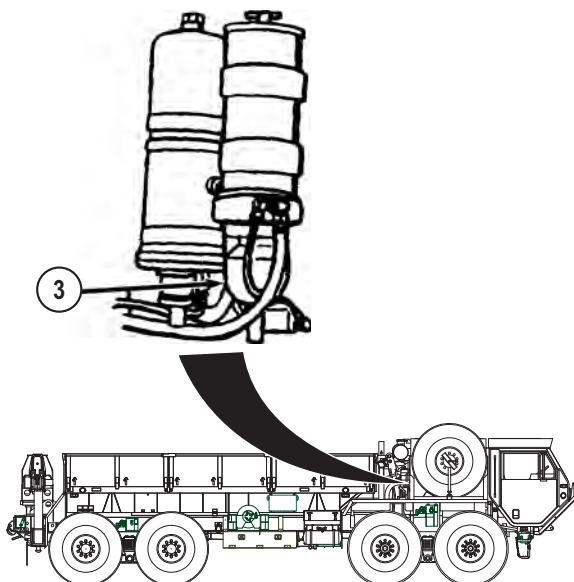


Figure 2.

6. When possible, park vehicle so it does not face into wind.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE VEHICLE IN SAND OR MUD**

INITIAL SETUP:

Not Applicable

OPERATE VEHICLE IN SAND OR MUD

CAUTION

Blowing sand may scratch glass surfaces. Glass surfaces should remain covered as much as possible in these conditions to prevent scratching.

NOTE

Operating in mud can worsen vehicle braking and speed up brake wear. If braking worsens while operating in mud, dry brakes by driving vehicle approximately 500 ft. (153 m) with service brakes frequently applied. This must be done with brakedrums totally out of mud, so that drying action can take place. If adequate braking is not restored by drying brakes, notify field level maintenance.

1. Leave glass surfaces covered if not needed for operations. Extra care should be taken when cleaning glass surfaces to prevent scratching surfaces.

NOTE

Principles of driving in sand can also be applied to driving in mud. Best time to drive on sand is at night or early morning when sand is damp. Damp sand gives better traction.

- a. Check air filter restriction indicator (1) often.
2. Adjust tires to correct tire pressure for type tire and environment. (WP 0006)

NOTE

Positioning TRANSFER CASE shift lever to LO automatically activates 8X8 drive.

3. Set TRANSFER CASE shift lever (2) to LO. 8X8 DRIVE indicator (3) will illuminate.

OPERATE VEHICLE IN SAND OR MUD - Continued

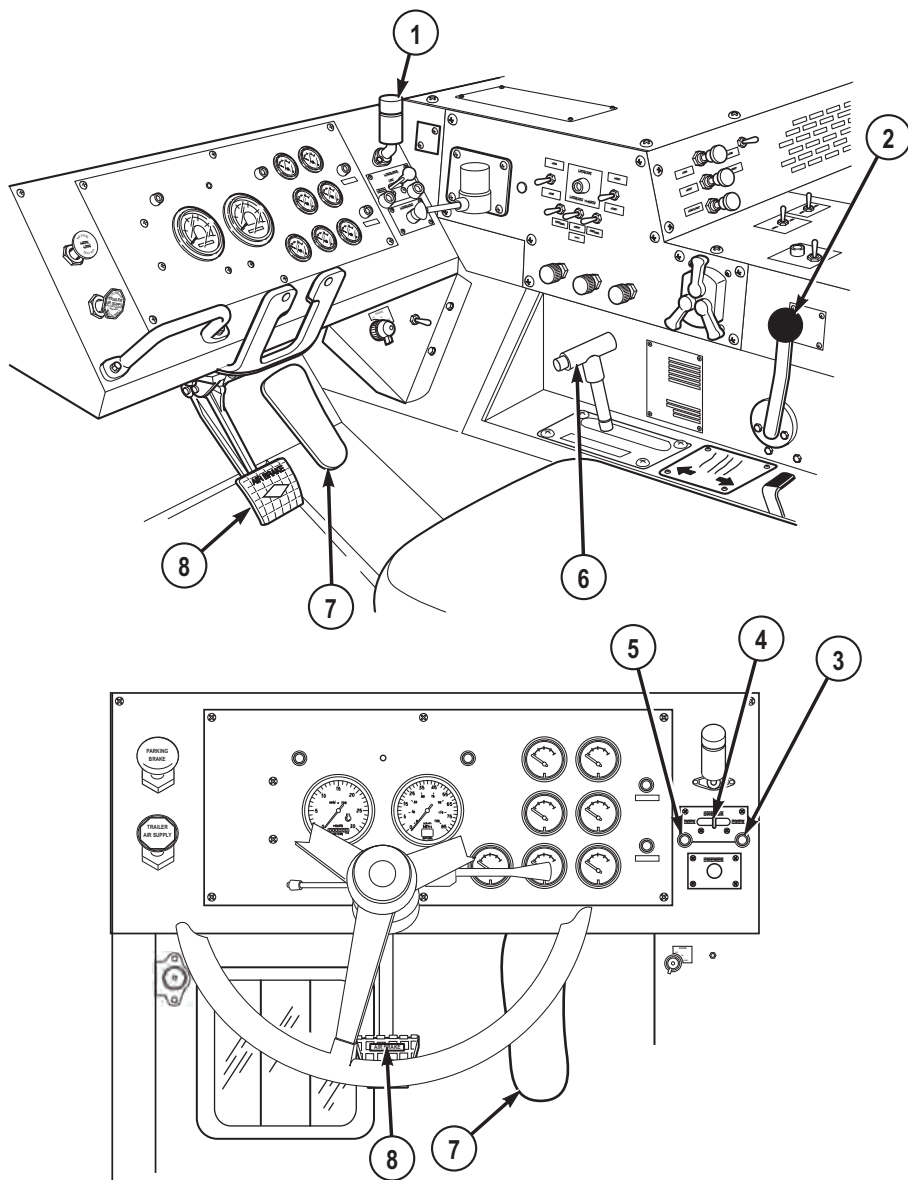


Figure 1.

OPERATE VEHICLE IN SAND OR MUD - Continued**CAUTION**

Wheel hop condition should be avoided to prevent possible damage to drivetrain. If wheel hop begins to occur, ease up on throttle to allow tires to grip surface. If wheel hop continues, release throttle and apply brakes. Apply throttle slowly as traction permits.

4. Start slowly. Do not spin wheels when starting to move vehicle.
5. Set TRACTION CONTROL lever (4) to INTER-AXLE DIFF LOCK for added traction. Indicator light (5) will illuminate.
6. Set transmission range selector (6) to 2 (2nd) or 1 (1st), as needed for added traction.
7. Do not straddle sand mounds or drive on sides of two sand mounds. Loose sand will not support vehicle on steep slopes.
8. Keep throttle pedal (7) steady after vehicle reaches desired speed.
9. Turn vehicle slowly when on loose sand or mud.
10. Steer vehicle straight up and down hills if possible.
11. To move vehicle forward and turn after vehicle is stopped in loose sand or mud, do the following:
 - a. Set transmission range selector (6) to R (reverse).
 - b. Press throttle pedal (7) and move vehicle straight back about 20 ft. (6.1 m).
 - c. Release throttle pedal (7) and press service brake pedal (8).
 - d. Set transmission range selector (6) to 1 (1st).
 - e. Release service brake pedal (8) and press throttle pedal (7) to move vehicle forward.
 - f. Turn vehicle gradually.
 - g. Set transmission range selector (6) to D (drive) when vehicle picks up speed and is moving forward smoothly.
12. If vehicle starts to skid, do the following:
 - a. Release throttle pedal (7).
 - b. Steer in direction of skid until vehicle stops skidding.
 - c. Press throttle pedal (7) slowly and steer vehicle on straight course.

PARK VEHICLE

1. Park vehicle as follows:

PARK VEHICLE - Continued

- a. Vehicle should not face into wind.
- b. Clean mud off vehicle as soon as possible.

CAUTION

- Do not hit axle breathers when cleaning mud from axles.
 - Do not direct high pressure water stream at glass surfaces, seals, air intake, axle breathers, exhaust outlet, or any other component of vehicle that could be easily damaged by high pressure water stream.
2. Clean mud from wheels, brakes, axles, universal joints, steering mechanism, and radiator as soon as possible.
 3. Make sure axle breather vent caps move freely on breather body.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
OPERATE VEHICLE IN DESERT ENVIRONMENT**

INITIAL SETUP:

Not Applicable

DESERT ENVIRONMENT OPERATION**NOTE**

FM 90-3 contains detailed instructions for living and working in desert.

1. Principles for operating in extreme heat (WP 0104) and extreme dust (WP 0105), sand, or mud (WP 0106) apply to desert environment.

NOTE

- Close heater valves to improve the efficiency of cabin air conditioning kit.
 - Closing the heater valves disables cabin heat.
2. Temperatures may change as much as 70°F (21°C) degrees between day and night. These changes may damage equipment if vehicle is not properly prepared.
 - a. Due to expansion and contraction of all fluids and air, care should be taken when filling fuel tank and fluid reservoirs to prevent overflow when temperatures change.
 - b. Precision instruments may be affected by temperature changes and may need adjustment more often.

END OF TASK**END OF WORK PACKAGE**

OPERATOR MAINTENANCE
OPERATE VEHICLE IN COLD ENVIRONMENT (32°F [0°C] TO -25°F [-32°C])

INITIAL SETUP:

Not Applicable

OPERATE VEHICLE IN COLD ENVIRONMENT

WARNING



Do not touch extremely cold metal (below -26°F, -32°C to -65°F, -54°C). Bare skin may freeze to cold metal. Failure to comply may result in injury or death to personnel.

CAUTION

- Before operating vehicle in extreme cold environment, ensure engine arctic kit is installed and vehicle has been prepared as described in FM 9-207 . Refer to FM 31-70 , FM 31-71 , and FM 21-305 for additional information on operations in extreme cold environment.
- Watch instrument panel closely. If any unusual readings occur, stop vehicle and shut off engine. Check engine immediately.
- Park in shelter when possible. If shelter is not available, park so vehicle does not face into wind. Place planks or brush under wheels so vehicle will not freeze in place.
- Fuel filter should be drained before topping off fuel tank. Keep fuel tank as full as possible during cold operations. Water forms in empty fuel tank as it cools. Water in fuel system could freeze and block system.
- All snow and ice should be removed from vehicle as soon as possible. Snow and ice may slow or stop movement of critical parts if allowed to pile up.
- Special care must be used during operations in extreme cold environment. In extreme cold, engine coolant and fluid in windshield

OPERATE VEHICLE IN COLD ENVIRONMENT - Continued

washer can freeze. Batteries can freeze and crack. Oil and grease may get thick and stiff. Rubber and metal parts may crack or become brittle and break easily.

- Proper component lubrication is a must for extreme cold operation.

1. Install tire chains, as needed. (WP 0096)

NOTE

Use ether start system when starting a cold engine.

2. Start engine (WP 0038) and allow engine warm up thoroughly.
3. Let engine warm up thoroughly.

NOTE

Positioning TRANSFER CASE shift lever to LO automatically activates 8X8 drive.

4. Set TRANSFER CASE shift lever (1) to LO. 8X8 DRIVE indicator (2) will illuminate.

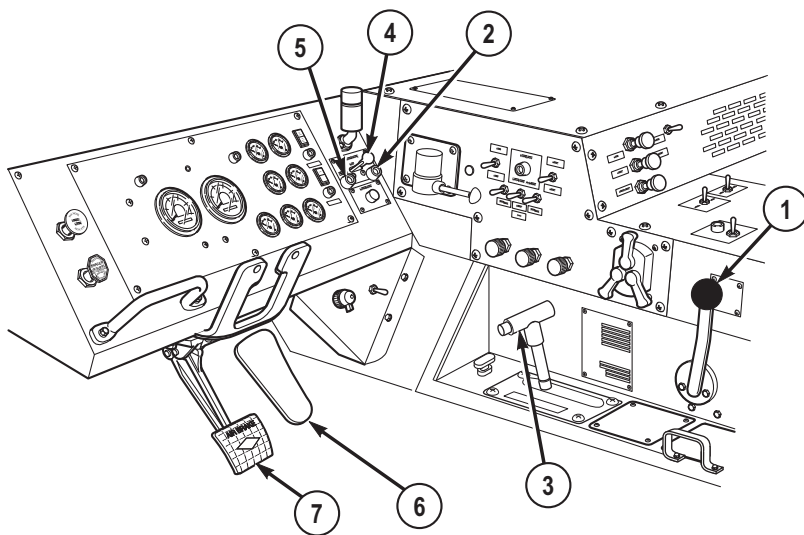


Figure 1.

5. Set transmission range selector (3) to 1 (1st gear range) and drive at lowest possible speed to warm driveline components and tires.
6. Drive on mud, snow, ice, and slippery surfaces as follows:

OPERATE VEHICLE IN COLD ENVIRONMENT - Continued**NOTE**

- TRACTION CONTROL lever should be set to 8X8 DRIVE when transfer case shift lever is set to HI range while driving on slippery surfaces.
 - Positioning TRANSFER CASE shift lever to LO automatically activates 8X8 drive.
- a. Set TRANSFER CASE shift lever (1) to LO for added traction. 8X8 DRIVE indicator (2) will illuminate.

NOTE

TRACTION CONTROL lever should be set to INTER-AXLE DIFF. LOCK when transfer case shift lever is set to LO range while driving on slippery surfaces.

- b. Set TRACTION CONTROL lever (4) in INTER-AXLE DIFF. LOCK (when LO range is used - recommended) or 8X8 DRIVE (if HI range is required), as needed, when driving on slippery surfaces. INTER-AXLE LOCK indicator (5) and/or 8X8 DRIVE indicator (2) will illuminate as applicable.
- c. Press throttle pedal (6) slowly when changing speed.
- d. Keep throttle pedal (6) steady after vehicle reaches desired speed.
- e. Turn vehicle slowly when on slippery surfaces.
- f. Steer vehicle away from ruts and large snowbanks.
- g. Steer vehicle straight up and down hills if possible.
- h. Use gear range 2 (2nd) or 3 (3rd) to go down medium grades.
- i. Use gear range 1 (1st) to go down steep or very slippery grades.
- j. Drive at slower speeds and stay twice normal distance from vehicle ahead.
- k. Signal turns sooner than normal to give vehicles behind ample time to safely slow down.

WARNING

Do not use engine brake when vehicle is on slippery surface. If engine brake is used incorrectly, vehicle may skid out of control. Failure to comply may result in injury or death to personnel.

OPERATE VEHICLE IN COLD ENVIRONMENT - Continued**NOTE**

Pressing service brake pedal lightly will help keep vehicle from skidding.

- l. Apply brakes sooner, and press service brake pedal (7) lightly to give early warning that vehicle will slow or stop.
- m. Downshift, if necessary, when slowing or stopping vehicle on slick surfaces.
- n. Keep windshield, windows, mirrors, headlights, stoplights, and body lights clean and free of snow and ice. Use defroster and windshield wipers to keep windshield free of snow and ice.
- o. Drive slowly and test brakes after driving through slush or water. If brakes slip, do the following:
 - (1) Continue to drive slowly.
 - (2) Apply moderate pressure on service brake pedal (7) to cause slight brake drag.
 - (3) When brakes are dry and no longer slip, release service brake pedal (7).
 - (4) Resume normal driving speed for conditions.
- p. If absolutely necessary for better traction, lower vehicle tire pressure to emergency air pressure limit:
 - (1) Ensure each tire has a valve cap.
 - (2) Drive at low speed when tire pressures are reduced.
- q. If rear of vehicle skids, do the following:
 - (1) Ease up on throttle pedal (6).
 - (2) Steer in same direction that vehicle is skidding.
 - (3) When vehicle is under control, lightly apply service brake pedal (7).
 - (4) Steer vehicle on a straight course and slowly apply throttle pedal (6).
- r. If vehicle starts to slide while climbing a grade, do the following:
 - (1) Ease up on throttle pedal (6).
 - (2) Steer in same direction that vehicle is skidding.
 - (3) Slowly apply throttle pedal (6) and steer vehicle on a straight course.
- s. If vehicle becomes stuck, do the following:
 - (1) Shovel a clear path ahead of each tire.
 - (2) Put boards, brush, or similar material in cleared paths to get better traction.

OPERATE VEHICLE IN COLD ENVIRONMENT - Continued

- (3) If vehicle remains stuck, use another vehicle to winch or tow stuck vehicle clear.
 - (4) If another vehicle is not available, self-recover vehicle using self-recovery winch. (WP 0099)
7. Park vehicle (WP 0050) as follows:

NOTE

If no shelter is available, park vehicle so it does not face into the wind. Vehicle facing opposite of the direction of the wind is optimal.

- a. Park vehicle in sheltered area, out of wind if possible.

NOTE

If no high, dry ground is available, spread out planks, brush, etc., to create a raised area so that vehicle tires will not freeze in snow, water, ice, or mud.

- b. Park vehicle on high, dry ground if possible.
- c. Park vehicle on level ground so vehicle body does not twist.
- d. Leave transfer case shift lever (1) in LO.

NOTE

Do not hit axle breathers when cleaning mud, snow, and ice from axles.

8. Clean snow, ice, and mud off vehicle as soon as possible.
9. Clean mud, snow, and ice from wheels, brakes, axles, universal joints, mirrors, steering mechanism, and radiator as soon as possible.
10. Ensure axle breather vent caps move freely on breather body.

END OF TASK**END OF WORK PACKAGE**

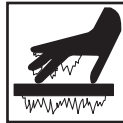
OPERATOR MAINTENANCE OPERATION IN EXTREME COLD ENVIRONMENT

INITIAL SETUP:

Not Applicable

OPERATE VEHICLE IN EXTREME COLD ENVIRONMENT (-26°F[-32°C] to -65°F[-54°C])

WARNING



Do not touch extremely cold metal (below -26°F, -32°C to -65°F, -54°C). Bare skin may freeze to cold metal. Failure to comply may result in injury or death to personnel.

CAUTION

- Before operating vehicle in extreme cold environment, ensure engine arctic kit is installed and vehicle has been prepared as described in FM 9-207.
- Refer to FM 31-70 , FM 31-71 , and FM 21-305 for additional information on operations in extreme cold environment.
- Watch instrument panel closely. If any unusual readings occur, stop vehicle and shut off engine. Check immediately.
- Park in shelter when possible. If shelter is not available, park so vehicle does not face into wind. Place planks or brush under wheels so vehicle will not freeze in place.
- Fuel filter should be drained before topping off fuel tank. Keep fuel tank as full as possible during cold operations. Water forms in empty fuel tank as it cools. Water in fuel system could freeze and block system.
- All snow and ice should be removed from vehicle as soon as possible. Snow and ice may slow or stop movement of critical parts if allowed to pile up.

OPERATE VEHICLE IN EXTREME COLD ENVIRONMENT (-26°F[-32°C] to -65°F[-54°C]) - Continued

- Special care must be used during operations in extreme cold environment. In extreme cold, engine coolant and fluid in windshield washer can freeze. Batteries can freeze and crack. Oil and grease may get thick and stiff. Rubber and metal parts may crack or become brittle and break easily.
 - Proper component lubrication is a must for extreme cold operation.
1. Principles and procedures for operating in cold environment (WP 0108) also apply to extreme cold environment.
 2. Ensure arctic engine heater kit has been installed.
 3. Operate arctic engine heater (WP 0071) as needed.

WARNING

Do not touch extremely cold metal (below -26°F, -32°C to -65°F, -54°C). Bare skin may freeze to cold metal. Failure to comply may result in injury or death to personnel.

NOTE

If additional air is put in tires for standby periods, lower tire pressure to normal amounts before driving vehicle.

4. In areas where temperatures reach -50°F (-46°C) or colder, fill tires with air approximately 10 psi above normal for long standby periods and overnight.

OPERATE LOAD HANDLING SYSTEM (LHS) IN EXTREME COLD ENVIRONMENT (-26°F [-32° C] to -50°F [-46° C])

1. Before operating load handling system (LHS), perform warm-up as follows:
 - a. Start engine. (WP 0038)
 - b. With engine running at idle, set PTO ENGAGE switch (1) to ON position. Indicator light (2) will illuminate.

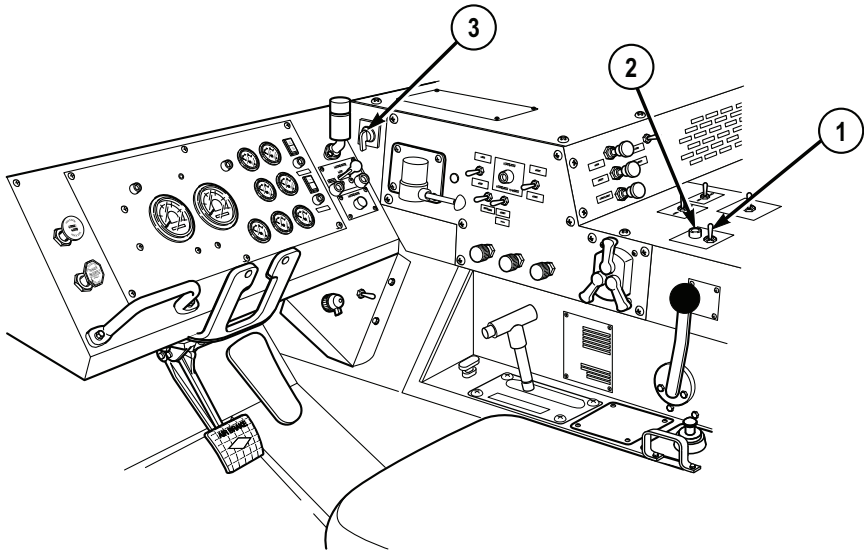
**OPERATE LOAD HANDLING SYSTEM (LHS) IN EXTREME COLD ENVIRONMENT
(-26°F [-32° C] to -50°F [-46° C]) - Continued**

Figure 1.

- c. Turn hydraulic selector switch (3) to AUTO. Allow pump to operate for five minutes at idle. LHS is then ready for operation at idle.
- d. With engine running at idle, cycle the LHS in AUTO mode. (WP 0064)
- e. After one complete cycle at idle, the LHS is ready for normal operation.

END OF TASK

END OF WORK PACKAGE

This page intentionally left blank

**OPERATOR MAINTENANCE
OPERATE VEHICLE IN FOREST OR ROCKY TERRAIN**

INITIAL SETUP:

Not Applicable

OPERATE VEHICLE IN FOREST OR ROCKY TERRAIN

WARNING



Ensure tire pressure is correct for vehicle operation. Failure to comply may result in injury or death to personnel.

NOTE

When driving over very rocky terrain is part of the mission route, be sure spare wheel and tire are on vehicle, in good repair, and at correct pressure for normal operations. There is greater chance of tire punctures when operating in rocky terrain.

1. Fold vehicle side mirrors in far enough so area to rear of vehicle can still be seen, but mirrors will not be damaged by rocks, trees, and other obstructions.

CAUTION

Before driving over ground obstructions such as stumps and large rocks, ensure vehicle has adequate clearance. Stumps and rocks may damage components underneath vehicle.

2. Avoid driving over obstructions if possible.

CAUTION

Ensure vehicle can clear overhanging tree limbs and other obstructions. Low overhead obstructions may damage cargo, cargo cover, and other parts on top of vehicle.

3. Avoid low overhanging obstructions if possible.

OPERATE VEHICLE IN FOREST OR ROCKY TERRAIN - Continued

4. Check traction and braking. Rocks and fallen leaves can be very slick, especially when wet.

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPERATE VEHICLE IN SALTWATER AREAS**

INITIAL SETUP:

Not Applicable

OPERATION

1. Inspect vehicle and major components (crane, tanker module, LHS, etc.) frequently for the buildup of salt deposits, rust, and corrosion.

NOTE

Do not direct high-pressure water hose nozzles, or steam cleaner nozzles into hydraulic system seals and/or electrical junction boxes.

2. If salt deposits are located, clean the affected areas using authorized local procedures.
3. Frequently wash the vehicle and major components to prevent the buildup of salt deposits.
4. If corrosion is present, notify your supervisor as these conditions need to be corrected immediately.

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
SET UP/SECURE HIGHWAY EMERGENCY MARKER KIT**

INITIAL SETUP:

Not Applicable

PREPARE VEHICLE/MARKERS FOR USE

1. Turn vehicle emergency flashers on. (WP 0089)
2. Remove emergency marker kit (1) from stowage brackets (2).

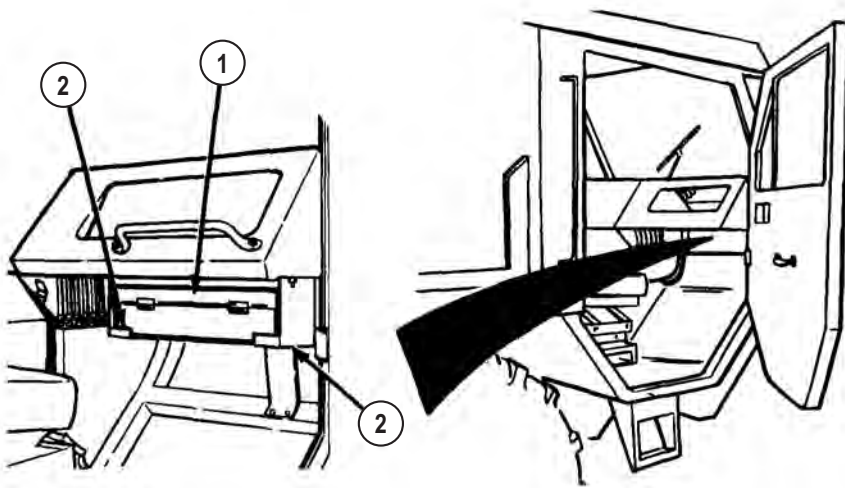


Figure 1.

3. Remove markers (3) from case.

PREPARE VEHICLE/MARKERS FOR USE - Continued

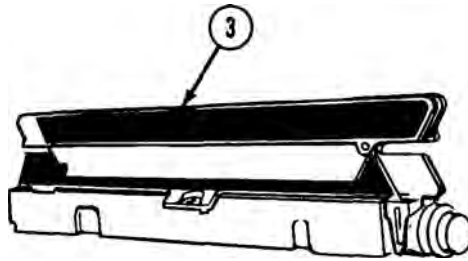


Figure 2.

4. Raise arms (4).



Figure 3.

5. Snap pin (5) into slot (6).

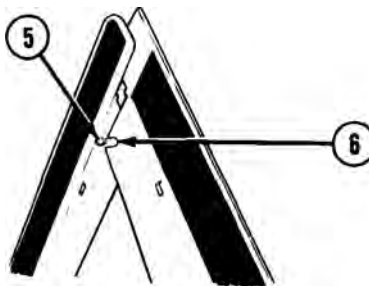
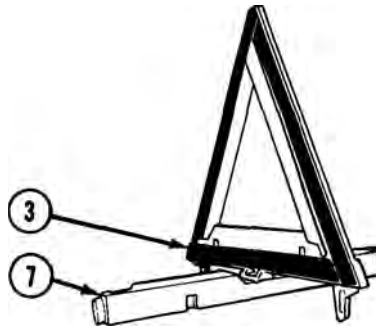
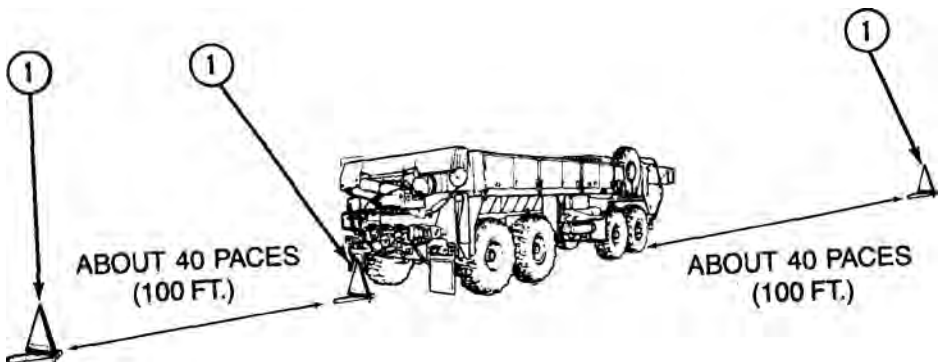


Figure 4.

6. Rotate marker (3) about 1/4 turn on base (7) until it stops.

PREPARE VEHICLE/MARKERS FOR USE - Continued*Figure 5.***PLACE MARKERS ON UNDIVIDED HIGHWAY**

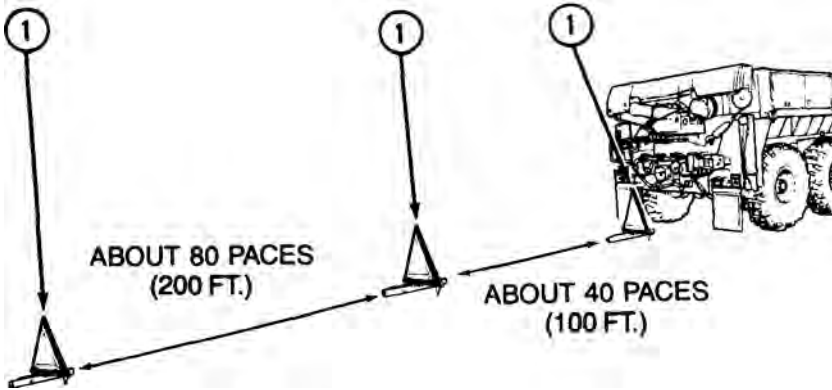
1. Place one marker (1) about 40 paces (100 ft. [30 m]) in front of vehicle, so marker faces traffic approaching from front.

*Figure 6.*

2. Place another marker (1) directly behind vehicle, so marker faces traffic approaching from rear.
3. Place third marker (1) approximately about 40 paces (100 ft. [30 m]) behind vehicle, so marker faces traffic approaching from rear.

PLACE MARKERS ON DIVIDED HIGHWAY

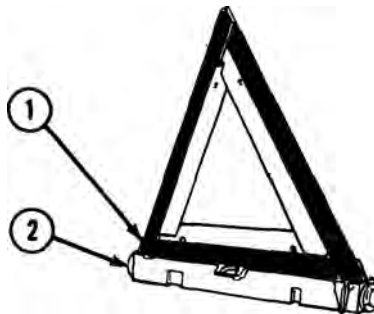
1. Place one marker (1) directly behind vehicle, so marker faces traffic approaching from rear.

PLACE MARKERS ON DIVIDED HIGHWAY - Continued*Figure 7.*

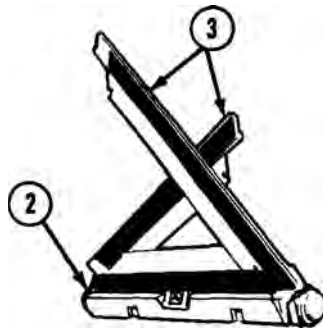
2. Place second marker (1) about 40 paces (100 ft. [30 m]) behind vehicle, so marker faces traffic approaching from rear.
3. Place third marker (1) about 80 paces (200 ft. [60 m]) behind second marker, so marker faces traffic approaching from rear.

SECURE MARKERS

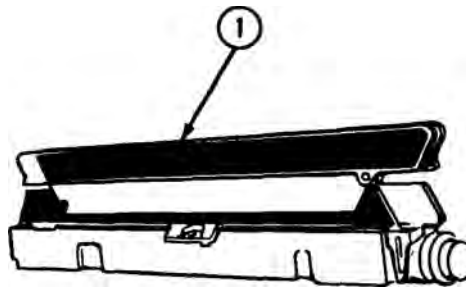
1. Rotate marker (1) over base (2).

*Figure 8.*

2. Separate arms (3).

SECURE MARKERS - Continued*Figure 9.*

3. Fold arms (3) down onto base (2).

*Figure 10.*

4. Put markers (1) in case.
5. Put emergency marker kit (4) in stowage brackets (5).

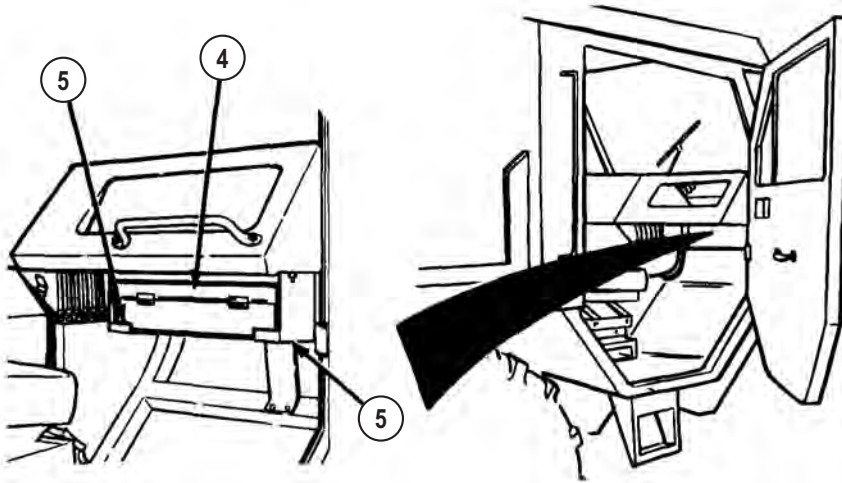
SECURE MARKERS - Continued

Figure 11.

6. Turn vehicle emergency flashers off. (WP 0089)

END OF TASK

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
MANUALLY RELEASE SPRING BRAKES**

INITIAL SETUP:

Not Applicable

CHOCK REAR WHEELS**NOTE**

This procedure should only be used when vehicle air system is totally inoperative and vehicle cannot be towed with rear end raised by wrecker.

1. Remove wheel chocks (1) from stowage.

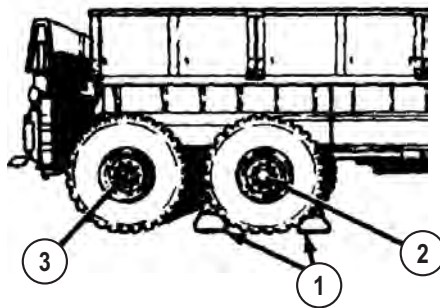


Figure 1.

2. Place wheel chocks (1) in front and back of one wheel on No. 3 (2) or No. 4 (3) axle.

RELEASE BRAKES**WARNING**

Ensure brake chamber is caged while releasing brakes. Spring is under 2,500 lbs (1 135 kg) tension. Failure to comply may result in injury or death to personnel.

NOTE

Driver side brake chamber on No. 4 axle is shown. Steps are same for No. 4 axle passenger side and No. 3 axle.

1. Remove dust cap (1) from brake chamber (2).

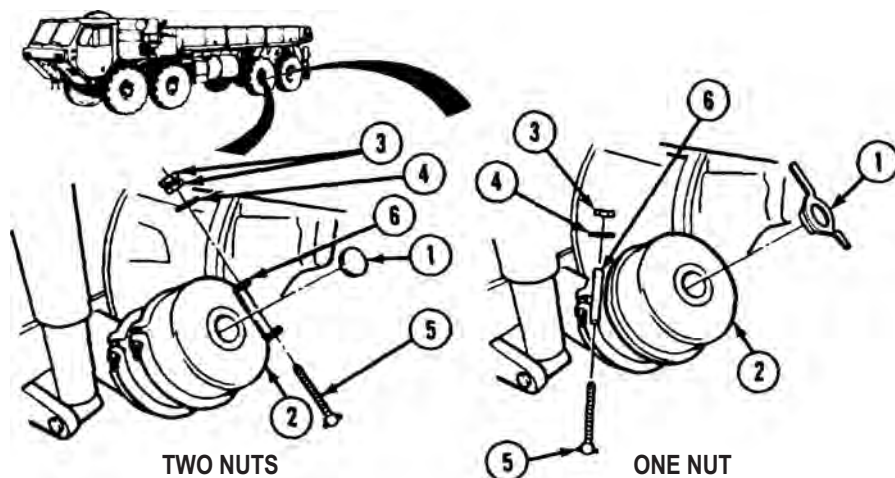
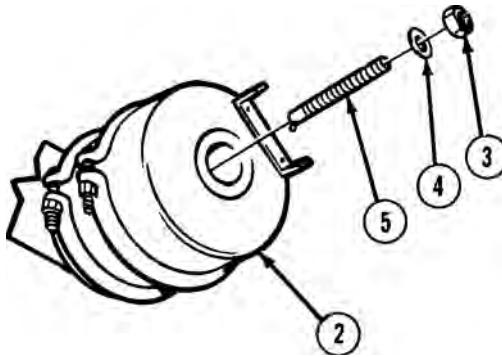


Figure 2.

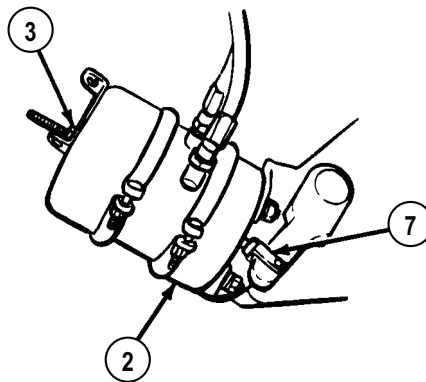
NOTE

There are two types of brake chambers: older vehicles have two nuts, newer vehicles have one nut.

2. Remove either one or two nuts (3) (as applicable), washer (4), and release-bolt (5) from bracket (6).
3. Insert release-bolt (5) into brake chamber (2).

RELEASE BRAKES - Continued*Figure 3.*

4. Turn release-bolt (5) 1/4 turn to engage inside brake chamber (2).
5. Install washer (4) and nut (3) on release-bolt (5).
6. Tighten nut (3) until clevis (7) is pulled to rear of brake chamber (2).

*Figure 4.*

7. Repeat Steps (1) through (6) to release three remaining spring brakes on No. 3 and No. 4 axles.

END OF TASK**END OF WORK PACKAGE**

This page intentionally left blank

**OPERATOR MAINTENANCE
LIMP HOME/FLAT TIRE WITH NO SPARE**

INITIAL SETUP:

Not Applicable

INSTALL LIMP HOME SETUP ON PASSENGER SIDE FRONT OR ANY REAR WHEEL

CAUTION

- Do not use this procedure on fully loaded M983 vehicle with trailer in tow. Limp home setup will not support extra weight and equipment could be damaged.
- Vehicle must not be driven faster than 10 mph (16 km/h) or farther than 30 miles (48 km) in limp home condition.

NOTE

- Use limp home procedure for emergency only in case of wheel bearing failure, wheel damage, or when unable to change wheel and tire.
 - For limp home setup on driver side front No. 1 and 2 axles, refer to Limp Home Setup/Driver Side Front section.
 - Limp home setup for No. 4 axle is shown. Other limp home setups are done in same manner.
1. Remove two wheel chocks (1), jack base plate (2), jack (3), 7 ft. (2.1 m) chain (4), and shackle (5) from stowage.

INSTALL LIMP HOME SETUP ON PASSENGER SIDE FRONT OR ANY REAR WHEEL - Continued

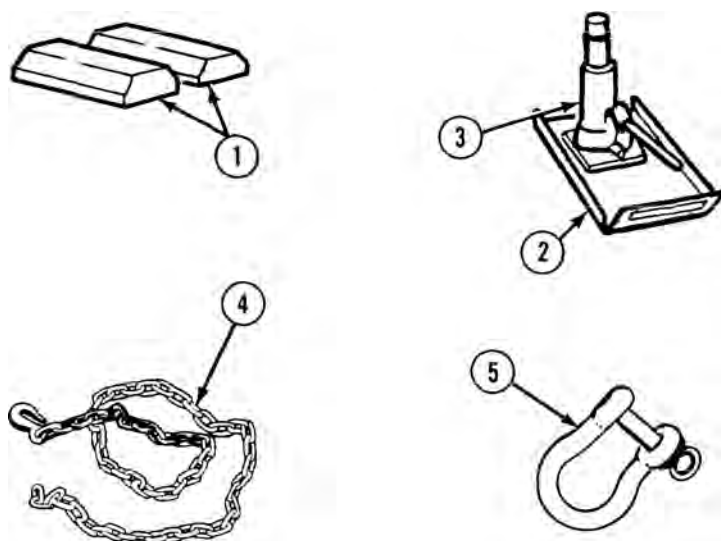


Figure 1.

2. Install two wheel chocks (WP 0090) (1) in front of and behind tire (6) across from tire (7) being raised.

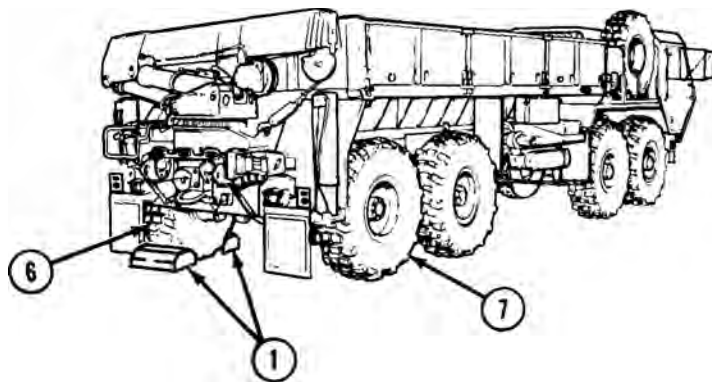


Figure 2.

3. Position jack base plate (2) and jack (3) under equalizer beam (8) 4 to 5 in. (102 to 127 mm) from center pivot point (9) towards axle to be raised (No. 4 axle shown).

INSTALL LIMP HOME SETUP ON PASSENGER SIDE FRONT OR ANY REAR WHEEL - Continued

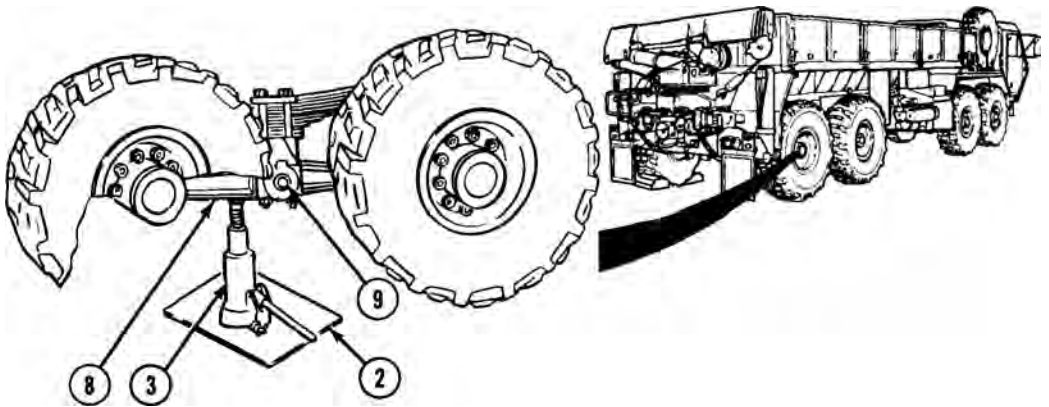


Figure 3.

4. Raise jack (3) until it touches equalizer beam (8).
5. Raise jack (3) until axle (10) is as close as it will go to axle stop (11).

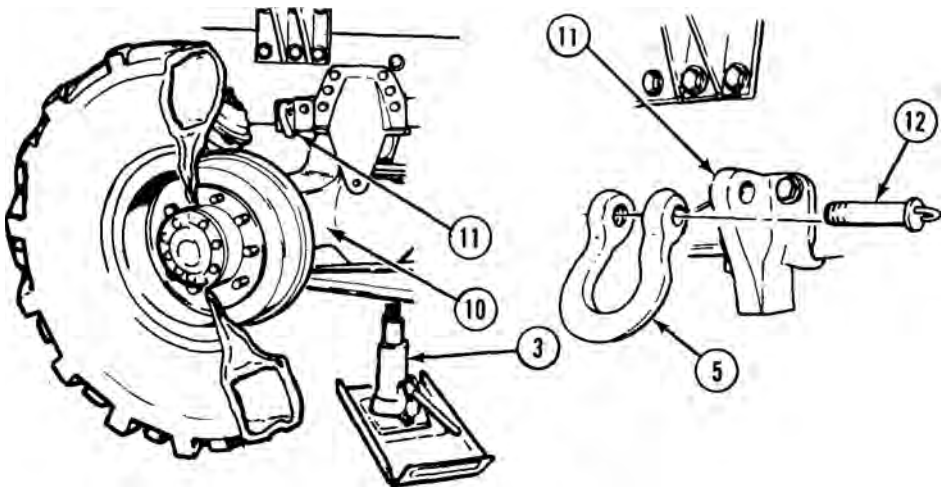


Figure 4.

6. Install shackle (5) on axle stop (11) with pin (12).

INSTALL LIMP HOME SETUP ON PASSENGER SIDE FRONT OR ANY REAR WHEEL - Continued**CAUTION**

Do not wrap 7 ft. (2.1 m) chain around any air line or brake chamber bracket. Air line could be crushed and damaged to bracket could result.

7. Route 7 ft. (2.1 m) chain (4) through shackle (5).

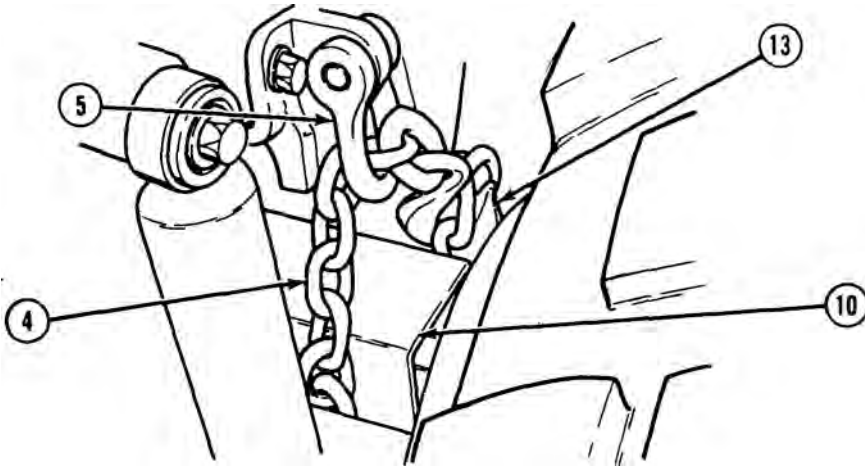


Figure 5.

8. Loop end of 7 ft. (2.1 m) chain (4) around axle (10).
9. Bring 7 ft. (2.1 m) chain (4) up to chain hook (13) and fasten as tight as possible.

WARNING

Keep hands away from chain when lowering jack. Hands and fingers could be crushed. Failure to comply may result in injury or death to personnel.

NOTE

Axle will drop slightly when jack is lowered.

10. Lower jack (3) and remove jack from under equalizer beam (8).

INSTALL LIMP HOME SETUP ON PASSENGER SIDE FRONT OR ANY REAR WHEEL - Continued

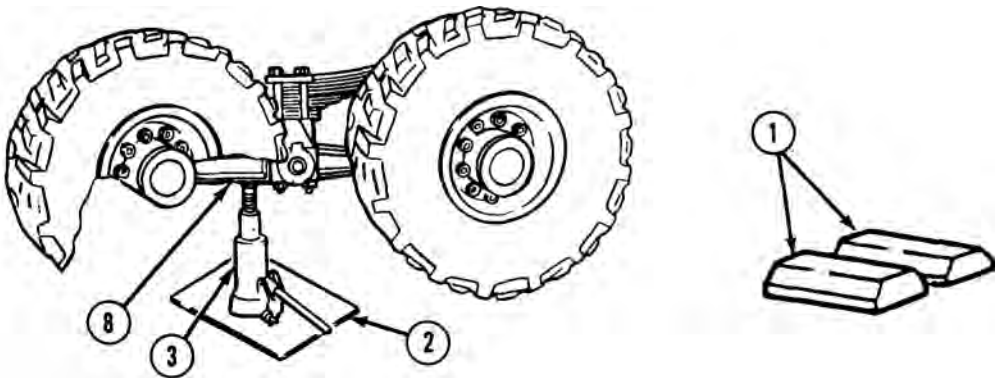


Figure 6.

11. Return jack (3), and jack base plate (2) to stowage.
12. Remove and stow two wheel chocks (1).

REMOVE LIMP HOME SETUP FROM PASSENGER SIDE FRONT OR ANY REAR WHEEL

1. Remove two wheel chocks (1), jack base plate (2), and jack (3) from stowage.

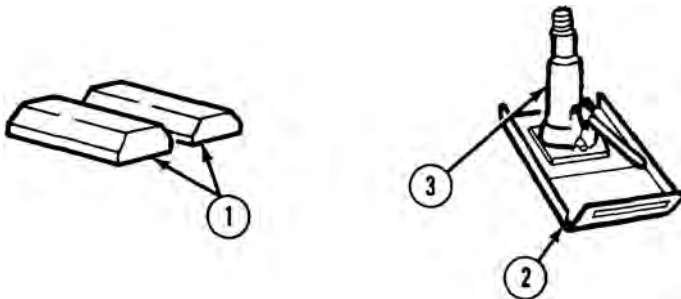


Figure 7.

2. Install two wheel chocks (WP 0090) (1) in front of and behind tire (4) across from tire (5) being raised.

REMOVE LIMP HOME SETUP FROM PASSENGER SIDE FRONT OR ANY REAR WHEEL - Continued

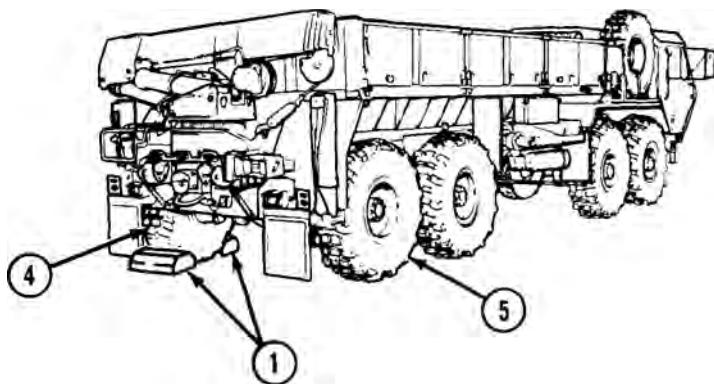


Figure 8.

3. Position jack base plate (2) and jack (3) under equalizer beam (6) 4 to 5 in. (102 to 127 mm) from center pivot point (7).

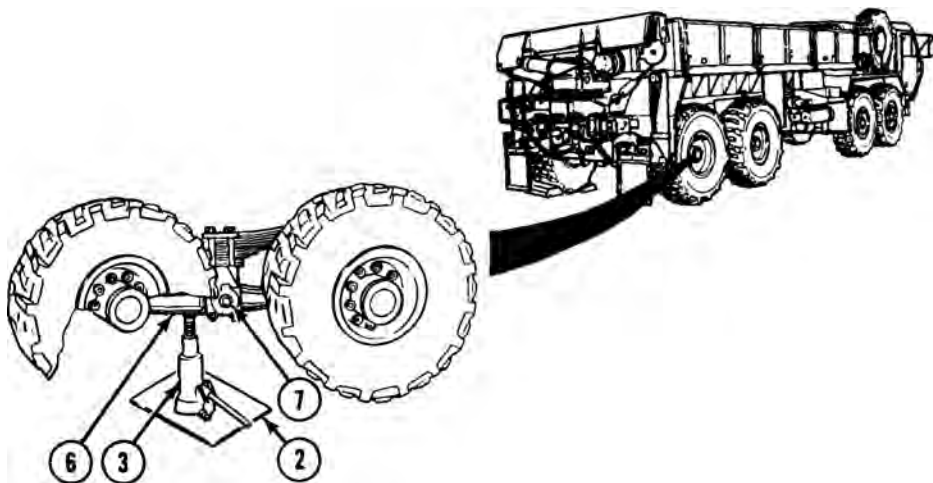


Figure 9.

4. Raise jack (3) until it touches equalizer beam (6).

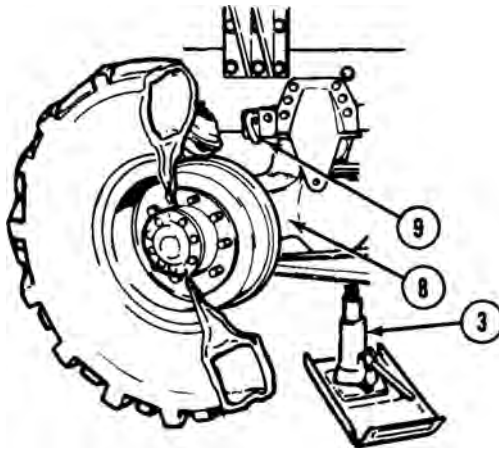
REMOVE LIMP HOME SETUP FROM PASSENGER SIDE FRONT OR ANY REAR WHEEL - Continued

Figure 10.

5. Raise jack (3) until axle (8) is as close as it will go to axle stop (9).
6. Unhook 7 ft. (2.1 m) chain (10) and remove from shackle (11) and axle (8).

REMOVE LIMP HOME SETUP FROM PASSENGER SIDE FRONT OR ANY REAR WHEEL - Continued

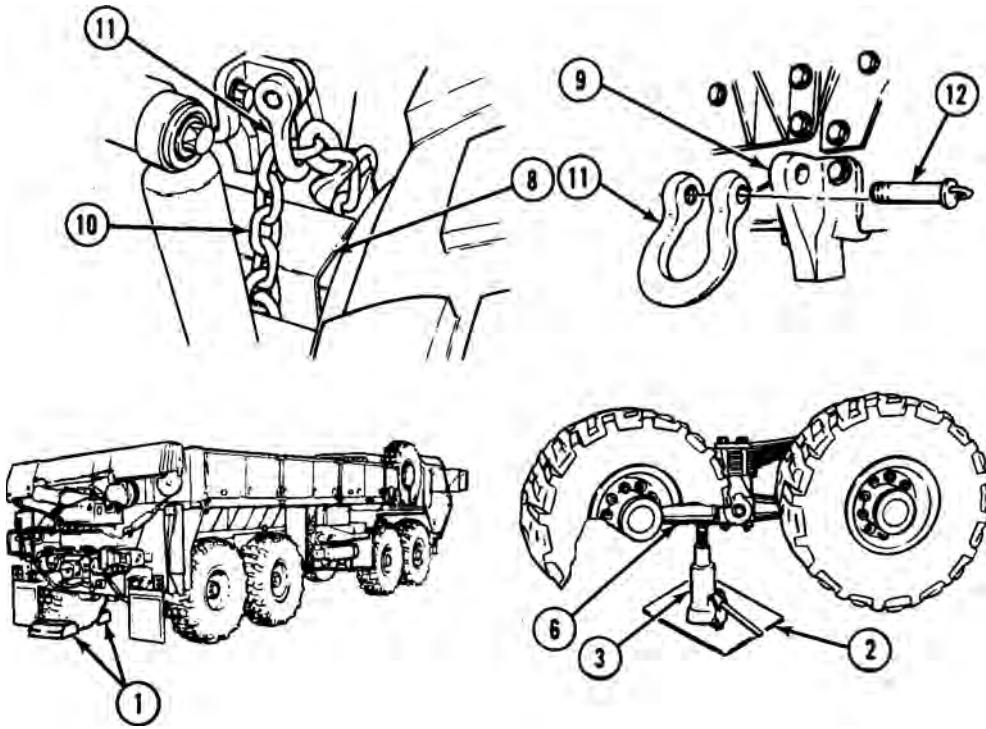


Figure 11.

7. Remove pin (12) from shackle (11) and axle stop (9).
8. Remove shackle (11) from axle stop (9) and reinstall pin (12) in shackle (11).
9. Lower jack (3) and remove jack (3) from equalizer beam (6).
10. Return jack base plate (2), jack (3), 7 ft. (2.1 m) chain (10), and shackle (11) to stowage.
11. Remove and stow two wheel chocks (1).

INSTALL LIMP HOME SETUP/DRIVER SIDE FRONT

CAUTION

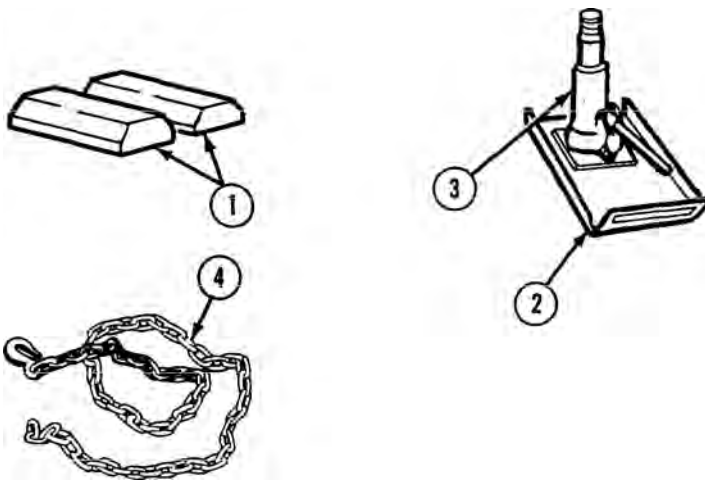
- Do not use this procedure on fully loaded M983 vehicle with trailer in tow. Limp home setup will not support extra weight and equipment could be damaged.

INSTALL LIMP HOME SETUP/DRIVER SIDE FRONT - Continued

- Vehicle must not be driven faster than 10 mph (16 km/h) or farther than 30 miles (48 km) in limp home condition.

NOTE

- Use limp home procedure for emergency only in case of wheel bearing failure, wheel damage, or when unable to change wheel and tire.
 - Limp home setup No. 1 axle is shown. Setup for No. 2 axle is done in same manner.
 - For limp home setup on other axles, refer to passenger side front or any rear wheel section above.
1. Remove two wheel chocks (1), jack base plate (2), jack (3), and 7 ft. (2.1 m) chain (4) from stowage.

*Figure 12.*

2. Install two wheel chocks (WP 0090) (1) in front of and behind tire (5) across from tire (6) being raised.

INSTALL LIMP HOME SETUP/DRIVER SIDE FRONT - Continued

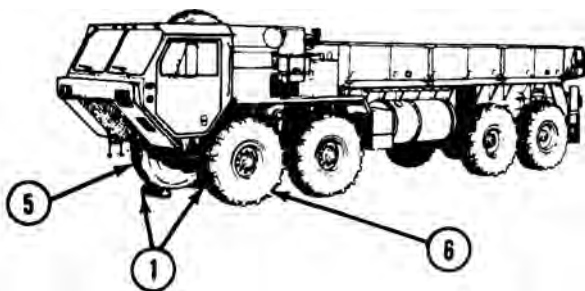


Figure 13.

3. Place jack base plate (2) and jack (3) under end of equalizer beam (7).

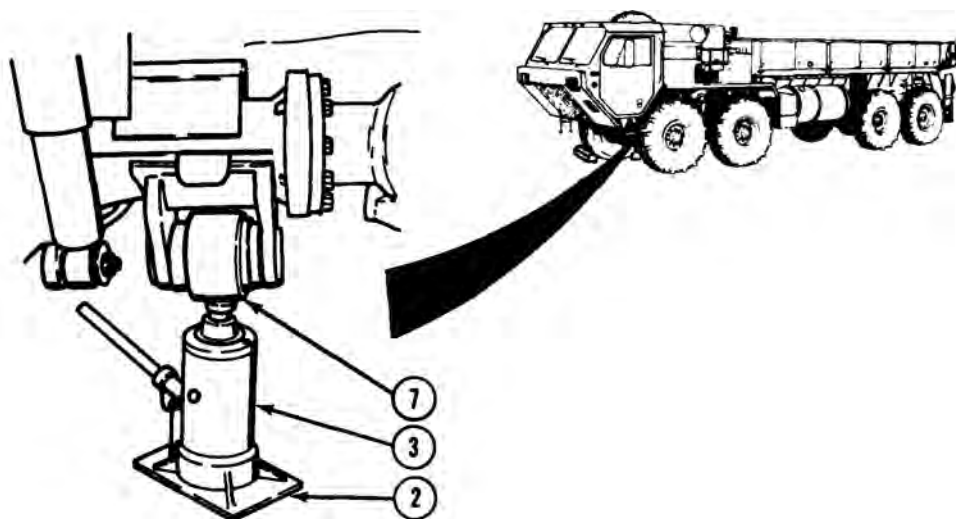


Figure 14.

4. Raise jack (3) until it touches end of equalizer beam (7).
5. Raise jack (3) until axle (8) is as close as it will go to axle stop (9).

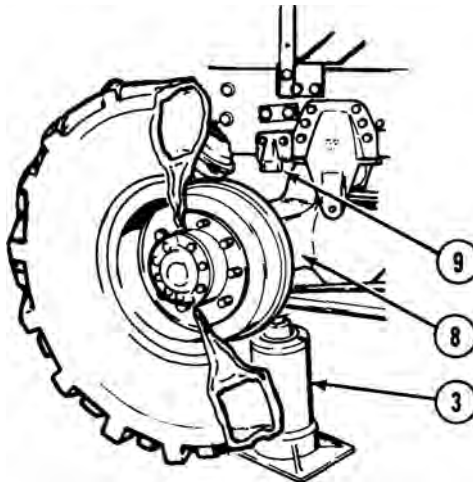
INSTALL LIMP HOME SETUP/DRIVER SIDE FRONT - Continued

Figure 15.

CAUTION

Do not wrap 7 ft. (2.1 m) chain around lateral torque rod or shift cables as they could be crushed. Failure to comply may result in damage to equipment.

6. Loop end of 7 ft. (2.1 m) chain (4) around frame (10) and axle (8).

INSTALL LIMP HOME SETUP/DRIVER SIDE FRONT - Continued

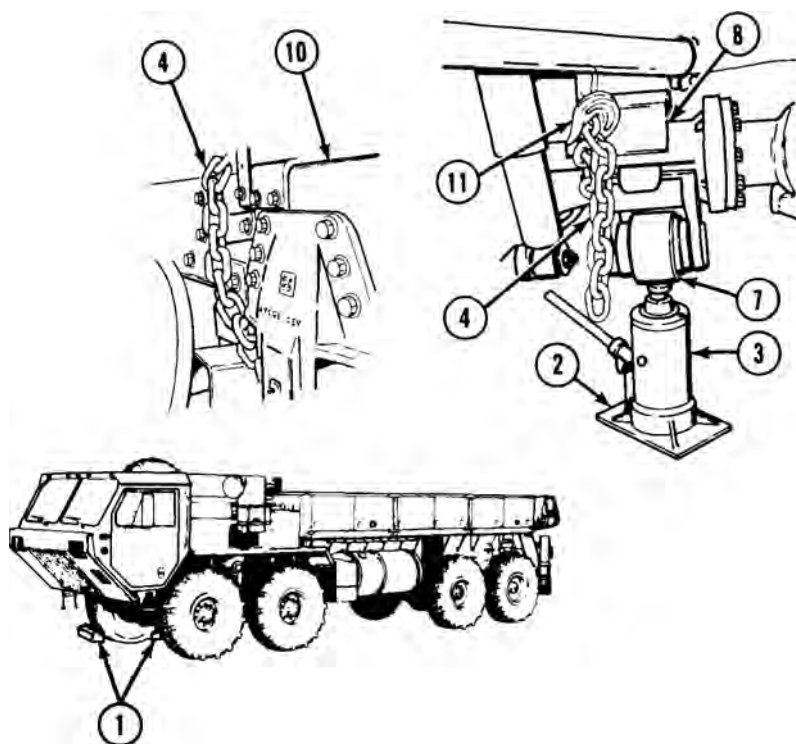


Figure 16.

WARNING

Keep hands away from chain when lowering jack. Hands and fingers could be crushed. Failure to comply may result in injury or death to personnel.

7. Bring end of 7 ft. (2.1 m) chain (4) up to chain hook (11) and fasten back into itself as tight as possible.

NOTE

Axle will drop slightly when jack is lowered.

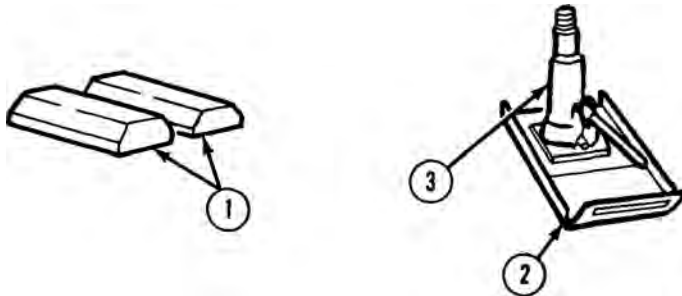
8. Lower jack (3) and remove jack (3) from end of equalizer beam (7).

INSTALL LIMP HOME SETUP/DRIVER SIDE FRONT - Continued

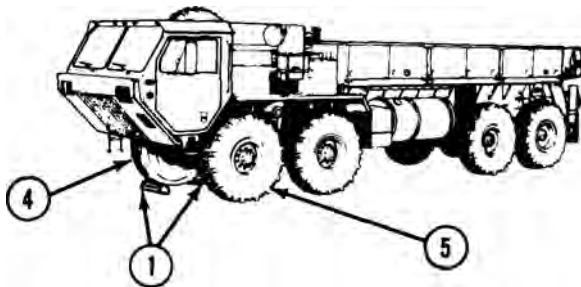
9. Return jack base plate (2), and jack (3) to stowage.
10. Remove and stow two wheel chocks (1).

REMOVE LIMP HOME SETUP/DRIVER SIDE FRONT

1. Remove two wheel chocks (1), jack base plate (2), and jack (3) from stowage.

*Figure 17.*

2. Install two wheel chocks (1) in front of and behind tire (4) across from tire (5) being raised.

*Figure 18.*

3. Place jack base plate (2) and jack (3) under end of equalizer beam (6).

REMOVE LIMP HOME SETUP/DRIVER SIDE FRONT - Continued

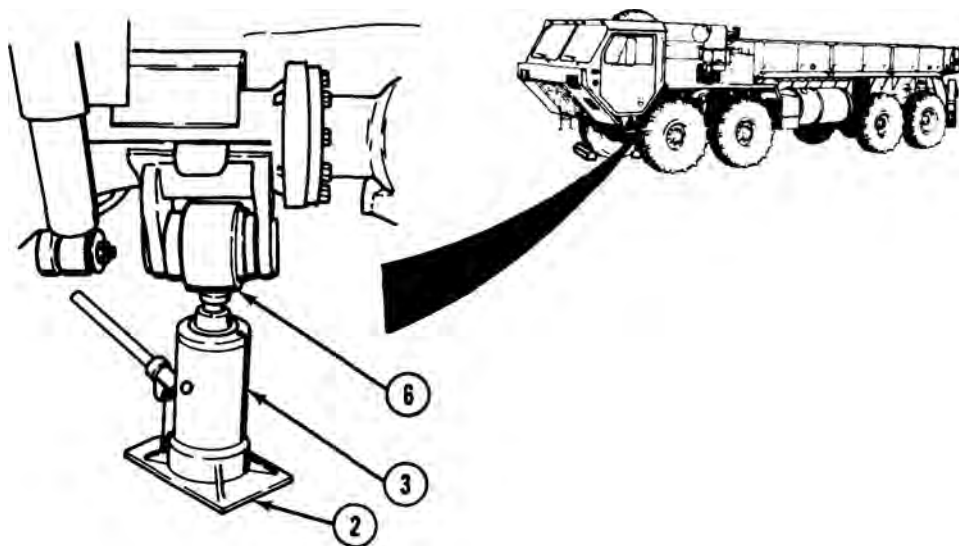


Figure 19.

4. Raise jack (3) until it touches end of equalizer beam (6).
5. Raise jack (3) until axle (7) is as close as it will go to axle stop (8).

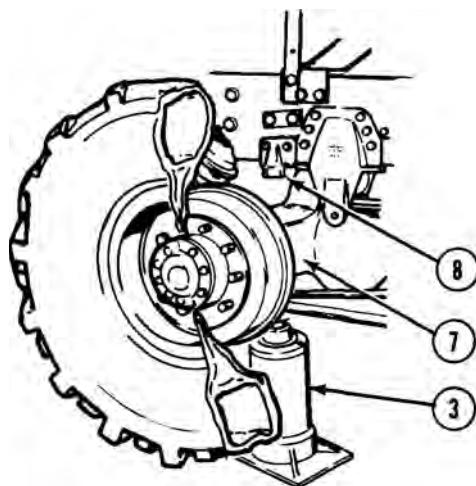
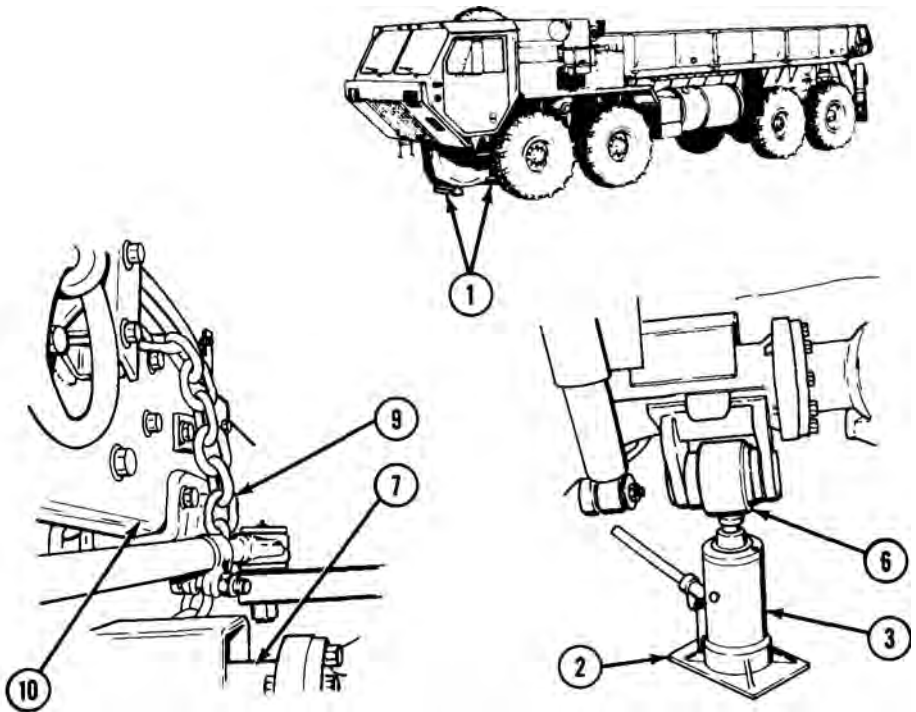


Figure 20.

6. Unhook 7 ft. (2.1 m) chain (9) and remove from around frame (10) and axle (7).

REMOVE LIMP HOME SETUP/DRIVER SIDE FRONT - Continued*Figure 21.*

7. Lower jack (3) and remove jack from equalizer beam (6).
8. Return jack base plate (2), jack (3), and 7 ft. (2.1 m) chain (9) to stowage.
9. Remove and stow two wheel chocks (1).

END OF TASK**END OF WORK PACKAGE**

This page intentionally left blank

**OPERATOR MAINTENANCE
SLAVE START VEHICLE**

INITIAL SETUP:**Personnel Required**Operator and Assistant - - - (2)

PREPARE ASSIST VEHICLE**NOTE**

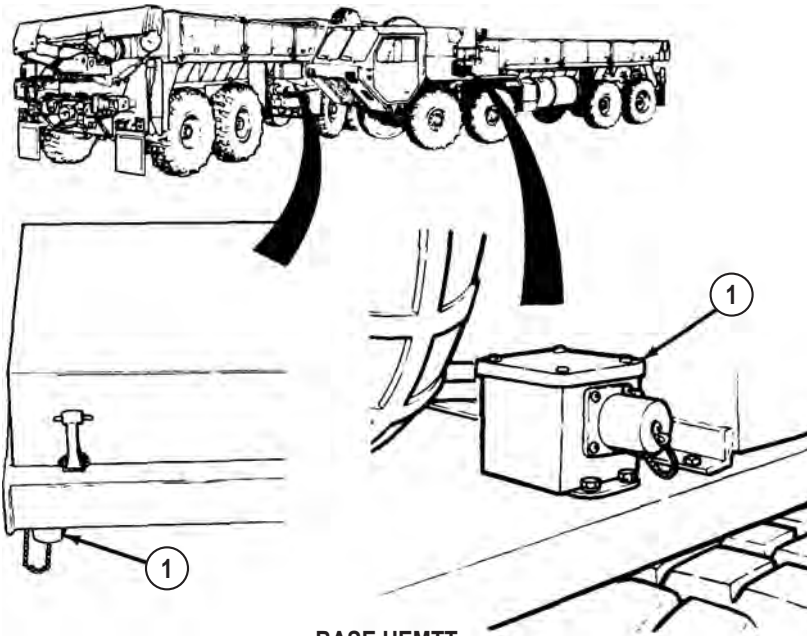
This procedure is a two soldier task.

1. Start engine of assist vehicle. (WP 0038)

NOTE

- Model of truck can be determined by information plate on inside of driver side cabin door.
 - Base Model HEMTT - Slave receptacle may be located either on battery box or driver side front fender.
 - A2 Model HEMTT - Slave receptacle is located on driver side front fender.
 - A4 Model HEMTT - Slave receptacle is located on driver side front fender.
2. Move assist vehicle into position beside disabled vehicle so slave receptacles (1) on both vehicles are side by side.

PREPARE ASSIST VEHICLE - Continued



BASE HEMTT

Figure 1.

PREPARE ASSIST VEHICLE - Continued

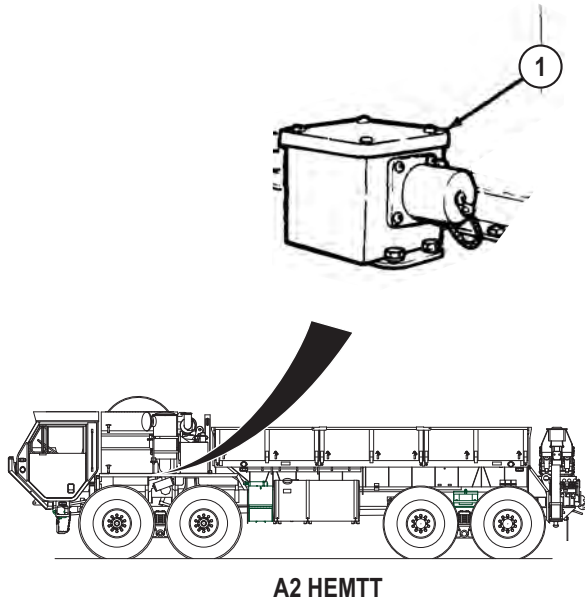


Figure 2.

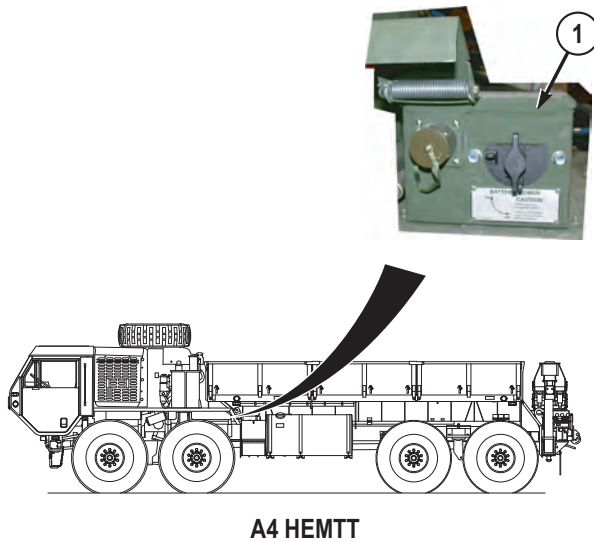


Figure 3.

3. Shut off engine of assist vehicle. (WP 0051)

SLAVE START DISABLED VEHICLE**NOTE**

- Model of truck can be determined by information plate on inside of driver side cabin door.
- Base Model HEMTT - Slave receptacle may be located either on battery box or driver side front fender.
- A2 Model HEMTT - Slave receptacle is located on driver side front fender.
- A4 Model HEMTT - Slave receptacle is located on driver side front fender.

1. Remove caps (2) from slave receptacles (1) on both vehicles.

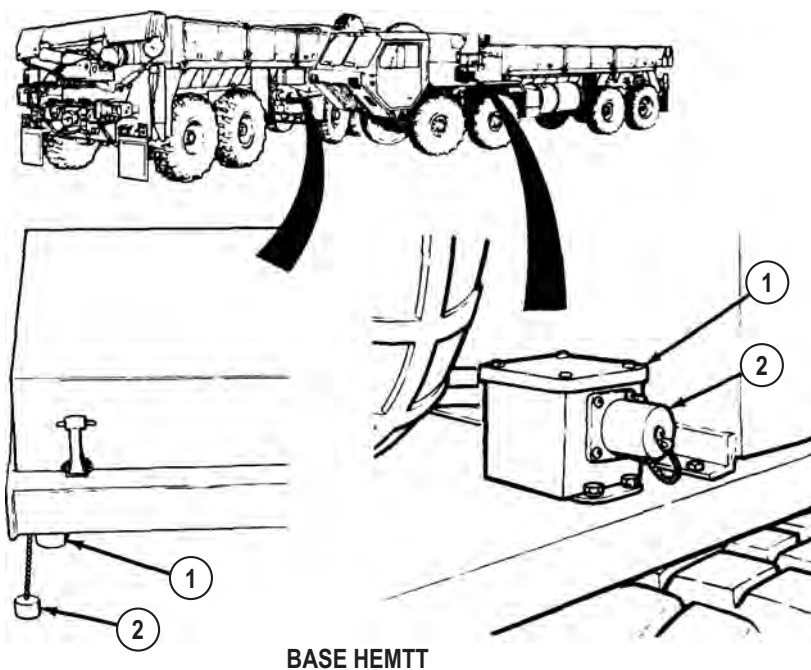
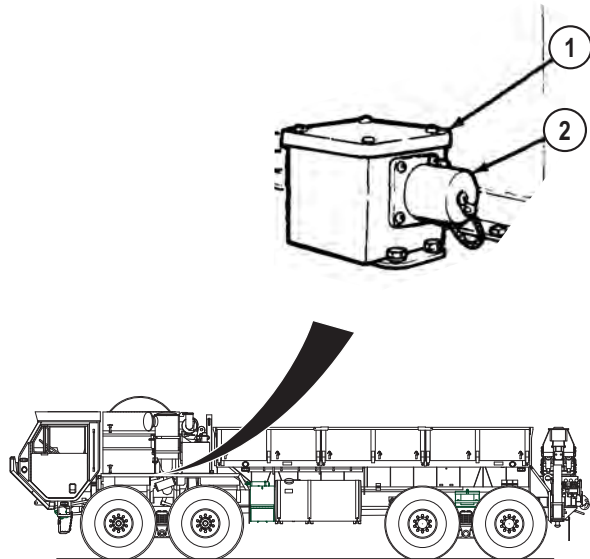


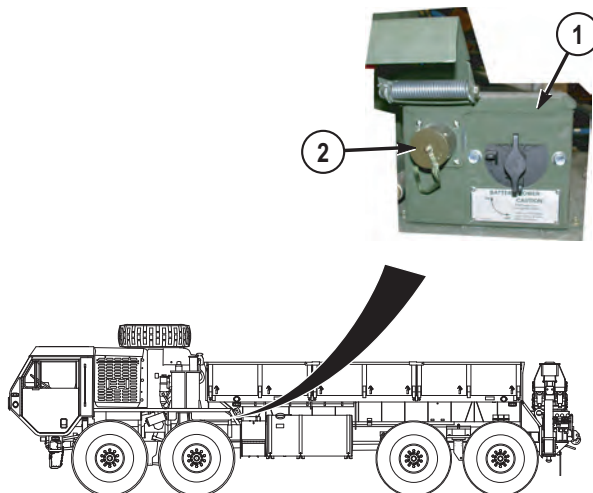
Figure 4.

SLAVE START DISABLED VEHICLE - Continued



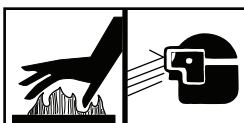
A2 HEMTT

Figure 5.



A4 HEMTT

Figure 6.

SLAVE START DISABLED VEHICLE - Continued**WARNING**

Hot transmission/oil can cause severe burns. Wear gloves and proper eye protection while performing troubleshooting or maintenance. Failure to comply may result in injury or death to personnel.

NOTE

Make sure connectors and receptacles are free from dirt, sand, and debris before use.

2. Remove NATO slave cable from stowage and plug into slave receptacles of both vehicles.
3. Start engine of assist vehicle. (WP 0038)
4. Using the throttle pedal, increase assist vehicle engine speed to more than 1000 rpm, while assistant starts engine of disabled vehicle. (WP 0038)
5. As soon as disabled vehicle engine is running smoothly, remove NATO slave cable from slave receptacles (1) on both vehicles and return to stowage.
6. Install caps (2) on slave receptacles (1) of both vehicles.
7. Move assist vehicle. (WP 0044)
8. Shut off engine of assist vehicle. (WP 0051)

NOTE

- Model of truck can be determined by information plate on inside of driver side cabin door.
 - A4 Model HEMTT does not have an AMPERES gauge. Battery voltage readout is located in top right corner of Liquid Crystal Display (LCD) on instrument panel.
 - Gauges are located in different places dependent on model HEMTT. Select correct view below for model HEMTT being serviced.
9. Check BATTERY gauge (3) of disabled vehicle. If BATTERY gauge (3) shows less than 24 volts, notify field level maintenance. If BATTERY gauge (3) shows 24 volts or more, continue with Step (11).

SLAVE START DISABLED VEHICLE - Continued

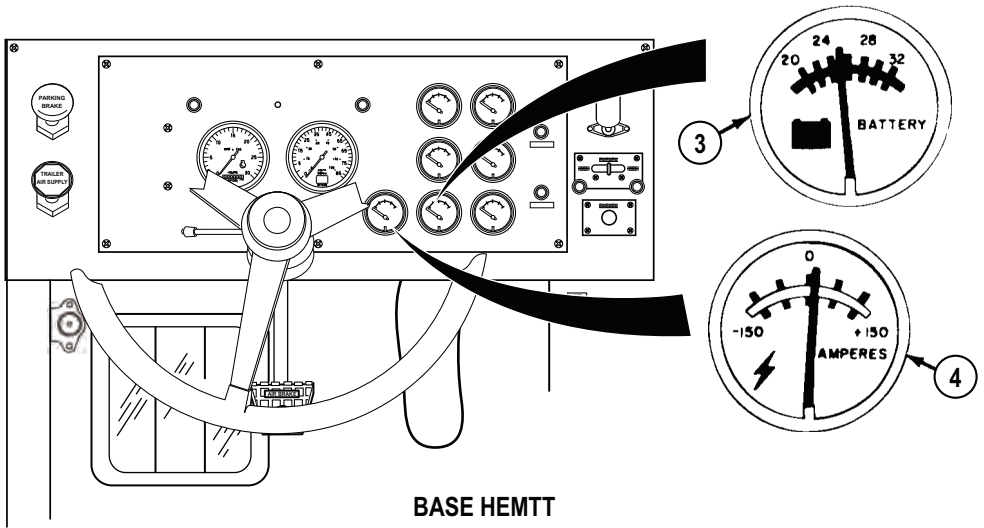


Figure 7.

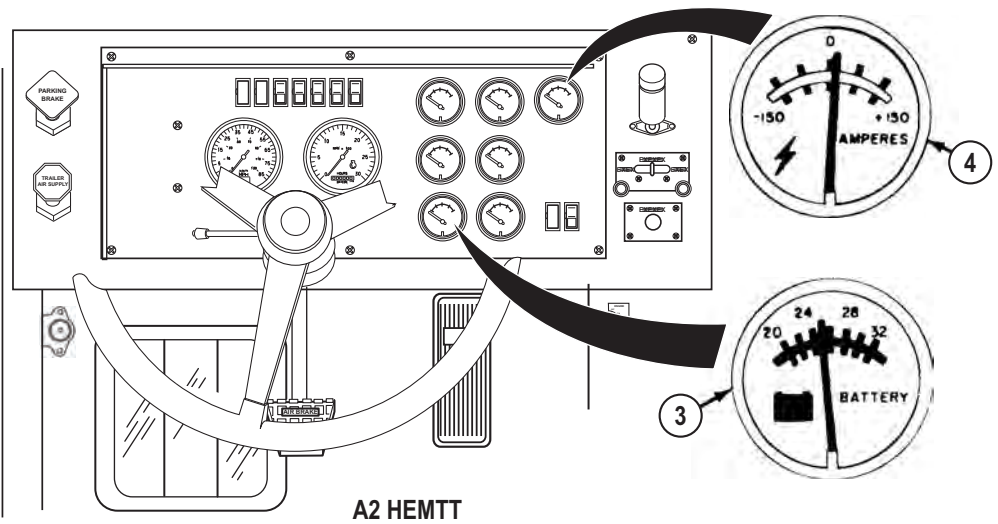


Figure 8.

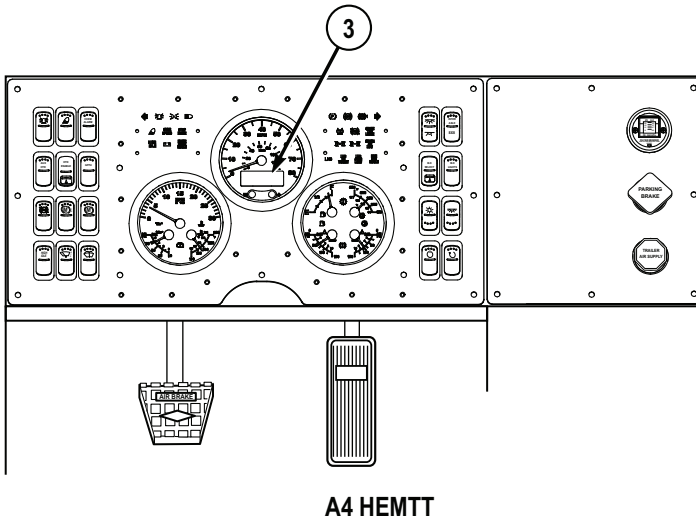
SLAVE START DISABLED VEHICLE - Continued

Figure 9.

10. Check AMPERES gauge (4) of disabled vehicle (as applicable). If AMPERES gauge shows discharge condition, notify field level maintenance. If AMPERES gauge (4) shows charging, continue operation of vehicle.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE
PERFORM IMMEDIATE ACTION FOR LOSS OF AIR SUPPLY SYSTEM PRESSURE

INITIAL SETUP:

Not Applicable

PERFORM PROCEDURE

1. If AIR indicator (1) illuminates and warning buzzer sounds while driving vehicle, check AIR PRESS gauge (2).

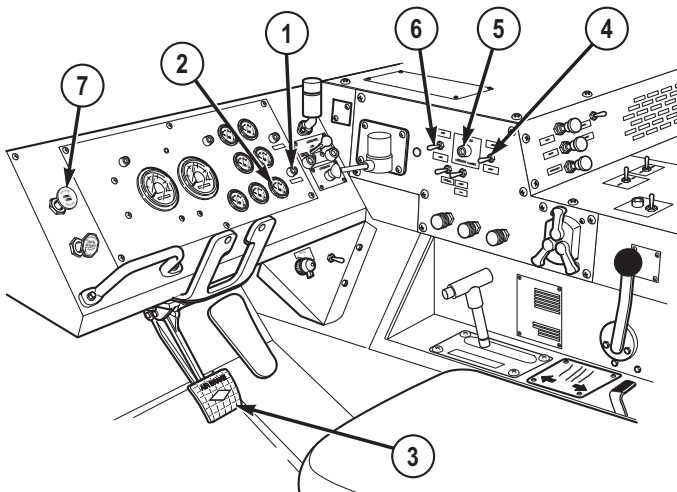


Figure 1.

NOTE

If both red needle and green needle on AIR PRESS gauge read zero, skip to Step (4).

2. If red pointer on AIR PRESS gauge (2) is at zero and green needle shows normal air pressure of 100 to 120 psi (690 to 827 kPa), complete the following:
 - a. Continue operation of vehicle. Brakes on all eight wheels and trailer will work even if air pressure from No. 2 air tank has been lost.
 - b. Notify field level maintenance as soon as possible.

PERFORM PROCEDURE - Continued**WARNING**

When green pointer of AIR PRESS gauge is at zero, braking capability is greatly reduced. Extra care must be used to avoid collision. Failure to comply may result in injury or death to personnel.

NOTE

If both red needle and green needle on AIR PRESS gauge read zero, skip to Step (4).

3. If green needle on AIR PRESS gauge (2) is at zero and red needle shows normal air pressure of 100 to 120 psi (690 to 827 kPa), complete the following:
 - a. Continue operation of vehicle. Brakes on third and fourth axles and trailer will work even if air pressure from No. 3 air tank has been lost.
 - b. Leave additional distance between vehicles.
 - c. Apply service brake pedal (3) earlier than usual when slowing vehicle.
 - d. Downshift as necessary, when slowing vehicle.

WARNING

Do not use engine brake when vehicle is on slippery surface. If engine brake is used incorrectly, vehicle may skid out of control. Failure to comply may result in injury or death to personnel.

- e. If necessary to slow vehicle, set Jacobs engine brake HIGH/LOW switch (6) to LOW and set ON/OFF switch (7) to ON.
 - f. Notify field level maintenance as soon as possible.
4. If both red needle and green needle on AIR PRESS gauge (2) read zero, complete the following:
 - a. Downshift as needed to control vehicle speed until place is found to stop.

PERFORM PROCEDURE - Continued**WARNING**

Use of service brake pedal will not slow or stop vehicle when both pointers of AIR PRESS gauge read zero. Use the following procedure to safely stop vehicle after loss of air pressure. Failure to comply may result in injury or death to personnel.

NOTE

When spring brakes are applied, vehicle will stop quickly. Vehicle cannot be driven again until malfunction is repaired and there is enough air supply for operation of service brakes.

- b. Look for place to stop vehicle without blocking other traffic.
- c. When suitable area is found to stop vehicle, pull out PARKING BRAKE control (8) to apply spring brakes on four rear wheels.
- d. Notify field level maintenance.

END OF TASK**END OF WORK PACKAGE**

This page intentionally left blank

**OPERATOR MAINTENANCE
PERFORM IMMEDIATE ACTION FOR LOSS OF HYDRAULIC SYSTEM**

INITIAL SETUP:

Not Applicable

NOTE

Steering wheel will be harder to turn after failure of hydraulic system.

1. If failure occurs while driving, continue steering as before.

NOTE

Failure of hydraulic system will stop operation of any crane, winch, or hydraulic motor on vehicle. All cranes and winches are equipped with automatic locking mechanisms to hold cranes and winches in position they were in before hydraulics failed.

2. Do not try to continue operation of any crane or winch.
3. Do not try to repair hydraulic system. Notify your supervisor.
4. Notify field level maintenance.

END OF TASK

END OF WORK PACKAGE

This page intentionally left blank

**OPERATOR MAINTENANCE
LOAD HANDLING SYSTEM (LHS) SLAVE HYDRAULIC OPERATION**

INITIAL SETUP:

Not Applicable

OPERATE LHS USING SLAVE HYDRAULIC SETUP

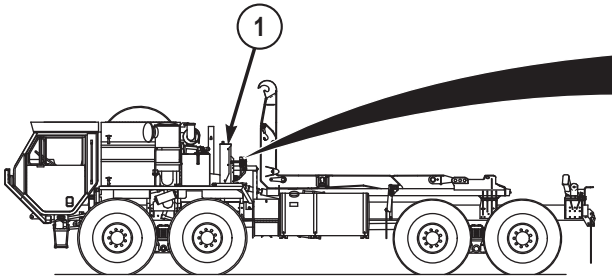
CAUTION

If LHS system on disabled vehicle is not in fully stowed position (transport position), remove hydraulic tank cap from operable vehicle prior to starting the task to allow excess hydraulic oil to drain. Failure to comply may result in damage to hydraulic tank or hydraulic system.

NOTE

- This procedure can only be used if there are no leaks or breaks in the hydraulic system.
 - This procedure is used to remove the load from a vehicle with a failed hydraulic pump or other failure which prevent operation of the hydraulic system.
 - Each vehicle is equipped with one hydraulic slave hose. Two hoses (one from each vehicle) are required to perform slave hydraulic procedures. Locate and remove hoses from stowage boxes of vehicles.
1. Move vehicles into position so LHS control box (1) on both vehicles are side by side.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued



BASE/A2 OPERABLE VEHICLE

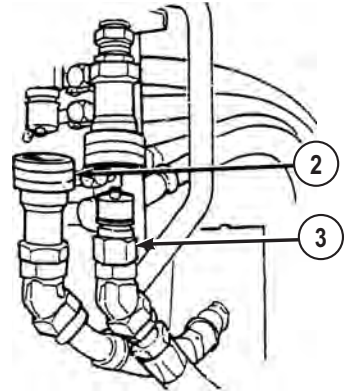
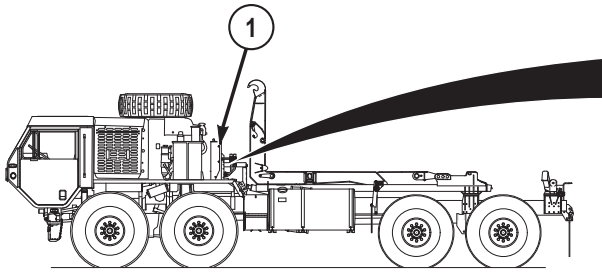


Figure 1.



A4 OPERABLE VEHICLE

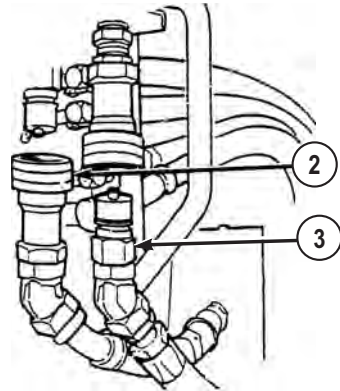


Figure 2.

2. Park both vehicles. (WP 0050)
3. Shut off engine on both vehicles. (WP 0051)

WARNING



Hydraulic fluid is under great pressure. Engines on both vehicles must be shut off while disconnecting hydraulic lines. Failure to comply may result in injury or death to personnel.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued**CAUTION**

To prevent hydraulic contamination, keep hydraulic quick disconnects clean, or damage to hydraulic system may result.

NOTE

Quick disconnects are located on the back of the LHS box.

4. Disconnect supply hose (2) and return hose (3) located on the back of LHS control box (1) of operable vehicle.
5. Disconnect supply hose (4) and return hose (5) located on the back of LHS control box (1) of disabled vehicle.

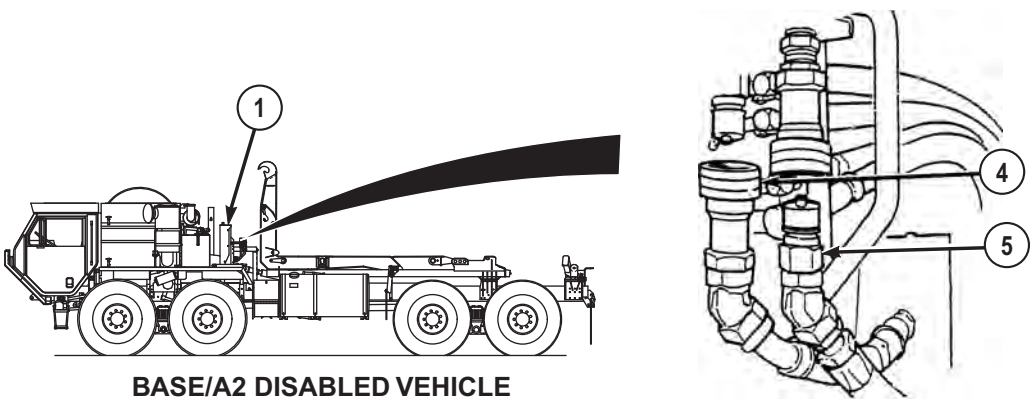


Figure 3.

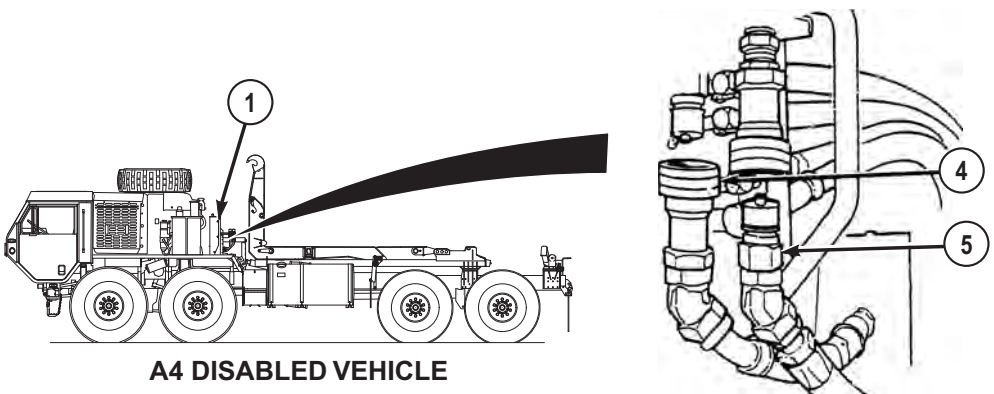


Figure 4.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued

6. Connect male end of first slave hose (6) to supply hose (2) of operable vehicle.

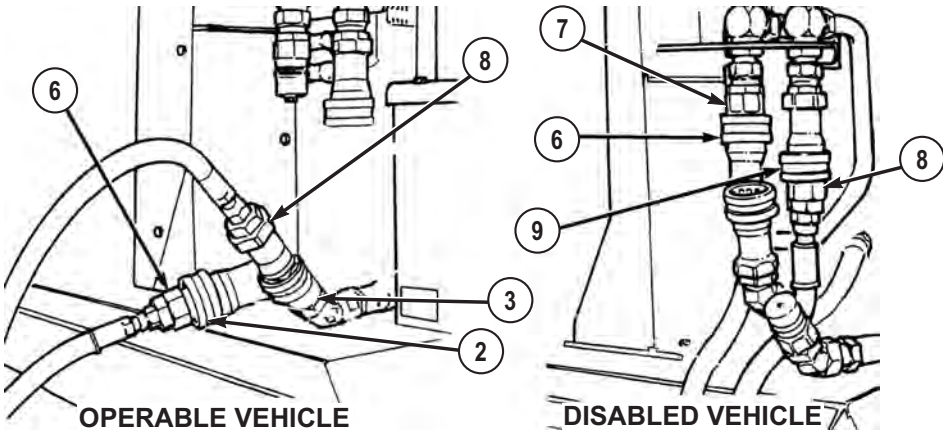
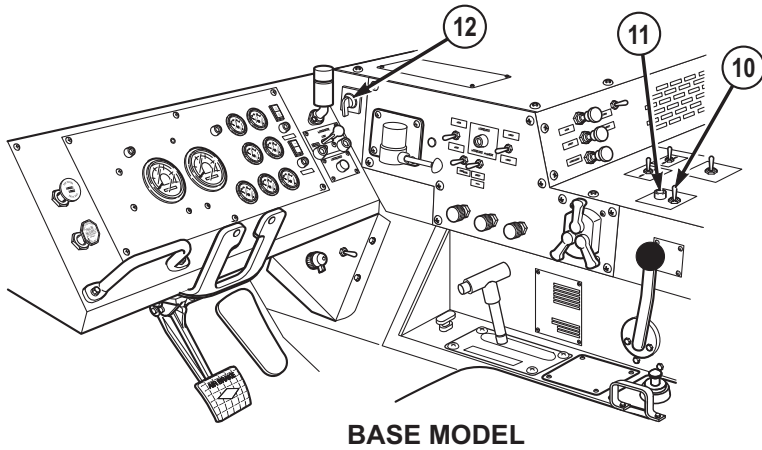


Figure 5.

7. Connect female end of first slave hose (6) to supply tube (7) mounted on back of LHS control box (1) of disabled vehicle.
8. Connect female end of second slave hose (8) to return hose (3) of operable vehicle.
9. Connect male end of second slave hose (8) to return tube (9) mounted on back of LHS control box (1) of disabled vehicle.
10. Start engine (WP 0038) of operable vehicle.

NOTE

- Model of vehicle can be determined by information plate on inside of driver side cabin door.
 - Steps (11) and (12) apply to operable M1120 BASE model HEMTT vehicle only.
 - Skip to Step (13) for operable M1120A2 model HEMTT vehicle.
 - Skip to Step (15) for operable M1120A4 model HEMTT vehicle.
11. Set PTO ENGAGE switch (10) to ON position. Indicator light (11) will illuminate.

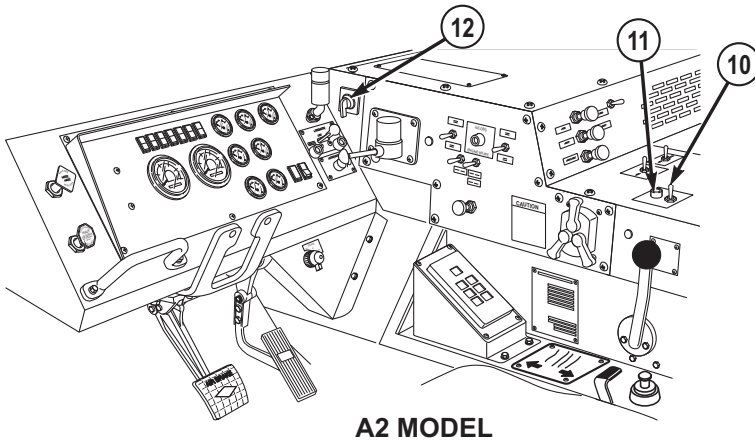
OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued*Figure 6.***CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

12. Turn hydraulic selector switch (12) to AUTO.

NOTE

- Model of vehicle can be determined by information plate on inside of driver side cabin door.
 - Steps (13) and (14) apply to operable M1120A2 model HEMTT vehicle only.
 - Skip to Step (15) for operable M1120A4 model HEMTT vehicle.
13. Set PTO ENGAGE switch (10) to ON position. Indicator light (11) will illuminate.

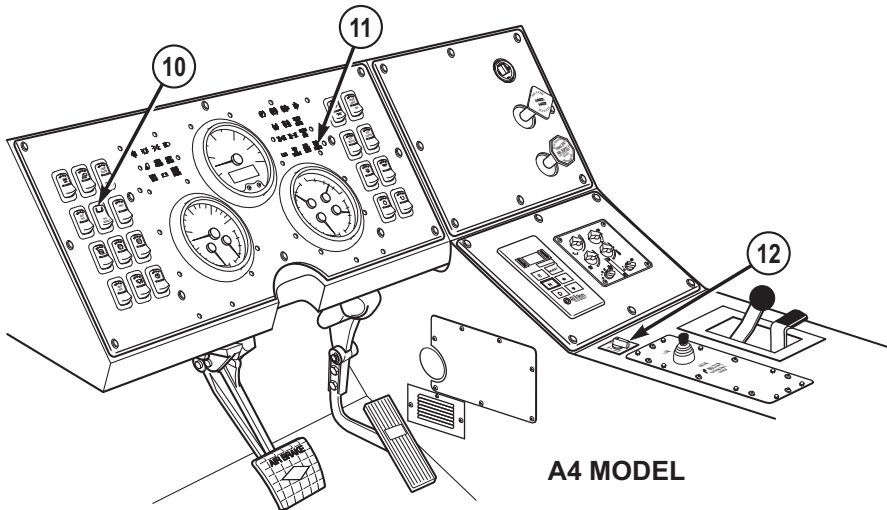
OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued**A2 MODEL***Figure 7.***CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

14. Turn hydraulic selector switch (12) to AUTO.

NOTE

- Model of vehicle can be determined by information plate on inside of driver side cabin door.
 - Steps (15) and (16) apply to operable M1120A4 model HEMTT vehicle only.
15. Set HYD ENABLE switch (10) to on position. MAIN HYD ENABLE indicator (11) will illuminate.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued*Figure 8.***CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

16. Turn hydraulic selector switch (12) to AUTO.

NOTE

- Model of vehicle can be determined by information plate on inside of driver side cabin door.
 - If disabled vehicle is a M1120 BASE or M1120A2 model HEMTT and has a failure in the hydraulic system, but not the electrical system, continue with Step (17). If both hydraulic and electrical systems have failed, skip to Step (19).
 - If disabled vehicle is an M1120A4 model HEMTT and has a failure in the hydraulic system, but not the electrical system, skip to Step (18). If both hydraulic and electrical systems have failed, skip to Step (19).
17. On disabled vehicle, turn ENGINE switch (13) to ON, and turn hydraulic selector switch (12) to AUTO. Operate joystick (14) to return LHS to the stowed position. Skip to Step (21).

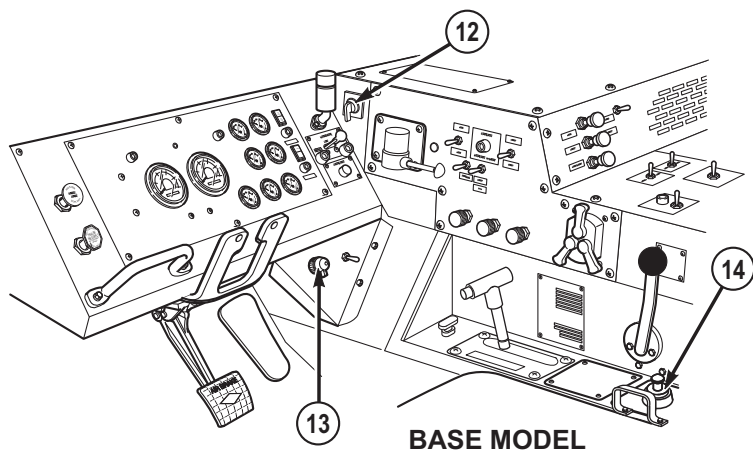
OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued

Figure 9.

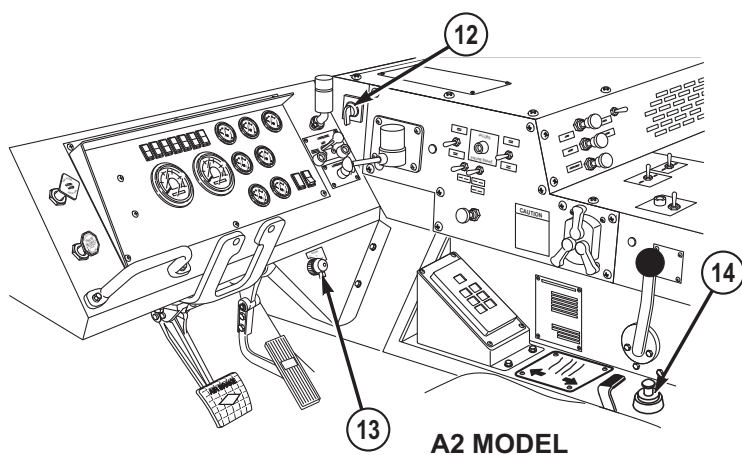


Figure 10.

NOTE

- Model of vehicle can be determined by information plate on inside of driver side cabin door.
- Step (18) applies to disabled M1120A4 model HEMTT vehicle only.

18. On disabled vehicle, position ignition switch (13) on, and turn hydraulic selector switch (12) to AUTO. Operate joystick (14) to return LHS to the stowed position. Skip to Step (21).

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued

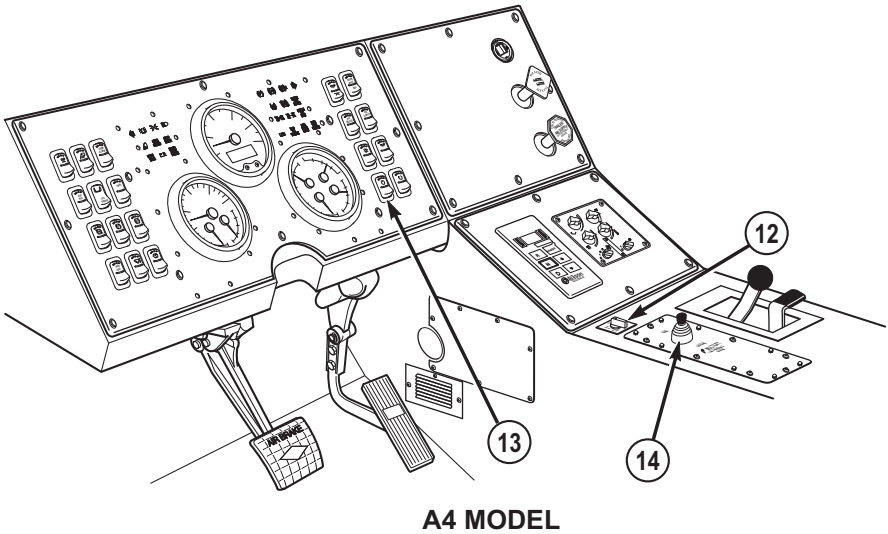


Figure 11.

NOTE

Only remove center screw on engine side of LHS control box cover.

19. On disabled vehicle, remove four screws (15), lockwashers (16), and LHS control box cover (17).

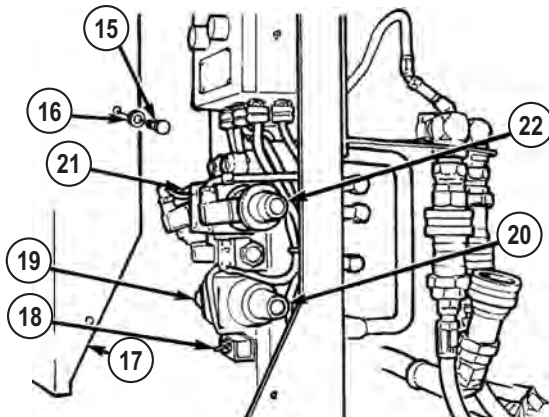


Figure 12.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued**NOTE**

Button may be stiff and hard to push in.

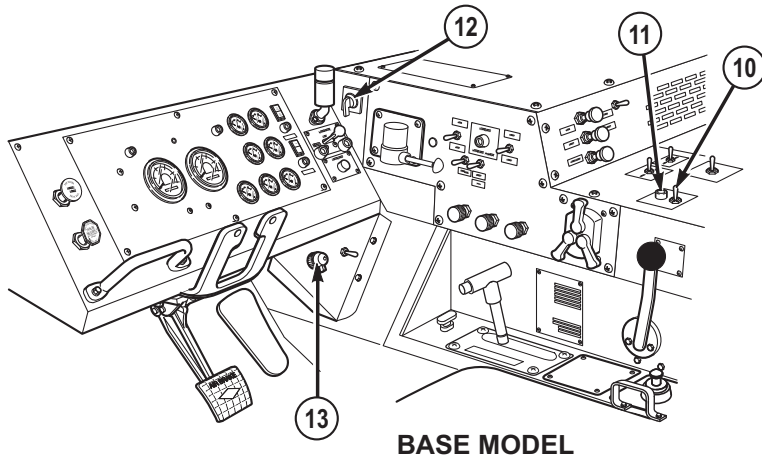
20. Press and hold free flow valve override button (18). Simultaneously press one or more of the following buttons to return LHS to the stowed position: hook arm UP (19), hook arm DOWN (20), main frame UP (21), main frame DOWN (22).
21. Shut down both vehicles:
 - a. Complete Steps (22) through (25) to shut down M1120 BASE model HEMTT vehicle.
 - b. Complete Steps (26) through (29) to shut down M1120A2 model HEMTT vehicle.
 - c. Complete Steps (30) through (33) for M1120A4 model HEMTT vehicle.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

NOTE

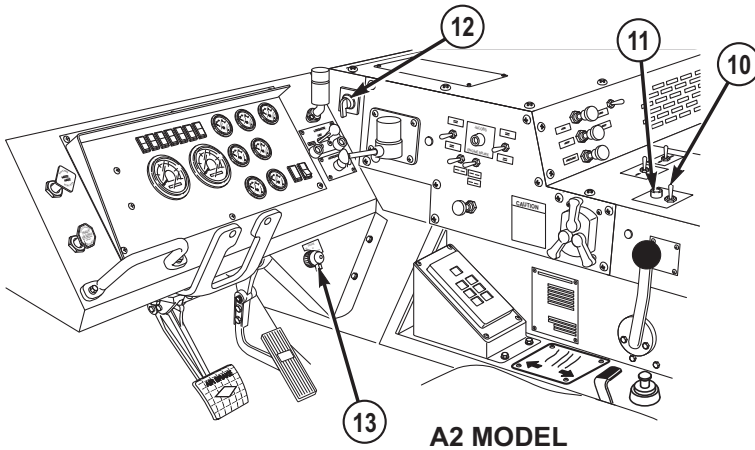
- Model of vehicle can be determined by information plate on inside of driver side cabin door.
 - Perform Steps (22) through (25) to shut down M1120 BASE model HEMTT vehicle.
22. Turn hydraulic selector switch (12) to OFF.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued*Figure 13.*

23. On operable vehicle, set PTO ENGAGE switch (10) to OFF position. Indicator light (11) will go out.
24. Shut off engine on operable vehicle. (WP 0051)
25. On disabled vehicle, turn ENGINE switch (13) to OFF.

NOTE

- Model of vehicle can be determined by information plate on inside of driver side cabin door.
 - Perform Steps (26) through (29) to shut down M1120A2 model HEMTT vehicle.
26. Turn hydraulic selector switch (12) to OFF.

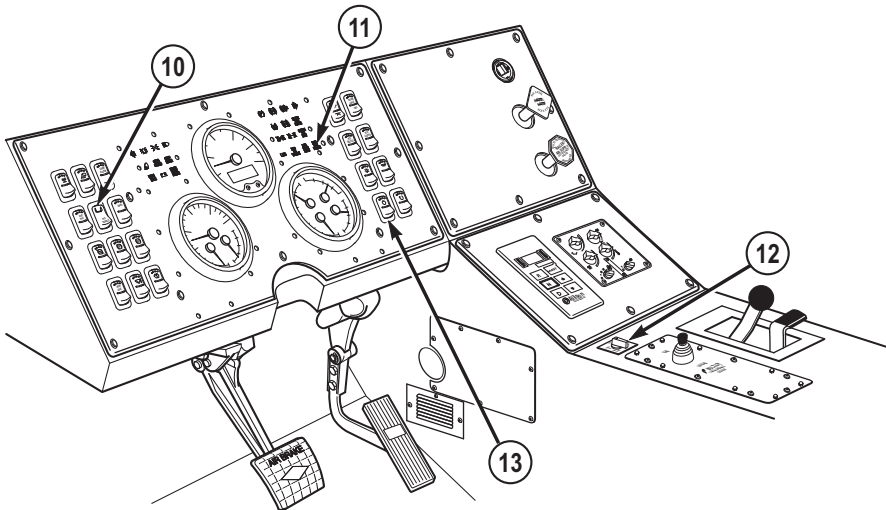
OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued*Figure 14.*

27. On operable vehicle, set PTO ENGAGE switch (10) to OFF position. Indicator light (11) will go out.
28. Shut off engine on operable vehicle. (WP 0051)
29. On disabled vehicle, turn ENGINE switch (13) to OFF.

NOTE

- Model of vehicle can be determined by information plate on inside of driver side cabin door.
- Perform Steps (30) through (33) to shut down M1120A4 model HEMTT vehicle.

30. Turn hydraulic selector switch (12) to OFF.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued**A4 MODEL***Figure 15.*

31. On operable vehicle, set HYD ENABLE switch (10) to off position. MAIN HYD ENABLE indicator (11) will go out.
32. Shut off engine on operable vehicle. (WP 0051)
33. On disabled vehicle, set ignition switch (13) to off position.

WARNING

Hydraulic fluid is under great pressure. Engines on both vehicles must be shut off while disconnecting hydraulic lines. Failure to comply may result in injury or death to personnel.

CAUTION

To prevent hydraulic contamination, keep hydraulic quick disconnects clean, or damage to hydraulic system may result.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued**NOTE**

Quick disconnects are located on the back of the LHS box.

34. Disconnect male end of first slave hose (6) from supply hose (2) of operable vehicle.

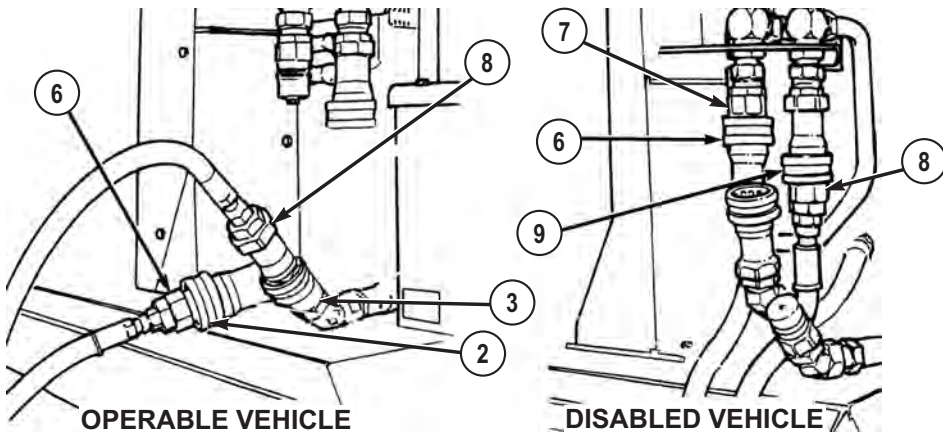
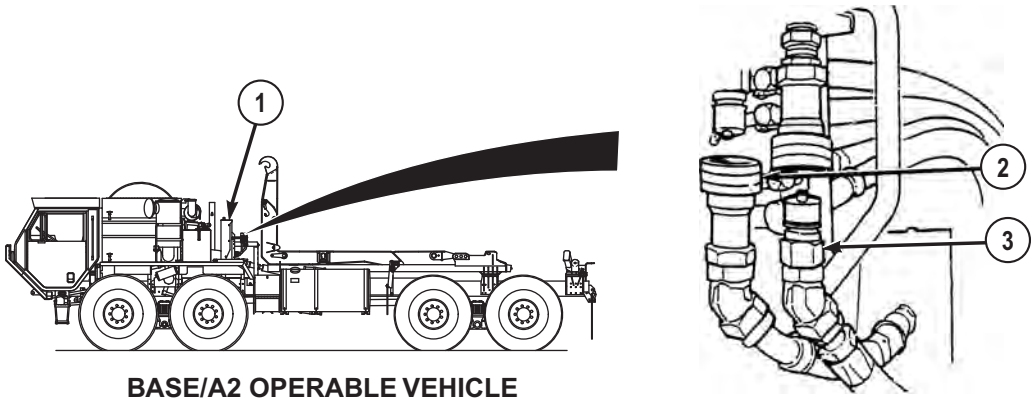
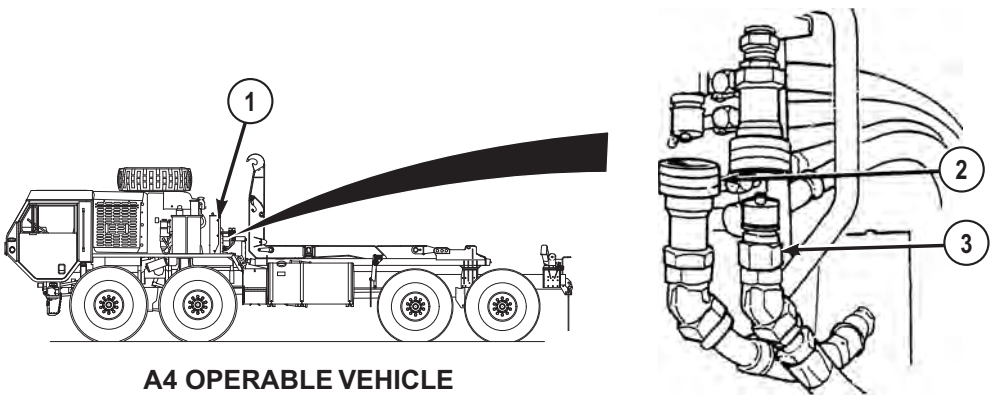


Figure 16.

35. Disconnect female end of first slave hose (6) from supply tube (7) of disabled vehicle.
36. Disconnect female end of second slave hose (8) from return hose (3) of operable vehicle.
37. Disconnect male end of second slave hose (8) from return tube (9) of disabled vehicle.
38. Return first and second slave hoses to appropriate stowage (one to each vehicle).
39. Connect supply hose (2) and return hose (3) to appropriate quick disconnects located on the back of LHS control box (1) on operable vehicle.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued*Figure 17.**Figure 18.*

40. Connect supply hose (4) and return hose (5) to appropriate quick disconnects located on the back of LHS control box (1) on disabled vehicle.

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued

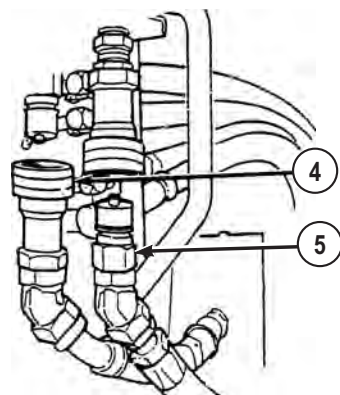
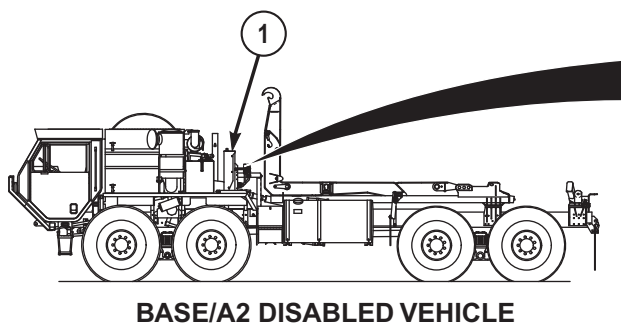


Figure 19.

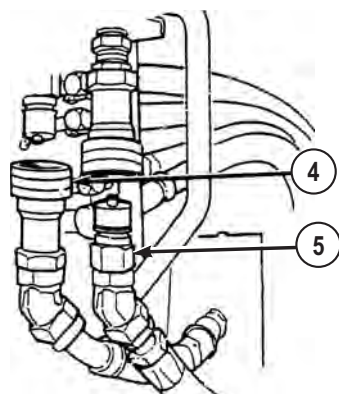
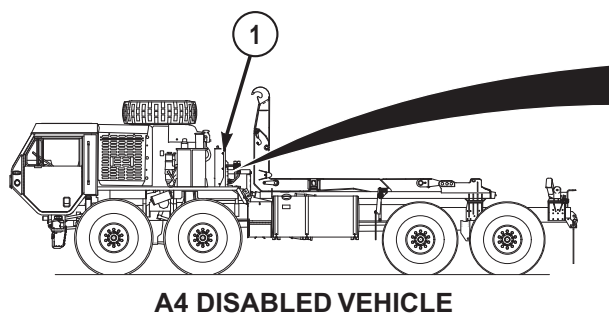
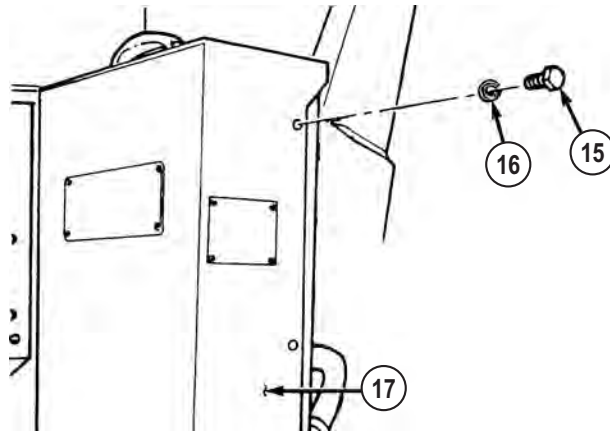


Figure 20.

41. When operations are completed, check hydraulic fluid levels of both vehicles. Service as necessary.
42. On disabled vehicle, install LHS control box cover (17) with four lockwashers (16) and screws (15).

OPERATE LHS USING SLAVE HYDRAULIC SETUP - Continued*Figure 21.***END OF TASK****END OF WORK PACKAGE**

This page intentionally left blank

**OPERATOR MAINTENANCE
LOAD HANDLING SYSTEM (LHS) MANUAL HYDRAULIC OPERATION**

INITIAL SETUP:

Not Applicable

MANUAL HYDRAULIC OPERATION

WARNING

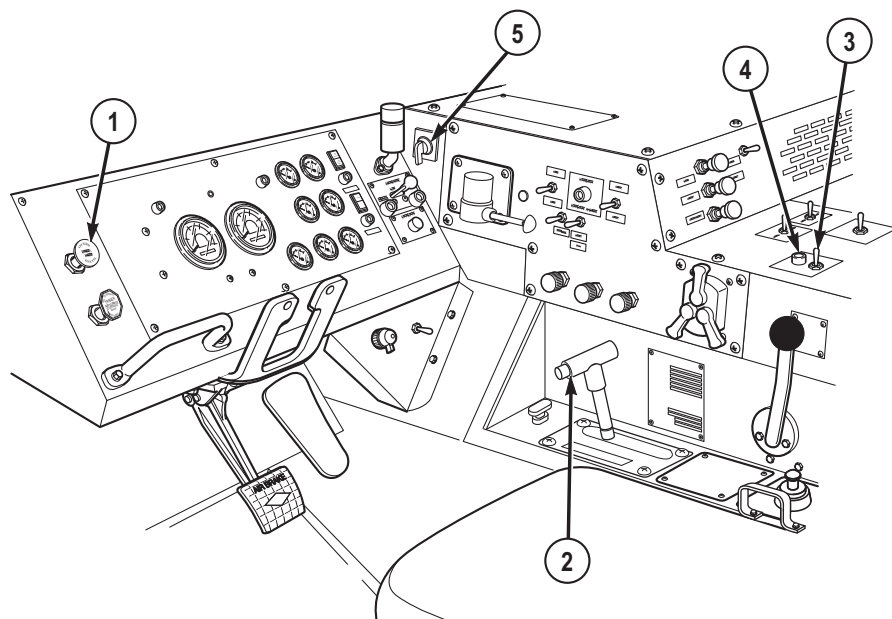


Hydraulic fluid is under great pressure. Engines on both vehicles must be shut off while disconnecting hydraulic lines. Failure to comply may result in injury or death to personnel.

NOTE

If electrical failure occurs during loading or unloading, manual operation of main manifold directional control valves will allow LHS operation until electrical failure can be repaired.

1. Pull out PARKING BRAKE control (1).

MANUAL HYDRAULIC OPERATION - Continued*Figure 1.*

2. Set transmission range selector (2) to N (Neutral).
3. Set PTO ENGAGE switch (3) to ON position. Indicator light (4) will illuminate.

CAUTION

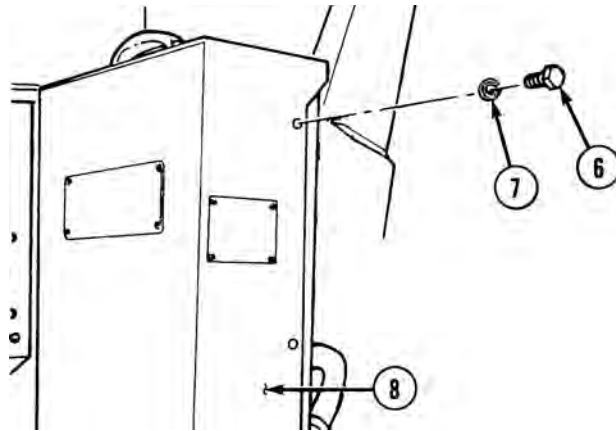
Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

4. Turn hydraulic selector switch (5) to MAN H.A., MAN M.F., or AUTO.

NOTE

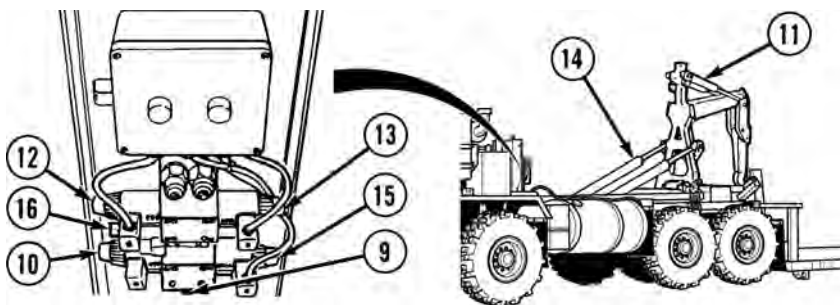
Only remove center screw on engine side of LHS control box cover.

5. Remove four screws (6), lockwashers (7), and LHS control box cover (8) to gain access to main manifold valve on driver side of vehicle.

MANUAL HYDRAULIC OPERATION - Continued*Figure 2.***CAUTION**

Engine speed must be at idle before hook arm cylinders are fully extended. Damage to equipment may result.

6. Unload flatrack from vehicle as follows:
 - a. Press and hold free flow valve override button (9) and manual hook arm UP button (10) until hook arm cylinders (11) are fully extended.

*Figure 3.*

- b. Press and hold free flow valve override button (9) and manual main frame UP button (12) until flatrack is unloaded.

MANUAL HYDRAULIC OPERATION - Continued**CAUTION**

To avoid equipment damage, ensure that main frame cylinders do not complete full retraction while operating at engine speeds above idle.

7. Load flatrack onto vehicle as follows:
 - a. Press and hold manual free flow valve override button (9) and press manual main frame DOWN button (13) until main frame cylinders (14) are fully retracted.
 - b. Press and hold manual free flow valve override button (9) and depress manual hook arm DOWN button (15) until flatrack is in transit position (fully loaded).
 - c. Press transit valve button (16) before moving vehicle.

CAUTION

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

8. Turn hydraulic selector switch (5) to MAN TRANS.

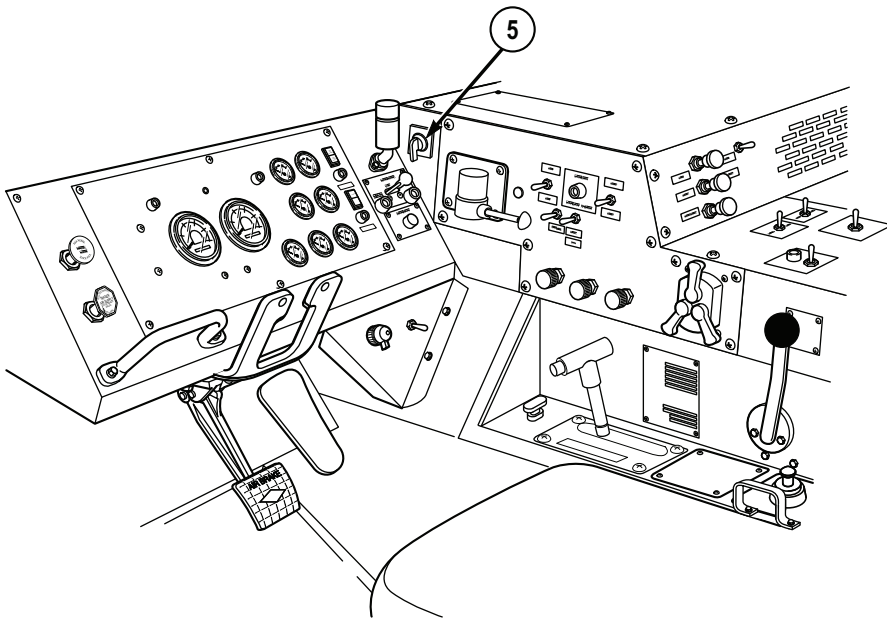
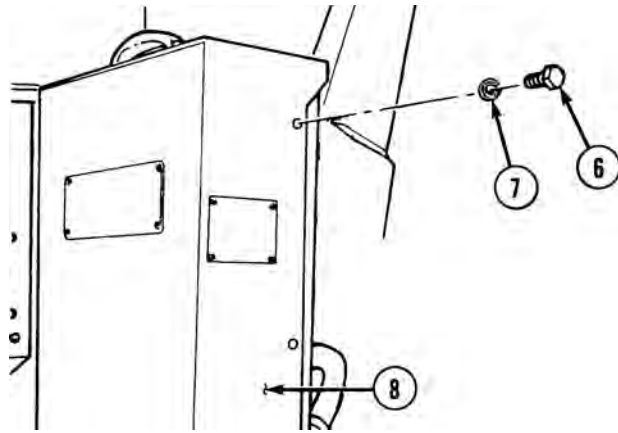


Figure 4.

9. Install LHS control box cover (8) with four screws (6) and lockwashers (7).

MANUAL HYDRAULIC OPERATION - Continued*Figure 5.***END OF TASK****END OF WORK PACKAGE**

This page intentionally left blank

**OPERATOR MAINTENANCE
LOWERING FLATRACK DURING COMPLETE HYDRAULIC FAILURE (HYDRAULIC
RELEASE)**

INITIAL SETUP:

Not Applicable

WARNING



Ensure operator, objects, and other personnel are clear of LHS and vehicle during LHS operation. Failure to comply may result in injury or death to personnel.

NOTE

In event of hydraulic failure during loading or unloading, load control valves fitted into system will stop LHS operation. To recover from this, solenoid valves are operated which, when open, bypass cylinder load control valves causing LHS to move under its own weight to load or unload position.

1. Pull out PARKING BRAKE control (1).

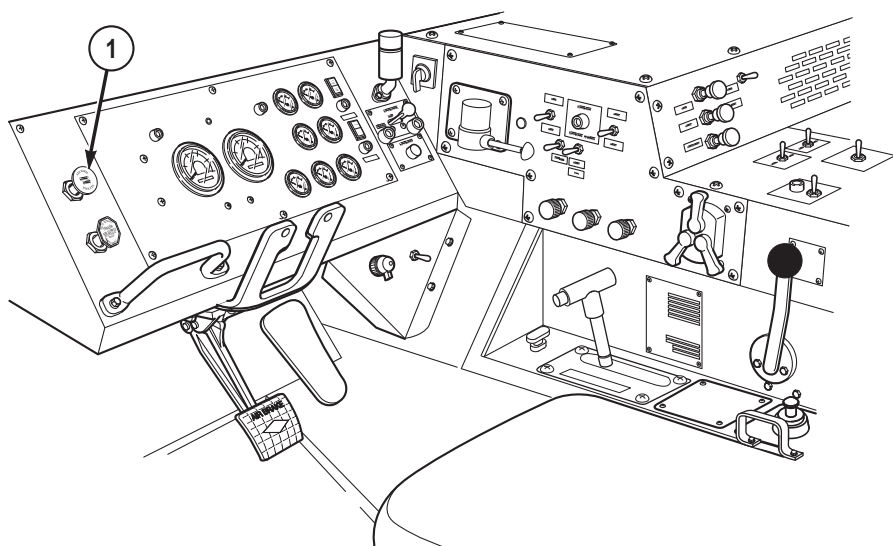


Figure 1.

NOTE

Only remove center screw on engine side of LHS control box cover.

2. Remove four screws (2), lockwashers (3), and LHS control box cover (4).

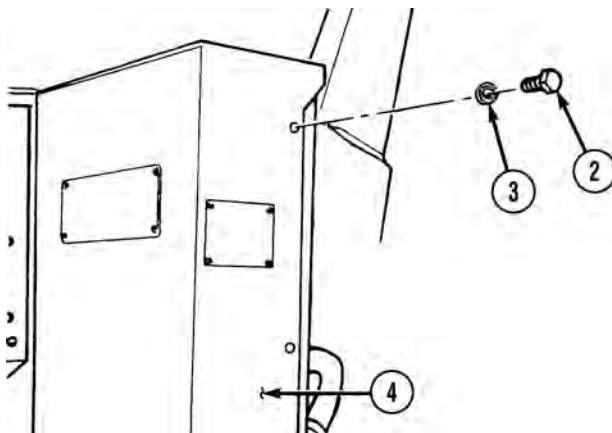


Figure 2.

3. Turn ENGINE switch (5) to ON position to allow power to electrical system, but do not start engine.

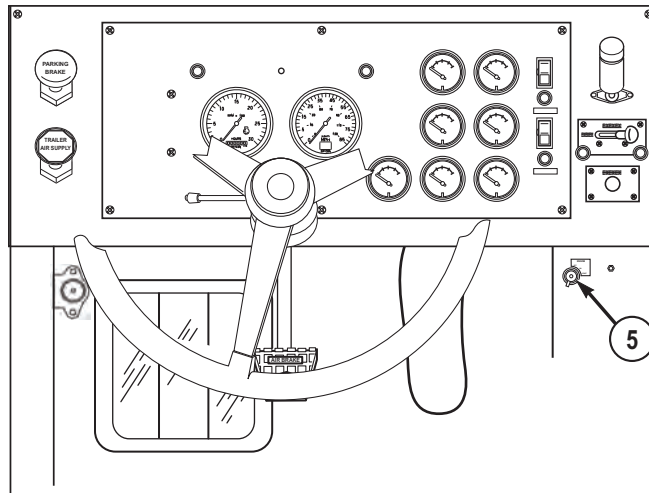


Figure 3.

CAUTION

Before depressing electrical lowering override buttons, direction of LHS payload movement (load or unload) must be known.

NOTE

- If flatrack and load center of gravity is over vehicle, load will return to transport position. If flatrack and load center of gravity is over rear of vehicle, flatrack will lower to the ground.
 - Under certain circumstances, an assist vehicle may be needed to aid in pulling payload back if dug in.
 - Operate electrical lowering override buttons by pressing and releasing buttons, these control movement of LHS.
4. Locate electrical hook arm override button (6) and main frame override button (7).

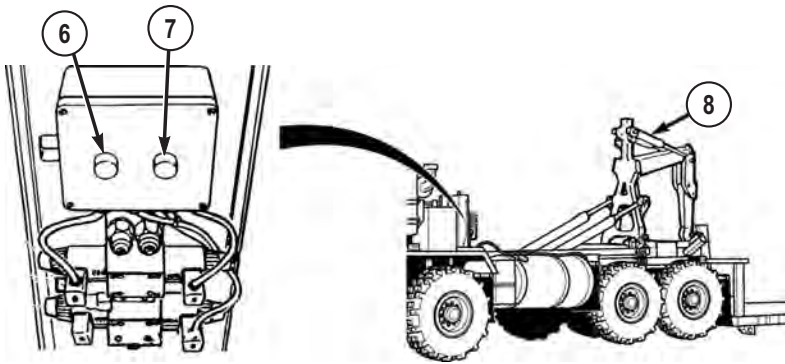


Figure 4.

5. Press main frame override button (7) for unloading.

NOTE

Ground conditions will determine if flatrack rolls/slides across ground or digs in. In event of digging in, operator should stop electrical override button operation. If this condition exists, the load will have to be unloaded manually. (WP 0121)

6. As flatrack unloads, operator continues using main frame electrical override button (7). Weight of flatrack and payload will continue until load is on ground. Operator will have to exercise caution during this procedure. If flatrack is not fully on ground, the hook arm override button (6) may be pressed until flatrack is on ground.
7. If load returns to transport position on vehicle during main frame override button (7) operation, the operation will continue until LHS movement stops.
8. Press the hook arm override button (6) until the hook arm cylinders (8) are in transport position.
9. Turn hydraulic selector switch (9) to MAN TRANS, which allows vehicle to be driven.

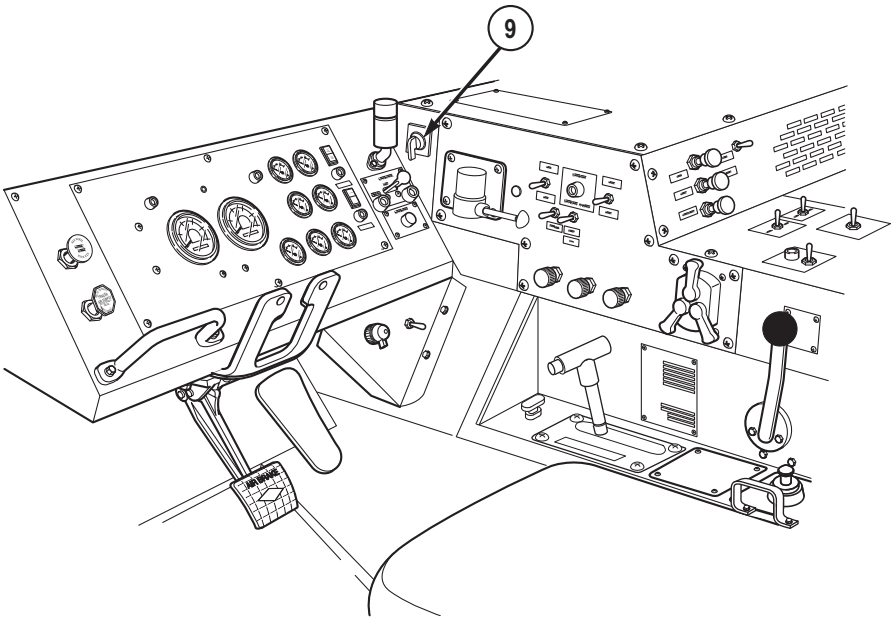


Figure 5.

10. Manually remove flatrack. (WP 0121)
11. Install four screws (2), lockwashers (3), and LHS control box cover (4).

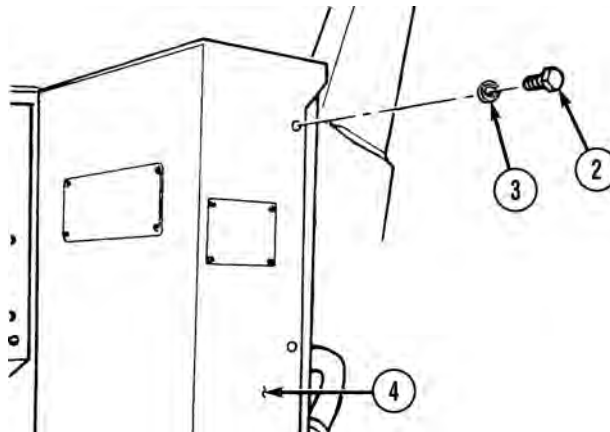


Figure 6.

END OF TASK

END OF WORK PACKAGE

This page intentionally left blank

**OPERATOR MAINTENANCE
MANUAL REMOVAL OF FLATRACK**

INITIAL SETUP:**Personnel Required**Operator and Assistant - - - (2)

REMOVE FLATRACK WITH LIFTING DEVICE**WARNING**

M1077 flatrack weighs 3,200 lbs (1 455 kg). M1077A1 flatrack weighs 3,900 lbs (1 773 kg). Do not attempt to lift or move flatrack without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

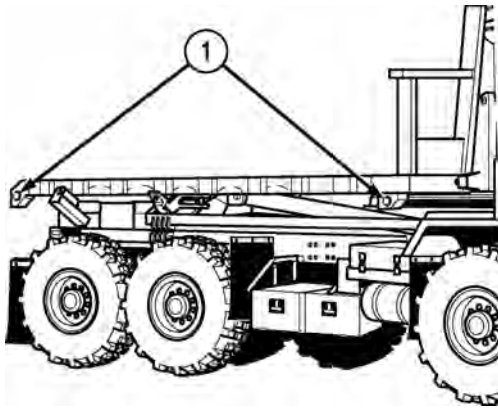
CAUTION

- Do not attempt to LOAD flatrack onto vehicle in this manner or equipment damage may result.
- Attempting to unload flatrack with LHS rear load locks engaged will result in damage to flatrack and possible damage to LHS.
- Flatrack must be empty before attempting to reengage hook and hook bar or damage to equipment may result.

NOTE

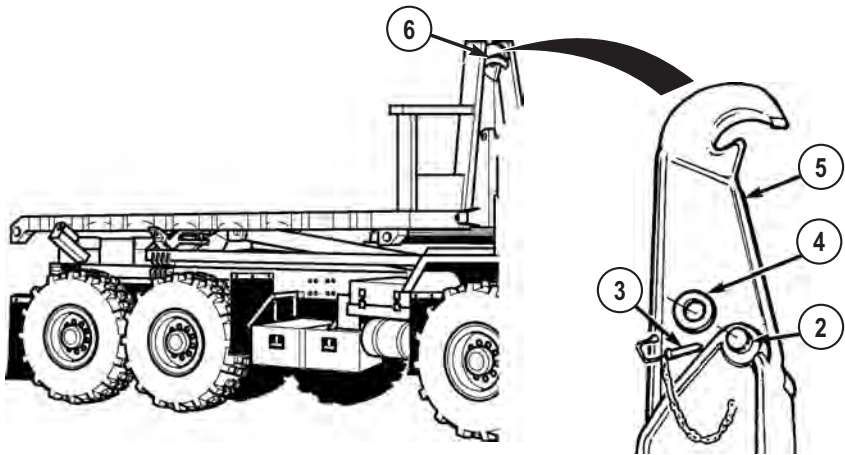
- If complete system failure or hydraulic failure as described in this paragraph does not allow normal operation, remove payload or flatrack and payload from vehicle.
- Flatrack is considered engaged in LHS rear load locks when any part of flatrack lock is under LHS lock.

1. Secure lifting slings to flatrack lifting eyes (1).

REMOVE FLATRACK WITH LIFTING DEVICE - Continued*Figure 1.***WARNING**

Lift hook weighs 200 lbs (91 kg). Do not attempt to lift or move lift hook without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

2. Apply tension to sling and lift flatrack slightly to relieve pressure on locking pin (2). Remove pin (3), washer (4), and locking pin (2) from LHS lift hook (5).

REMOVE FLATRACK WITH LIFTING DEVICE - Continued*Figure 2.*

3. Using a lifting device, lift flatrack slightly. Flatrack will not separate from vehicle due to flatrack hook bar being engaged under LHS lift hook (5) and load locks being engaged.

WARNING

Personnel must stand clear of flatrack and LHS lift hook areas during loading and unloading procedures. Failure to comply may result in injury to personnel.

4. Using another vehicle or an anchor point, pull flatrack rearwards from LHS lift hook (5) until LHS lift hook clears and falls free of flatrack hook bar (6).
5. Move LHS lift hook (5) back into position.
6. Install locking pin (2), washer (4), and pin (3) in LHS lift hook (5).

END OF TASK**END OF WORK PACKAGE**

This page intentionally left blank

**OPERATOR MAINTENANCE
MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK**

INITIAL SETUP:

Not Applicable

MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK

CAUTION

- Attempting to unload flatrack with LHS rear load locks engaged will result in damage to flatrack and possible damage to LHS.
- Flatrack must be empty before attempting to re-engage hook and hook bar or damage to equipment may result.

NOTE

Flatrack is considered engaged in LHS rear load locks when any part of flatrack lock is under LHS lock.

1. Visually inspect LHS rear load lock (1) and flatrack load lock (2) to determine if flatrack (3) is engaged or disengaged.

MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK - Continued

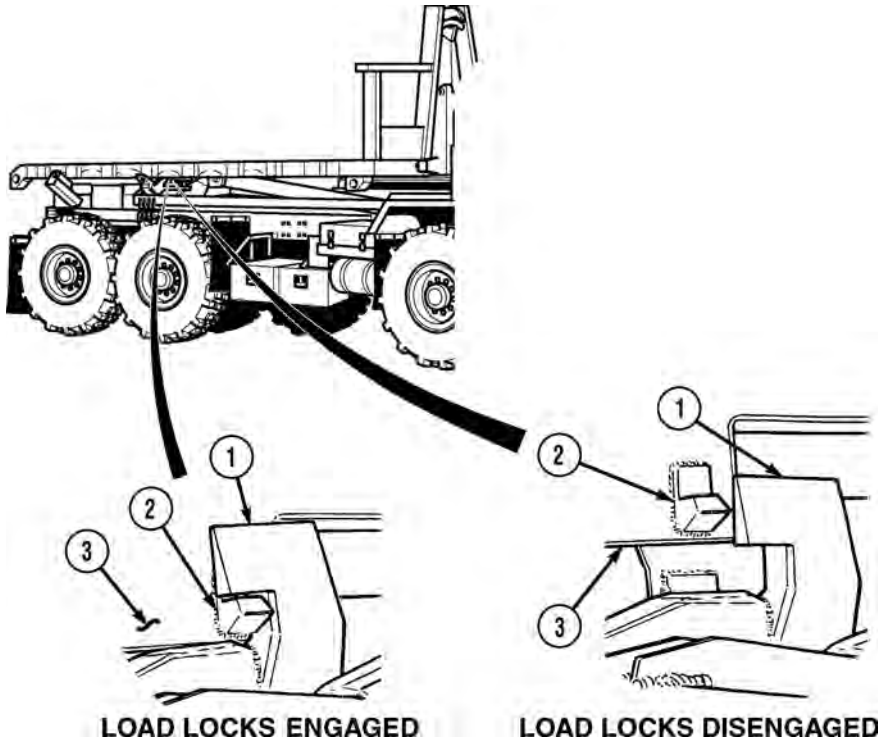
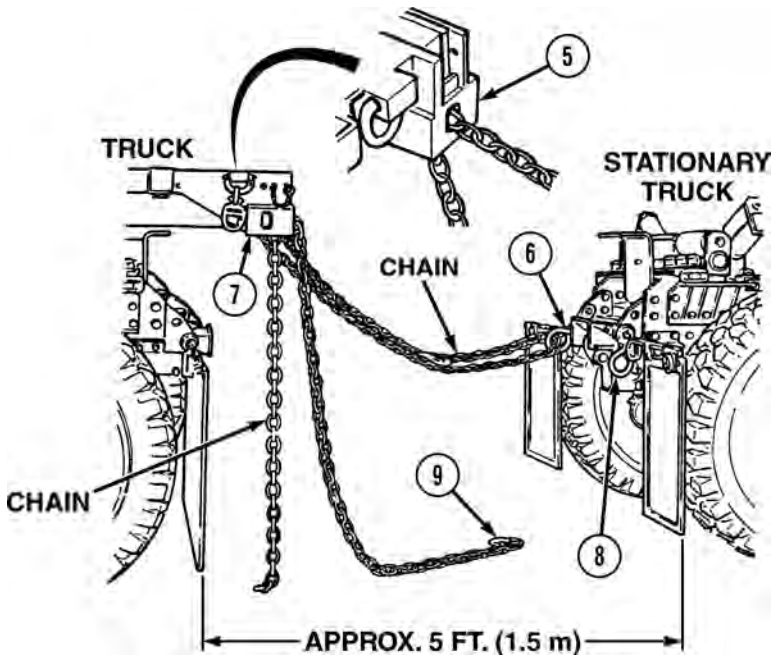


Figure 1.

NOTE

- If flatrack load lock is not engaged in LHS rear load locks, skip to Step (9).
- If flatrack load lock is engaged in LHS rear load locks, proceed to Step (2).

2. Position vehicle so rear of vehicle is about 5 ft. (1.5 m) from another stationary vehicle.

MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK - Continued*Figure 2.***CAUTION**

Use of a chain at each flatrack corner casting is required, or damage to equipment can result.

NOTE

Use of the 14 ft. (4.3 m) chain from the vehicle BII and another chain of equal length and strength is required.

3. Route one chain through the right ISO corner casting (5) of vehicle and through the left tow shackle (6) on the stationary vehicle.
4. Route the second chain through the left flatrack ISO corner casting (7) of vehicle and through the right tow shackle (8) on the stationary vehicle.
5. Adjust chains to equal lengths and hook chain hooks (9) on chains.

MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK - Continued**WARNING**

Keep all personnel away from rear of flatrack and chains while attempting to disengage the load locks. Chains will be under great tension and could unhook or fail. Failure to comply may result in injury or death to personnel.

CAUTION

Vehicle should be driven forward slowly or damage to equipment can result.

NOTE

Ensure that both chains tighten evenly when moving vehicle forward.

6. Push in **PARKING BRAKE** control (4) and move vehicle forward to take slack out of chains.

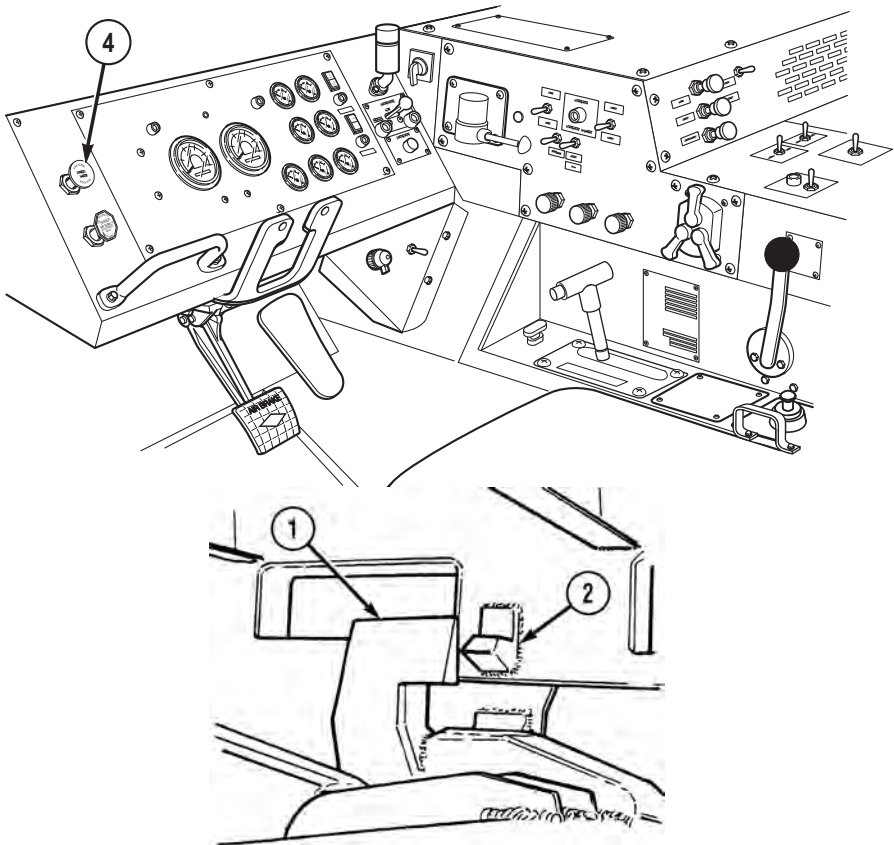
MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK - Continued

Figure 3.

7. Increase engine speed until flatrack load lock (2) disengages from LHS rear load locks (1).
8. Move vehicle rearward to relieve tension on chains.
9. Pull out PARKING BRAKE control (4).
10. Remove and stow both chains.
11. Push in PARKING BRAKE control (4) and drive vehicle forward to allow room for removal of flatrack (3).

MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK - Continued

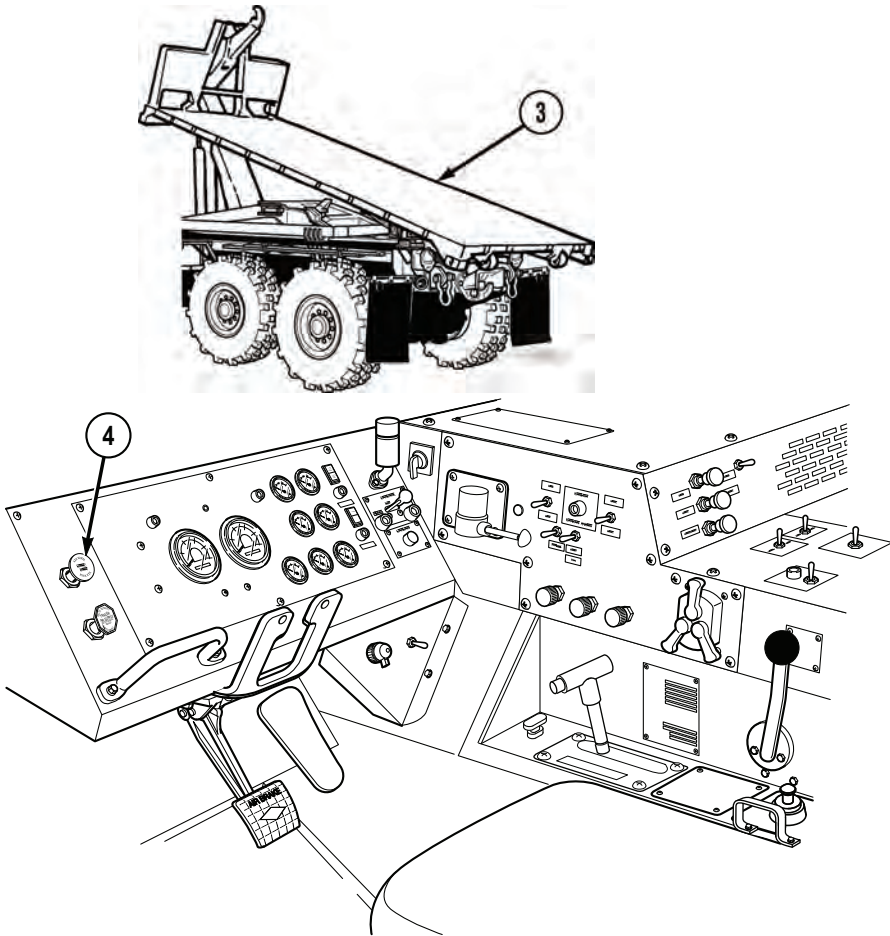
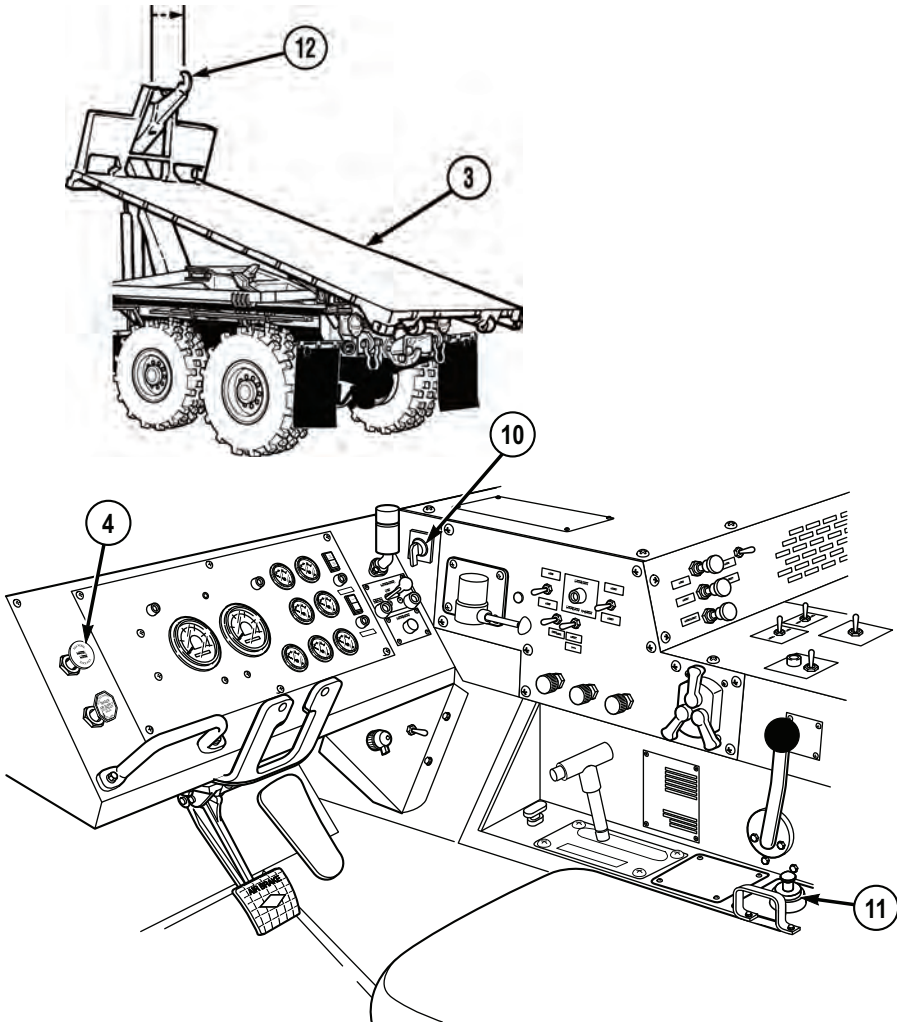


Figure 4.

12. Pull out PARKING BRAKE control (4).

MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK - Continued*Figure 5.***CAUTION**

Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.

13. Turn hydraulic selector switch (10) to AUTO.

MANUALLY RE-ENGAGE FLATRACK HOOKBAR TO LHS HOOK - Continued**WARNING**

Personnel must stand clear of flatrack and LHS lift hook areas during loading and unloading procedures. Failure to comply may result in injury to personnel.

NOTE

Lift hook will raise with flatrack hook bar outside of lift hook. As the hook arm raises, the flatrack will move rearward and engage the lift hook.

14. Move joystick (11) to UNLOAD position until the flatrack (3) engages LHS lift hook (12).
15. Load/Unload Flatrack in AUTO Mode. (WP 0064)

END OF TASK**END OF WORK PACKAGE**

**OPERATOR MAINTENANCE
STOWAGE AND SIGN GUIDE**

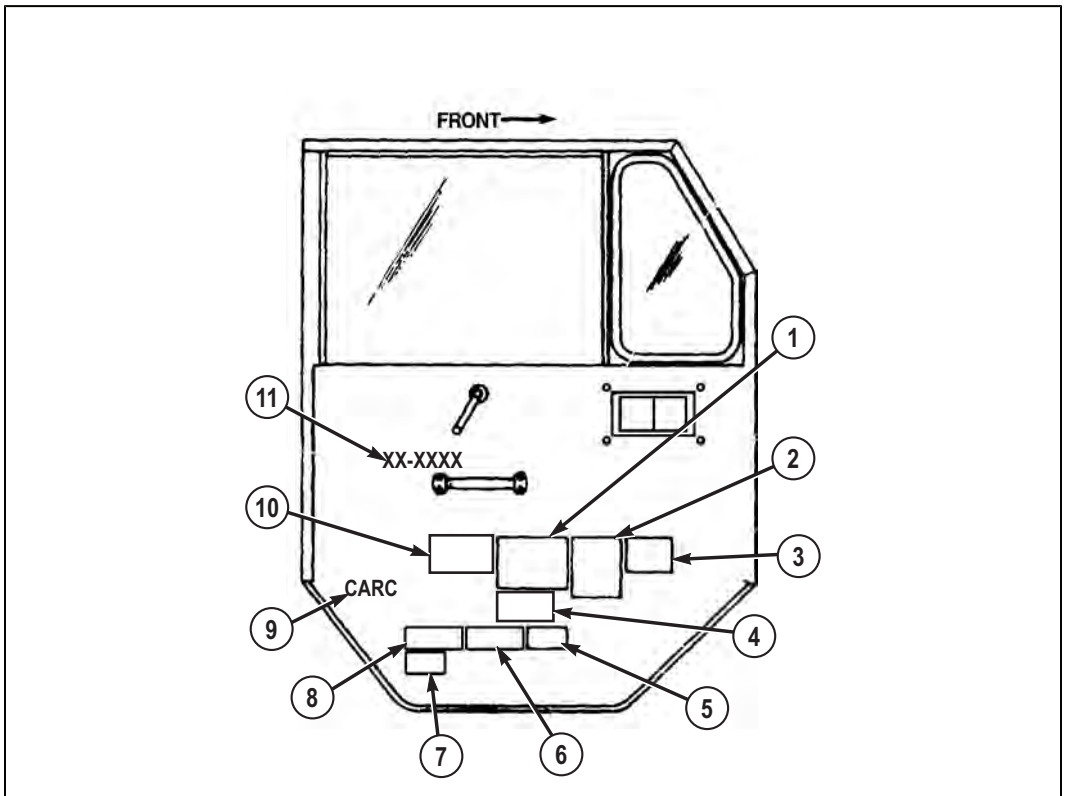
Scope

This work package shows locations for data plates, decals, and stencils that are required to be in place on the HEMTT series vehicles.

General

The following figures show the location of metal signs, decals, and stencils used on the vehicle. Most of these signs and stencils contain cautions or information needed to operate the vehicle safely. For stowage locations of Components Of End Item (COEI) and Basic Issue Items (BII), refer to Components of End Item and Basic Issue Items tables. (WP 0174)

Table 1. Inside Driver Side Door.



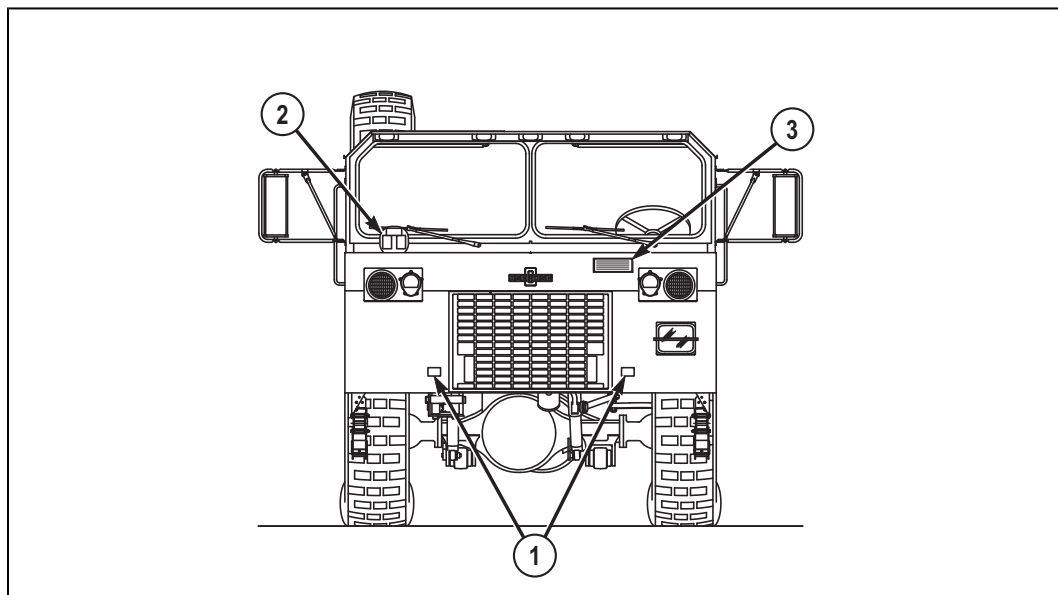
General - Continued

Table 1. Inside Driver Side Door. - Continued

| INDEX | DECAL/PLATE/STENCIL |
|-------|---|
| 1 | Manufacturer's Certification Information |
| 2 | Parts Data |
| 3 | Name Plate |
| 4 | Overhaul Data (not included on all vehicles) |
| 5 | Tire Inflation Data |
| 6 | Warranty Information |
| 7 | Rustproofing Data/Rustproofing CAUTION |
| 8 | Noise Exemption Decal (not included on all vehicles) |
| 9 | "CARC" Stencil (not included on all vehicles) |
| 10 | Shipping Data |
| 11 | Registration Number (inside both driver and passenger side doors) (not included on all vehicles) |

General - Continued

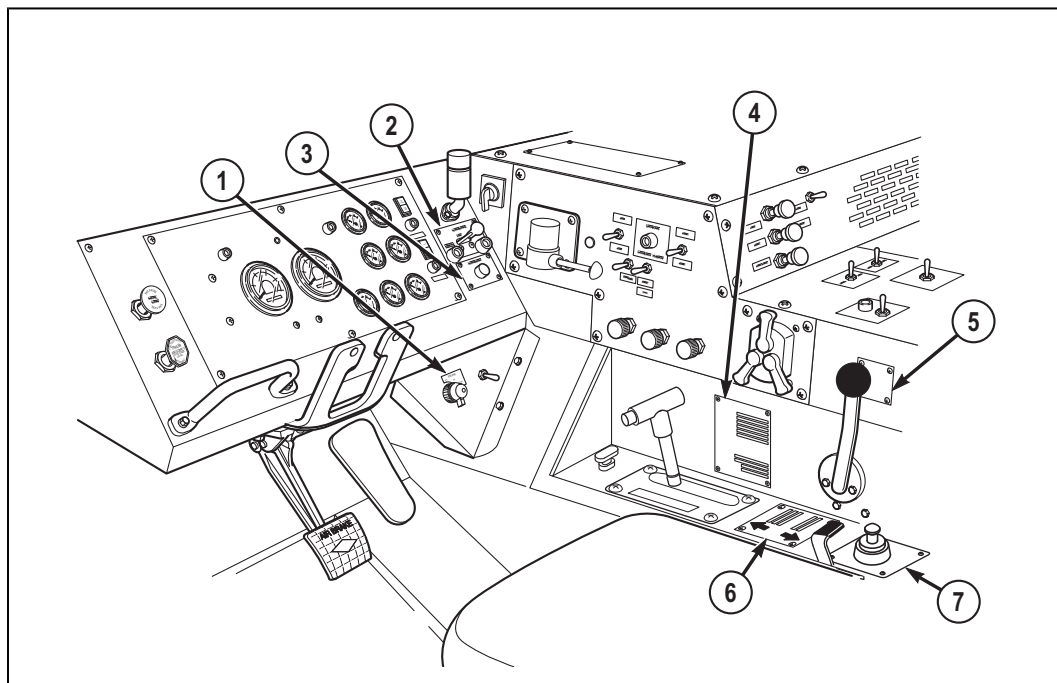
Table 2. Front Exterior.



| INDEX | PLACARD/STENCIL |
|-------|---------------------------|
| 1 | "TIE DOWN" Stencil |
| 2 | Sign Kit/Weight Indicator |
| 3 | "U.S. ARMY" Stencil |

General - Continued

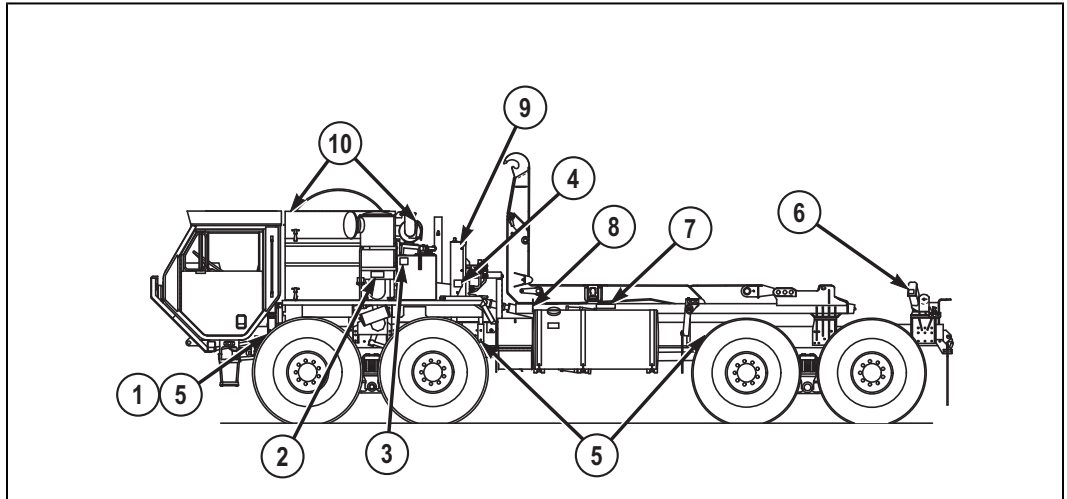
Table 3. M1120 LHS Cabin.



| INDEX | DECAL/PLACARD/PLATE |
|-------|---|
| 1 | Engine ON/OFF Decal |
| 2 | Traction Control Data Plate |
| 3 | Ether Start Data Plate |
| 4 | Vehicle Data Plate |
| 5 | Transfer Case Data Plate |
| 6 | Self-Recovery Winch Data Plate (vehicles equipped with self-recovery winch only) |
| 7 | Load Handling System Joystick LOAD/UNLOAD Placard |

General - Continued

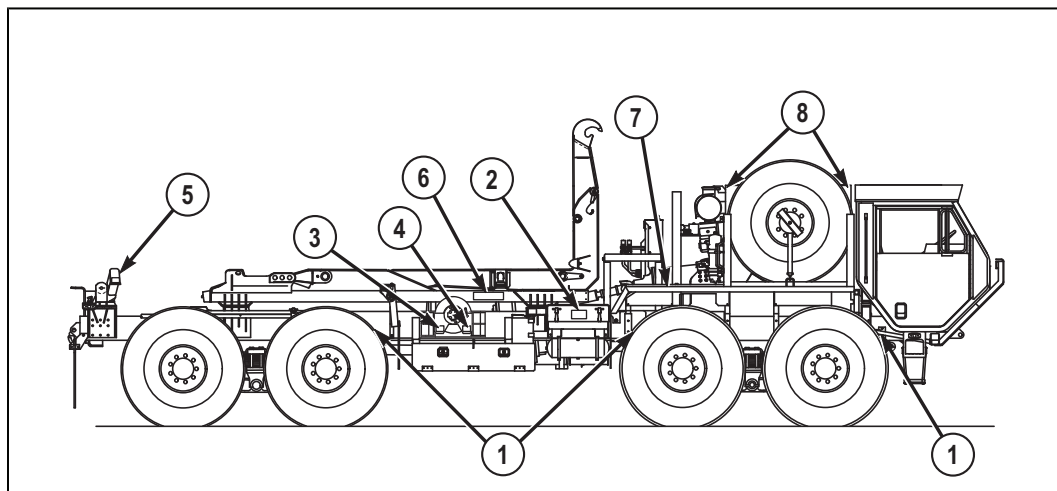
Table 4. M1120 LHS Driver Side Exterior.



| INDEX | DECAL/PLACARD/PLATE/STENCIL |
|-------|--|
| 1 | Vehicle Identification Number (VIN) Placard |
| 2 | CAUTION Decal (hearing protection required) |
| 3 | "FULL COLD" Stencil |
| 4 | L.H.S. HYDRAULIC SLAVE Placard |
| 5 | "TIE DOWN" Stencil |
| 6 | WARNING Placard |
| 7 | "MULTILIFT" Stencil |
| 8 | Multilift Data Plate |
| 9 | Multilift Data Plate and LHS Override Data Plate (inside cover) |
| 10 | "NO STEP" Stencil (multiple on exhaust and engine access panels) |

General - Continued

Table 5. M1120 LHS Passenger Side Exterior.



| INDEX | DECAL/PLACARD/PLATE/STENCIL |
|-------|---|
| 1 | "TIE DOWN" Stencil |
| 2 | CAUTION Decal (hearing protection required) |
| 3 | Self-Recovery Winch Data Plate (vehicles equipped with self-recovery winch only) |
| 4 | WARNING (self-recovery winch) Plate (vehicles equipped with self-recovery winch only) |
| 5 | WARNING Placard |
| 6 | "MULTILIFT" Stencil |
| 7 | CAUTION (hydraulic selector valve) Decal (vehicles equipped with self-recovery winch only) |
| 8 | "NO STEP" Stencil (multiple on exhaust and engine access panels) |

General - Continued

Table 6. M1120 LHS Rear Exterior.

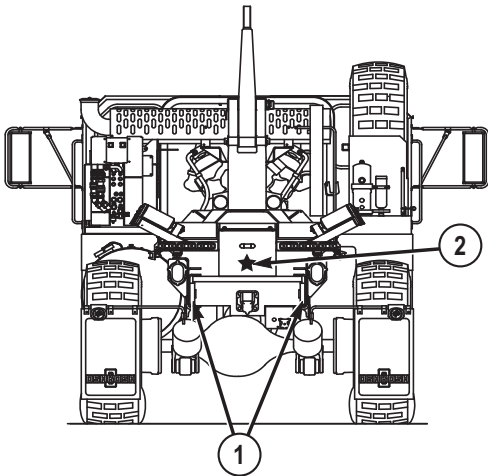
| | |
|---|---|
|  | |
| INDEX | STENCIL |
| 1 | "SLING POINT" and "TIE DOWN" Stencils (one each per side) |
| 2 | US Army Star Stencil |

Table 7. Miscellaneous Decals/Placards/Plates/Stencils.

| LOCATION | M977/ M985 | M978 | M983 | M984A 1 | M985 E1 | M1120 LHS | M1977 CBT |
|---------------|---------------|------|------|------------|------------|--------------|--------------|
| Axle Housing | 4 | 4 | 4 | 4 | 4 | 4 | 4 |
| Carrier | 4 | 4 | 4 | 4 | 4 | 4 | 4 |
| Transfer Case | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| Engine | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| Transmission | 1 | 1 | 1 | 1 | 1 | 1 | 1 |

General - Continued

Table 7. Miscellaneous Decals/Placards/Plates/Stencils. - Continued

| | | | | | | | |
|------------------|----|----|----|----|----|----|----|
| Heavy-Duty Winch | 0 | 0 | 0 | 1 | 0 | 0 | 0 |
| Total | 11 | 11 | 11 | 12 | 11 | 11 | 11 |

END OF WORK PACKAGE

CHAPTER 3
TROUBLESHOOTING
PROCEDURES

**OPERATOR MAINTENANCE
BUZZER SOUNDS AND AIR INDICATOR IS LIT**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

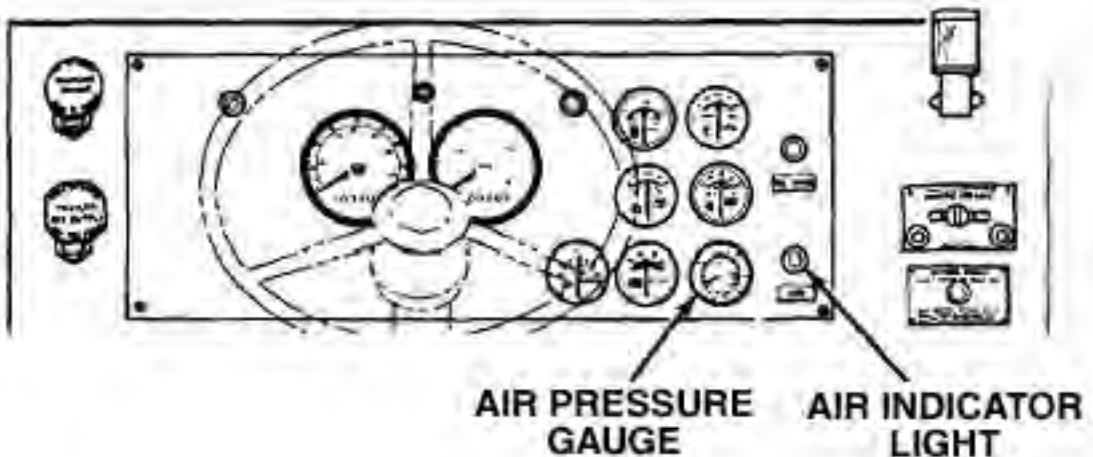
Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE**BUZZER SOUNDS AND AIR INDICATOR IS LIT****TEST 1 - Is air pressure greater than 75 psi (517 kPa)?**

1. Start engine, (WP 0038) and allow air pressure to build.
2. Check air pressure.

*Figure 1.*

3. Turn engine OFF. (WP 0051)

CONDITION/INDICATION

Is air pressure greater than 75 psi (517 kPa)?

DECISION

- No - Test 2 - Are any petcock valves open?
- Yes - Notify Supervisor.

TEST 2 - Are any petcock valves open?

1. Check if any air reservoir petcock valves are open. If valve(s) open, close petcock(s).



Figure 2.

CONDITION/INDICATION

Are any petcock valves open?

DECISION

Petcock(s) open - Test 6 - Does buzzer stop, and air indicator light extinguish?
 Petcock's closed - Test 3 - Is trailer air supply control in correct position?

TEST 3 - Is trailer air supply control in correct position?

1. Check that trailer air supply control is pulled out (OFF position) if no trailer is coupled, and pushed in (ON position) if trailer is coupled.
2. If trailer air control is found in an incorrect position, set to correct position.

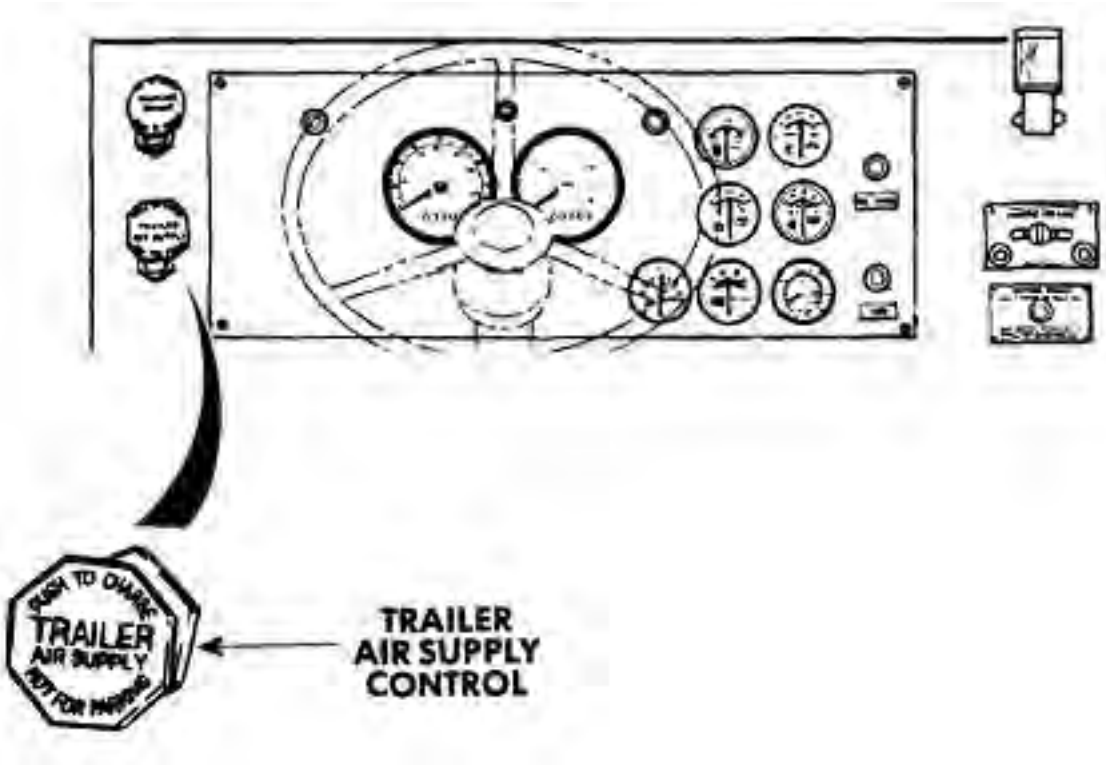


Figure 3.

CONDITION/INDICATION

Is trailer air supply control in correct position?

DECISION

No - Test 6 - Does buzzer stop, and air indicator light extinguish?
 Yes - Test 4 - Does air reservoir, hoses, lines, fittings, and/or connectors leak?

TEST 4 - Does air reservoir, hoses, lines, fittings, and/or connectors leak?

1. Check air reservoir, hoses, lines, fittings, and/or connectors for leaks. Tighten any leaks found.

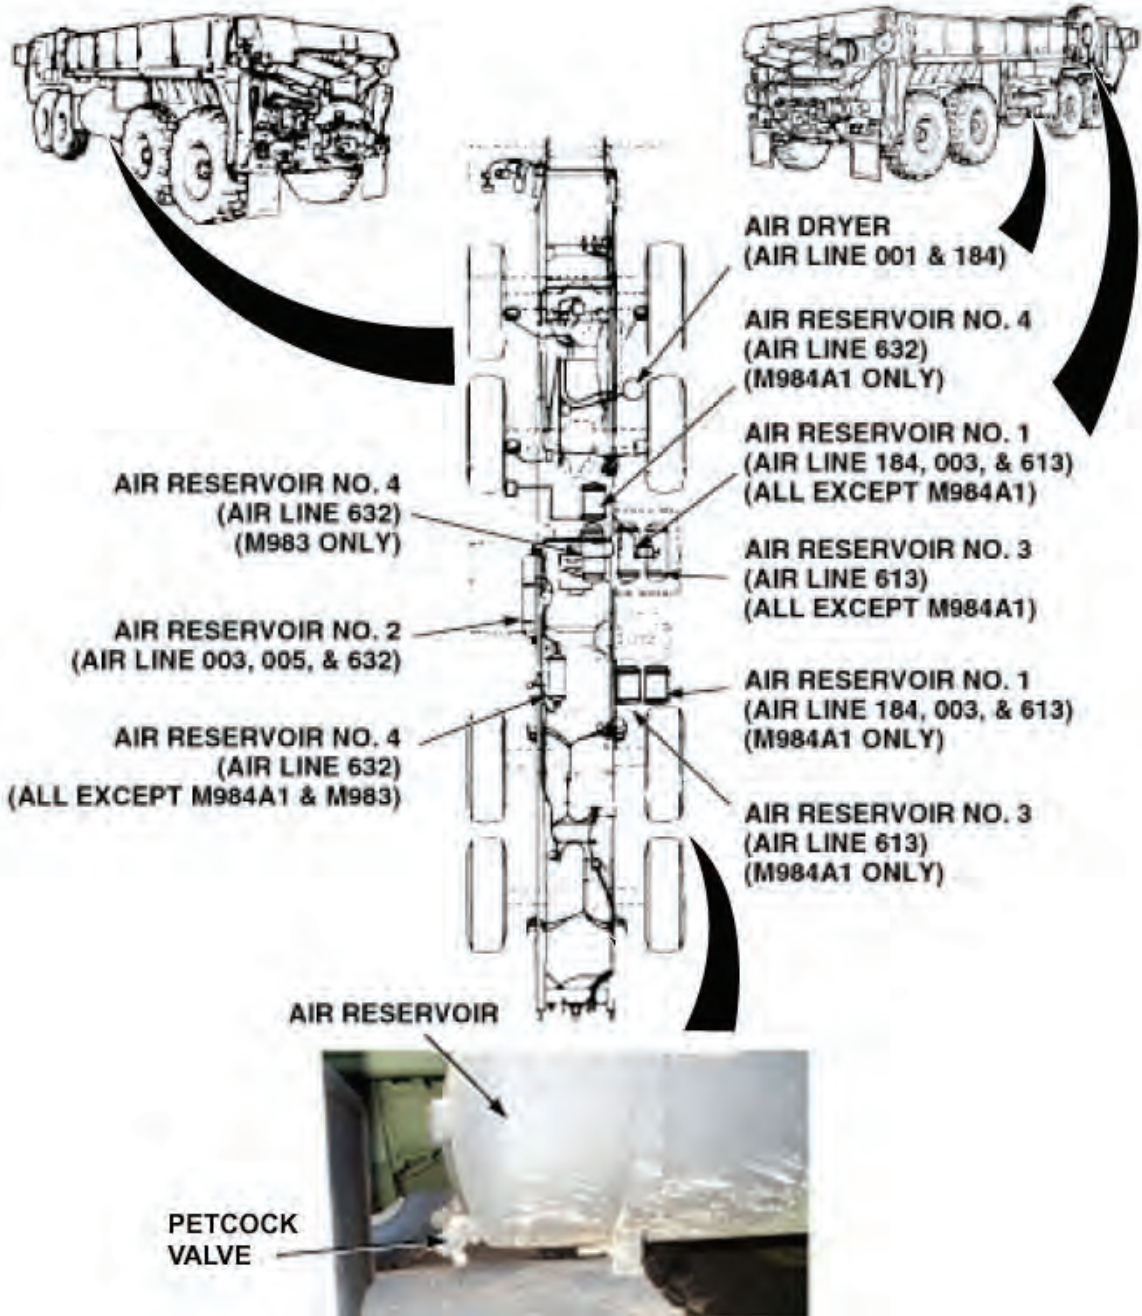


Figure 4.

CONDITION/INDICATION

Does air reservoir, hoses, lines, fittings, and/or connectors leak?

DECISION

Air reservoir, hoses, lines and/or connectors leak. - Notify Supervisor. Test 6 - Does buzzer stop, and air indicator light extinguish? Notify Supervisor.

Air reservoir, hoses, lines, fittings, and/or connectors OK - Test 5 - Does buzzer sound, and air indicator light illuminate when trailer is disconnected?

TEST 5 - Does buzzer sound, and air indicator light illuminate when trailer is disconnected?

1. If trailer is coupled, disconnect trailer from vehicle.

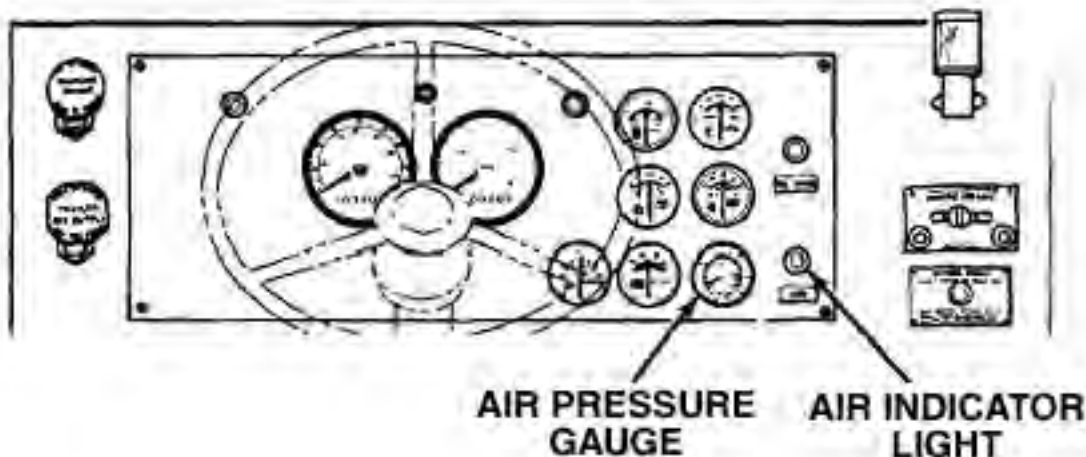


Figure 5.

2. Start engine, (WP 0038) and allow air pressure to build.
3. Check if buzzer continues to sound, and if air indicator light is illuminated.
4. Turn engine off. (WP 0051)

CONDITION/INDICATION

Does buzzer sound, and air indicator light illuminate when trailer is disconnected?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

TEST 6 - Does buzzer stop, and air indicator light extinguish?

1. Start engine, (WP 0038) and allow air pressure to build.

2. Check that buzzer does not sound, and air indicator light is off.

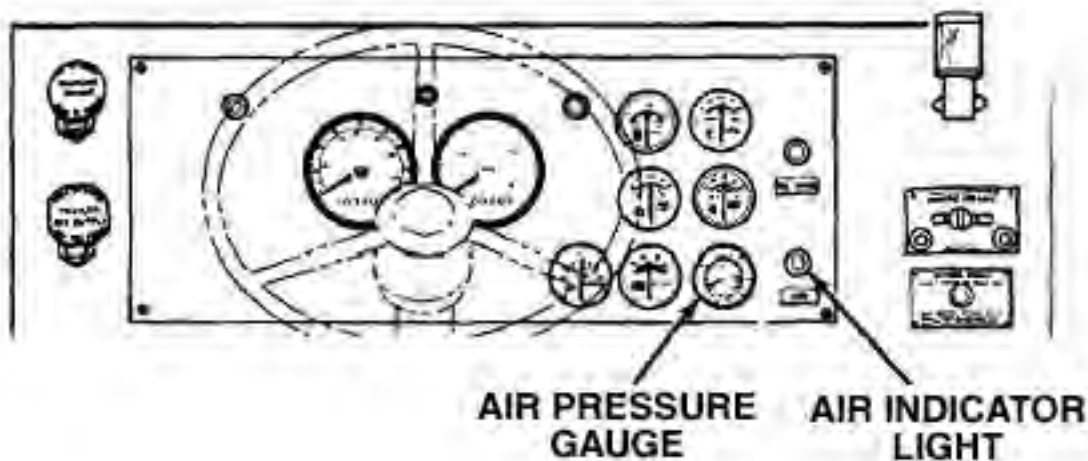


Figure 6.

3. Turn engine off. (WP 0051)

CONDITION/INDICATION

Does buzzer stop, and air indicator light extinguish?

DECISION

No - Notify Supervisor.
Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
WINDSHIELD WASHER WILL NOT OPERATE**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

**TROUBLESHOOTING PROCEDURE
WINDSHIELD WASHER WILL NOT OPERATE**

TEST 1 - Is washer fluid reservoir free from damage or cracks?

1. Check washer fluid reservoir for cracks and/or damage.



WINDSHIELD
WASHER
RESERVOIR

Figure 1.

CONDITION/INDICATION

Is washer fluid reservoir free from damage or cracks?

DECISION

No - Notify Supervisor.

Yes - Test 2 - Is washer fluid present in washer fluid reservoir?

TEST 2 - Is washer fluid present in washer fluid reservoir?**CAUTION**

Do not fill windshield washer reservoir with water when temperatures are likely to be 32°F (0°C) or less. If water freezes, reservoir can crack or break.

1. Check washer fluid level in reservoir. if low, fill windshield washer reservoir.



WINDSHIELD
WASHER
RESERVOIR

Figure 2.

CONDITION/INDICATION

Is washer fluid present in washer fluid reservoir?

DECISION

No - Test 6 - Does the windshield washer operate?

Yes - Test 3 - Are all hoses securely attached to reservoir?

TEST 3 - Are all hoses securely attached to reservoir?

1. Check that all hoses are securely attached to reservoir. If loose hoses are found, attach to reservoir.

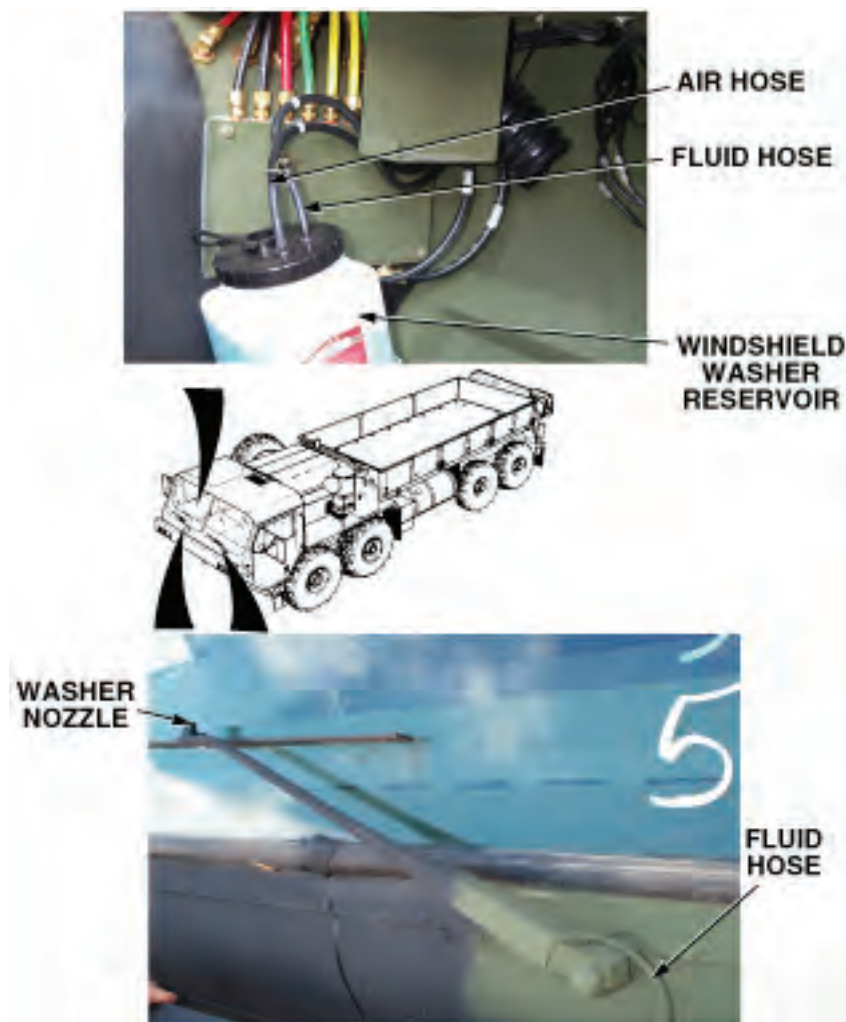


Figure 3.

CONDITION/INDICATION

Are all hoses securely attached to reservoir?

DECISION

No - Test 6 - Does the windshield washer operate?

Yes - Test 4 - Are hoses free of cracks or damage?

TEST 4 - Are hoses free of cracks or damage?

1. Check if hoses are cracked or damaged.

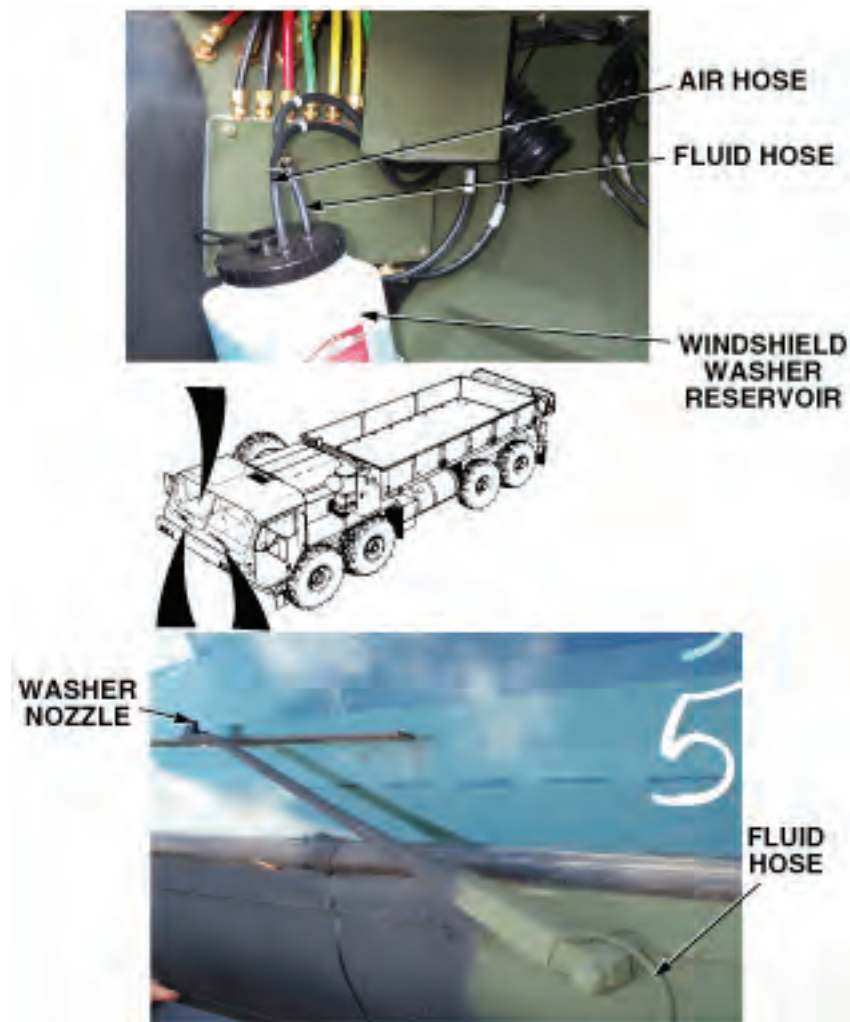


Figure 4.

CONDITION/INDICATION

Are hoses free of cracks or damage?

DECISION

No - Notify Supervisor.

Yes - Test 5 - Are washer spray openings free of debris?

TEST 5 - Are washer spray openings free of debris?

1. Check washer spray openings on wipers for clogs.

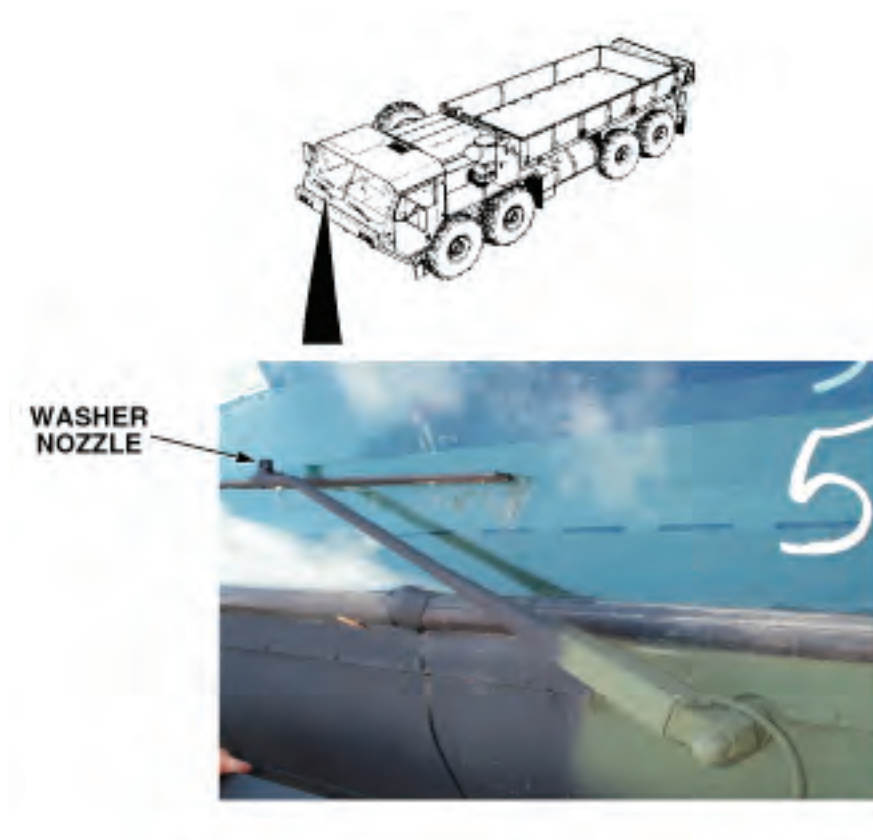


Figure 5.

2. If openings are clogged, clear washer spray opening using pin, wire, or similar item.

CONDITION/INDICATION

Are washer spray openings free of debris?

DECISION

No - Test 6 - Does the windshield washer operate?
Yes - Notify Supervisor.

TEST 6 - Does the windshield washer operate?

1. Start engine, (WP 0038) and allow air pressure to build.
2. Check windshield washer for proper operation.

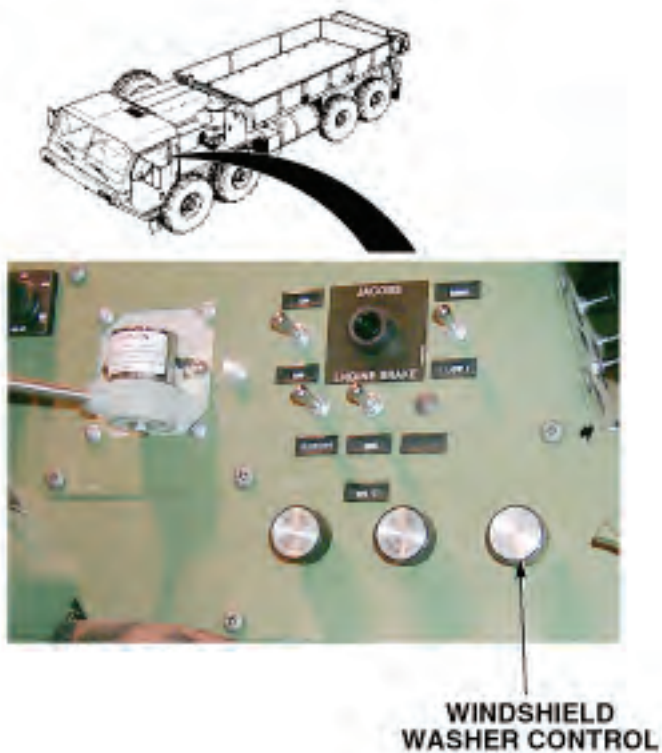


Figure 6.

CONDITION/INDICATION

Does the windshield washer operate?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
AIR SYSTEM LOSES PRESSURE DURING OPERATION**

INITIAL SETUP:**Equipment Condition**

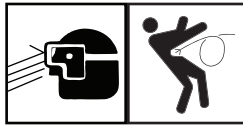
Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

**TROUBLESHOOTING PROCEDURE
AIR SYSTEM LOSES PRESSURE DURING OPERATION**

TEST 1 - Are any petcock valves open?**WARNING**

Vehicles air system is pressurized, be sure to wear proper eye protection and keep face away from drain valves while draining air reservoirs. Open air drain valves slowly to prevent sudden blast of air. Failure to comply may result in injury to personnel.

1. Check to make sure all four air reservoir petcock valves are closed.



Figure 1.

CONDITION/INDICATION

Are any petcock valves open?

DECISION

Petcock(s) open - Test 5 - Does air system lose pressure during operation?
Petcocks closed - Test 2 - Is trailer air supply control in correct position?

TEST 2 - Is trailer air supply control in correct position?

1. Check if trailer air supply control is pulled out (OFF position) if no trailer is coupled, and pushed in (ON position) if trailer is coupled.

- If trailer air control is found in an incorrect position, set to correct position.

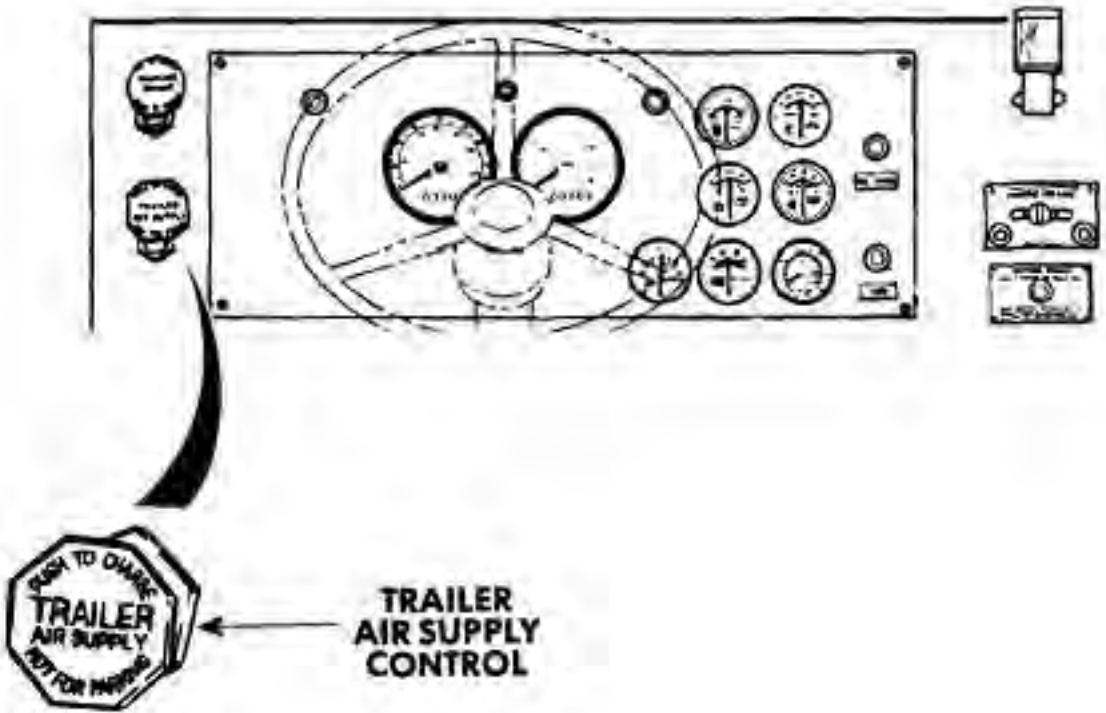


Figure 2.

CONDITION/INDICATION

Is trailer air supply control in correct position?

DECISION

No - Test 5 - Does air system lose pressure during operation?

Yes - Test 3 - Does air pressure reach 120 psi (827 kPa) with engine accelerated?

TEST 3 - Does air pressure reach 120 psi (827 kPa) with engine accelerated?

- Start engine. (WP 0038)
- Accelerate engine and check if air pressure reaches 120 psi (827 kPa).

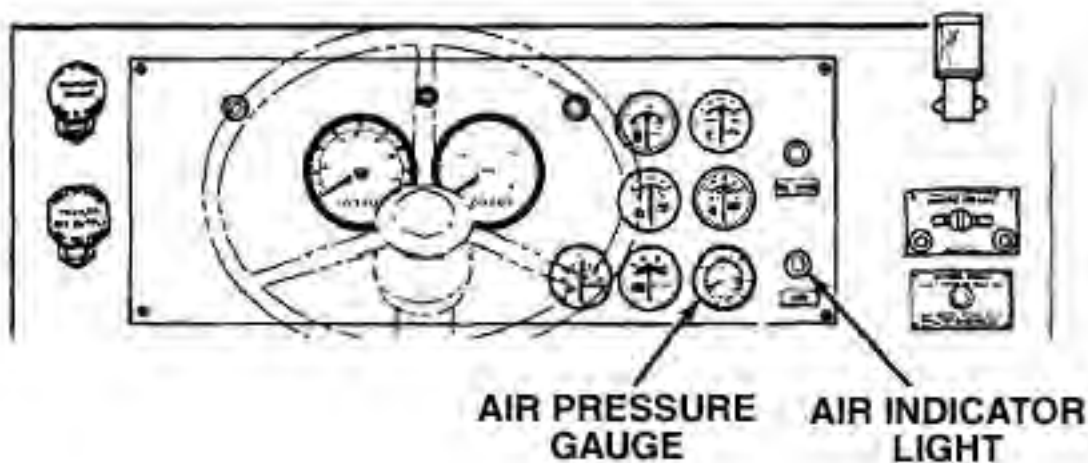


Figure 3.

CONDITION/INDICATION

Does air pressure reach 120 psi (827 kPa) with engine accelerated?

DECISION

No - Notify Supervisor.

Yes - Test 4 - Are air leaks present?

TEST 4 - Are air leaks present?

1. Turn engine off. (WP 0051)
2. Press service brake treadle completely down, and have crew member check for air leaks.

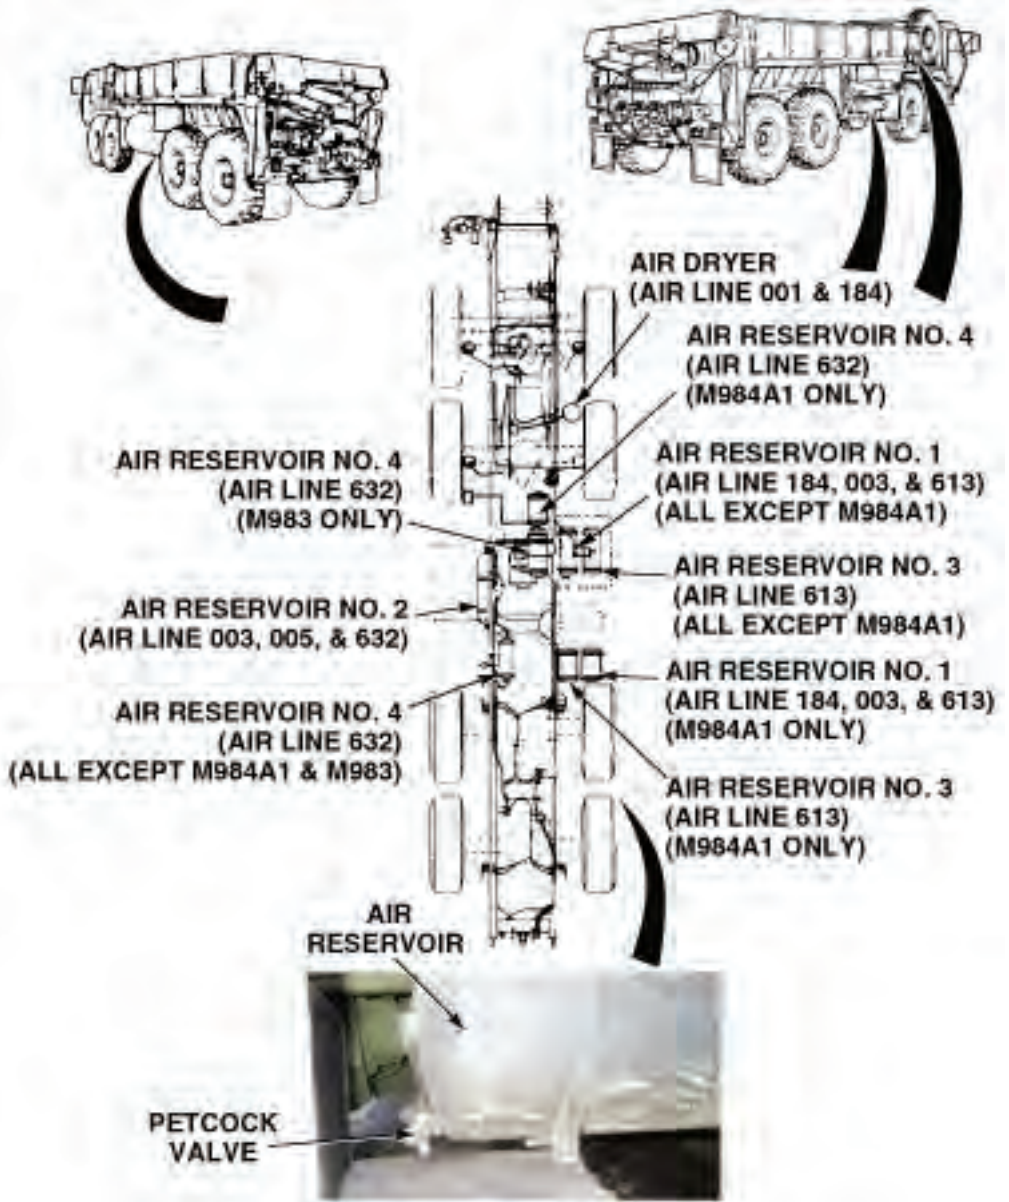


Figure 4.

3. If leaky fitting(s) found, tighten fittings.

CONDITION/INDICATION

Are air leaks present?

DECISION

Air leaks found - Notify Supervisor.

No air leaks found - Test 5 - Does air system lose pressure during operation?

TEST 5 - Does air system lose pressure during operation?

1. Start engine. (WP 0038)
2. Test drive vehicle.
3. Observe and note air pressure.

CONDITION/INDICATION

Does air system lose pressure during operation?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
TRAILER BRAKE DOES NOT APPLY WHEN SERVICE BRAKE TREADLE OR
PARKING BRAKE IS USED**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE

**TRAILER BRAKE DOES NOT APPLY WHEN SERVICE BRAKE TREADLE OR
PARKING BRAKE IS USED**

TEST 1 - Are intervehicular air hoses securely and correctly connected?

1. Check that intervehicular air hoses are secure and correctly connected. If not, reconnect correctly.

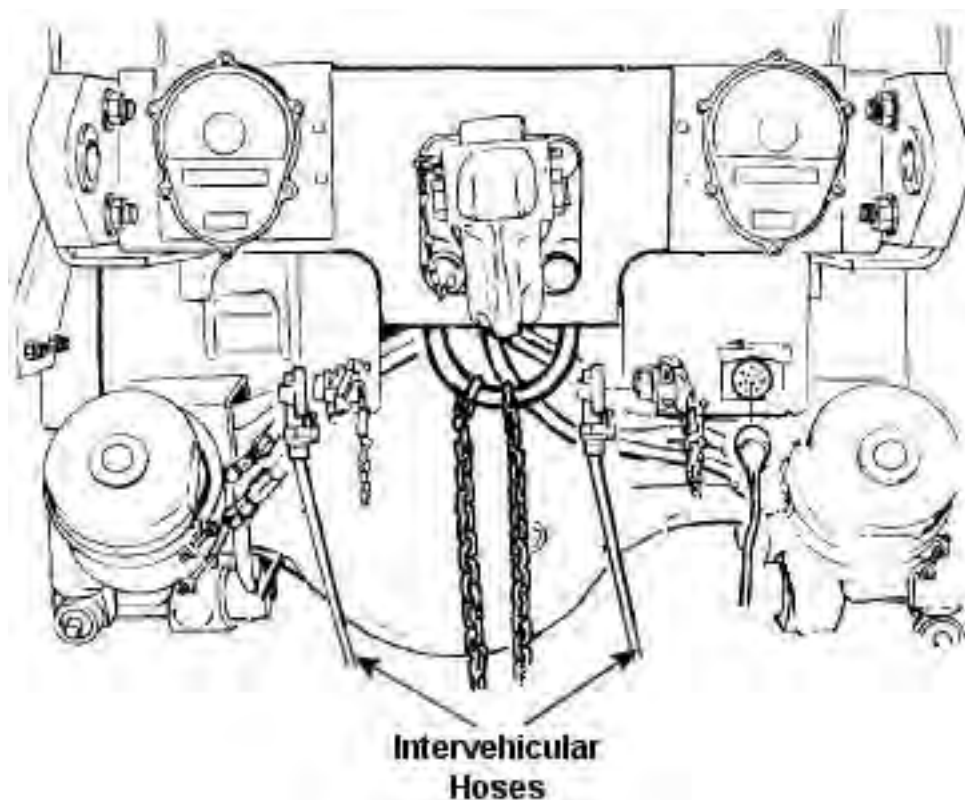


Figure 1.

CONDITION/INDICATION

Are intervehicular air hoses securely and correctly connected?

DECISION

No - Test 3 - Do trailer brakes apply when service brake treadle or parking brake is used?

Yes - Test 2 - Is trailer air supply control pushed in (ON position)?

TEST 2 - Is trailer air supply control pushed in (ON position)?

1. Check if trailer air supply control is pushed in (ON position).

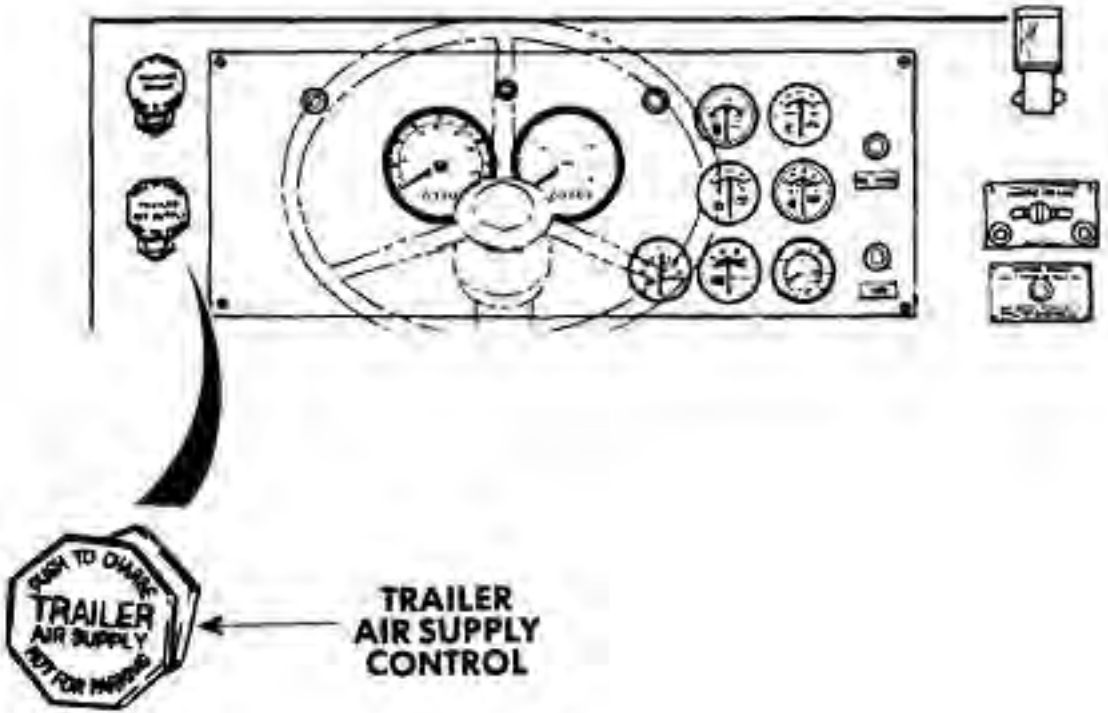


Figure 2.

2. If trailer air supply control is found pulled out (OFF position), push in.

CONDITION/INDICATION

Is trailer air supply control pushed in (ON position)?

DECISION

No - Test 3 - Do trailer brakes apply when service brake treadle or parking brake is used?

Yes - Notify Supervisor.

TEST 3 - Do trailer brakes apply when service brake treadle or parking brake is used?

1. Start engine. (WP 0038)
2. Test drive vehicle.
3. Note trailer brake operations.

CONDITION/INDICATION

Do trailer brakes apply when service brake treadle or parking brake is used?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
AIR HORN WILL NOT OPERATE**

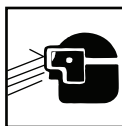
INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

**TROUBLESHOOTING PROCEDURE
AIR HORN WILL NOT OPERATE****TEST 1 - Are air hoses tight?****WARNING**

Caution the hose connections could be under pressure be sure to wear eye protection to avoid personal injury.

1. Check air hose connections for tightness. Tighten any loose hose connections found.

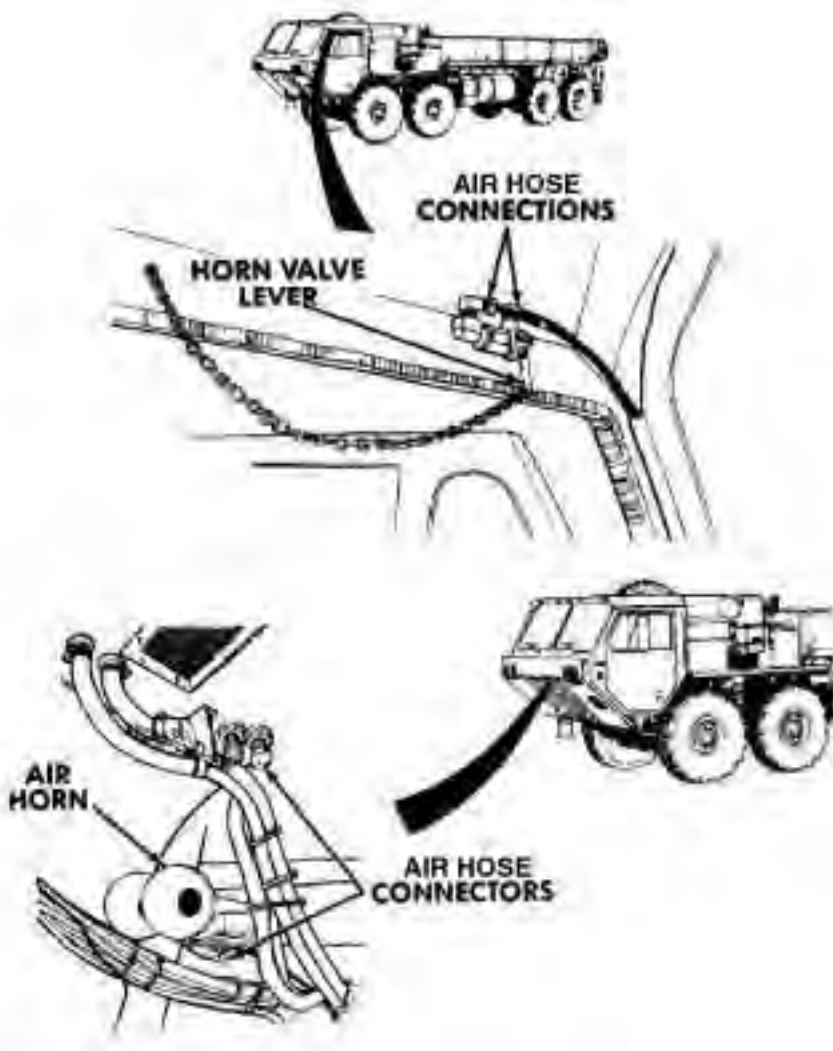


Figure 1.

CONDITION/INDICATION

Are air hoses tight?

DECISION

Connections loose - Test 3 - Does air horn operate?

Connections OK - Test 2 - Does horn valve lever move freely?

TEST 2 - Does horn valve lever move freely?

1. Check horn valve lever for freedom of movement.

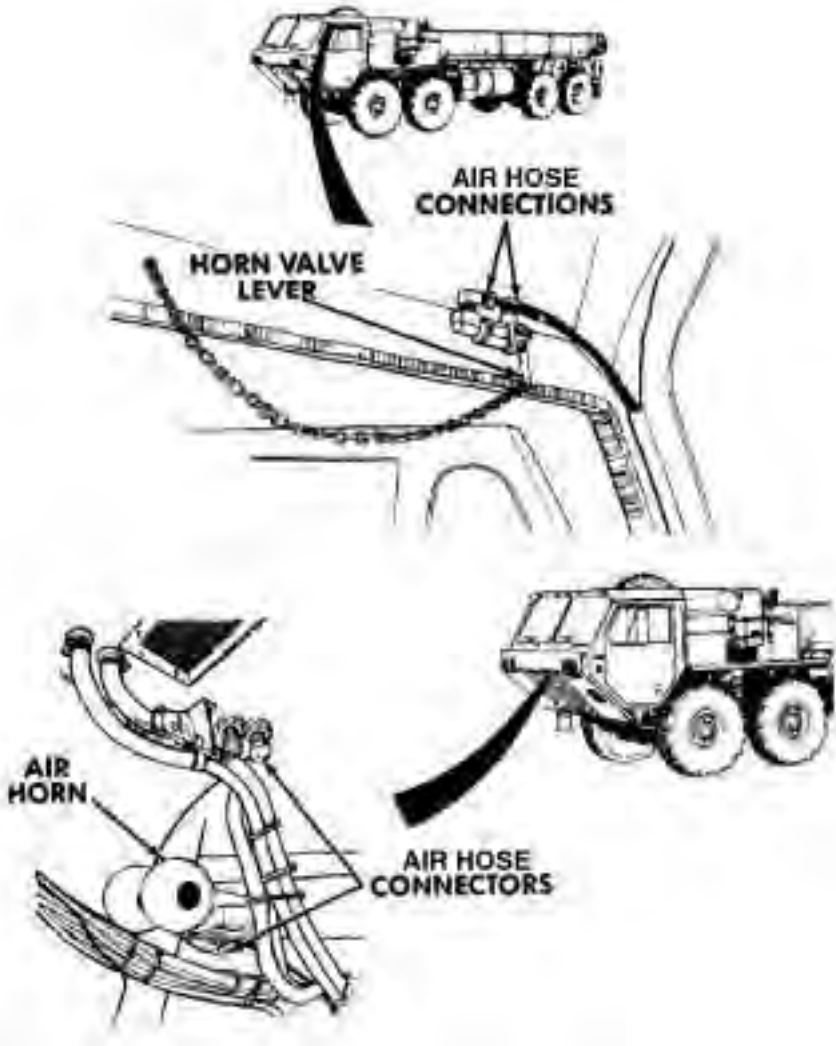


Figure 2.

CONDITION/INDICATION

Does horn valve lever move freely?

DECISION

No - Notify Supervisor.

Yes - Test 3 - Does air horn operate?

TEST 3 - Does air horn operate?

1. Start engine, (WP 0038) and allow air pressure to build.
2. Check air horn for proper operation.

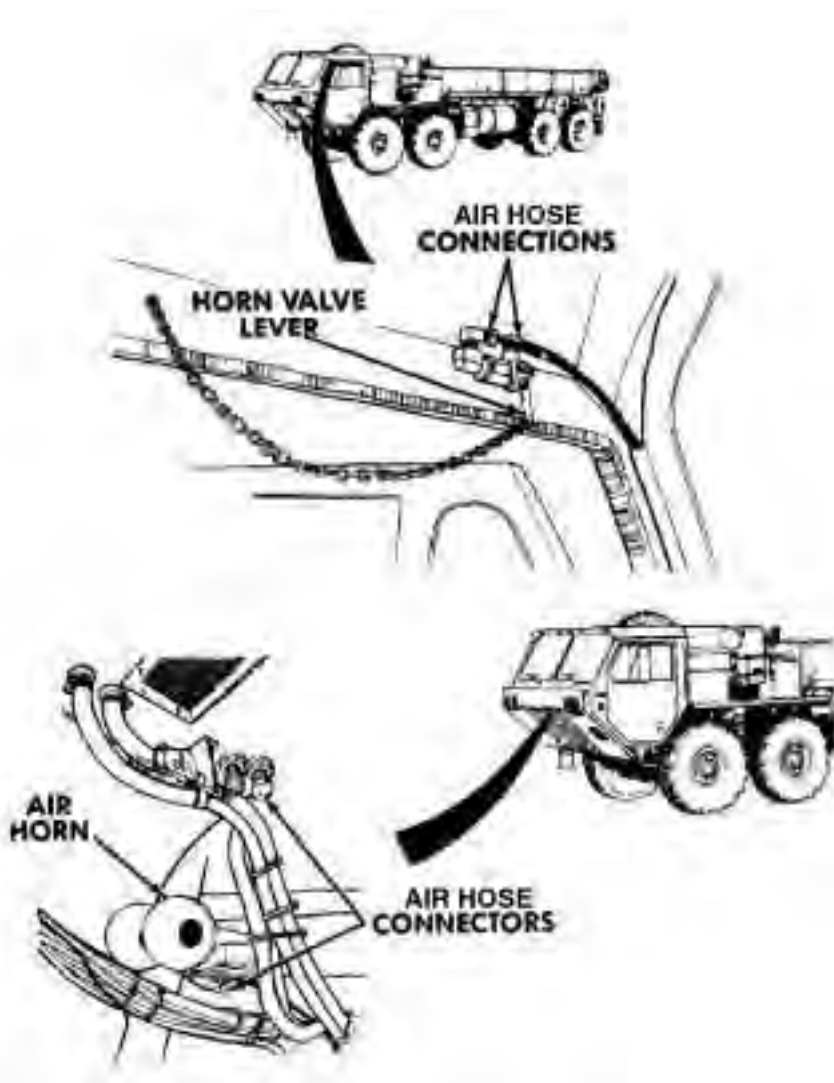


Figure 3.

3. Turn engine off. (WP 0051)

CONDITION/INDICATION

Does air horn operate?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
ARCTIC ENGINE HEATER FAILS TO OPERATE**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

**TROUBLESHOOTING PROCEDURE
ARCTIC ENGINE HEATER FAILS TO OPERATE**

TEST 1 - Is fuel present in fuel tank?

1. Turn engine start switch ON. (WP 0021)
2. Check fuel gauge for presence of fuel.



Figure 1.

3. Turn engine start switch OFF.
4. Add fuel to fuel tank if no fuel present.

CONDITION/INDICATION

Is fuel present in fuel tank?

DECISION

No - Test 3 - Does arctic heater operate?

Yes - Test 2 - Are arctic heater intake port and exhaust tube free from blockage?

TEST 2 - Are arctic heater intake port and exhaust tube free from blockage?

1. Inspect arctic heater inlet port and exhaust tube for foreign objects and obstructions. Remove any items found.

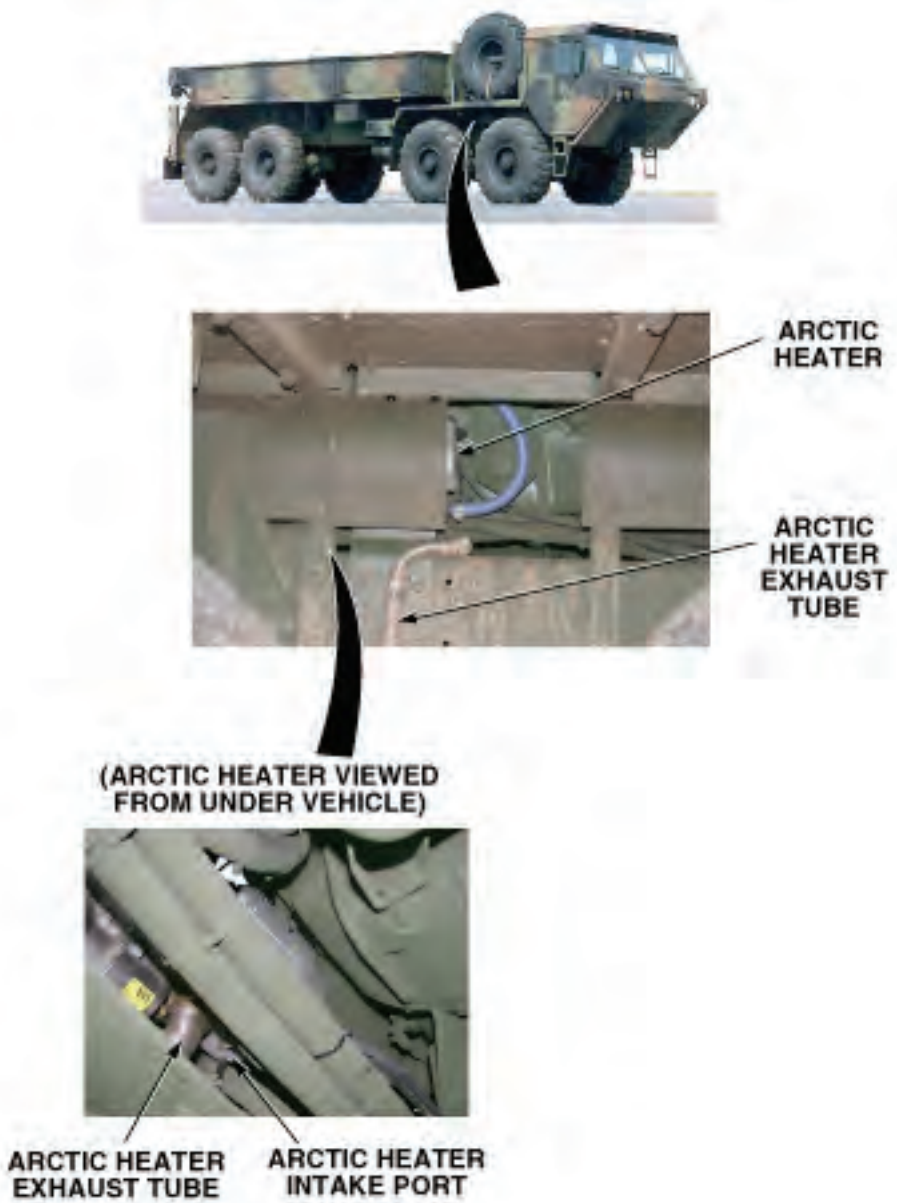


Figure 2.

CONDITION/INDICATION

Are arctic heater intake port and exhaust tube free from blockage?

DECISION

-
Continue - Test 3 - Does arctic heater operate?

TEST 3 - Does arctic heater operate?**CAUTION**

Do not attempt to operate arctic heater if arctic heater fails to start, or shutdown occurs during normal operation. System shutdown may indicate an arctic heater system fault. Failure to comply may cause system lockout.

CAUTION

Do not operate arctic heater if arctic heater indicator light flashes during normal operation. Arctic heater indicator light flashing indicates an arctic heater system fault. Failure to comply may cause system lockout.

NOTE

If arctic heater does not operate, arctic heater may be in lockout mode due to, either too many overheat occurrences (code 15), or too many start attempts (code 50). Arctic heater lockout mode (code 50) is activated if arctic heater fails to start after 20 successive start attempts (10 start cycles in succession).

NOTE

The arctic heater will attempt to start two times per start cycle. After the second failed start attempt, the arctic heater will not operate until the arctic heater on/off switch is turned off, then back on.

NOTE

Audible clicking from the arctic heater fuel metering pump may indicate that the arctic heater fuel system isn't primed. If audible clicking is heard from the arctic heater fuel metering pump, repeat steps (1) through (4) four times, or until arctic heater starts. Do not attempt to start arctic heater more than five times. The arctic heater should prime itself within nine start attempts.

1. Turn arctic heater ON. (WP 0071)
2. Observe arctic heater indicator light for steady illumination.
3. Observe arctic heater for proper operation.



Figure 3.

4. Turn arctic heater on/off switch OFF.

CONDITION/INDICATION

Does arctic heater operate?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
ONE OR MORE LIGHTING CIRCUITS NOT OPERATING**

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE

ONE OR MORE LIGHTING CIRCUITS NOT OPERATING

TEST 1 - Is the lighting system control in the ON or OPERATING position?

1. Check if lighting system control is ON or in OPERATING position.

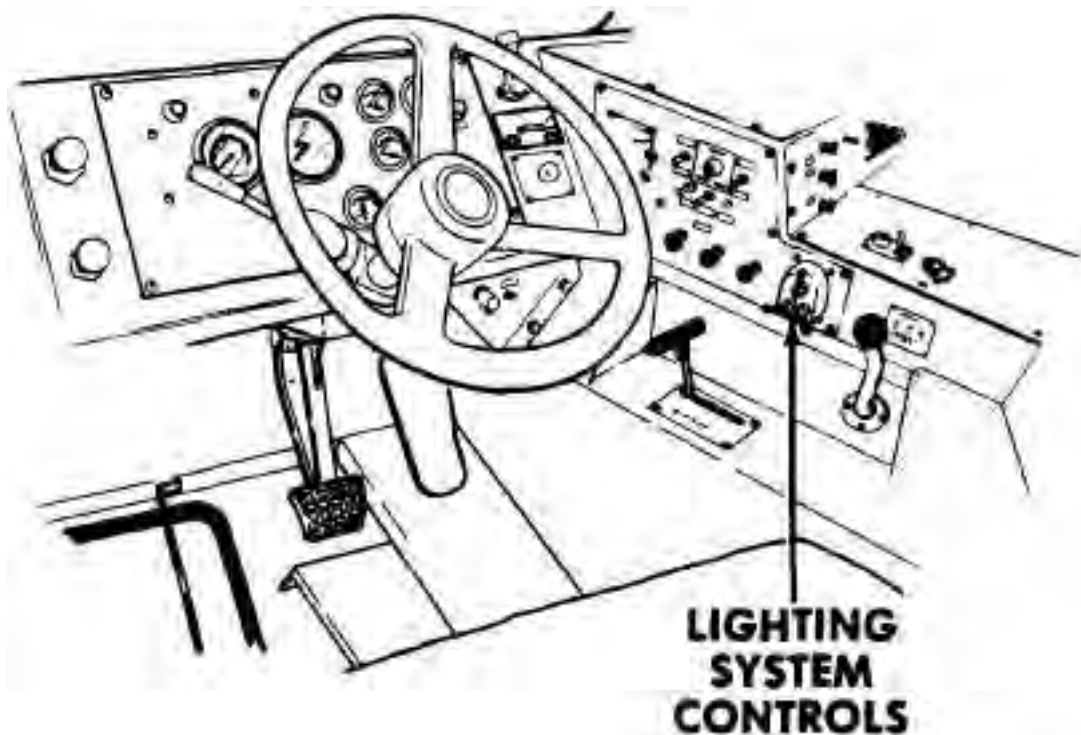


Figure 1.

CONDITION/INDICATION

Is the lighting system control in the ON or OPERATING position?

DECISION

No - Test 3 - Do all lighting circuits operate properly?

Yes - Test 2 - Is intervehicular connection secure and/or connected correctly?

TEST 2 - Is intervehicular connection secure and/or connected correctly?

1. If trailer is attached, and trailer lighting system is not working, check intervehicular connection.
2. If trailer lights are the problem, make sure cable is securely connected.

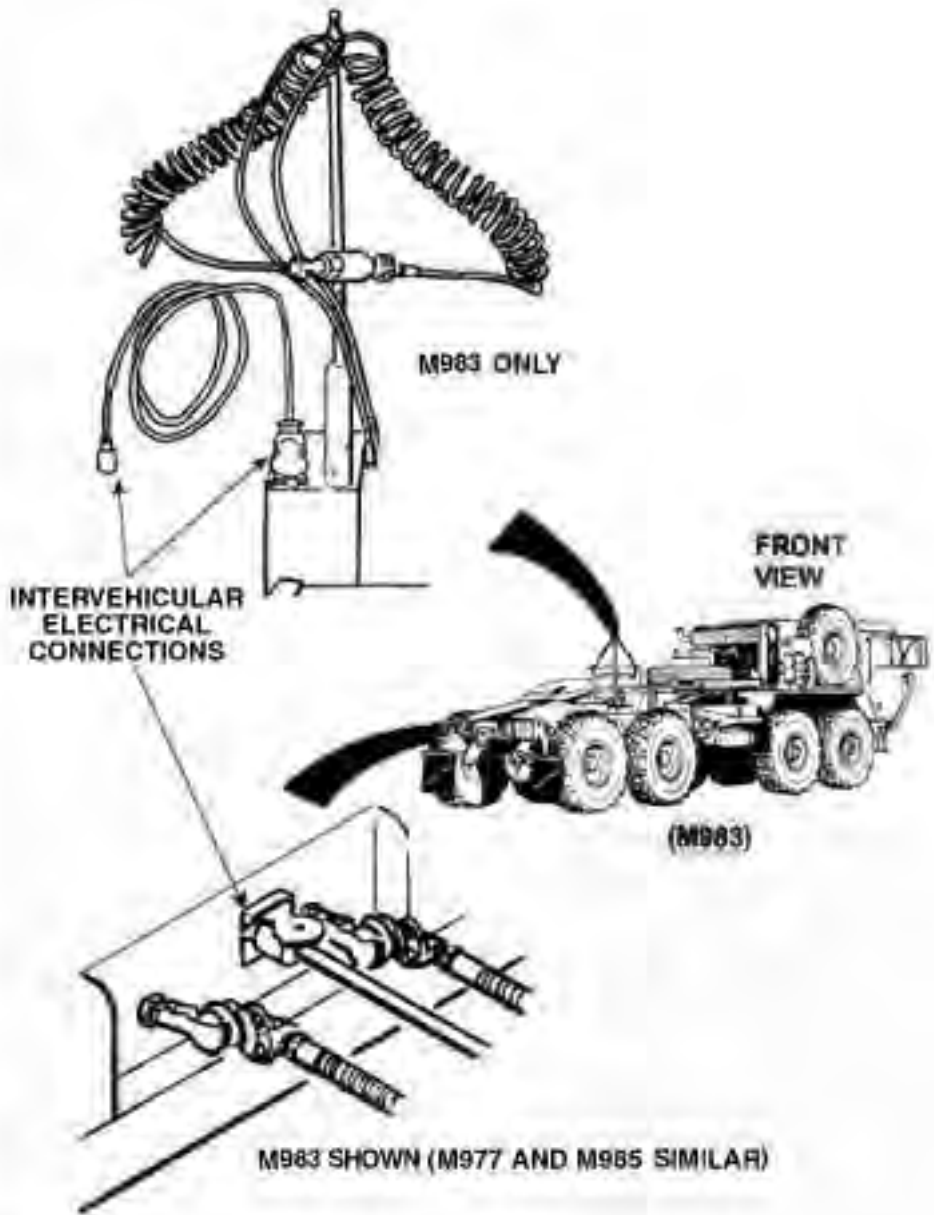


Figure 2.

CONDITION/INDICATION

Is intervehicular connection secure and/or connected correctly?

DECISION

Intervehicular cable loose. - Test 3 - Do all lighting circuits operate properly? Notify Supervisor.

Intervehicular connection OK. - Notify Supervisor.

TEST 3 - Do all lighting circuits operate properly?

1. Check for proper operation of dome lights. (WP 0079)
2. Check for proper operation of panel lights. (WP 0080)
3. Check for proper operation of service drive lights. (WP 0082)
4. Check for proper operation of parking lights. (WP 0081)
5. Check for proper operation of clearance lights. (WP 0084)
6. Check for proper operation of stoplight. (WP 0083)
7. Check for proper operation of blackout drive lights. (WP 0085)
8. Check for proper operation of blackout marker lights. (WP 0086)
9. Check for proper operation of turn signal lights. (WP 0088)

CONDITION/INDICATION

Do all lighting circuits operate properly?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE
FAILS TO CRANK WHEN ENGINE START SWITCH IS TURNED TO START POSITION

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE

FAILS TO CRANK WHEN ENGINE START SWITCH IS TURNED TO START POSITION

TEST 1 - Is transmission range selector in neutral (N)?

1. Verify range selector is in neutral (N) position. If not in neutral (N), shift it to neutral (N).

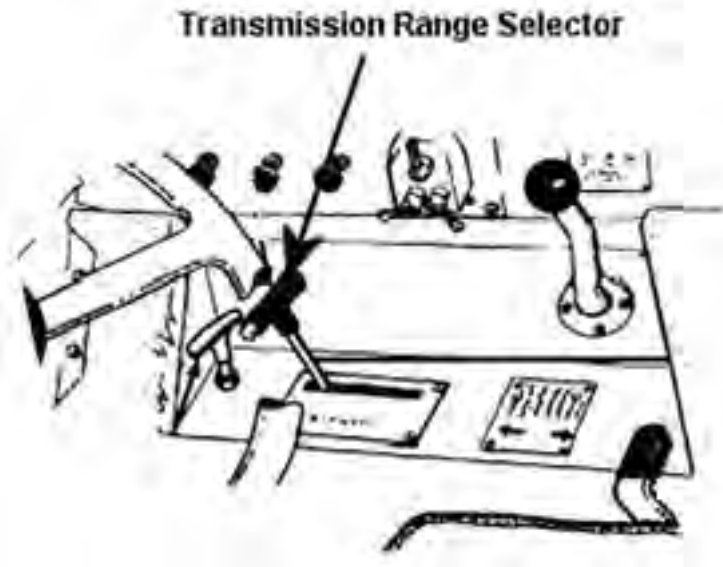


Figure 1.

CONDITION/INDICATION

Is transmission range selector in neutral (N)?

DECISION

- No - Test 3 - Does engine crank when engine start switch is turned to start position?
- Yes - Test 2 - Are battery cable connections clean, tight, and free from damage?

TEST 2 - Are battery cable connections clean, tight, and free from damage?

1. Remove battery box cover. (WP 0171)
2. Check battery cable connections for dirt, corrosion and/or looseness.

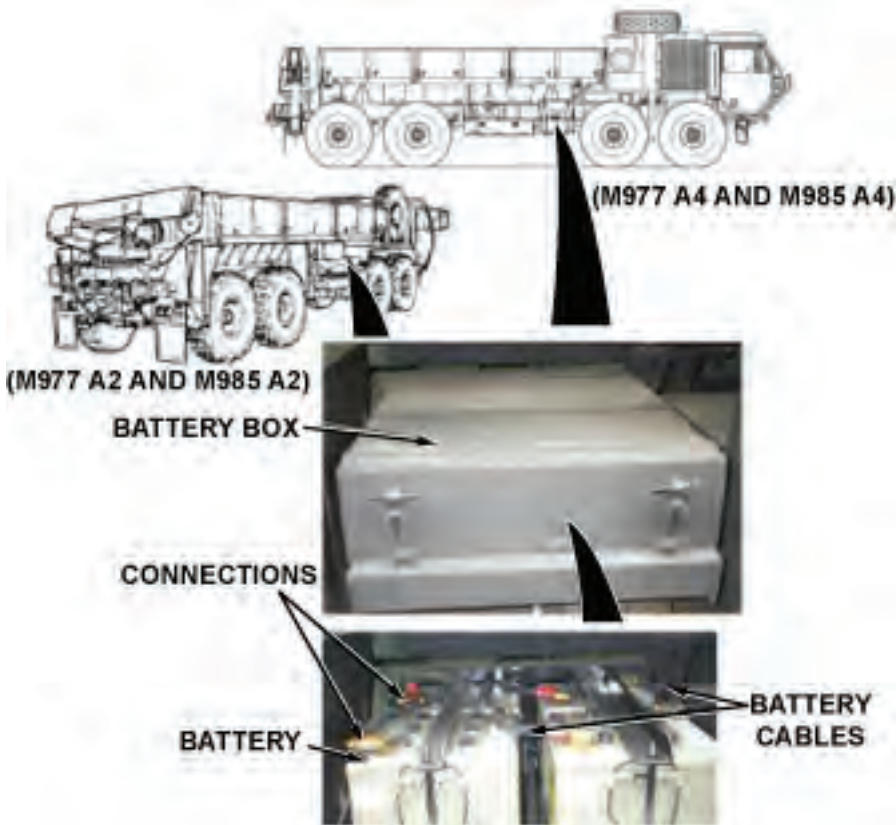


Figure 2.

3. Check battery cables for damage.

CONDITION/INDICATION

Are battery cable connections clean, tight, and free from damage?

DECISION

- No - Notify Supervisor.
- Yes - Test 3 - Does engine crank when engine start switch is turned to start position?

TEST 3 - Does engine crank when engine start switch is turned to start position?

1. Install battery box cover. (WP 0171)
2. Attempt to start engine. (WP 0038)

CONDITION/INDICATION

Does engine crank when engine start switch is turned to start position?

DECISION

No - Notify Supervisor.
Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
CRANKS BUT FAILS TO START**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

**TROUBLESHOOTING PROCEDURE
CRANKS BUT FAILS TO START**

TEST 1 - Does fuel gauge indicate the presence of fuel?

1. Turn engine start switch ON. (WP 0021)
2. Check fuel gauge for indication of fuel presence.



Figure 1.

3. Turn engine start switch OFF. (WP 0021)
4. If fuel gauge indicated no fuel present, add fuel to fuel tank.

CONDITION/INDICATION

Does fuel gauge indicate the presence of fuel?

DECISION

No - Test 5 - Does engine start?

Yes - Test 2 - Is there fuel present in fuel tank?

TEST 2 - Is there fuel present in fuel tank?

1. Remove fuel tank cap and filter screen from fuel tank.

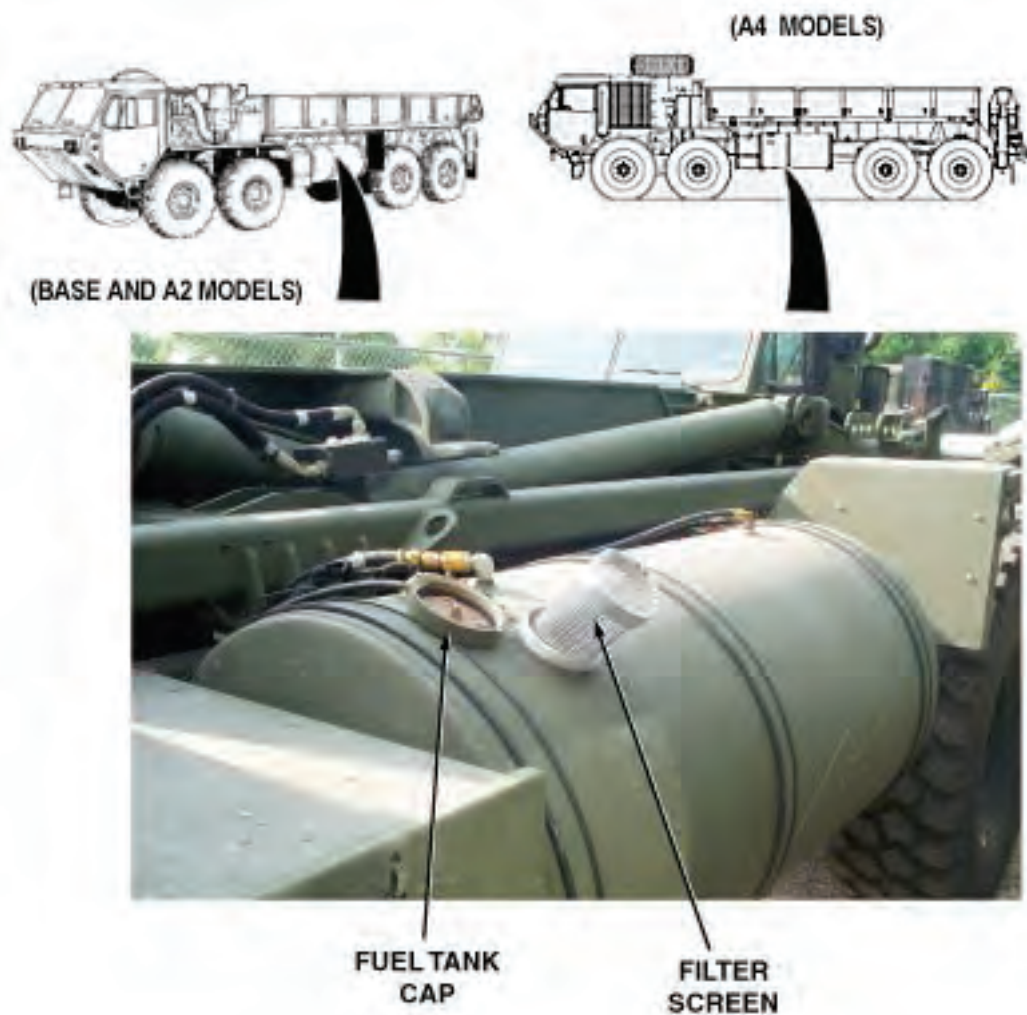


Figure 2.

2. Check fuel tank for presence of fuel.
3. Add fuel to fuel tank if no fuel was present.
4. Replace filter screen and fuel tank cap on fuel tank.

CONDITION/INDICATION

Is there fuel present in fuel tank?

DECISION

No - Test 5 - Does engine start?

Yes - Test 3 - Is air filter restricted?

TEST 3 - Is air filter restricted?

1. Attempt to start engine and note indication on air filter restriction indicator.



Figure 3.

CONDITION/INDICATION

Is air filter restricted?

DECISION

Restricted - Test 4 - Does air filter restriction indicator showed yellow and/or VACUUM INCHES H₂O window shows less than 18 after servicing air filter?

Not Restricted - Test 5 - Does engine start?

TEST 4 - Does air filter restriction indicator showed yellow and/or VACUUM INCHES H2O window shows less than 18 after servicing air filter?

1. Service air filter. (WP 0169)
2. Attempt to start engine and note indication on air filter restriction indicator.



Figure 4.

CONDITION/INDICATION

Does air filter restriction indicator showed yellow and/or VACUUM INCHES H2O window shows less than 18 after servicing air filter?

DECISION

Restricted - Notify Supervisor.

Not Restricted - Test 5 - Does engine start?

TEST 5 - Does engine start?

1. Attempt to start engine. (WP 0038)

CONDITION/INDICATION

Does engine start?

DECISION

No. - Notify Supervisor.
Yes. - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE
STARTS OR RUNS ROUGHLY AFTER PROPER WARM-UP, DOES NOT MAKE FULL
POWER, OR MAKES EXCESSIVE EXHAUST SMOKE

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE

STARTS OR RUNS ROUGHLY AFTER PROPER WARM-UP, DOES NOT MAKE FULL
POWER, OR MAKES EXCESSIVE EXHAUST SMOKE

TEST 1 - Is PTO engaged?

1. Start engine and allow engine to reach normal operating temperature. (WP 0038)
2. Check PTO ENGAGE switch and PTO ENGAGE indicator to make sure that PTO is disengaged. Light should be off.

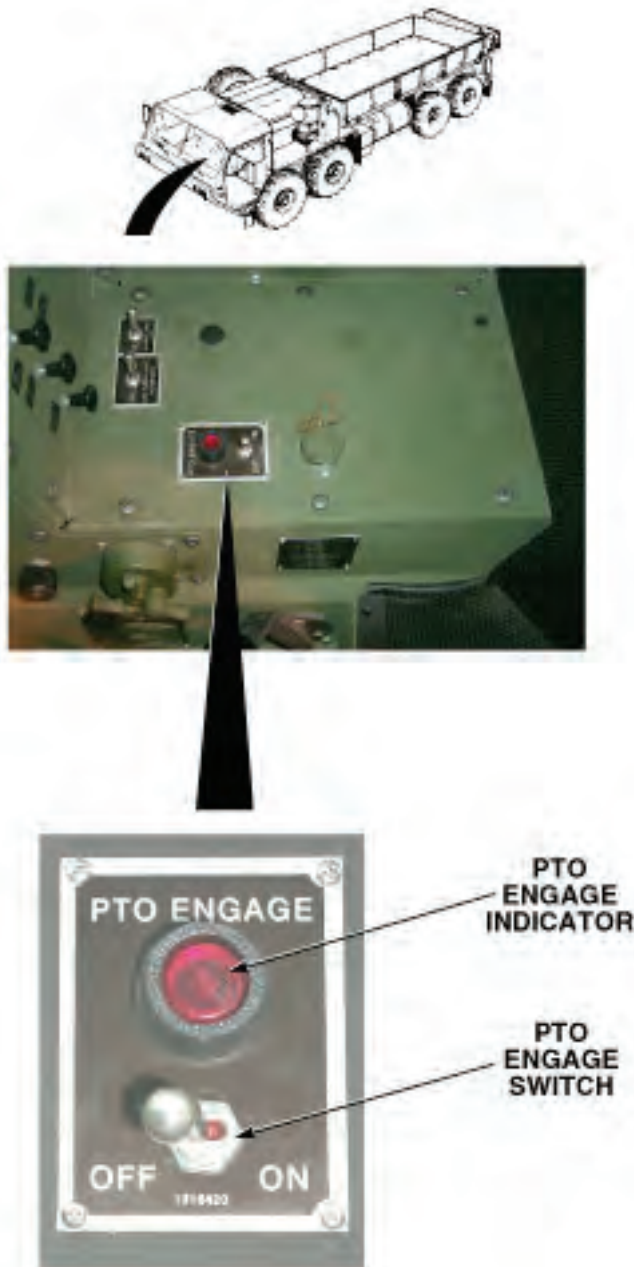


Figure 1.

CONDITION/INDICATION

Is PTO engaged?

DECISION

PTO engaged. - Test 4 - Does engine start or run roughly after proper warm-up, and/or does not make full power or makes excessive exhaust smoke?

PTO disengaged. - Test 2 - Does air filter restriction indicator show red and/or VACUUM INCHES H2O window show 18 or more after being reset?

TEST 2 - Does air filter restriction indicator show red and/or VACUUM INCHES H2O window show 18 or more after being reset?

1. Reset air filter restriction indicator.
2. Start engine. (WP 0038)
3. Check if air filter restriction indicator is red and/or VACUUM INCHES H2O window shows 18 or more.



Figure 2.

CONDITION/INDICATION

Does air filter restriction indicator show red and/or VACUUM INCHES H₂O window show 18 or more after being reset?

DECISION

Restricted. - Test 3 - Does air filter restriction indicator show red and/or VACUUM INCHES H₂O window show 18 or more after being cleaned?

Not restricted. - Test 4 - Does engine start or run roughly after proper warm-up, and/or does not make full power or makes excessive exhaust smoke?

TEST 3 - Does air filter restriction indicator show red and/or VACUUM INCHES H2O window show 18 or more after being cleaned?

1. Turn engine OFF. (WP 0051)
2. Clean air filter. (WP 0169)
3. Start engine. (WP 0038)
4. Check if air filter restriction indicator is red and/or VACUUM INCHES H2O window shows 18 or more.



Figure 3.

CONDITION/INDICATION

Does air filter restriction indicator show red and/or VACUUM INCHES H2O window show 18 or more after being cleaned?

DECISION

Restricted. - Notify Supervisor.

Not restricted. - Test 4 - Does engine start or run roughly after proper warm-up, and/or does not make full power or makes excessive exhaust smoke?

TEST 4 - Does engine start or run roughly after proper warm-up, and/or does not make full power or makes excessive exhaust smoke?

1. Test drive vehicle.

CONDITION/INDICATION

Does engine start or run roughly after proper warm-up, and/or does not make full power or makes excessive exhaust smoke?

DECISION

Runs rough. - Notify Supervisor.

Runs normal. - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE ENGINE OVERHEATS

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE ENGINE OVERHEATS

TEST 1 - Are right-side radiator hoses and housing free from leaks?

WARNING



Radiator coolant hoses are very hot and pressurized during vehicle operation. Allow radiator to cool prior to checking hoses. Failure to comply may result in injury or death to personnel.

1. Open driver and passenger side engine covers. (WP 0172)
2. Check upper and lower radiator hoses and housing for leaks.
3. Check that all clamps are tight and secure.

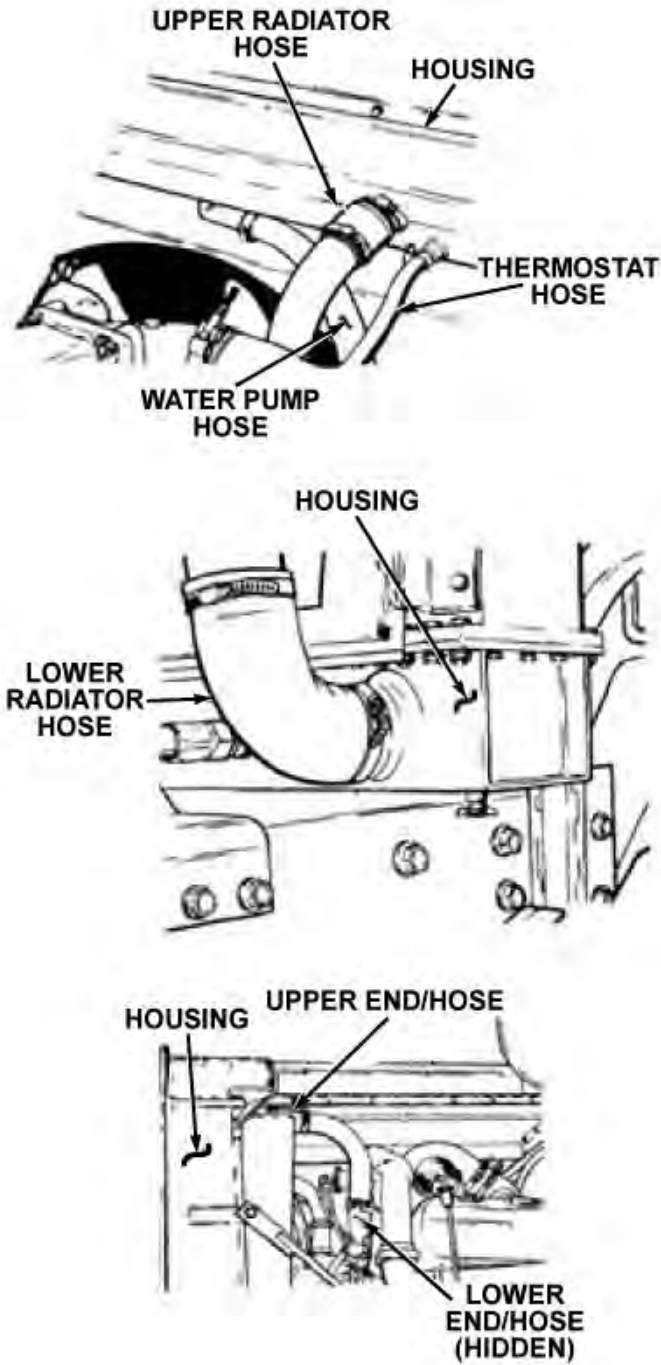


Figure 1.

CONDITION/INDICATION

Are right-side radiator hoses and housing free from leaks?

DECISION

Radiator hoses and/or housing damaged. - Notify Supervisor. Test 2 - Does engine overheat? Notify Supervisor.

Radiator hoses and/or housing free from damage and/or leaks. - Notify Supervisor.

TEST 2 - Does engine overheat?

1. Close driver and passenger side engine covers. (WP 0172)
2. Start engine. (WP 0038)

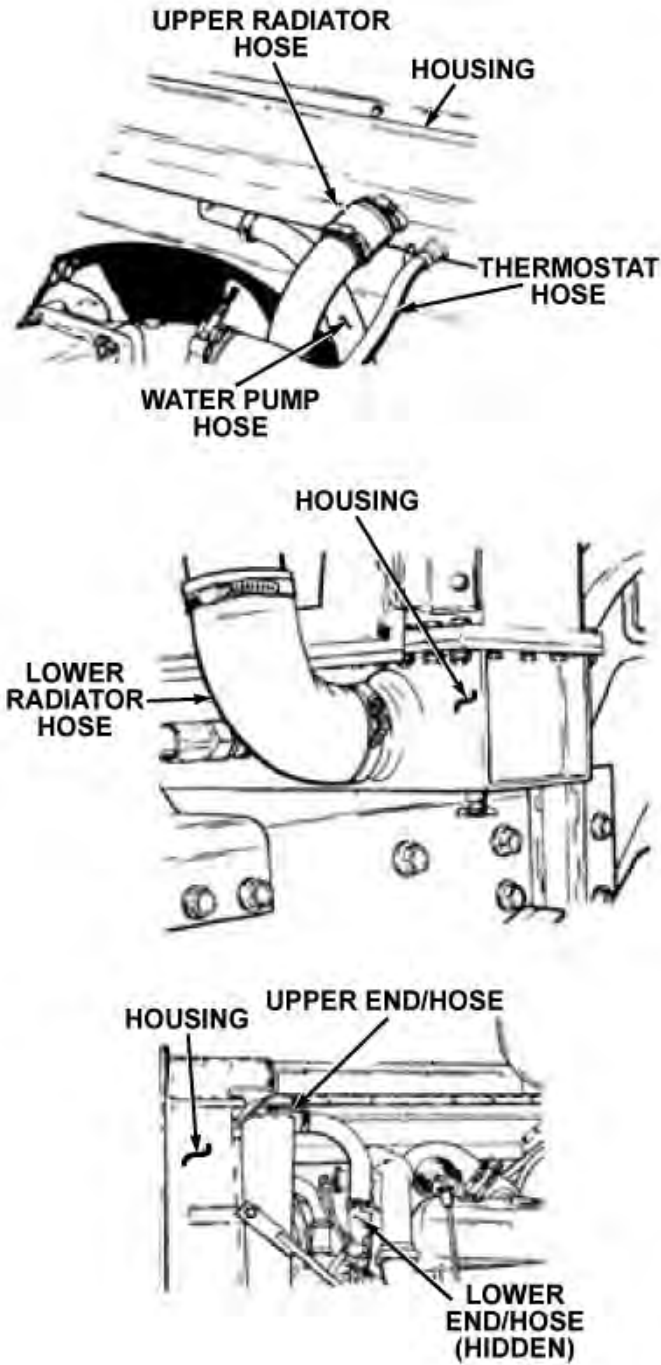


Figure 2.

3. Test drive vehicle.

CONDITION/INDICATION

Does engine overheat?

DECISION

Engine overheats - Notify Supervisor.

Engine OK - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
LOW OIL PRESSURE GAUGE INDICATION**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

**TROUBLESHOOTING PROCEDURE
LOW OIL PRESSURE GAUGE INDICATION**

TEST 1 - Is engine oil level low?

1. Check engine oil level. (WP 0159)

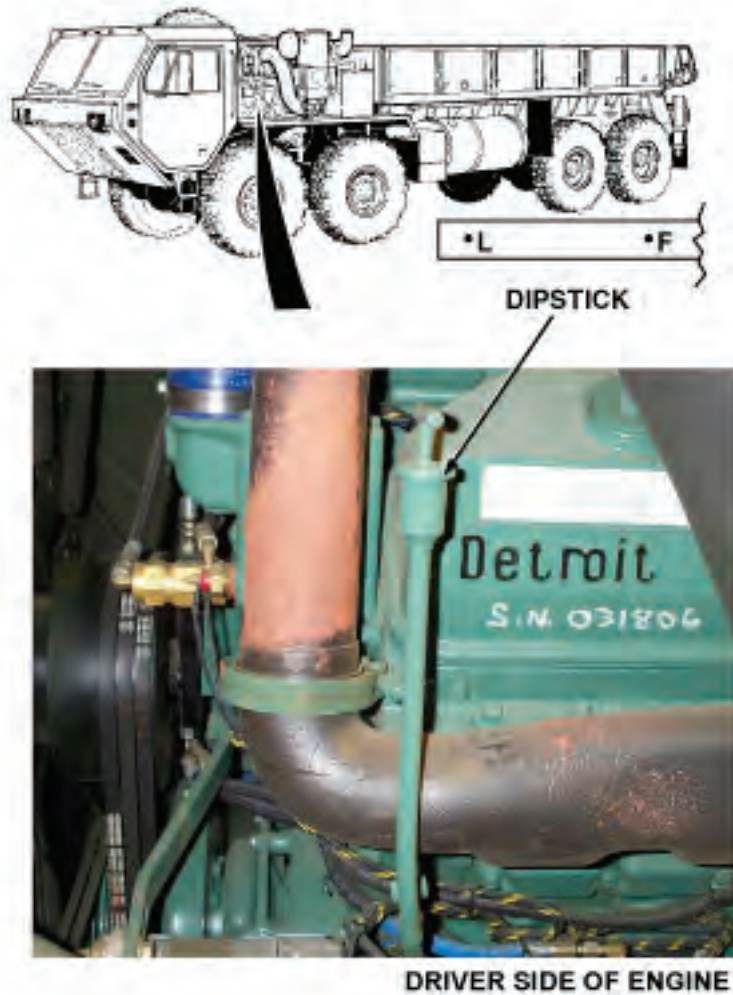


Figure 1.

2. If oil level is low, fill oil to proper level. (WP 0159)

CONDITION/INDICATION

Is engine oil level low?

DECISION

-
Continue - Test 2 - Is engine oil pressure still low?

TEST 2 - Is engine oil pressure still low?

1. Start engine and allow engine to reach operating temperature. (WP 0038)
2. Check OIL PRESS gauge. Gauge should read as follows:
 - At idle, oil pressure can go as low as 5 psi (34 kPa).
 - Normal operation range is 40 psi to 60 psi (276 to 414 kPa) between engine speeds 1800 to 2100 rpm. Minimum for safe operation is 30 psi (207 kPa).

CONDITION/INDICATION

Is engine oil pressure still low?

DECISION

Oil pressure low. - Notify Supervisor.
Oil pressure OK. - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE EXCESSIVE OIL CONSUMPTION

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

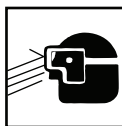
Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE EXCESSIVE OIL CONSUMPTION

TEST 1 - Are engine oil lines loose?

WARNING



Caution the oil lines could be under pressure be sure to wear the proper eye protection to avoid personal injury.

1. Open driver and passenger side engine covers. (WP 0172)

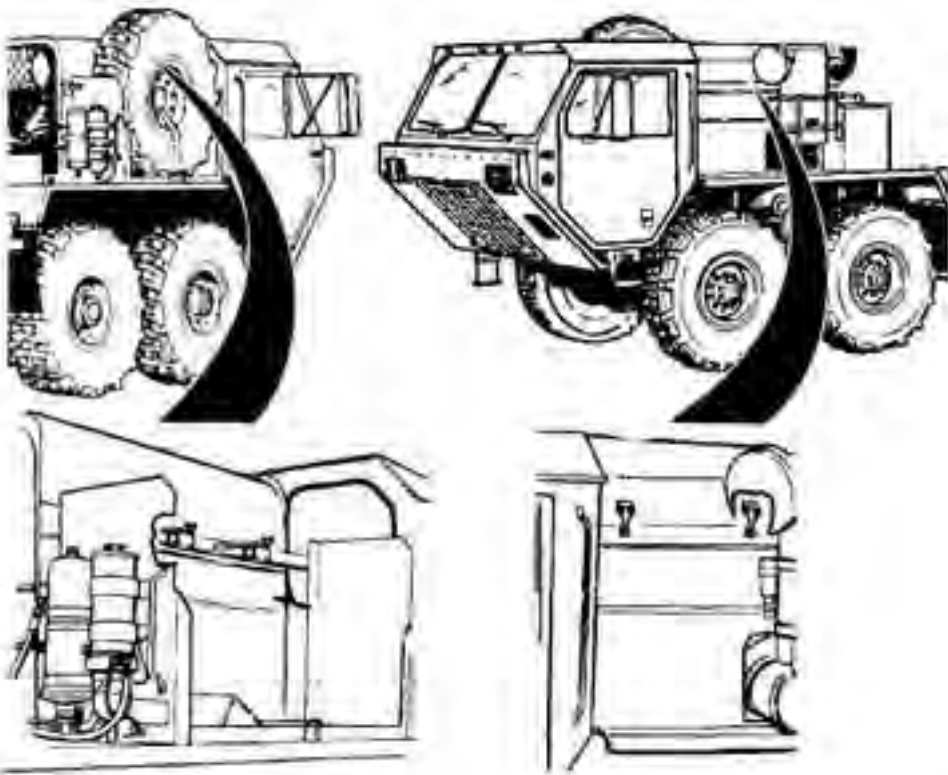


Figure 1.

2. Check for loose engine oil lines or damaged components.

CONDITION/INDICATION

Are engine oil lines loose?

DECISION

Lines Loose - Notify Supervisor.

Lines OK - Test 2 - Are any engine oil leaks present?

TEST 2 - Are any engine oil leaks present?

1. Tighten any loose fittings/components if found.
2. Visually check for engine oil leaks.

CONDITION/INDICATION

Are any engine oil leaks present?

DECISION

Leaks found. - Notify Supervisor.

No leaks found. - Notify Supervisor.

END OF WORK PACKAGE

OPERATOR MAINTENANCE
HYDRAULIC SYSTEM OPERATES TOO SLOW, TOO FAST, WITH JERKY
MOVEMENTS; OR ONE OR MORE HYDRAULICS CIRCUITS WILL NOT OPERATE

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE

HYDRAULIC SYSTEM OPERATES TOO SLOW, TOO FAST, WITH JERKY
MOVEMENTS; OR ONE OR MORE HYDRAULICS CIRCUITS WILL NOT OPERATE

TEST 1 - Is hydraulic fluid level within normal operating range?

1. Check hydraulic fluid level. If low, add hydraulic fluid. (WP 0159)

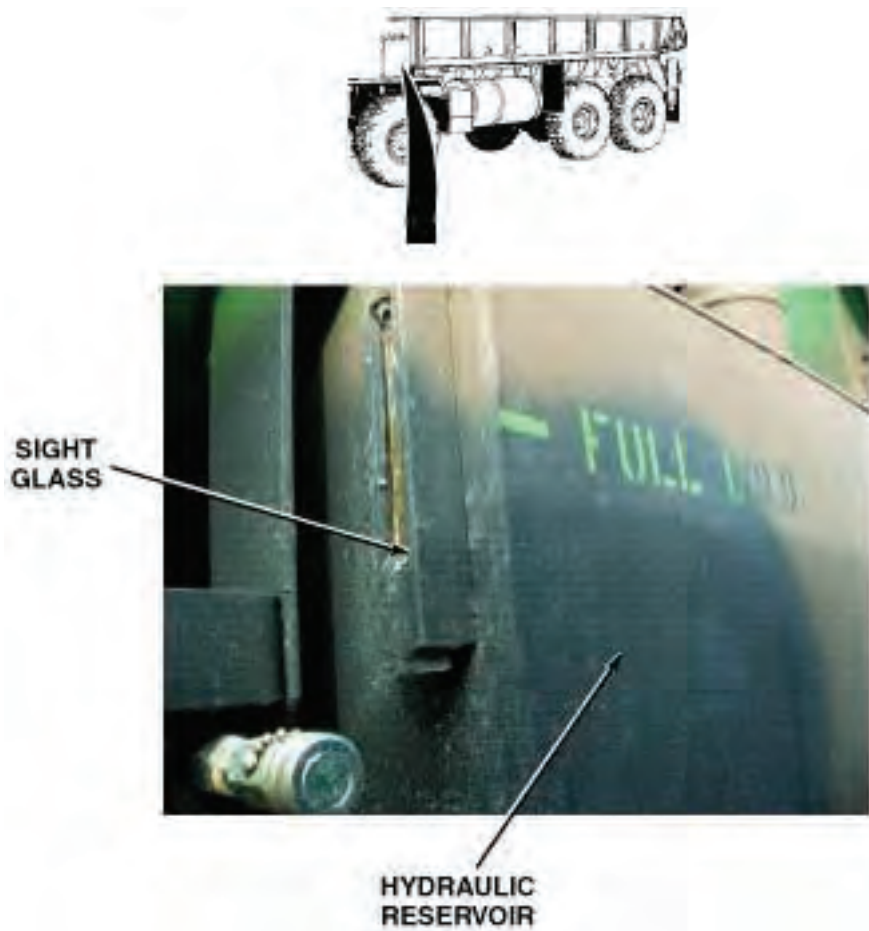


Figure 1.

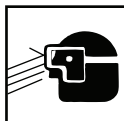
CONDITION/INDICATION

Is hydraulic fluid level within normal operating range?

DECISION

No - Test 3 - Do all hydraulic systems operate properly?

Yes - Test 2 - Are hydraulic hoses and connections free from leaks and/or damage?

TEST 2 - Are hydraulic hoses and connections free from leaks and/or damage?**WARNING**

Caution the hydraulic system maybe under pressure be sure to wear the proper eye protection to avoid personal injury.

1. Check hydraulic hoses and connections for leaks and/or damage.

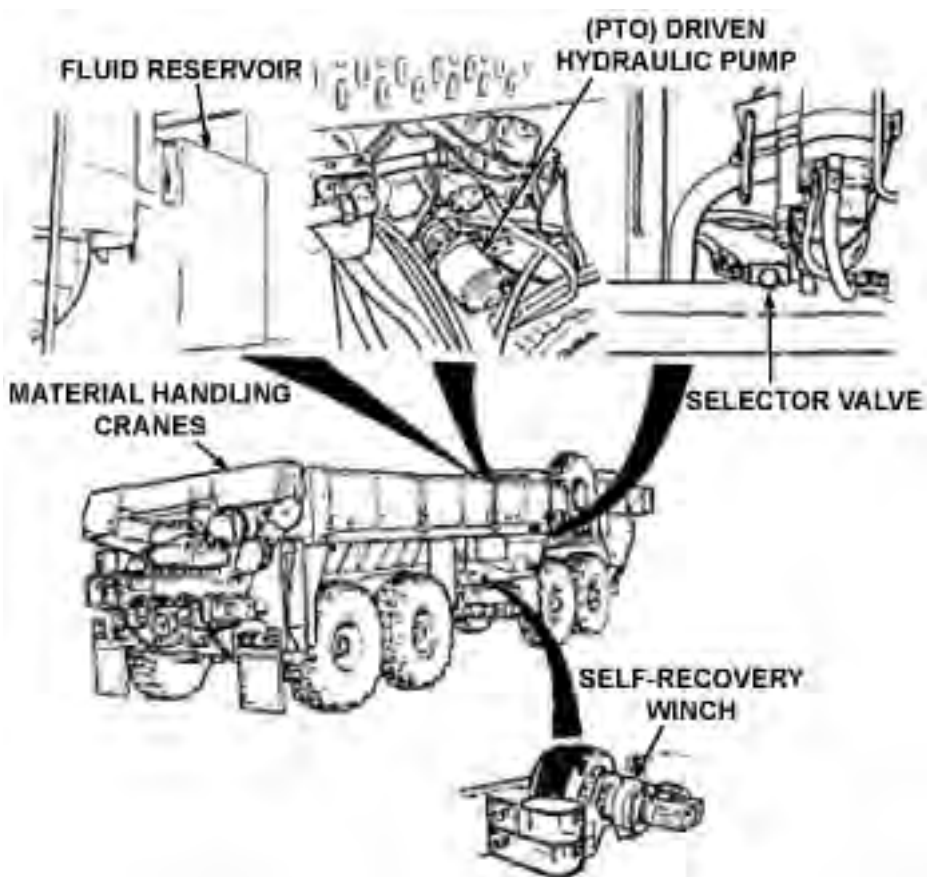


Figure 2.

2. Attempt to tighten loose hose(s) and/or connection(s).

CONDITION/INDICATION

Are hydraulic hoses and connections free from leaks and/or damage?

DECISION

Hydraulic hose or connection damaged. - Notify Supervisor. Test 3 - Do all hydraulic systems operate properly? Notify Supervisor.

Hydraulic hoses and connections OK. - Notify Supervisor.

TEST 3 - Do all hydraulic systems operate properly?

1. Start engine. (WP 0038)
2. Operate hydraulic systems to check for proper operation.

CONDITION/INDICATION

Do all hydraulic systems operate properly?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
LOAD HANDLING SYSTEM WILL NOT OPERATE**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE**LOAD HANDLING SYSTEM WILL NOT OPERATE****TEST 1 - Is PTO ENGAGE switch in ON position and indicator light on?**

1. Verify PTO ENGAGE switch is in ON position and indicator light is on. If not in ON position, place PTO ENGAGE switch to ON position.

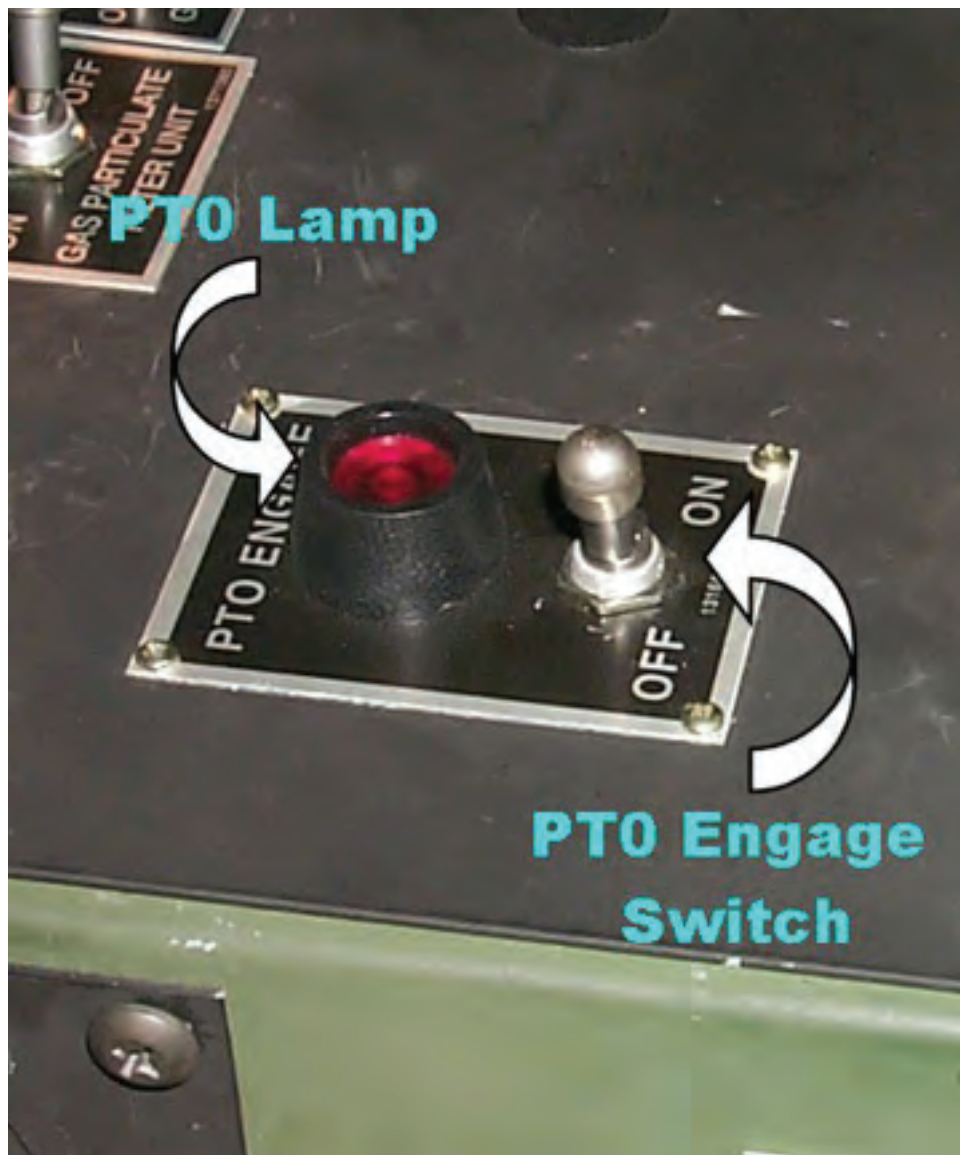


Figure 1.

CONDITION/INDICATION

Is PTO ENGAGE switch in ON position and indicator light on?

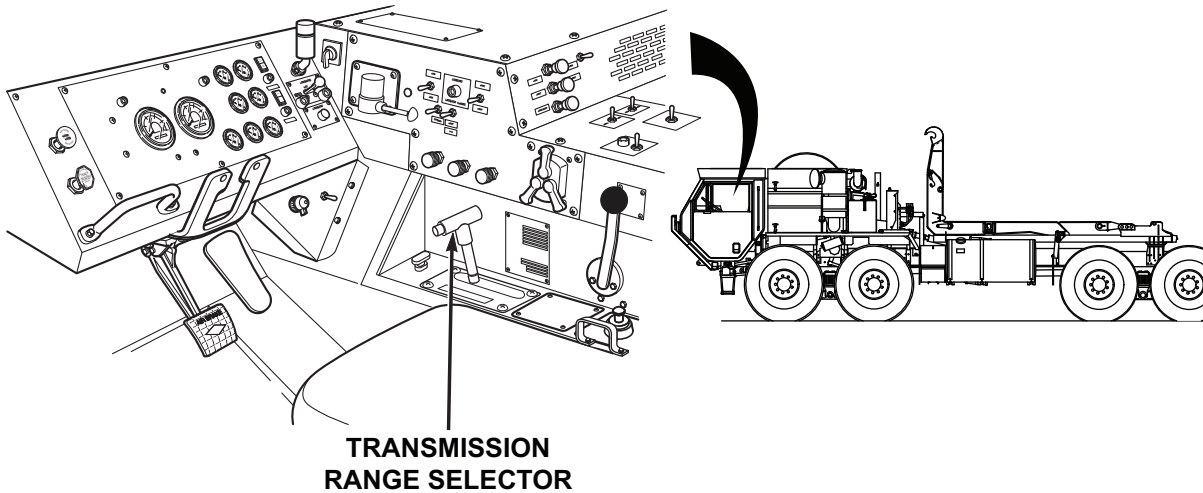
DECISION

No - Test 7 - Does Load Handling System operate?

Yes - Test 2 - Is transmission range selector in neutral (N)?

TEST 2 - Is transmission range selector in neutral (N)?

1. Verify range selector is in neutral (N). If not in neutral (N), shift into neutral (N).

*Figure 2.***CONDITION/INDICATION**

Is transmission range selector in neutral (N)?

DECISION

No - Test 7 - Does Load Handling System operate?

Yes - Test 3 - Is hydraulic selector switch in correct position?

TEST 3 - Is hydraulic selector switch in correct position?

1. Verify hydraulic selector switch is in correct position. If not, turn switch to correct appropriate position.

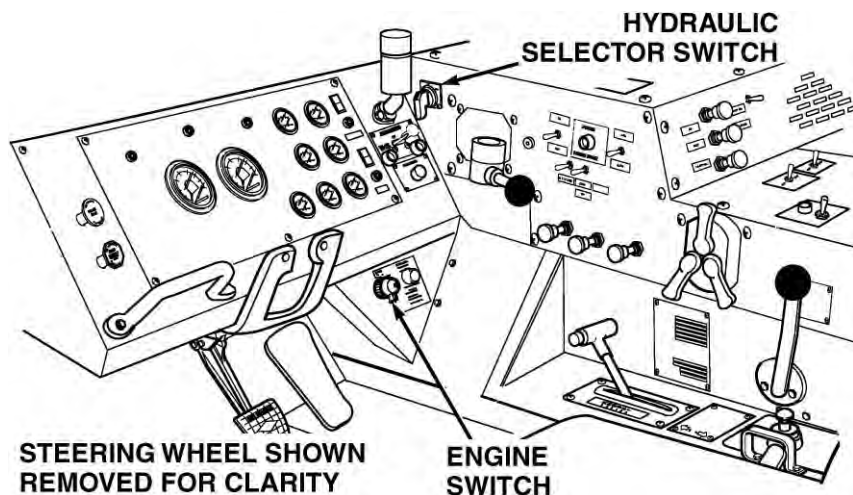


Figure 3.

CONDITION/INDICATION

Is hydraulic selector switch in correct position?

DECISION

No - Test 7 - Does Load Handling System operate?

Yes - Test 4 - Is LHS circuit breaker properly set?

TEST 4 - Is LHS circuit breaker properly set?

1. Check if LHS circuit breaker is tripped.



Figure 4.

2. Reset circuit breaker if tripped.

CONDITION/INDICATION

Is LHS circuit breaker properly set?

DECISION

Circuit breaker was tripped and was able to be reset. - Test 7 - Does Load Handling System operate? Notify supervisor.

Circuit breaker was not tripped. - Test 5 - Is fluid at proper level in hydraulic reservoir?

TEST 5 - Is fluid at proper level in hydraulic reservoir?

1. Check fluid level in hydraulic reservoir.

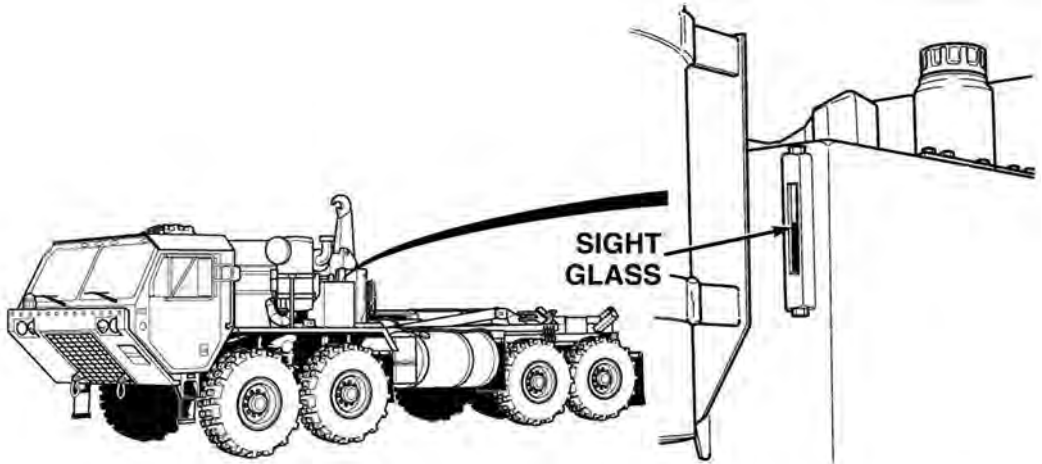


Figure 5.

CONDITION/INDICATION

Is fluid at proper level in hydraulic reservoir?

DECISION

No - Notify supervisor.

Yes - Test 6 - Is hydraulic reservoir temperature cool?

TEST 6 - Is hydraulic reservoir temperature cool?**NOTE**

Continued repetitive cycles, approximately nine at rated 26,000 lb. payload, of the handling system (LHS) could cause overheating and system will fail to pick up the load.

1. Ensure temperature of hydraulic reservoir is not hot. The hydraulic reservoir is cool if you can hold your hand on the reservoir for more than 10 seconds.
2. If hydraulic reservoir is hot, wait approximately 1 1/2 hours or until the hydraulic reservoir is cool.

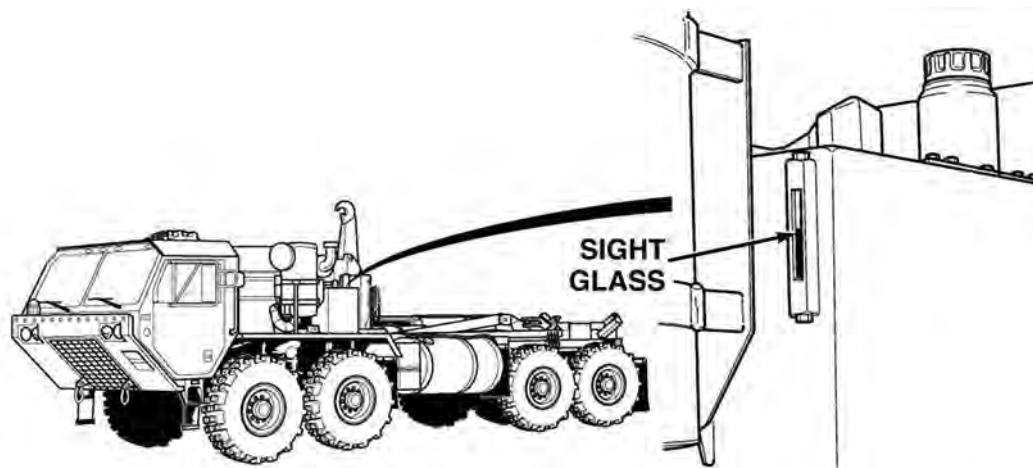


Figure 6.

CONDITION/INDICATION

Is hydraulic reservoir temperature cool?

DECISION

No - Test 7 - Does Load Handling System operate?

Yes - Test 7 - Does Load Handling System operate?

TEST 7 - Does Load Handling System operate?

1. Attempt to operate LHS. (WP 0064)



Figure 7.

CONDITION/INDICATION

Does Load Handling System operate?

DECISION

No - Notify supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE
LHS MAIN FRAME CYLINDERS MOVE SLOWLY DURING UNLOAD OPERATION

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE

LHS MAIN FRAME CYLINDERS MOVE SLOWLY DURING UNLOAD OPERATION

TEST 1 - Is fluid at proper level in hydraulic reservoir with LHS in transit position?

1. Check fluid level in hydraulic reservoir with LHS in transit position (WP 0064).

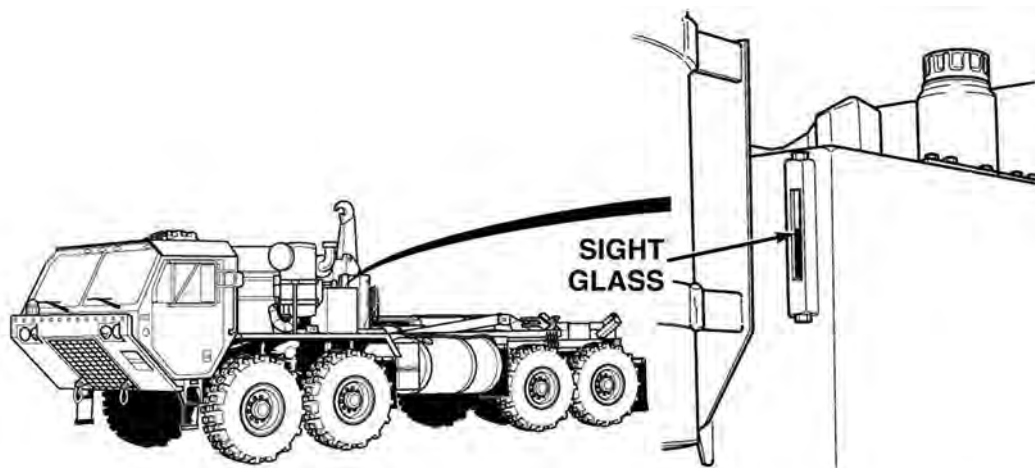


Figure 1.

CONDITION/INDICATION

Is fluid at proper level in hydraulic reservoir with LHS in transit position?

DECISION

Hydraulic fluid level is OK. LHS is in MAN M.F. mode. - Test 3 - Does Load Handling System operate normally during unload operation? Notify supervisor.

Hydraulic fluid level is OK. LHS is in AUTO mode. - Test 2 - Does LHS operate normally during unload operation?

TEST 2 - Does LHS operate normally during unload operation?

1. Verify LHS is set for AUTO operation mode. (WP 0064)

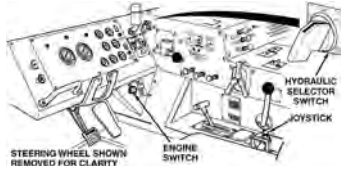


Figure 2.

2. Throttle engine to between 1,500 and maximum RPM.
3. Move joystick to LOAD position and hold for approximately three seconds.
4. Attempt to complete unloading operation.

CONDITION/INDICATION

Does LHS operate normally during unload operation?

DECISION

No - Notify supervisor.

Yes - Problem corrected.

TEST 3 - Does Load Handling System operate normally during unload operation?

1. Verify LHS is set for MAN M.F. operation mode. (WP 0065)

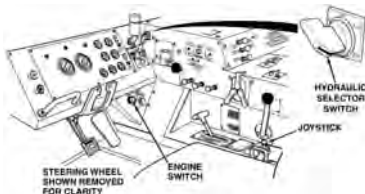


Figure 3.

CAUTION

Engine speed must be at idle before using hydraulic selector switch or damage to equipment may result.

2. Move hydraulic selector switch to OFF or MAN TRANS position for approximately three seconds.

3. Return switch to desired position and attempt to complete unloading operation.

CONDITION/INDICATION

Does Load Handling System operate normally during unload operation?

DECISION

No - Notify supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
LHS MOVES SLOWLY IN ALL MODES**

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

**TROUBLESHOOTING PROCEDURE
LHS MOVES SLOWLY IN ALL MODES**

TEST 1 - Is fluid at proper level in hydraulic reservoir?

1. Check fluid level in hydraulic reservoir.

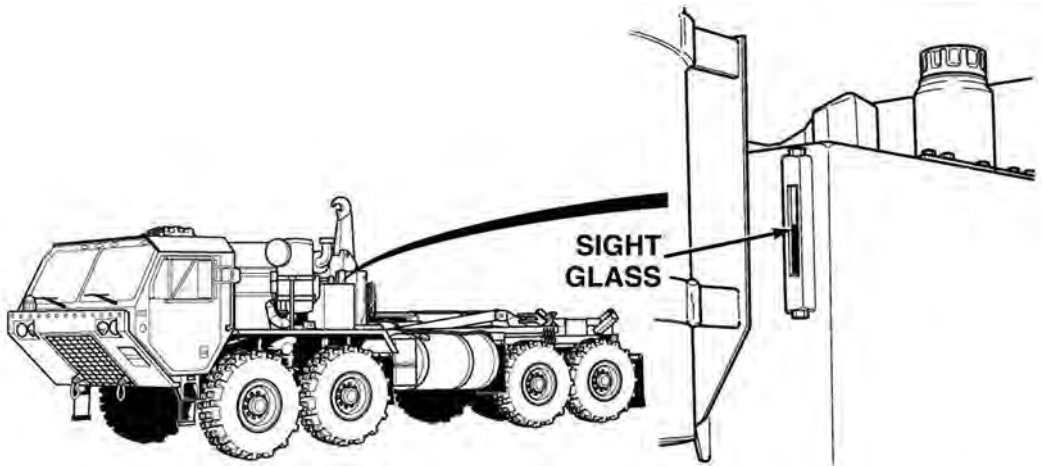


Figure 1.

CONDITION/INDICATION

Is fluid at proper level in hydraulic reservoir?

DECISION

No - Notify supervisor.

Yes - Notify supervisor.

END OF WORK PACKAGE

OPERATOR MAINTENANCE
FLATRACK DISENGAGES FROM LHS HOOK WHILE ATTEMPTING TO UNLOAD

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE**FLATRACK DISENGAGES FROM LHS HOOK WHILE ATTEMPTING TO UNLOAD****TEST 1 - Flatrack hook bar must be manually re-engaged**

1. Manually re-engage flatrack hook bar with LHS hook.



Figure 1.

CONDITION/INDICATION

Flatrack hook bar must be manually re-engaged

DECISION

-
Continue - Notify supervisor.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
FRONT LIFT ADAPTER LOWER CONTAINER LOCKS WILL NOT ENGAGE INTO
CONTAINER LOWER CASTING**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE**FRONT LIFT ADAPTER LOWER CONTAINER LOCKS WILL NOT ENGAGE INTO
CONTAINER LOWER CASTING****TEST 1 - Are lower container castings free from mud and debris?**

1. Check for mud and debris around both lower container castings.
2. Clean container castings as needed.

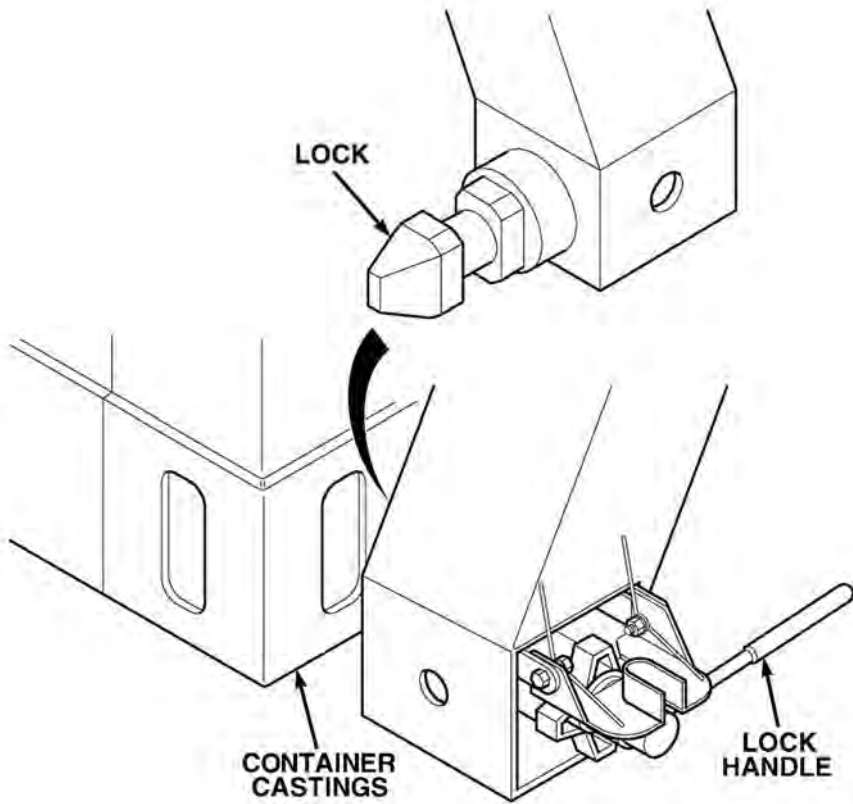


Figure 1.

CONDITION/INDICATION

Are lower container castings free from mud and debris?

DECISION

No - Test 4 - Do front lifting adapter lower container locks engage into container lower castings?

Yes - Test 2 - Are lower container locks free from mud and debris?

TEST 2 - Are lower container locks free from mud and debris?

1. Check that both lower container locks are free from mud and debris and rotate freely.
2. Clean container locks as needed.

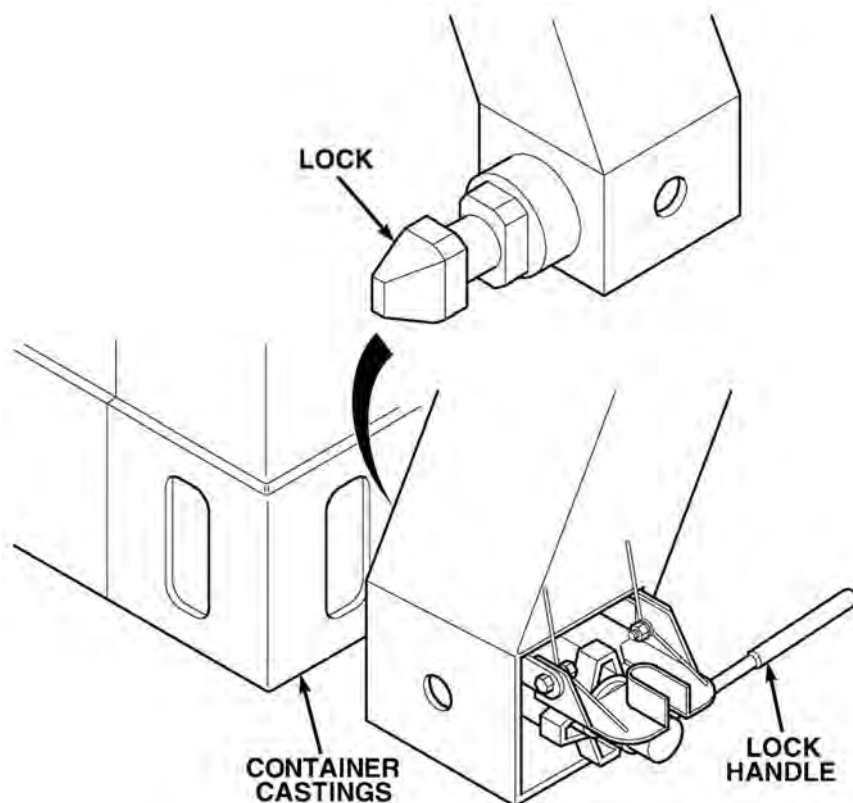


Figure 2.

CONDITION/INDICATION

Are lower container locks free from mud and debris?

DECISION

No - Test 4 - Do front lifting adapter lower container locks engage into container lower castings?

Yes - Test 3 - Are lower container locks in UNLOCKED position?

TEST 3 - Are lower container locks in UNLOCKED position?

1. Verify that both lower container locks are in straight up (UNLOCKED) position.

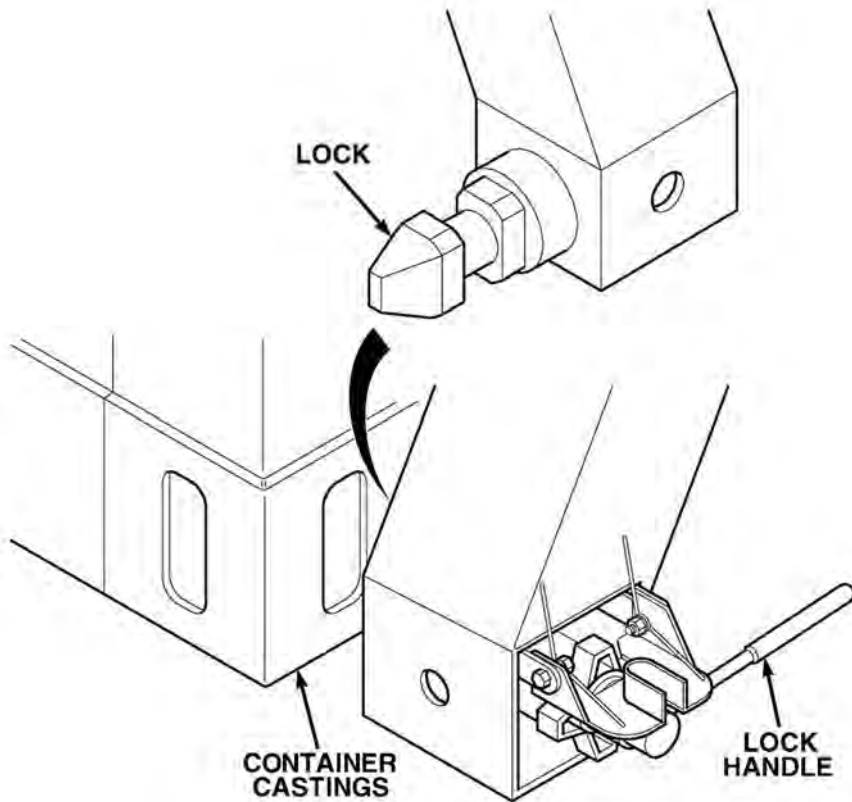


Figure 3.

CONDITION/INDICATION

Are lower container locks in UNLOCKED position?

DECISION

No - Position lower container locks to UNLOCKED position. (WP 0057)

Yes - Test 4 - Do front lifting adapter lower container locks engage into container lower castings?

TEST 4 - Do front lifting adapter lower container locks engage into container lower castings?

1. Attempt to engage front lifting adapter lower container locks into container lower castings. (WP 0053)



Figure 4.

CONDITION/INDICATION

Do front lifting adapter lower container locks engage into container lower castings?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE
ONE OR BOTH REAR CONTAINER LOCKS CANNOT BE PINNED OR APPEAR TO BE
EXTREMELY LOOSE

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE

ONE OR BOTH REAR CONTAINER LOCKS CANNOT BE PINNED OR APPEAR TO BE
EXTREMELY LOOSE

TEST 1 - Is container fully stowed on truck?

1. Reload 82 inch (208 cm) or taller container on truck. (WP 0053)
2. Reload 72 inch (183 cm) or taller container on truck. (WP 0054)

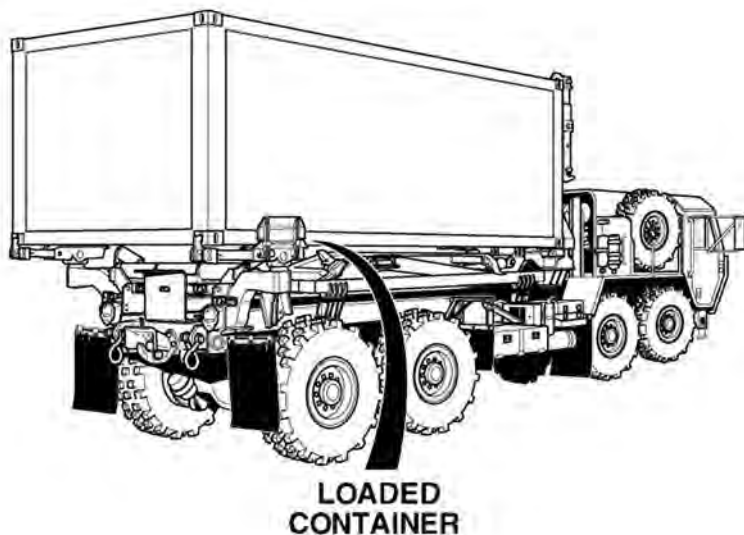


Figure 1.

3. Reload 51 inch (130 cm) or taller container on truck. (WP 0055)
4. Reload 48 inch (122 cm) or taller container on truck. (WP 0056)

CONDITION/INDICATION

Is container fully stowed on truck?

DECISION

Continue - Test 2 - Are rear container locks and pins free from damage?

TEST 2 - Are rear container locks and pins free from damage?

1. Check if rear container locks and pins are damaged or bent.

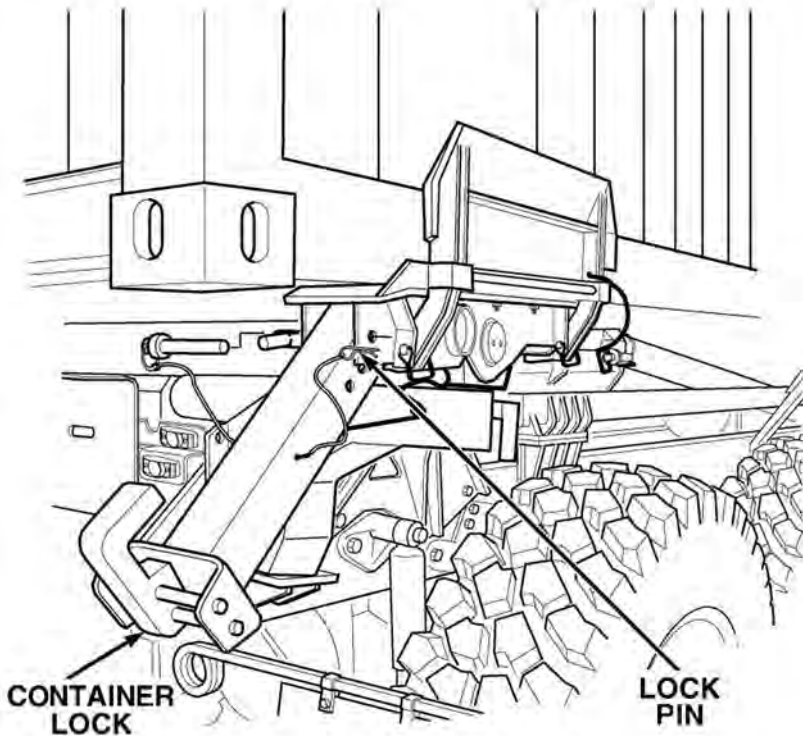


Figure 2.

CONDITION/INDICATION

Are rear container locks and pins free from damage?

DECISION

No - Notify Supervisor.

Yes - Test 3 - Can both rear container locks be pinned and secured properly?

TEST 3 - Can both rear container locks be pinned and secured properly?**NOTE**

Select appropriate step below in accordance with current container size being loaded.

1. Attempt to reload 82 inch (208 cm) or taller container (WP 0053) on truck.
2. Attempt to reload 72 inch (183 cm) or taller container (WP 0054) on truck.

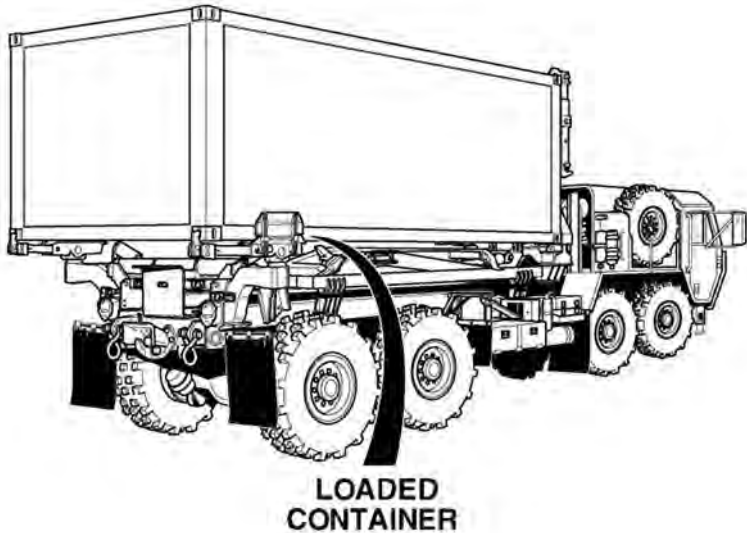


Figure 3.

3. Attempt to reload 51 inch (130 cm) or taller container (WP 0055) on truck.
4. Attempt to reload 48 inch (122 cm) or taller container (WP 0056) on truck.

CONDITION/INDICATION

Can both rear container locks be pinned and secured properly?

DECISION

No - Notify Supervisor.
Yes - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE
ONE OF BOTH REAR CONTAINER LOCKS CANNOT BE FREED FROM CONTAINER

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE**ONE OF BOTH REAR CONTAINER LOCKS CANNOT BE FREED FROM CONTAINER****TEST 1 - Are locks pinned due to container shifting?**

1. Check if rear container locks are pinned from container shifting.

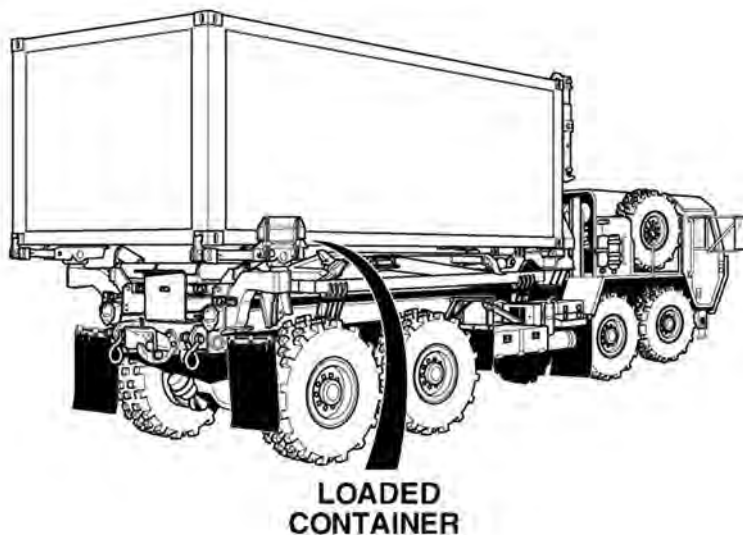


Figure 1.

2. Hit locks with BII hammer to loosen if pinned by shifted container.

CONDITION/INDICATION

Are locks pinned due to container shifting?

DECISION

No - Test 2 - Are rear container locks and pins free from damage?

Yes - Test 3 - Can both rear container locks be freed from container?

TEST 2 - Are rear container locks and pins free from damage?

1. Check if rear container locks and pins are damaged or bent.

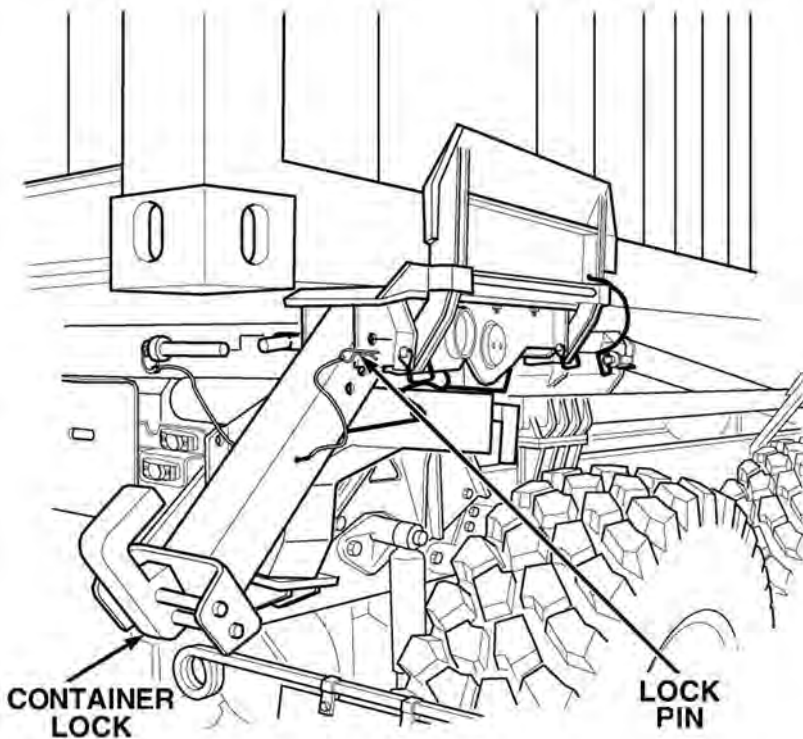


Figure 2.

CONDITION/INDICATION

Are rear container locks and pins free from damage?

DECISION

No - Notify Supervisor.

Yes - Test 3 - Can both rear container locks be freed from container?

TEST 3 - Can both rear container locks be freed from container?

1. Attempt to free rear container locks from container.

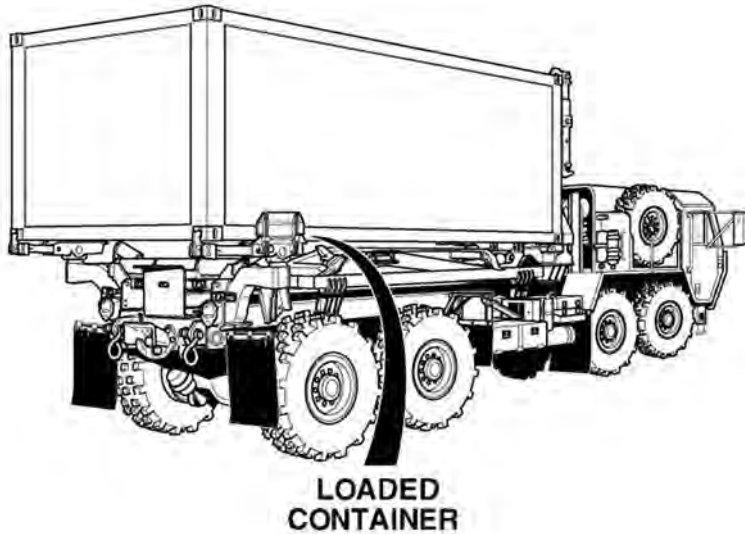


Figure 3.

CONDITION/INDICATION

Can both rear container locks be freed from container?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
CONTAINER JERKS WHILE IN CONTACT WITH SLIDERS DURING LOADING OR
UNLOADING SEQUENCE**

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE

**CONTAINER JERKS WHILE IN CONTACT WITH SLIDERS DURING LOADING OR
UNLOADING SEQUENCE**

TEST 1 - Sliders may be lacking adequate grease to allow container to slide smoothly.

1. If loading container, reverse sequence to remove container from contact with sliders and grease sliders.

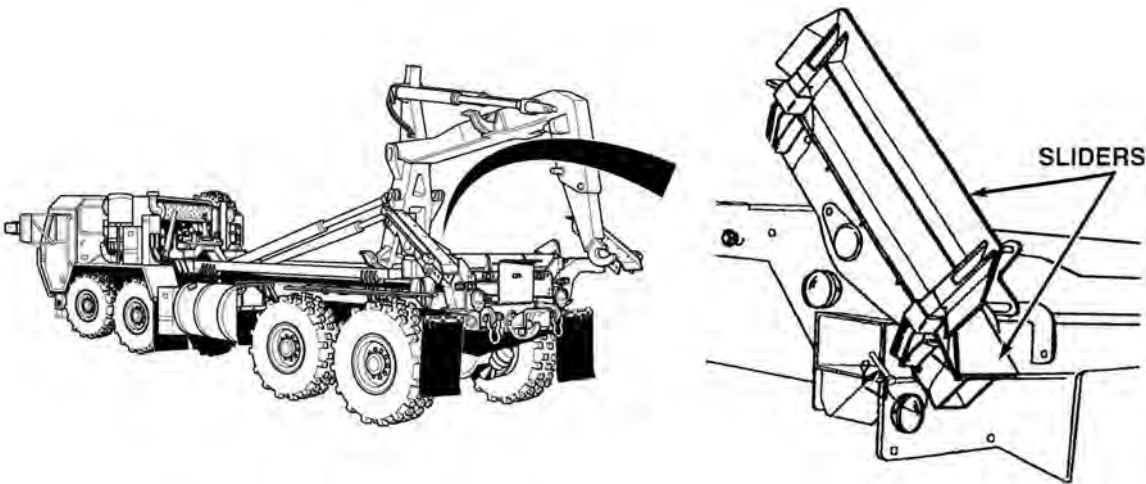


Figure 1.

2. If unloading container, stop sequence and attempt to grease sliders as access allows.

CONDITION/INDICATION

Sliders may be lacking adequate grease to allow container to slide smoothly.

DECISION

-
Continue - Test 2 - Is container free from jerking while in contact with sliders during loading or unloading sequence?

TEST 2 - Is container free from jerking while in contact with sliders during loading or unloading sequence?

1. Attempt to load or unload container from vehicle.



Figure 2.

CONDITION/INDICATION

Is container free from jerking while in contact with sliders during loading or unloading sequence?

DECISION

No - Notify Supervisor.
Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
SELF-RECOVERY WINCH DOES NOT WORK**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE**SELF-RECOVERY WINCH DOES NOT WORK****TEST 1 - Is hydraulic fluid level within normal operating range?**

1. Check hydraulic fluid level. If low, add hydraulic fluid. (WP 0159)

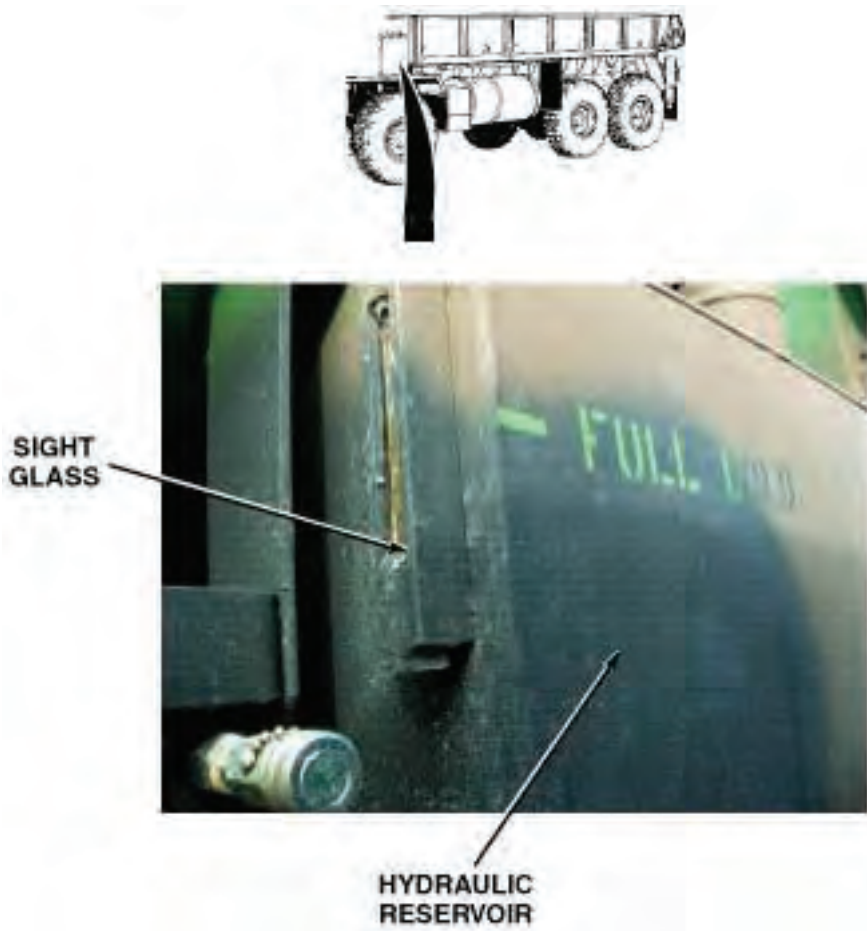


Figure 1.

CONDITION/INDICATION

Is hydraulic fluid level within normal operating range?

DECISION

No - Test 3 - Does self-recovery winch operate properly?

Yes - Test 2 - Is self-recovery winch shift linkage free from debris and damage?

TEST 2 - Is self-recovery winch shift linkage free from debris and damage?

1. Check self-recovery winch shift linkage for debris and damage. If debris found, clean shift linkage. (WP 0166)



Figure 2.

CONDITION/INDICATION

Is self-recovery winch shift linkage free from debris and damage?

DECISION

Linkage damaged. - Notify Supervisor. Test 3 - Does self-recovery winch operate properly? Notify Supervisor.

Linkage OK. - Notify Supervisor.

TEST 3 - Does self-recovery winch operate properly?

1. Start engine. (WP 0038)
2. Check operation of self-recovery winch. (WP 0099)

CONDITION/INDICATION

Does self-recovery winch operate properly?

DECISION

No - Notify supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE UNUSUALLY NOISY WHEN OPERATING

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE UNUSUALLY NOISY WHEN OPERATING

TEST 1 - Is self-recovery winch cable free of twists, tangles, or binding?

1. Check if self-recovery winch cable is twisted, tangled, or causing drum to bind. If cable is tangled, pay out or take up cable as necessary to straighten.

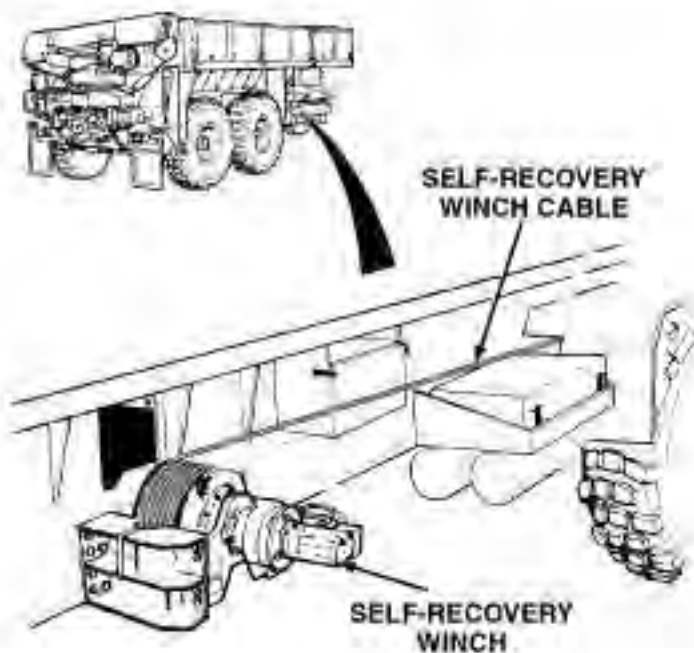


Figure 1.

CONDITION/INDICATION

Is self-recovery winch cable free of twists, tangles, or binding?

DECISION

No - Notify supervisor.

Yes - Test 2 - Is self-recovery winch free of unusual noise when operating?

TEST 2 - Is self-recovery winch free of unusual noise when operating?

1. Start engine. (WP 0038)



Figure 2.

2. Operate self-recovery winch, and listen for unusual noise. (WP 0099)

CONDITION/INDICATION

Is self-recovery winch free of unusual noise when operating?

DECISION

No - Notify supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE
VEHICLE IS HARD TO STEER, SHIMMIES, WANDERS, OR PULLS TO ONE SIDE

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE**VEHICLE IS HARD TO STEER, SHIMMIES, WANDERS, OR PULLS TO ONE SIDE****TEST 1 - Are tires inflated to proper pressure for road condition?****WARNING**

Tire air pressure must be checked properly. Failure to comply may result in injury or death to personnel.

NOTE

- Inflate tires only when they are cool. Inflate to proper pressure for road condition.
- Tire tread is non-directional. Vehicle operation is not affected by direction of traction bars.

1. Check tires for proper inflation. (WP 0157)

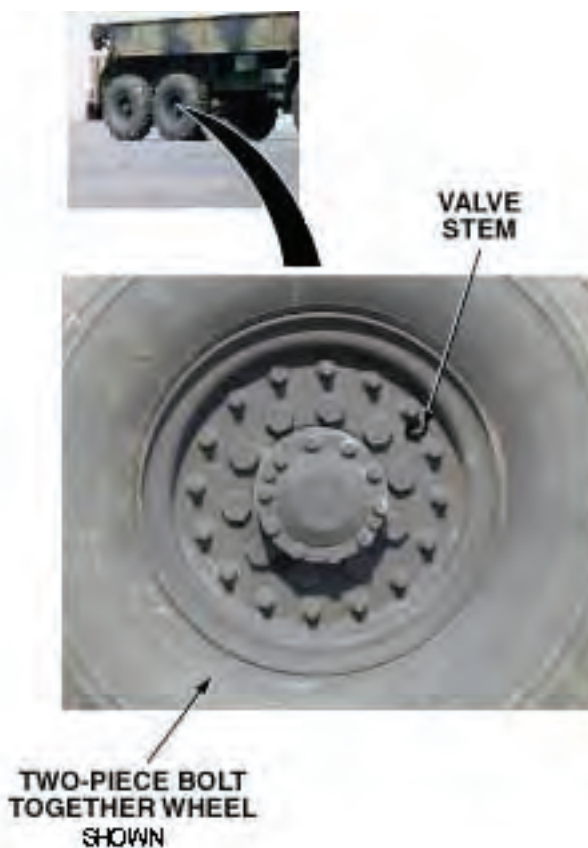


Figure 1.

2. If tires are improperly inflated, inflate or deflate tires to proper pressure.

CONDITION/INDICATION

Are tires inflated to proper pressure for road condition?

DECISION

Improperly inflated - Test 3 - Is vehicle hard to steer; or does it shimmy, wander, or pull to one side?

Inflation OK - Test 2 - Are wheels free of loose, missing, or broken lugnuts?

TEST 2 - Are wheels free of loose, missing, or broken lugnuts?

1. Check for loose, missing, or broken lugnuts.



Figure 2.

CONDITION/INDICATION

Are wheels free of loose, missing, or broken lugnuts?

DECISION

No - Tighten and/or replace loose, missing, or damaged lugnut(s). (WP 0167)

Yes - Notify Supervisor.

TEST 3 - Is vehicle hard to steer; or does it shimmy, wander, or pull to one side?

1. Start engine. (WP 0038)
2. Test drive vehicle.

CONDITION/INDICATION

Is vehicle hard to steer; or does it shimmy, wander, or pull to one side?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
VEHICLE STEERING SLOW TO RESPOND OR INTERMITTENT**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE**VEHICLE STEERING SLOW TO RESPOND OR INTERMITTENT****TEST 1 - Is hydraulic fluid low?**

1. Check for low hydraulic fluid. (WP 0159)
2. If fluid level is low, add hydraulic fluid. (WP 0159)

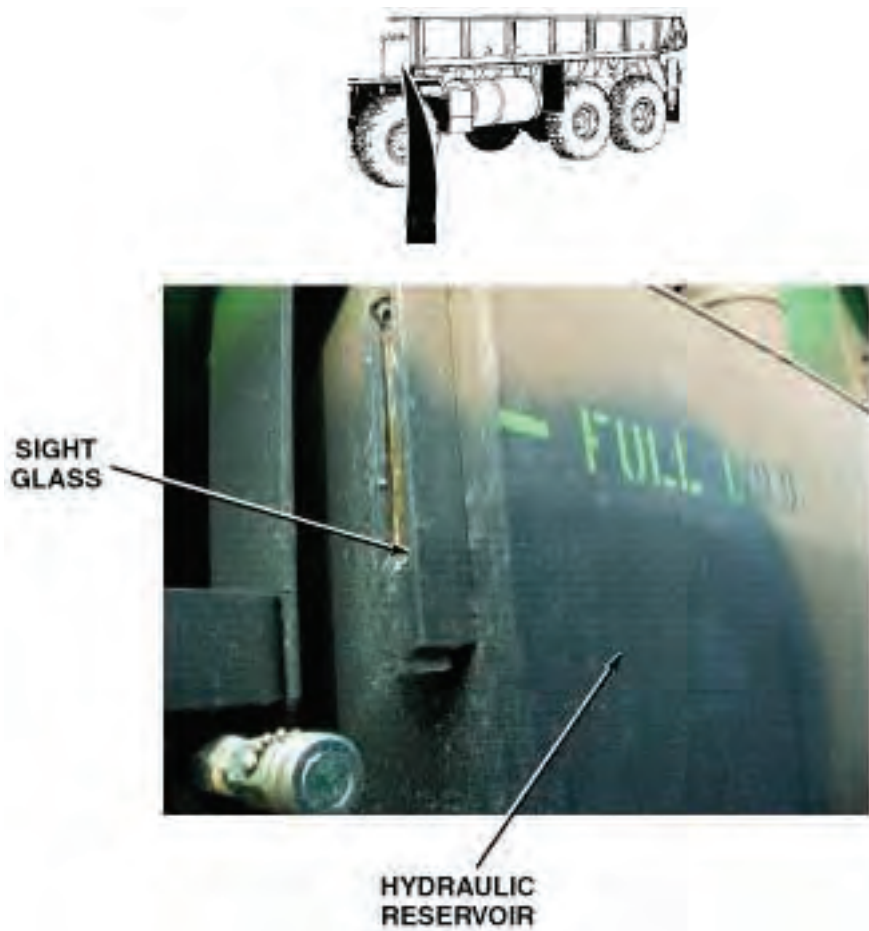


Figure 1.

CONDITION/INDICATION

Is hydraulic fluid low?

DECISION

Fluid level low - Test 3 - Is steering slow to respond or intermittent?

Fluid level OK - Test 2 - Are there any leaking or damaged hydraulic fittings or lines?

TEST 2 - Are there any leaking or damaged hydraulic fittings or lines?**WARNING**

Vehicles air system is pressurized, be sure to wear proper eye protection and keep face away from drain valves while draining air reservoirs. Open air drain valves slowly to prevent sudden blast of air. Failure to comply may result in injury to personnel.

1. Check for leaking or damaged hydraulic lines and/or fittings.

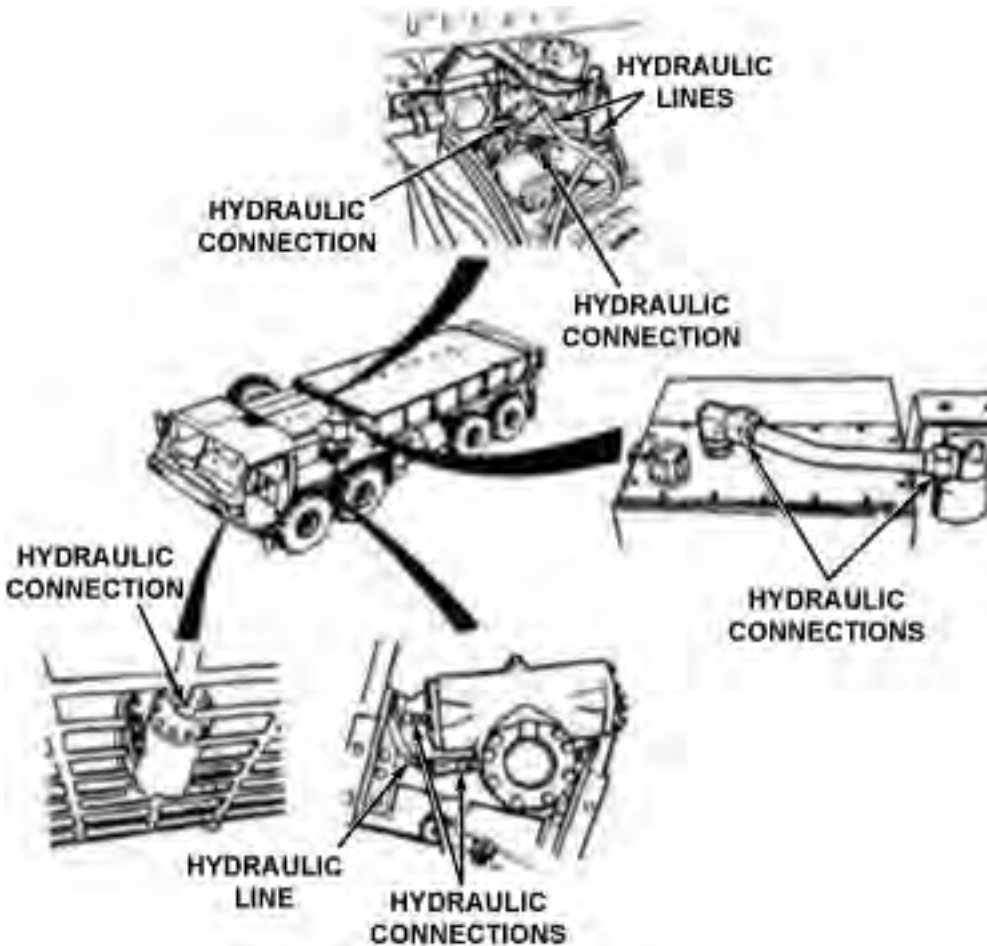


Figure 2.

2. If loose hydraulic fluid fittings are found, tighten fittings.

CONDITION/INDICATION

Are there any leaking or damaged hydraulic fittings or lines?

DECISION

Hydraulic lines damaged or leaking. - Ensure fittings are tightened and notify supervisor of faulty hydraulic lines. Tighten loose fittings. (Test 3 - Is steering slow to respond or intermittent?) Notify Supervisor.

No leaks, damaged lines or loose fittings found. - Notify Supervisor.

TEST 3 - Is steering slow to respond or intermittent?

1. Start engine. (WP 0038)

2. Test drive vehicle.

CONDITION/INDICATION

Is steering slow to respond or intermittent?

DECISION

Steering faulty - Notify Supervisor.

Steering OK - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE UNUSUALLY NOISY WHEN OPERATING

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE UNUSUALLY NOISY WHEN OPERATING

TEST 1 - Is transmission/transfer case free from unusual noise while operating?

1. Start engine. (WP 0038)
2. Test drive vehicle.



Figure 1.

CONDITION/INDICATION

Is transmission/transfer case free from unusual noise while operating?

DECISION

No - Notify supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE SLOW OR DIFFICULT ENGAGEMENT

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE SLOW OR DIFFICULT ENGAGEMENT

TEST 1 - Does transmission and/or transfer case engage normally?

1. Start engine. (WP 0038)
2. Test drive vehicle.



Figure 1.

CONDITION/INDICATION

Does transmission and/or transfer case engage normally?

DECISION

No - Notify Supervisor.

Yes - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
TRANSFER CASE SHIFT LEVER WILL NOT SHIFT**

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE

TRANSFER CASE SHIFT LEVER WILL NOT SHIFT

TEST 1 - Does transfer case shift lever shift when transmission is shifted from Neutral (N) to Drive (D)?

1. Start engine (WP 0038)
2. Move transmission range selector from Neutral (N) to Drive (D). Apply throttle to roll vehicle slightly, and shift transmission from (D) to (N). As vehicle stops, shift TRANSFER CASE shift lever.

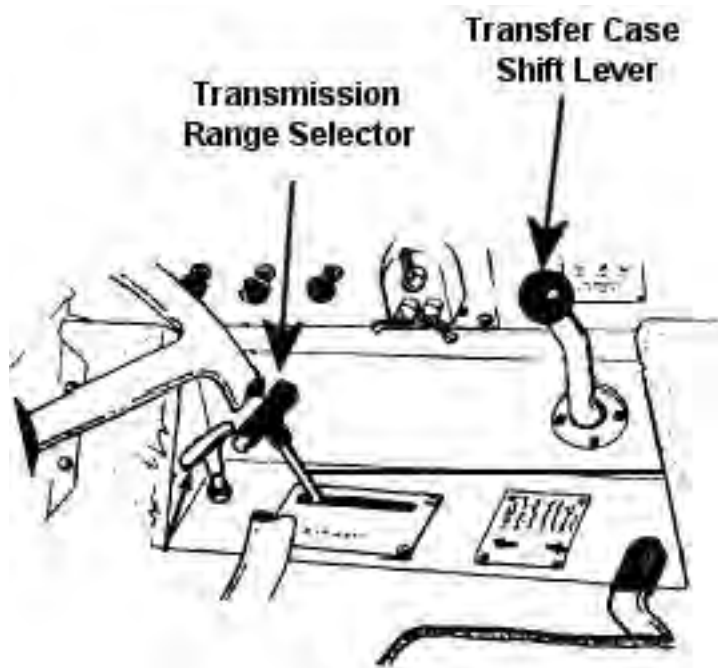


Figure 1.

CONDITION/INDICATION

Does transfer case shift lever shift when transmission is shifted from Neutral (N) to Drive (D)?

DECISION

No - Test 2 - Does transfer case shift lever shift when transmission is shifted from Neutral (N) to Reverse (R)?

Yes - Problem corrected.

TEST 2 - Does transfer case shift lever shift when transmission is shifted from Neutral (N) to Reverse (R)?

1. Move transmission range selector from Neutral (N) to Reverse (R). Apply throttle to roll vehicle slightly and shift transmission from R to N. As vehicle stops, shift TRANSFER CASE shift lever.

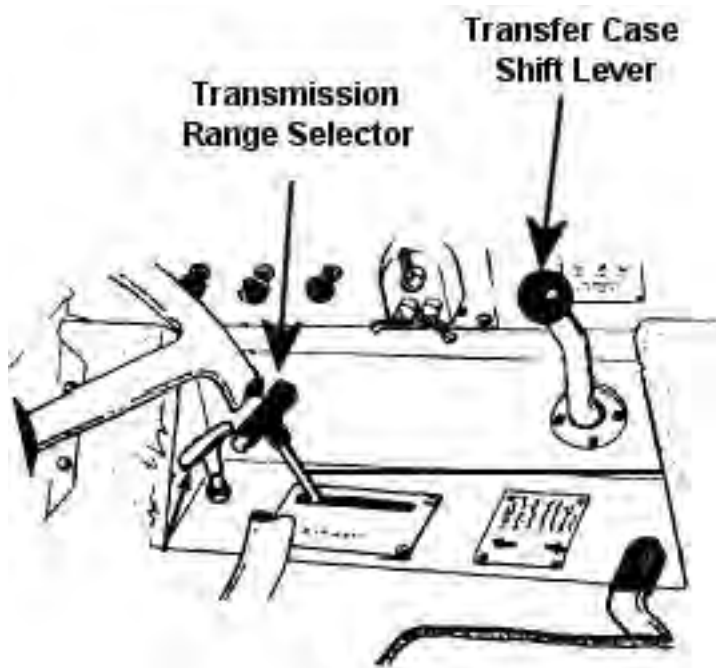


Figure 2.

CONDITION/INDICATION

Does transfer case shift lever shift when transmission is shifted from Neutral (N) to Reverse (R)?

DECISION

No - Test 3 - Is shift cable free of mud and debris?
Yes - Problem corrected.

TEST 3 - Is shift cable free of mud and debris?

1. Turn engine OFF. (WP 0051)
2. Check shift cable for mud and/or debris.

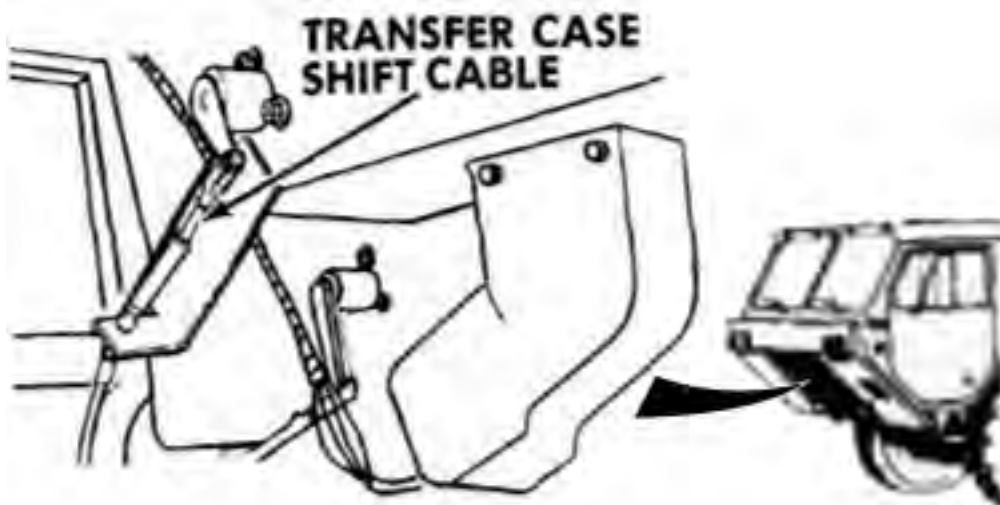


Figure 3.

3. If needed, clean shift cable. (WP 0166)

CONDITION/INDICATION

Is shift cable free of mud and debris?

DECISION

Dirty - Test 4 - Does transfer case shift lever shift normally?
Clean - Notify Supervisor.

TEST 4 - Does transfer case shift lever shift normally?

1. Start engine. (WP 0038)
 - a. Test drive vehicle.
2. Attempt to shift transfer case. (WP 0042)

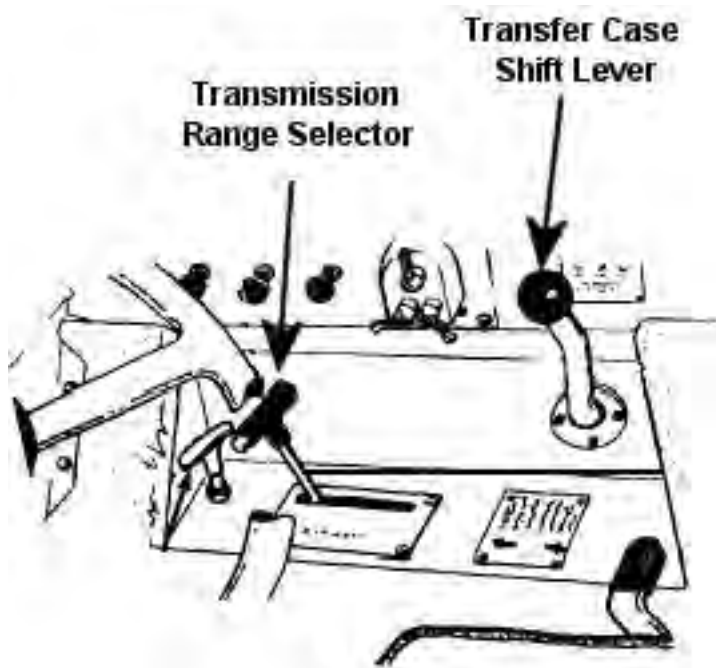


Figure 4.

3. Turn engine OFF. (WP 0051)

CONDITION/INDICATION

Does transfer case shift lever shift normally?

DECISION

No - Notify Supervisor.
Yes - Problem corrected.

END OF WORK PACKAGE

OPERATOR MAINTENANCE
TRANS TEMP GAUGE INDICATES OVERHEATING DURING NORMAL OPERATION

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

TROUBLESHOOTING PROCEDURE**TRANS TEMP GAUGE INDICATES OVERHEATING DURING NORMAL OPERATION****TEST 1 - Is transmission fluid at proper operating level?**

1. Check transmission fluid level. (WP 0159)

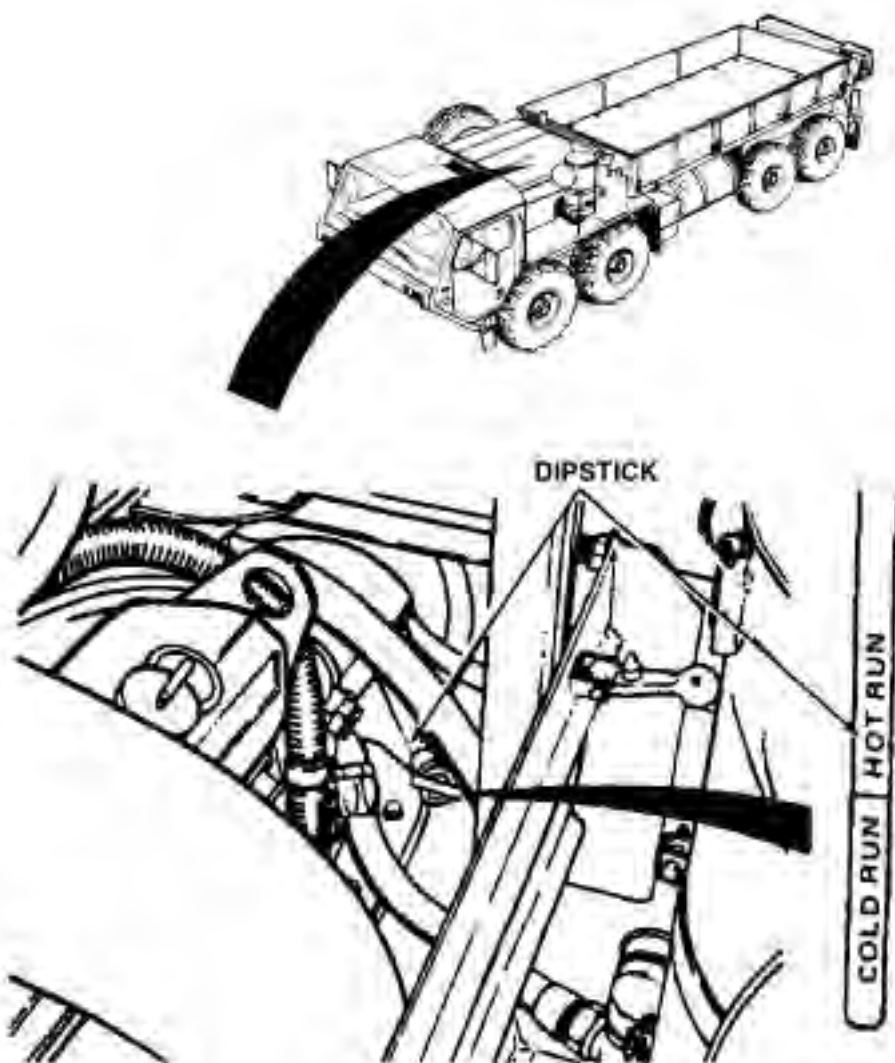


Figure 1.

2. If transmission fluid is low, add transmission fluid. (WP 0159)

CONDITION/INDICATION

Is transmission fluid at proper operating level?

DECISION

Transmission fluid was high. - Notify Supervisor. Test 2 - Does TRANS TEMP gauge indicate overheating during normal operation?

Transmission fluid was at proper level. - Notify Supervisor.

TEST 2 - Does TRANS TEMP gauge indicate overheating during normal operation?

1. Start engine. (WP 0038)
2. Test drive vehicle.

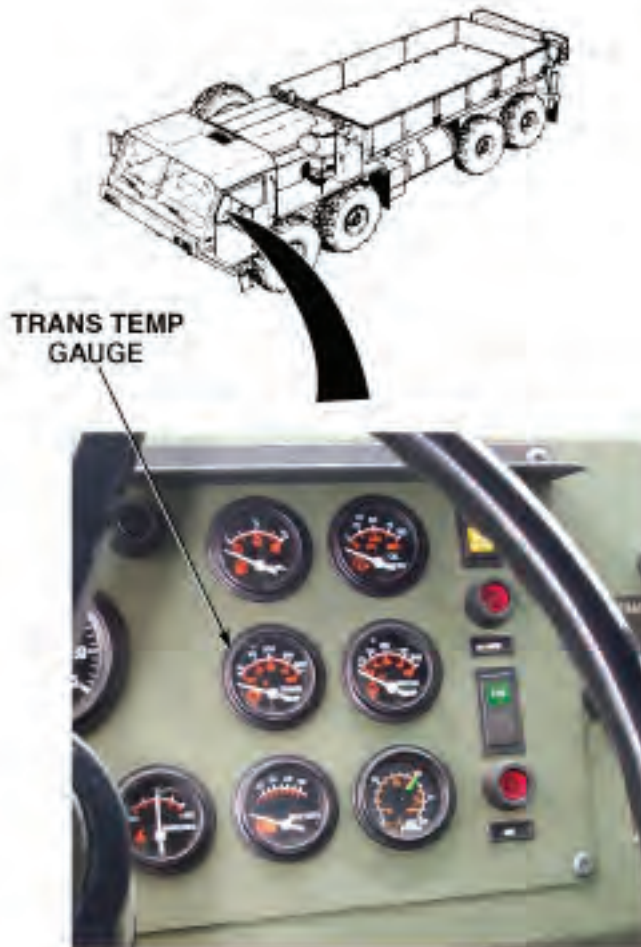


Figure 2.

CONDITION/INDICATION

Does TRANS TEMP gauge indicate overheating during normal operation?

DECISION

Overheating - Notify Supervisor.

Correct temperature - Problem corrected.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
WHEEL WOBBLES**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

**TROUBLESHOOTING PROCEDURE
WHEEL WOBBLES**

TEST 1 - Are any lugnuts loose, missing or broken?

1. Check wheels for loose, missing or broken lugnuts.



Figure 1.

CONDITION/INDICATION

Are any lugnuts loose, missing or broken?

DECISION

No - Tighten or replace lugnut(s). (WP 0167)

Yes - Test 2 - Are any of the wheels bent?

TEST 2 - Are any of the wheels bent?

1. Check to see if any of the wheels are bent.



Figure 2.

CONDITION/INDICATION

Are any of the wheels bent?

DECISION

Wheel bent - Replace damaged wheel(s). (WP 0167)

Wheels OK - Notify Supervisor.

TEST 3 - Do any of the wheels wobble?

1. Start engine. (WP 0038)
2. Test drive vehicle.

CONDITION/INDICATION

Do any of the wheels wobble?

DECISION

Wheel wobbles - Notify Supervisor.

Wheel OK - Notify Supervisor.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
TIRES WORN UNEVENLY OR EXCESSIVELY**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - Continued

Parking brakes applied. (WP 0050)

Wheels chocked. (WP 0090)

**TROUBLESHOOTING PROCEDURE
TIRES WORN UNEVENLY OR EXCESSIVELY**

TEST 1 - Are tires inflated to proper pressure for road condition?**WARNING**

Tire air pressure must be checked properly. Failure to comply may result in injury or death to personnel.

NOTE

- Inflate tires only when they are cool. Inflate to proper pressure for road condition.
- Tire tread is non-directional. Vehicle operation is not affected by direction of traction bars.

1. Check tires for proper inflation. (WP 0160)

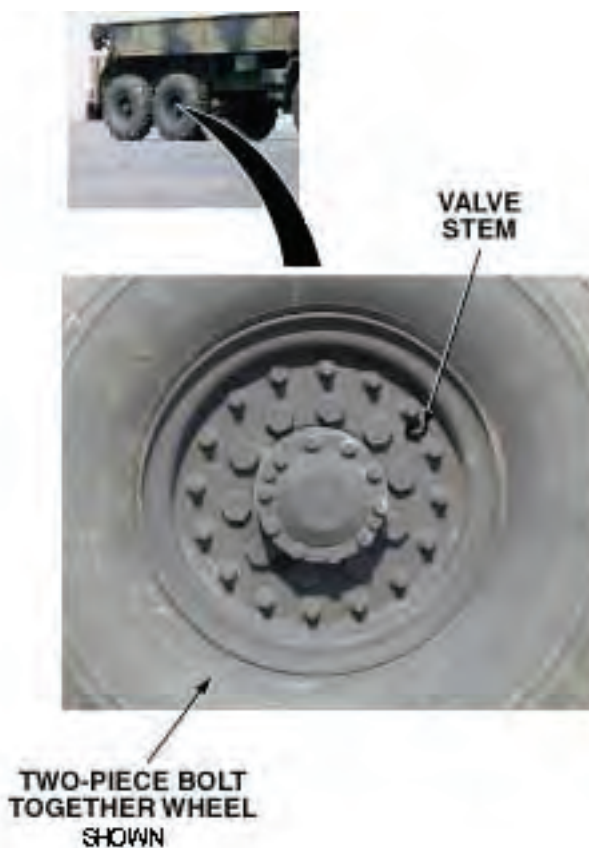


Figure 1.

2. If tires are improperly inflated, inflate or deflate to proper pressure.

CONDITION/INDICATION

Are tires inflated to proper pressure for road condition?

DECISION

Improperly inflated - Notify Supervisor.

Inflation OK - Notify Supervisor.

END OF WORK PACKAGE

CHAPTER 4

PREVENTIVE
MAINTENANCE
CHECKS AND
SERVICES (PMCS)

OPERATOR MAINTENANCE INTRODUCTION - PREVENTIVE MAINTENANCE

PMCS INTRODUCTION

This section contains PMCS requirements for HEMTT series vehicles. The PMCS tables contain checks and services necessary to ensure that the vehicle is ready for operation. Using PMCS tables, perform maintenance at specified intervals.

MAINTENANCE FORMS AND RECORDS

Every mission begins and ends with paperwork. There is not much of it, but it must be kept up. The filled out forms and records have several uses. They are a permanent record of services, repairs, and modifications made on the vehicle; they are reports to unit maintenance and to your Commander; and they serve as a checklist to find out what is wrong with the vehicle after its last use, and whether those faults have been fixed. For the information needed on forms and records, refer to DA PAM 750-8. (WP 0173)

PREVENTIVE MAINTENANCE CHECKS AND SERVICES

- Do the before (B) PREVENTIVE MAINTENANCE just before operating vehicle. Pay attention to the CAUTIONS and WARNINGS.
- Do the during (D) PREVENTIVE MAINTENANCE while vehicle and/or its component systems are in operation. Pay attention to the CAUTIONS and WARNINGS.
- Do the after (A) PREVENTIVE MAINTENANCE right after operating vehicle. Pay attention to the CAUTIONS and WARNINGS.
- Do the (W) PREVENTIVE MAINTENANCE weekly. Pay attention to the CAUTIONS and WARNINGS.
- Do the (M) PREVENTIVE MAINTENANCE once a month. Pay attention to the CAUTIONS and WARNINGS.
- Do the (S) PREVENTIVE MAINTENANCE once every six months. Pay attention to the CAUTIONS and WARNINGS.
- If something does not work, troubleshoot and notify the supervisor.
- Always do PREVENTIVE MAINTENANCE in the same order until it gets to be habit. Once practiced, problems can be spotted in a hurry.
- If something looks wrong and cannot be fixed right then, write it on DA Form 2404 (WP 0173) or DA Form 5988-E. (WP 0173) If something seems seriously wrong, report it to field level maintenance RIGHT NOW.
- When doing PREVENTIVE MAINTENANCE, take along the tools needed and a rag or two to make all the checks.

GENERAL MAINTENANCE PROCEDURE

- **Cleanliness:** Dirt, grease, oil, and debris only get in the way and may cover up a serious problem. Use solvent cleaning compound (WP 0176, Table 1, Item 6, 7, 8, 9, 10, 11) on all metal surfaces and soapy water on rubber.
- **Bolts, Nuts, and Screws:** Check bolts, nuts, and screws for obvious looseness, missing, bent, or broken condition and tighten or replace as necessary. They cannot all be checked with a tool, of course, but look for chipped paint, bare metal, or rust around bolt heads.
- **Welds:** Look for loose or chipped paint, rust, or gaps where parts are welded together. If a bad weld is found, have it repaired.
- **Electric Wires and Connectors:** Look for cracked or broken insulation, bare wires, and loose or broken connectors. Tighten loose connectors and make sure wires are in good shape.
- **Hydraulic Lines and Fittings:** Look for wear, damage, and leaks, and make sure clamps and fittings are tight. Wet spots show leaks, of course, but a stain around a fitting or connector can indicate a leak. If a connector or fitting is loose, tighten it. If something is broken or worn out, repair or replace per applicable procedure.
- **Damage is defined as:** Any conditions that affect safety or would render the vehicle unserviceable for mission requirements.

FLUID LEAKAGE

It is necessary to know how fluid leakage affects the status of fuel, oil, coolant, and the hydraulic systems. The following are definitions of types/classes of leakage necessary to know in order to determine the status of the vehicle.

NOTE

Equipment operation is allowable with minor leakage (Class I or II). Consideration must be given to the fluid capacity in the item/system being checked/inspected. When in doubt, notify the supervisor. When operating with Class I or II leaks, continue to check fluid levels as required in the PMCS. Class III leaks should be repaired per applicable procedure.

Class I : Seepage of fluid (as indicated by wetness or discoloration) not great enough to form drops.

Class II: Leakage of fluid great enough to form drops but not enough to cause drops to drip from item being checked/inspected.

Class III: Leakage of fluid great enough to form drops that fall from the item being checked/inspected.

PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)

Prior to performing your PMCS, check with your PLL clerk to verify that the latest publications are being used.

PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) - Continued

Listed below are the sections of the PMCS.

PMCS - BEFORE (WP 0157)

PMCS - DURING (WP 0158)

PMCS - AFTER (WP 0159)

PMCS - WEEKLY (WP 0160)

PMCS - MONTHLY (WP 0162)

PMCS - SEMIANNUAL (WP 0161)

Vehicles designated or dispatched to transport Class A or B ammunition, explosives, poisons, or radioactive yellow III materials over public highways require more stringent inspections.

Daily Walk Around PMCS Diagram. This routing diagram will be of help to complete the B, D, or A PMCS. It shows the vehicle PMCS routing track, which matches the sequence of PMCS to be performed.

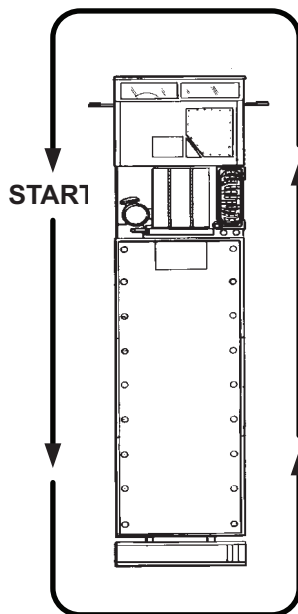


Figure 1.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
BEFORE - PREVENTIVE MAINTENANCE**

INITIAL SETUP:

Tools and Special Tools

Gloves, Leather (WP 0175, Table 2)

Table 1. PMCS - BEFORE

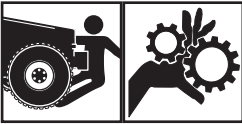

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| | | | <p style="text-align: center;">WARNING</p>  <p>Do not start engine or move vehicle when personnel are under vehicle or working on brake lines. Failure to comply may result in injury or death to personnel.</p> <p style="text-align: center;">WARNING</p>  <p>Ensure engine is OFF and eye protection is worn when checking for leaks. Failure to comply may result in injury or death to personnel.</p> | |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| | | | <p style="text-align: center;">NOTE</p> <p>Perform Operator's Before, After, and Weekly PMCS checks if:</p> <ul style="list-style-type: none"> • You are the assigned driver but have not operated the vehicle since the last weekly inspection. • You are operating the vehicle for the first time. <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Clean all lubrication points with cleaning compound, solvent and allow to dry prior to servicing. • When using a grease gun, apply lubricant to the fitting until clean lubricant squeezes out of the part being lubricated. • Always refer to lubrication instructions (WP 0163) to ensure equipment has correct lubricants appropriate to operating environment (expected continuous temperatures). If not, remove/drain and reapply/refill equipment with appropriate lubricants for operating environment as | |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| 1 | Before | Driver Side Exterior | <p>prescribed in lubrication instructions. (WP 0163)</p> <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Diesel engine slobber is an inherent condition of diesel engines. When diesel engines are allowed to idle for prolonged periods of time, this characteristic may be interpreted as a Class III leak. Check engine oil level. If there is any doubt, contact your supervisor or field level maintenance. • If leakage is detected, further investigation is needed to determine the location and cause of the leak. If there is any doubt, contact your supervisor or field level maintenance. <p>1. Check underneath entire length of driver side of vehicle for fluid and air leaks.</p> | Any fuel leak, Class III leak (other than fuel), or air lines/fittings leaking or damaged. |

Table 1. PMCS - BEFORE - Continued


| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| | | | <p>2. Visually check driver side of vehicle for obvious damage that would impair operation.</p> <p style="text-align: center;">WARNING</p>  <ul style="list-style-type: none"> • During normal vehicle operation, cooling system can become very hot. Allow cooling system to cool prior to servicing. Failure to comply may result in injury to personnel. • Use extreme care when removing radiator cap. Sudden release of pressure can cause a steam flash. Slowly loosen radiator cap to the first stop to relieve pressure before removing radiator cap completely. Failure to comply may result in injury to personnel. • Use a clean, thick waste cloth or like material to remove radiator cap. | <p>Any damage that would impair operation.</p> |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| 2 | Before | Radiator | <p>Avoid using gloves. If hot water soaks through gloves, personnel could be burned. Failure to comply may result in injury to personnel.</p> <p>Remove radiator cap and check radiator coolant level. Coolant level should be up to bottom of filler neck. If fluid level is low, fill to appropriate level.</p> | Coolant is low. |

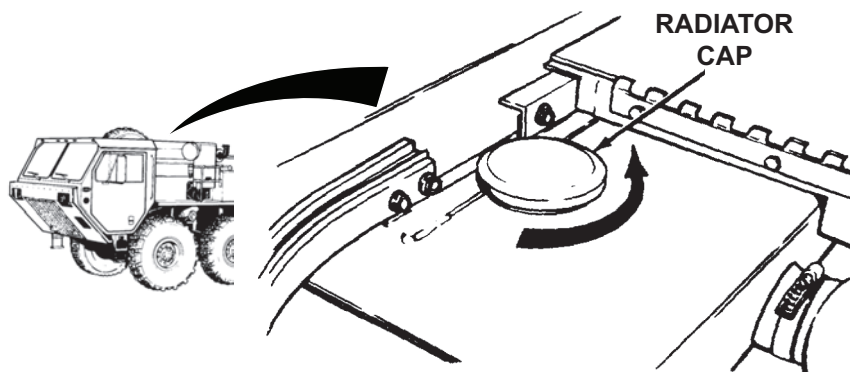


Figure 1.

WARNING



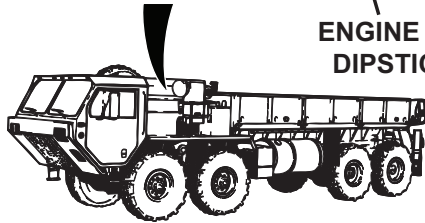
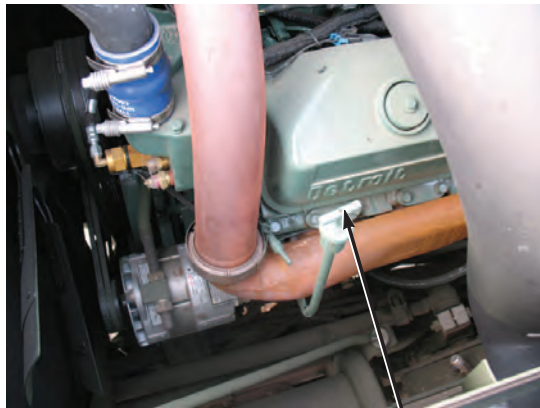
Do not operate a vehicle with a tire in an over-inflated or un-

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|--|
| 3 | Before | Driver Side Tires | <p>der-inflated condition, or with a questionable defect. Failure to comply may result in injury or death to personnel and damage to equipment.</p> <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • A tire is bad or in need of repair if the bead, sidewall, and tread areas show signs of damage. • Remember that this process requires you to make judgment calls and the goal is to safely maintain equipment in top quality conditions. <p>Check for correct air pressure on each driver side tire and service tire (WP 0170) as required.</p> | Tire missing, deflated, or un-serviceable. |
| 4 | Before | Engine | <ol style="list-style-type: none"> 1. Check engine oil level on dipstick. | |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | |



**ENGINE OIL
DIPSTICK**

Figure 2.

NOTE

Engine oil level should be between L (low) and F (full) mark on dipstick.

- a. Add engine oil as required. (WP 0163)

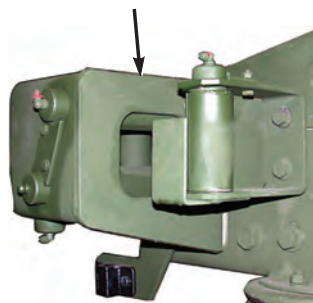
Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|---|
| 5 | Before | Rear of Vehicle | <p>b. Drain excess engine oil as required, or notify field level maintenance.</p> <p>Visually check rear of vehicle for obvious damage that would impair operation.</p> | Any damage that would impair operation. |
| 6 | Before | Self-Recovery Winch (SRW) | <p>1. Inspect self-recovery winch for obvious damage.</p> | Self-recovery winch unserviceable. |

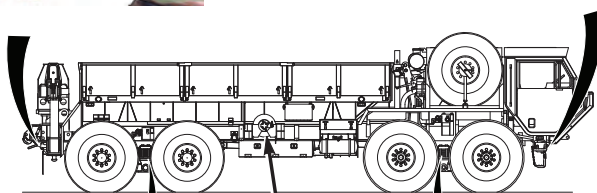
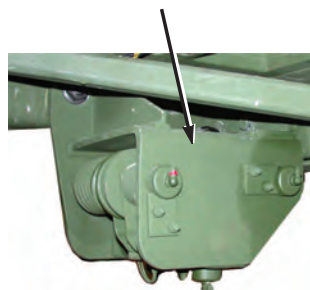
Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

REAR CABLE GUIDE



FRONT CABLE GUIDE



REAR TENSIONER



SELF-RECOVERY WINCH

FRONT TENSIONER



Figure 3.

2. Inspect front cable guide for any loose or missing parts and any obvious damage.

Front cable guide has loose or missing parts, or is

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| 7 | Before | Wheel Chocks | <p>3. Inspect front tensioner for loose or missing parts and any obvious damage.</p> <p>4. Inspect rear tensioner for loose or missing parts and any obvious damage.</p> <p>5. Inspect rear cable guide for loose or missing parts and any obvious damage</p> <p>Ensure vehicle is equipped with four wheel chocks.</p> <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Diesel engine slobber is an inherent condition of | <p>unserviceable.</p> <p>Front tensioner has loose or missing parts, or is unserviceable.</p> <p>Rear tensioner has loose or missing parts, or is unserviceable.</p> <p>Rear cable guide has loose or missing parts, or is unserviceable.</p> <p>Vehicle is equipped with less than four wheel chocks.</p> |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|--|
| 8 | Before | Passenger Side Exterior | <p>diesel engines. When diesel engines are allowed to idle for prolonged periods of time, this characteristic may be interpreted as a Class III leak. Check engine oil level. If there is any doubt, contact your supervisor or field level maintenance.</p> <ul style="list-style-type: none"> If leakage is detected, further investigation is needed to determine the location and cause of the leak. If there is any doubt, contact your supervisor or field level maintenance. <ol style="list-style-type: none"> 1. Check underneath entire length of driver side of vehicle for fluid and air leaks. 2. Visually check driver side of vehicle for obvious damage that would impair operation. | <p>Any fuel leak, Class III leak (other than fuel), or air lines/fittings leaking or damaged.</p> <p>Any damage that would impair operation.</p> |

Table 1. PMCS - BEFORE - Continued

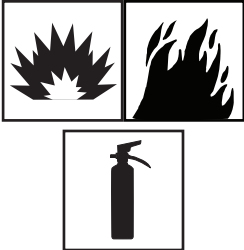
| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 9 | Before | Fuel/ Water | <p style="text-align: center;">WARNING</p> <div style="text-align: center;">  </div> <p>Fuel is very flammable and can explode easily. Keep fuel away from open fire and keep fire extinguisher within easy reach when working with fuel. Do not work on fuel system when engine is hot. Fuel can be ignited when engine is hot. When working with fuel, post signs that read NO SMOKING WITHIN 50 FEET OF VEHICLE. Failure to comply may result in injury or death to personnel.</p> <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Drain fuel into suitable container. • Operation of vehicle with malfunctioning fuel/water separator may violate AR 385-55. (WP 0173) <p>1. Check for level of water in bowl of fuel/water separator. If there is</p> | |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| | | Separator | water, turn thumb nut on bottom of bowl to open contaminant drain valve. Keep drain open until only pure fuel is flowing out of drain tube. Close drain valve by turning thumb nut. | |

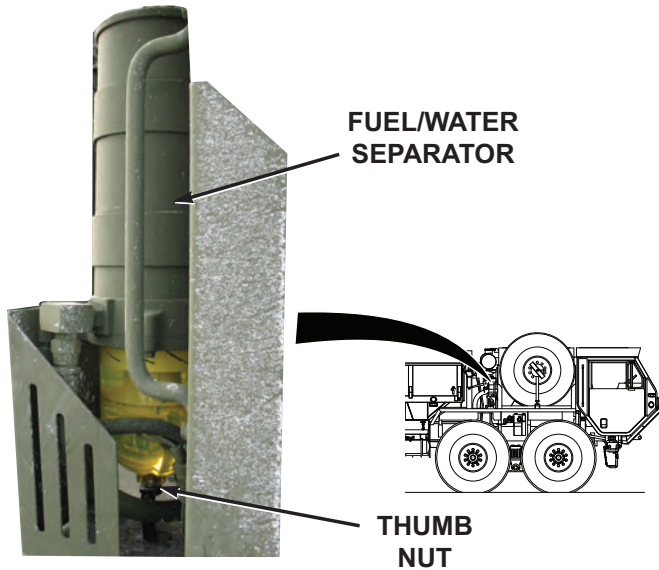


Figure 4.

| | | | |
|--|--|---|-------------------|
| | | 2. Check fuel/water separator for leaks and damage. | Any fuel leaking. |
|--|--|---|-------------------|

Table 1. PMCS - BEFORE - Continued


| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| 10 | Before | Passenger Side Tires | <p style="text-align: center;">WARNING</p>  <p>Do not operate a vehicle with a tire in an over-inflated or under-inflated condition, or with a questionable defect. Failure to comply may result in injury or death to personnel and damage to equipment.</p> <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Remember that a tire in storage (spare) can be flat but not look like it. The HEMTT tire sidewalls can support the wheel. Don't be fooled. • A tire is bad or in need of repair if the bead, sidewall, and tread areas show signs of damage. • Remember that this process requires you to make judgment calls and the goal is to safely maintain equipment in top quality conditions. <p>1. Check for correct air pressure on each passenger side tire</p> | Tire missing, deflating |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | or excessively worn. |

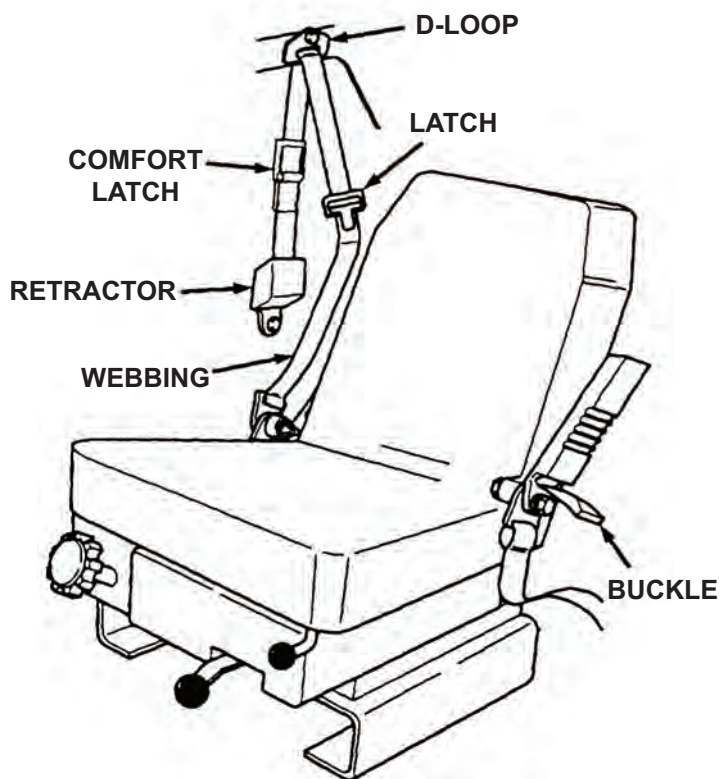


Figure 5.

b. Check D-loop for free rotation, deformation, cracks, or damage.

D-loop does not rotate freely or is deformed,

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|--|
| | | | <p>c. Check comfort latch for proper operation, cracks, or damage.</p> <p>d. Check latch and buckle for wear, deformation, damage, or broken casing.</p> <p>e. Check latch and buckle for proper operation.</p> | <p>cracked, or broken.</p> <p>Comfort latch is broken, or does not lock in place easily, and does not release by tugging down on webbing.</p> <p>Molded plastic around buckle/latch is deformed, cracked, or broken.</p> <p>Buckle/latch do not engage with a solid sounding "click" and/or do not release freely when button on buckle is pushed.</p> |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|---|
| | | | <ul style="list-style-type: none"> f. Check that retractor is not locked up, and pays out/reels in webbing properly. g. Check all seat belt mounting hardware for looseness and other damage. <p>2. Check four-point seat belt system as follows:</p> <ul style="list-style-type: none"> a. Check seat belt strap webbing wear, tears, fraying, etc. | <p>Retractor does not operate properly or retractor cover is cracked/ broken.</p> <p>Seat belt hardware is loose, missing, rusted, corroded, or damaged.</p> <p>Webbing is cut, frayed or excessively worn.</p> |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

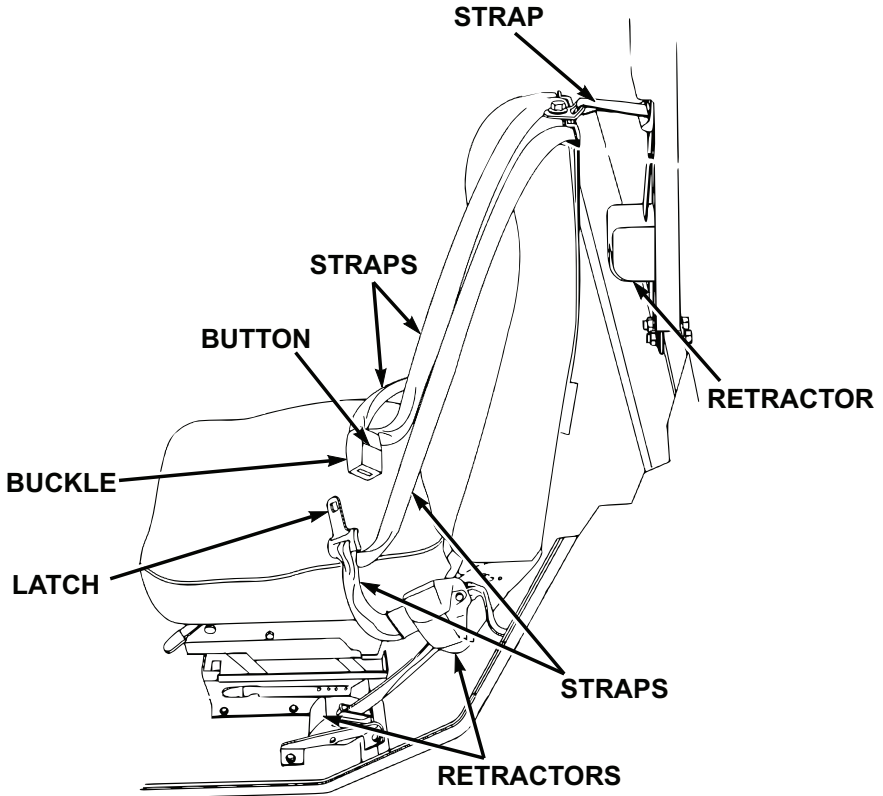


Figure 6.

| | | | |
|--|--|--|---|
| | | <p>b. Check latch and buckle for proper operation, wear, deformation, damage, and broken casing.</p> | <p>Buckle/latch does not engage with a solid-sounding "click" and/or does not</p> |
|--|--|--|---|

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|---|
| 12 | Before | Seats | <p>c. Check all seat belt retractors are not locked up and pay out/reel in webbing straps properly.</p> <p>d. Check all seat belt mounting hardware for looseness and other damage.</p> <p>Check operation of seat adjusting mechanisms. (WP 0023)</p> | <p>release freely when button is pushed. Molded plastic around buckle/latch is deformed, cracked, or broken.</p> <p>Retractor(s) do not operate properly, or retractor cover(s) are cracked/ broken.</p> <p>Hardware is loose, missing, rusted, corroded, or damaged.</p> <p>Seat adjustment mechanism broken or missing.</p> |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

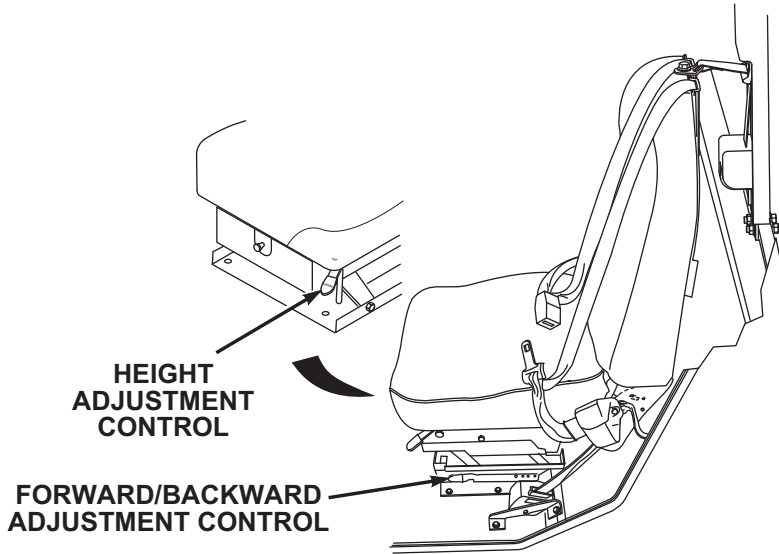


Figure 7.

| | | | | |
|----|--------|-------------------------|--|---------------------------------------|
| 13 | Before | Fire Extinguisher (cab) | 1. Check for missing or damaged fire extinguisher. | Fire extinguisher missing or damaged. |
|----|--------|-------------------------|--|---------------------------------------|

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

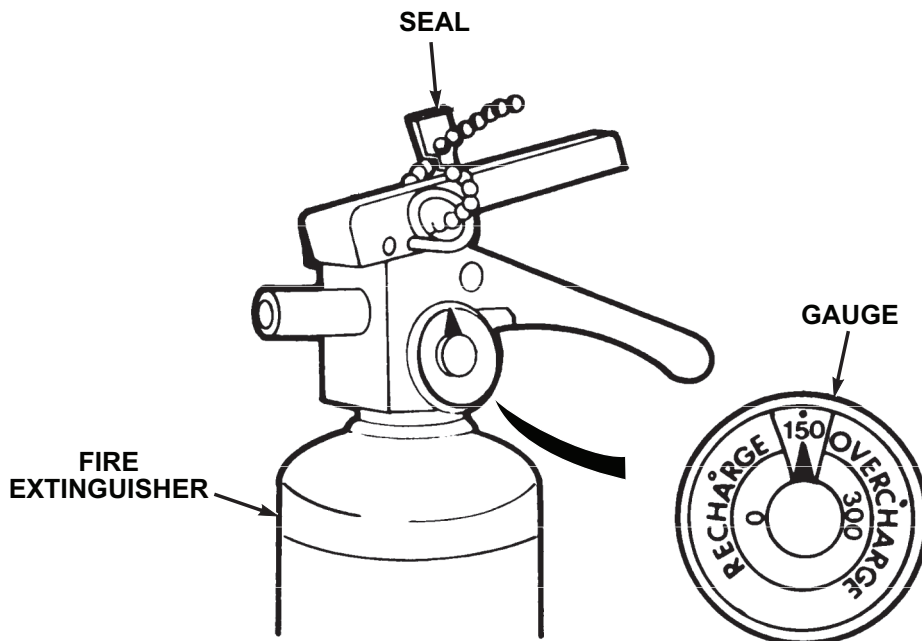


Figure 8.

| | | | |
|--|--|--|--|
| | | <ol style="list-style-type: none"> 2. Check gauge for proper pressure of about 150 psi (1034 kPa). 3. Ensure fire extinguisher mounting is secure. | <p>Pressure gauge needle in RECHARGE area.</p> |
|--|--|--|--|

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|---|
| | | | <p>4. Check for damaged or missing seal.</p> <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Complete all start engine (WP 0038) procedures, and comply with all notes, cautions, and warnings within that procedure before completing the PMCS checks below. • Once all start engine (WP 0038) procedures are completed, engine should be kept running for the remaining PMCS checks. | Seal broken or missing. |
| 14 | Before | Engine | <p>Start engine. (WP 0038)</p> <p style="text-align: center;">NOTE</p> <p>Check the instruments listed below for damage, operation, and condition.</p> | Engine fails to start. |
| 15 | Before | Instruments | <p>1. Engine OIL PRESS gauge.</p> | Engine OIL PRESS gauge is in-operative. |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

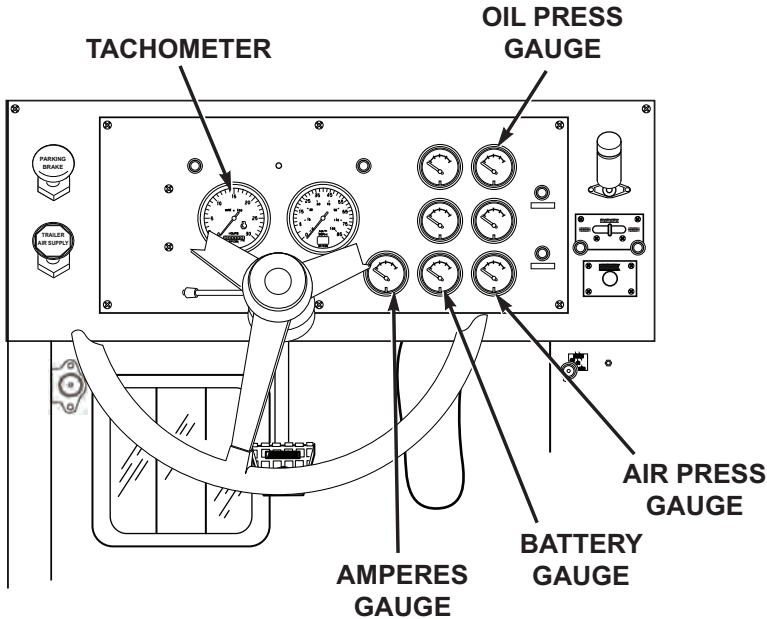


Figure 9.

| | | | |
|--|--|-----------------------|--|
| | | <p>2. Tachometer.</p> | <p>Tachometer is inoperative or indicates less than 700 rpm or more than 725 rpm at idle after engine has been properly warmed up (start en-</p> |
|--|--|-----------------------|--|

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| | | | <p data-bbox="543 607 807 638">3. BATTERY gauge.</p> <p data-bbox="543 942 807 973">4. AMPERES gauge.</p> <p data-bbox="715 1233 807 1264" style="text-align: center;">NOTE</p> <p data-bbox="587 1283 933 1525">Air pressure buzzer will sound anytime low air indicator is illuminated. Ensure low air indicator and buzzer activate when air pressure falls below 60 to 75 psi (414 to 517 kPa) in either front or rear air system.</p> <p data-bbox="543 1556 807 1587">5. AIR PRESS gauge.</p> | <p data-bbox="1030 456 1173 578">gine (WP 0038) procedure completed).</p> <p data-bbox="1030 607 1173 911">BATTERY gauge is in-operative, or indicates less than 24 VDC or more than 30 VDC with engine running.</p> <p data-bbox="1030 942 1173 1184">AMPERES gauge is in-operative, or shows a negative reading with engine running.</p> <p data-bbox="1030 1556 1173 1616">AIR PRESS gauge is in-</p> |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|---|
| | | | <p>6. Air filter restriction indicator.</p> | <p>operative or indicates either system is below 60 psi (414 kPa) after engine has been properly warmed up (start engine (WP 0038) procedure completed). Low air pressure indicator and/or buzzer remain on, or do not operate.</p> <p>Air filter restriction indicator inoperative, cracked, or unserviceable.</p> |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

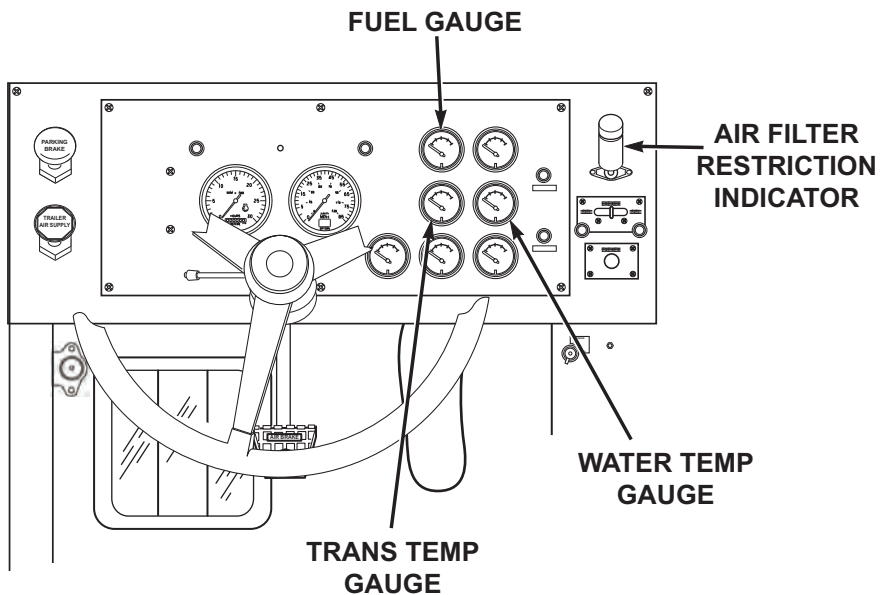


Figure 10.

NOTE

Several minutes are required for engine to warm up so an accurate reading can be taken.

- 7. WATER TEMP gauge.

WATER TEMP gauge is inoperative, or indicates less than

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| | | | <p style="text-align: center;">NOTE</p> <p>Transmission may not reach 160°F (71°C) oil temperature at idle for several minutes.</p> <p>8. TRANS TEMP gauge.</p> <p>9. FUEL gauge.</p> | <p>140°F (60°C) or more than 230°F (110°C) after engine has been properly warmed up (start engine (WP 0038) procedure completed).</p> <p>TRANS TEMP gauge indicates more than 250°F (121°C).</p> <p>FUEL gauge is inoperative, or indicates less than the required amount of fuel needed</p> |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--|--|------------------------------------|
| 16 | Before | TRANSFER CASE Shift Lever and TRACTION CONTROL lever | <p style="text-align: center;">CAUTION</p> <p>Vehicle must be parked when making this check. Failure to comply may result in damage to equipment. Transfer case will be damaged if shifted while vehicle is moving.</p> <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Engine must be running to perform this check. • Transmission must be in N (neutral) to perform this check. <p>1. TRANSFER CASE Shift Lever - Check operation: (WP 0042)</p> | to complete the mission. |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

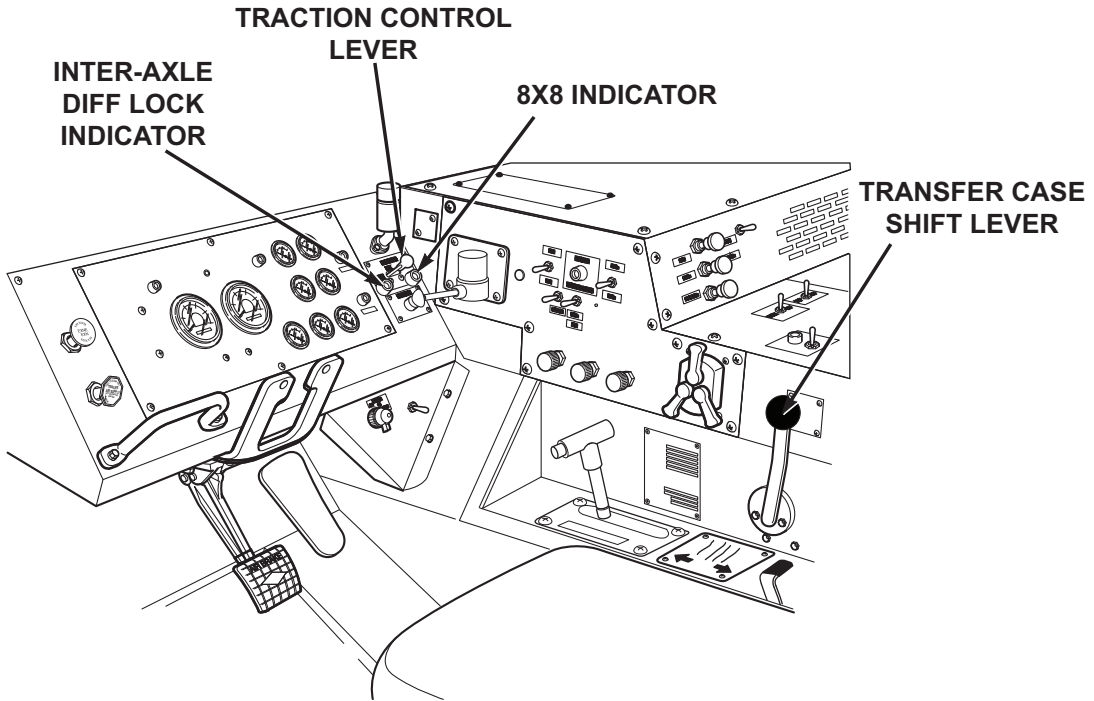


Figure 11.

- a. Set transfer case shift lever to each range position.
- b. Transfer case shift lever should move freely through all range positions.

TRANSFER CASE shift lever inoperable or binds between

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| 17 | Before | Engine Retarder/ Brake | <p>2. TRACTION CONTROL Lever - Check operation: (WP 0021)</p> <p>a. TRACTION CONTROL lever should slide smoothly, and interact with transfer case shift lever to show correct indications on dash panel.</p> <p style="text-align: center;">NOTE</p> <p>Engine must be running to perform this check.</p> <p>1. Check engine retarder/brake for proper operation (WP 0043) (vehicle stationary) using the following procedures:</p> <p>a. Pull out PARKING BRAKE control.</p> | <p>range de-tents.</p> <p>TRACTION CONTROL lever or indicators inoperable.</p> |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

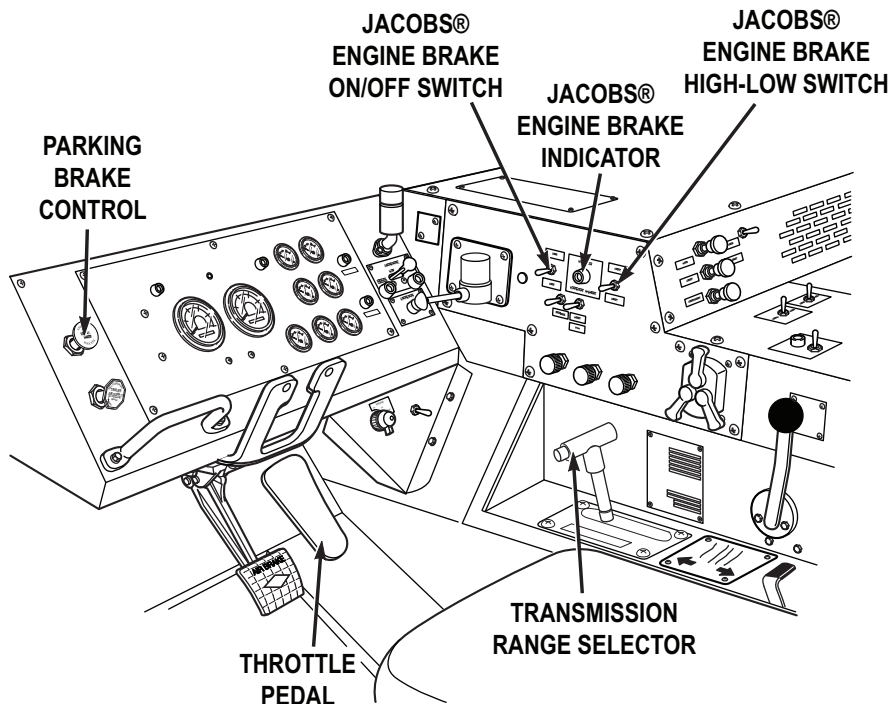


Figure 12.

| | | | |
|--|--|--|--|
| | | <ul style="list-style-type: none"> b. Set transmission range selector to N (neutral) position. c. Apply throttle pedal and increase engine speed to 1900-2100 rpm for several seconds to allow | |
|--|--|--|--|

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| 18 | Before | Steering | <p>transmission to upshift to at least 2 (2nd gear range).</p> <p>d. Set JACOBS ® ENGINE BRAKE ON/OFF switch to ON position, JACOBS ® ENGINE BRAKE indicator light will come on.</p> <p>e. Release throttle pedal and listen for engine "popping" or "chattering" sounds that indicate engine retarder/ brake is engaged and operating.</p> <p style="text-align: center;">NOTE</p> <p>Engine must be running to perform this check.</p> <p>1. Check vehicle steering for proper operation:</p> <p>a. Turn steering wheel from full left to full right, back to full left.</p> <p style="text-align: center;">NOTE</p> <p>Engine must be running to perform this check.</p> | Steering inoperable or binds. |
| 19 | Before | PTO Switch | Set PTO ENGAGE switch to ON position. Indicator light will illuminate. | PTO ENGAGE switch and/or indicator |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | does not operate. |

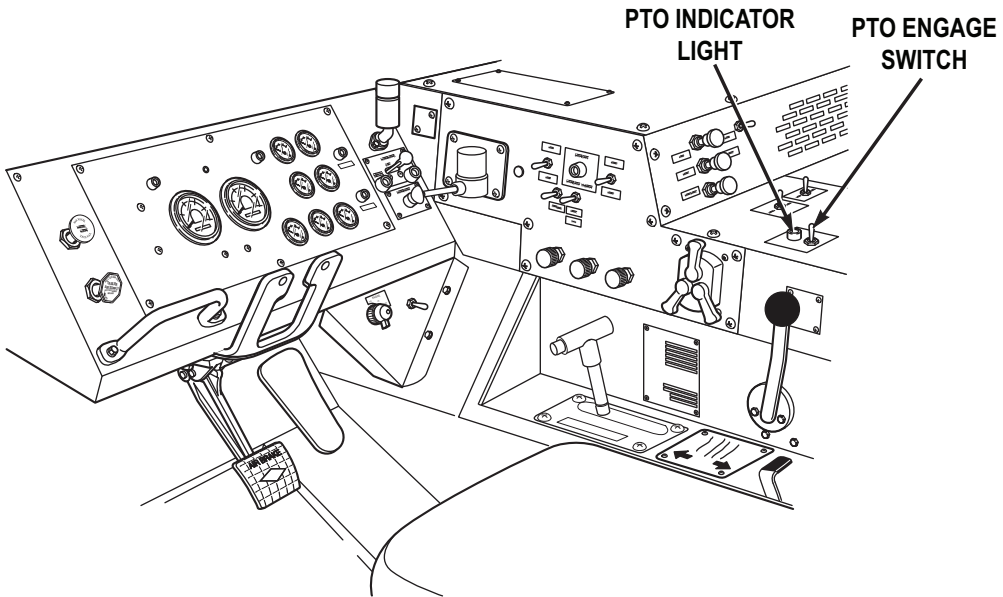


Figure 13.

WARNING



Check for overhead power lines or other obstructions prior to attempting LHS operation. LHS reaches a height of

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| 20 | Before | LHS | <p>18 ft. 2 in. (5.23 m). Failure to comply may result in injury or death to personnel.</p> <p>1. Check for proper operation of hydraulic selector switch and joystick control:</p> | |

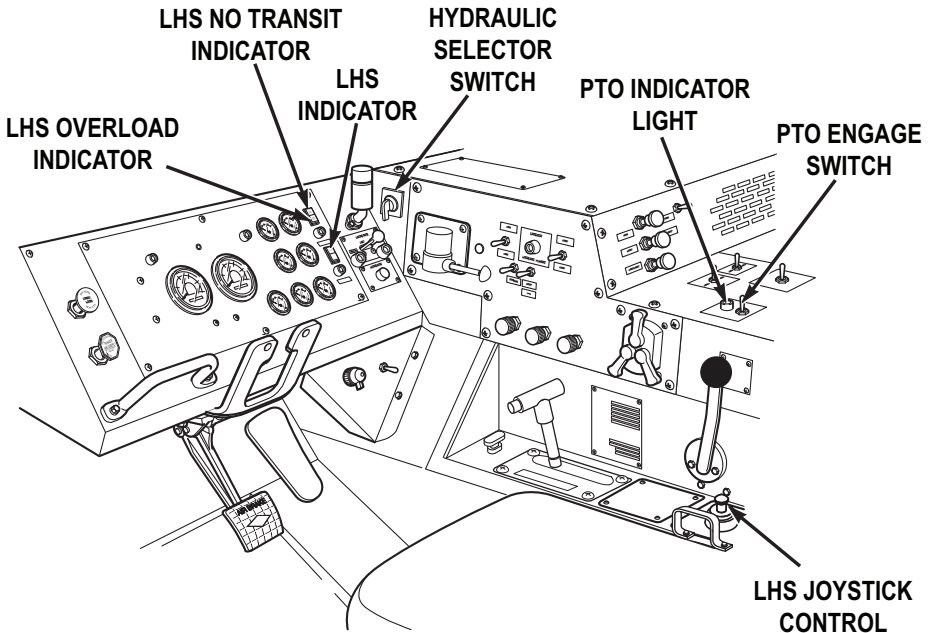


Figure 14.

- a. Set PTO ENGAGE switch to ON position. Indicator light will illuminate.

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| | | | <p style="text-align: center;">CAUTION</p> <p>Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.</p> <p style="text-align: center;">NOTE</p> <p>LHS indicator will illuminate green when hydraulic selector switch is moved out of OFF position.</p> <p>b. Turn hydraulic selector switch to AUTO.</p> <p>c. Move joystick to UNLOAD position and raise LHS approximately 1-2 ft. (30-61 cm).</p> <p>(1) LHS NO TRANSIT indicator will illuminate (red).</p> <p>(2) LHS OVERLOAD indicator may illuminate (yellow) if system is overloaded.</p> <p>2. Move joystick to LOAD position, LHS NO TRANSIT indicator will go out when LHS is completely loaded.</p> | |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 21 | Before | WIPER/ Washer Controls | <p style="text-align: center;">CAUTION</p> <p>Engine speed must be at idle before using hydraulic selector switch, or damage to equipment may result.</p> <ol style="list-style-type: none"> 3. Turn hydraulic selector switch to OFF. LHS indicator will go out. 4. Set PTO ENGAGE switch to OFF position. Indicator light will go out. <p style="text-align: center;">NOTE</p> <p>Operation of vehicle with malfunctioning windshield wiper may violate AR 385-55. (WP 0173)</p> <ol style="list-style-type: none"> 1. Check WIPER controls (driver and passenger side) for proper operation. (WP 0033) | |

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | |

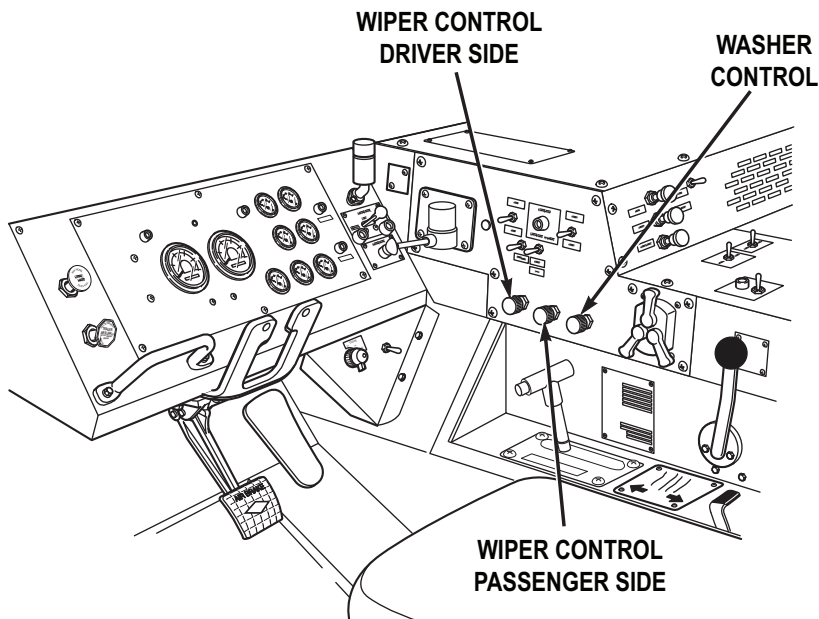


Figure 15.

2. Check windshield washer control for proper operation. (WP 0033)

NOTE

- Engine must be running to perform this check.
- Operation of vehicle with malfunctioning windshield wiper may violate AR 385-55. (WP 0173)

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 22 | Before | Parking Brake Control | 1. Check PARKING BRAKE control for proper operation: (WP 0039) | |

PARKING BRAKE CONTROL

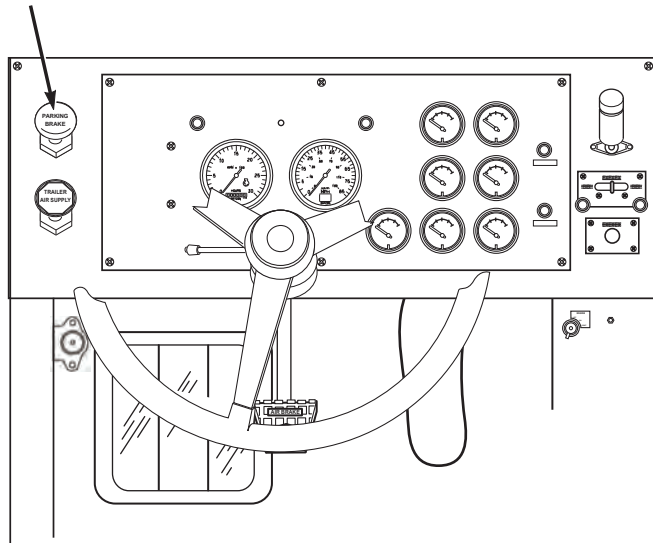


Figure 16.

| | | | |
|--|--|--|--|
| | | <ol style="list-style-type: none"> a. With vehicle at idle and service brake pedal engaged, (WP 0040) set transmission range selector to D (drive). (WP 0042) b. Apply (pull out) PARKING BRAKE control. (WP 0039) | |
|--|--|--|--|

Table 1. PMCS - BEFORE - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|---|
| 23 | Before | Engine | <p>c. Release service brake pedal. (WP 0040)</p> <p>d. Set transmission range selector to N (neutral). (WP 0042)</p> <p style="text-align: center;">NOTE</p> <p>Operator may continue on with mission if vehicle requires no servicing.</p> <p>Shut OFF engine (WP 0051) (as required).</p> | <p>Vehicle moves with PARKING BRAKE control applied (pulled out).</p> |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
DURING - PREVENTIVE MAINTENANCE**

INITIAL SETUP:

Tools and Special Tools

Gloves, Leather (WP 0175, Table 2)

Table 1. PMCS - DURING


| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| 1 | During | Engine | <p style="text-align: center;">WARNING</p> <div style="text-align: center;">  </div> <p>Ensure engine is OFF and eye protection is worn when checking for leaks. Failure to comply may result in injury or death to personnel.</p> <p>Check and/or listen for excessive smoke, unusual noise, rough running, and misfiring.</p> <p style="text-align: center;">NOTE</p> <p>Check trailer handbrake control lever only if a trailer is hooked up to vehicle.</p> | <p>Engine has excessive smoke, unusual noise, runs rough, or misfires.</p> |

Table 1. PMCS - DURING - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|---------------------------------|---|--|
| 2 | During | Trailer Handbrake Control Lever | Check trailer handbrake control lever for proper operation. (WP 0041) | Control lever does not apply trailer brakes. |

TRAILER HANDBRAKE CONTROL LEVER

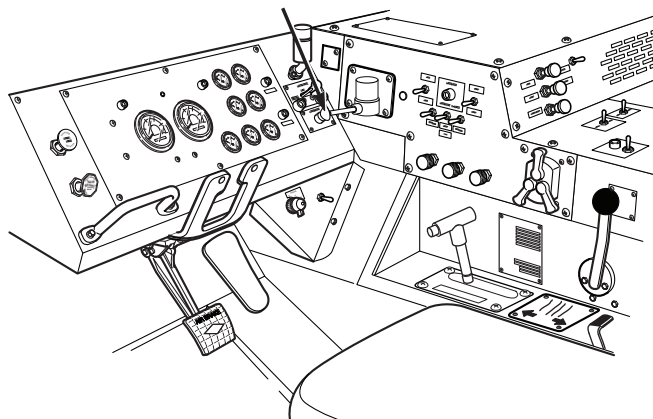


Figure 1.

Listen for actuation. If none, refer to applicable trailer operator's manual.

NOTE

During operation, all gauges should maintain the proper readings listed in the PMCS BEFORE checks. (WP 0157)

Table 1. PMCS - DURING - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|-----------------|-----------------|---------------------------------------|--|--|
| 3 | During | Instruments | Monitor all gauges, indicators, and warning lights for proper reading and operation while operating vehicle. | Gauges, indicators, and warning lights do not read/operate properly. |
| 4 | During | Transmission | Check transmission for proper operation. (WP 0042) | Transmission slips or will not shift. |
| 5 | During | Steering | Be alert for any unusual noise, binding, or difficulty in steering during operation. | Steering binds or is unresponsive. |
| 6 | During | Service Brakes | Be alert for chatter, noise, and side pull. | Service brakes do not operate properly. |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
AFTER - PREVENTIVE MAINTENANCE**

INITIAL SETUP:

Tools and Special Tools

Gloves, Leather (WP 0175, Table 2)

Table 1. PMCS - AFTER

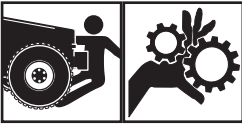

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| | | | <p style="text-align: center;">WARNING</p>  <p>Do not start engine or move vehicle when personnel are under vehicle or working on brake lines. Failure to comply may result in injury or death to personnel.</p> <p style="text-align: center;">WARNING</p>  <p>Ensure engine is OFF and eye protection is worn when checking for leaks. Failure to comply may result in injury or death to personnel.</p> | |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| | | | <p style="text-align: center;">NOTE</p> <p>Perform Operator's Before, After, and Weekly PMCS checks if:</p> <ul style="list-style-type: none"> • You are the assigned driver but have not operated the vehicle since the last weekly inspection. • You are operating the vehicle for the first time. <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Clean all lubrication points with cleaning compound, solvent and allow to dry prior to servicing. • When using a grease gun, apply lubricant to the fitting until clean lubricant squeezes out of the part being lubricated. • Always refer to lubrication instructions (WP 0163) to ensure equipment has correct lubricants appropriate to operating environment (expected continuous temperatures). If not, remove/drain and reapply/refill equipment with appropriate lubricants for operating environment as | |

Table 1. PMCS - AFTER - Continued


| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|---|
| 1 | After | Underneath Vehicle | <p>prescribed in lubrication instructions. (WP 0163)</p> <ol style="list-style-type: none"> 1. Check entire underside of vehicle for fluid and air leaks. 2. Check entire underside of vehicle for signs of fluid leakage (fuel, oil, and coolant). <p style="text-align: center;">WARNING</p> <div style="text-align: center;">  </div> <p>Prolonged contact with lubricating oil may cause skin rash. Immediately wash skin and clothing that come in contact with lubricating oil thoroughly and remove saturated clothing. Keep area well-ventilated to keep fumes at a minimum. Failure to comply may result in injury or death to personnel.</p> <p style="text-align: center;">CAUTION</p> <p>Do not fill hydraulic reservoir past FULL COLD mark. Fail-</p> | <p>Any fuel, Class III leak, or air lines/fittings leaking or damaged.</p> <p>Any fuel leak. Class III leak of any other fluid.</p> |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| 2 | After | Hydraulic Fluid Reservoir | <p>ure to comply may result in damage to equipment.</p> <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Hydraulic oil expands when heated, which may give the operator false (high) fluid level readings if the vehicle has been recently operated. • If possible, wait until hydraulic reservoir is completely cooled down (minimum of 2 hours) prior to adding hydraulic oil, otherwise fill reservoir to FULL COLD mark. <p>1. Check that hydraulic fluid level in sight glass on hydraulic fluid reservoir is at FULL COLD mark (may be above FULL COLD mark if vehicle has been recently operated). If low, add hydraulic oil to FULL COLD mark:</p> | |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | |



Figure 1.

- | | | |
|--|--|---|
| | | <ol style="list-style-type: none"> a. Remove cap from hydraulic reservoir. b. Fill hydraulic reservoir with lubricating oil (WP 0163, Table 4) until sight glass reads at FULL COLD mark. c. Install cap on hydraulic reservoir. |
|--|--|---|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|--|
| 3 | After | Driver Side Wheels | <ol style="list-style-type: none"> 2. Check appearance of hydraulic fluid in sight glass. Make sure it is clear and not milky or foamy. 1. Check wheels for broken, cracked, and bent surfaces. 2. Check lugnuts and wheel studs for obvious looseness and damage. If loose, tighten and report to maintenance as soon as practical. | <p>Fluid appears milky or foamy.</p> <p>Wheel is broken, cracked, or bent.</p> <p>Two or more lugnuts or studs on the same wheel are missing, broken, or bent.</p> |
| 4 | After | Driver Side Shock Absorbers | Check driver side shock absorbers for leaks and damage. | Damaged or Class III leak present. |
| 5 | After | Rear Exterior | Check rear of vehicle for obvious damage that would impair operation. | Any damage that would impair operation. |
| 6 | After | Towing Gladhands | Check for presence and condition of towing gladhands and rubber grommets. | |
| 7 | After | Passenger side Wheels | <ol style="list-style-type: none"> 1. Check wheels for broken, cracked, and bent surfaces. | Wheel is broken, |

Table 1. PMCS - AFTER - Continued


| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| 8 | After | Passenger Side Shock Absorbers | <p>2. Check lugnuts and wheel studs for obvious looseness and damage. If loose, tighten and report to maintenance as soon as practical.</p> <p>Check passenger side shock absorbers for leaks and damage.</p> <p style="text-align: center;">WARNING</p>  <p>Vehicles air system is pressurized, be sure to wear proper eye protection and keep face away from drain valves while draining air reservoirs. Open air drain valves slowly to prevent sudden blast of air. Failure to comply may result in injury to personnel.</p> | <p>cracked, or bent.</p> <p>Two or more lugnuts or studs on the same wheel are missing, broken, or bent.</p> <p>Damaged or Class III leak present.</p> |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 9 | After | Air Reservoirs | <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Only drain air reservoirs that are located under the passenger side battery box. • The M983 has three air reservoirs under the battery box, all other models have two. <p>1. Drain only air reservoirs under battery box as follows:</p> | |

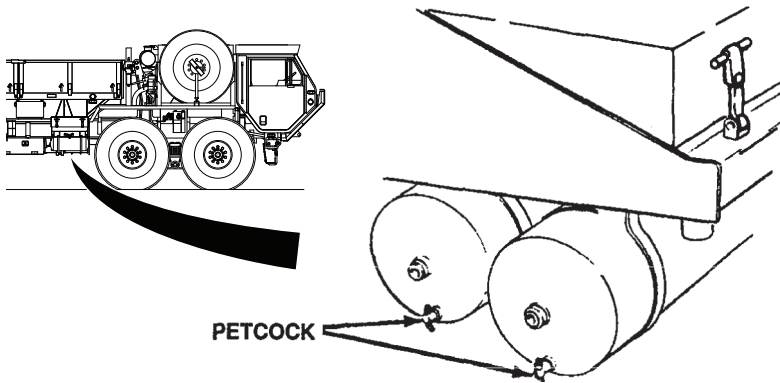


Figure 2.

- a. Turn petcock on bottom of reservoir to open position.
- b. Let condensation drain off.

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 10 | After | Transmission | <p>c. Turn petcock on bottom of reservoir to closed position.</p> <p style="text-align: center;">CAUTION</p> <p>Clean around end of fill tube prior to removing dipstick. This will aid in preventing dirt or foreign matter from entering the transmission and causing damage.</p> <p style="text-align: center;">NOTE</p> <p>Vehicle is parked (WP 0050) on a flat, level surface.</p> <p>Engine is at idle.</p> <p>Transmission is at normal operating temperature, 160-200°F (71-93°C).</p> <p>1. With engine running, check transmission fluid level on dipstick:</p> | |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

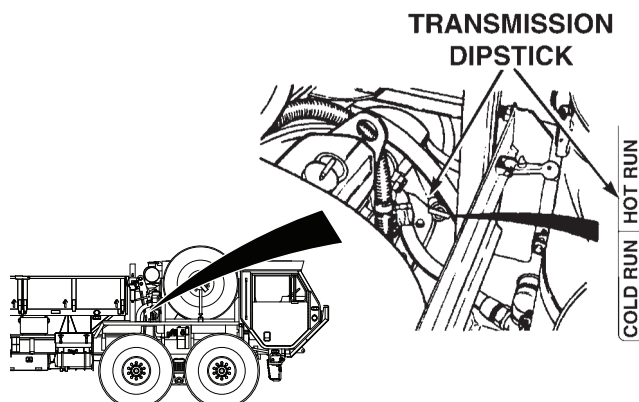


Figure 3.

NOTE

Fluid level should be between HOT FULL and HOT ADD marks.

2. Add OE/HDO (WP 0163, Table 2) as required or notify field level maintenance if overfull.

11 After

Spare Tire/ Wheel

1. Check spare tire for cuts, gouges, cracks, or scratches. Remove any sharp objects.

Tire has cuts, gouges, or cracks that could result in tire failure. Tire is missing or

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| 12 | After | Exterior of Cab | <ol style="list-style-type: none"> 2. Check wheel for broken, cracked, and bent surfaces. 3. Check lugnuts and wheel studs for obvious looseness and damage. 1. Visually inspect cab and components for damage. <p style="text-align: center;">NOTE</p> <p>Operation of vehicle with broken/missing mirrors may violate AR 385-55. (WP 0173)</p> | <p>unserviceable.</p> <p>Wheel is broken, cracked, or bent.</p> <p>Two or more lugnuts or studs are missing, broken, or bent.</p> <p>Any component is damaged that would impair vehicle mission.</p> |
| 13 | After | Mirrors | Check condition of mirrors. | |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

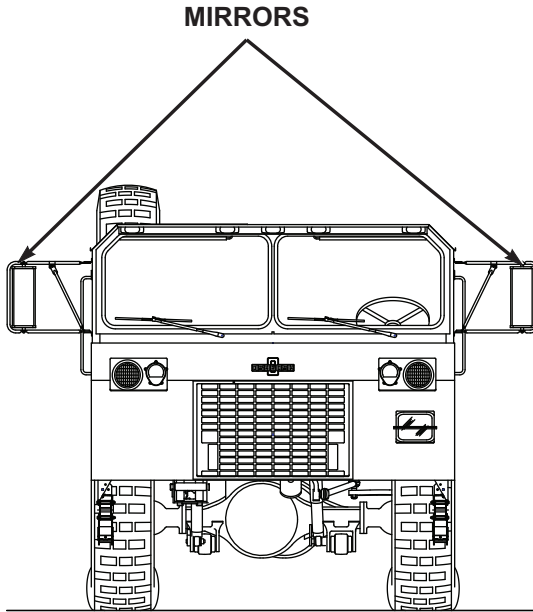


Figure 4.

NOTE

Operation of vehicle with damaged or missing windshield may violate AR 385-55. (WP 0173)

14

After

Windshield and Wiper Arms/Blades

1. Check windshield glass for presence and condition.

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

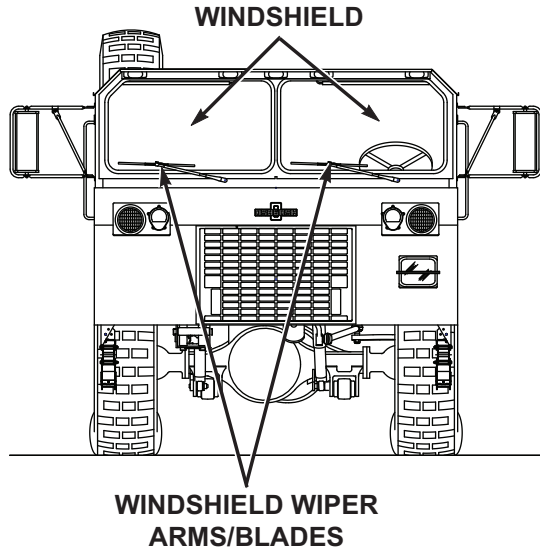


Figure 5.

| | | | | |
|----|-------|------------|---|--|
| 15 | After | Fan Switch | <p style="text-align: center;">NOTE</p> <p>Operation of vehicle with damaged wiper arms/blades may violate AR 385-55. (WP 0173)</p> <p>2. Check condition of wiper arms and blades.</p> <p>Check fan control switch for proper operation (WP 0034) in LO and HI positions.</p> | |
|----|-------|------------|---|--|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

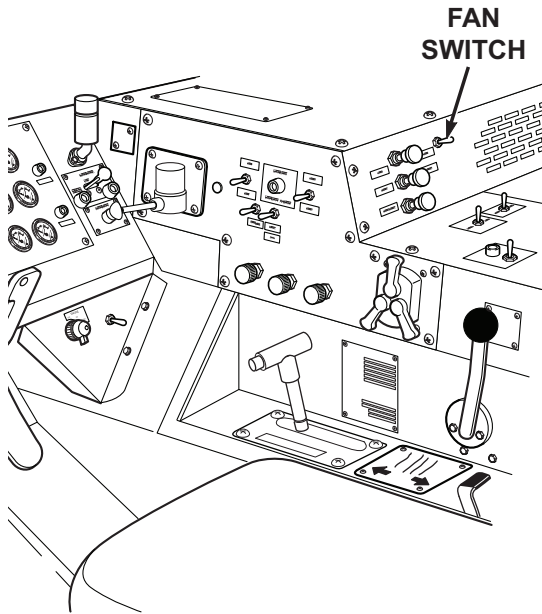


Figure 6.

NOTE

Operation of vehicle with malfunctioning windshield wiper may violate AR 385-55. (WP 0173)

16

After

WIPER/
Washer
Controls

1. Check WIPER controls (driver and passenger side) for proper operation. (WP 0033)

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

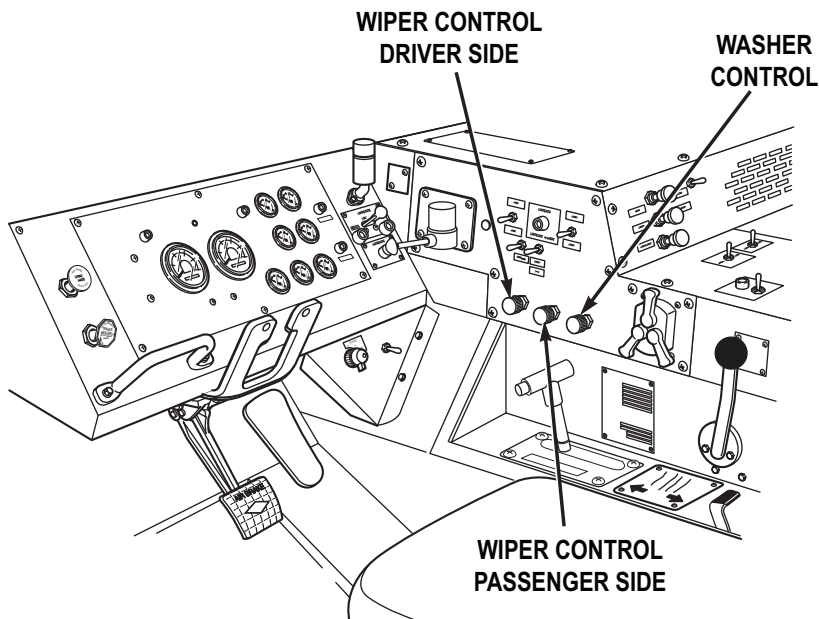


Figure 7.

| | | | | |
|----|-------|-------|--|--|
| 17 | After | Horns | <p>2. Check windshield washer control for proper operation.</p> <p>NOTE</p> <p>Operation of vehicle with malfunctioning horn may violate AR AR 385-55. (WP 0173)</p> <p>Check both horns (air and electric) for proper operation.</p> | |
|----|-------|-------|--|--|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|------------------------------------|---|------------------------------------|
| 18 | After | Turn Signal Control And Indicators | <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Light checks will require assistance. • Operation of vehicle with malfunctioning turn signal control may violate AR 385-55. (WP 0173) <p>1. Check turn signal control for proper operation. (WP 0019)</p> | |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

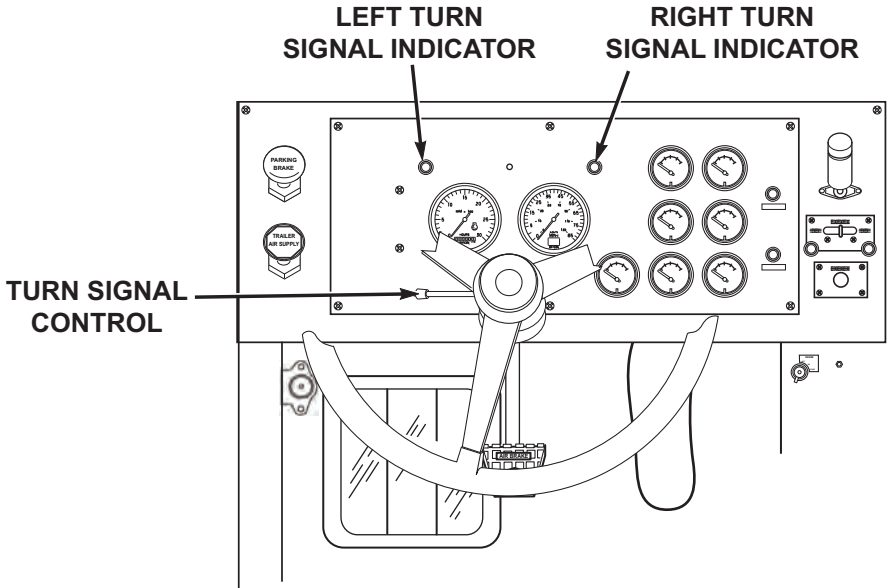


Figure 8.

2. Check turn signal indicators for proper operation. (WP 0021)

NOTE

- Light checks will require assistance.
- Operation of vehicle with malfunctioning emergency flasher control may violate AR 385-55. (WP 0173)

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| 19 | After | Emergency Flasher Control | Check emergency flasher control for proper operation. (WP 0019) | |

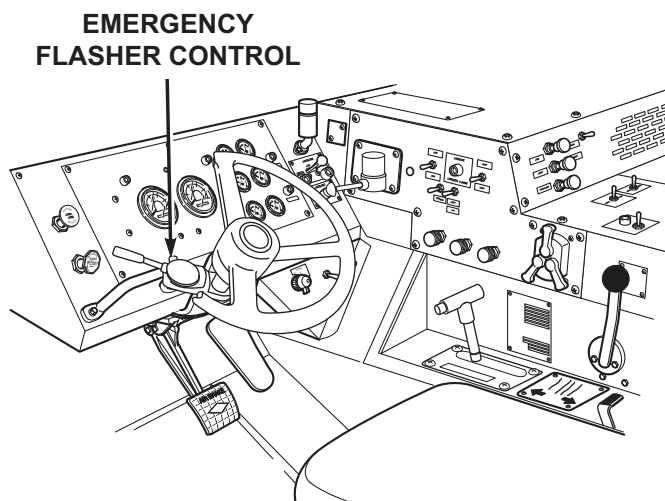


Figure 9.

NOTE

- Light checks will require assistance.
- Operation of vehicle with malfunctioning service lights may violate AR 385-55. (WP 0173)

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------------|--|------------------------------------|
| 20 | After | Lights | Check headlights, clearance lights, turn signals, and brake lights for proper operation. <p style="text-align: center;">NOTE</p> Operation of vehicle with malfunctioning beacon light may violate AR 385-55. (WP 0173) | |
| 21 | After | Portable Beacon Light (If equipped) | Remove beacon light from glove box and check for proper operation. (WP 0087) | |
| 22 | After | Load Handling System (LHS) | 1. Check LHS for loose and missing parts. | Parts are missing. |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

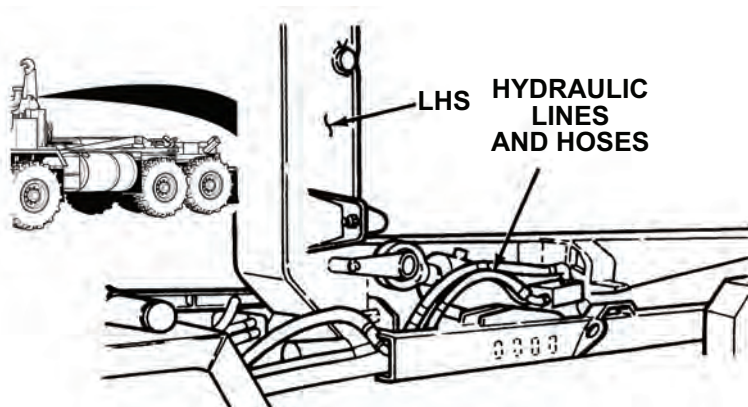


Figure 10.

| | | | | |
|----|-------|---|---|--|
| 23 | After | Front Lift Adapter (FLA) (If equipped) | <ol style="list-style-type: none"> 2. Visually check hydraulic hoses and lines for leaks. Visually check for cracked and kinked lines. 1. Check FLA for missing or damaged lockpin. If lockpin is missing or damaged, remove lockpin from rail transport lock for temporary use as replacement. | <p>Cracks or kinks that will impair operation are present. Class III leak present.</p> <p>lockpin is damaged or missing.</p> |
|----|-------|---|---|--|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

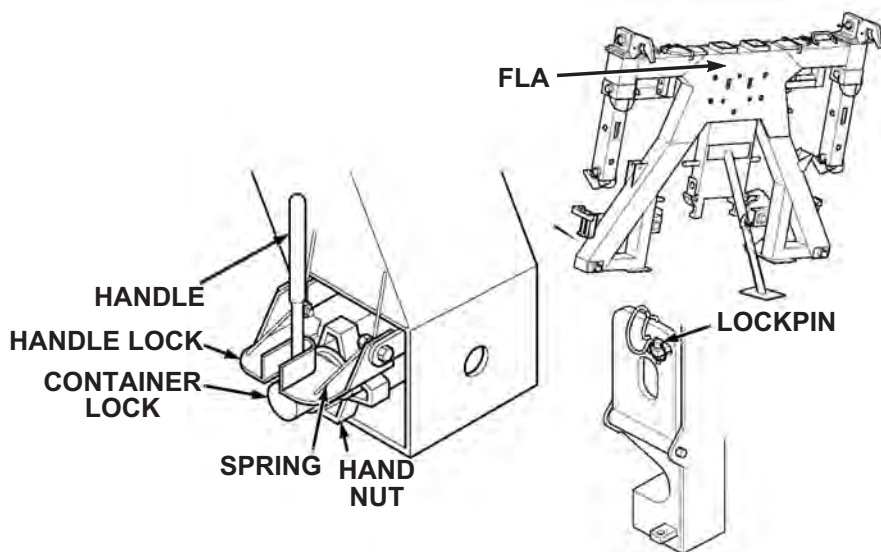


Figure 11.

| | | | |
|--|--|---|---|
| | | <ol style="list-style-type: none"> 2. Check container locks for damage and/or free rotation. 3. Check for damaged or missing handle lock, handle, hand nut, and spring. | <p>Container lock is damaged or missing.</p> <p>Handle lock, handle, hand nut, or spring is damaged or missing.</p> |
|--|--|---|---|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 24 | After | Rear Container Locks | <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • If hooks are missing or removed to replace lost pins, hook on opposite side must also be removed to maintain balance. • If pin or parts are damaged or missing, container guide storage pin may be used temporarily. <p>1. Check rear container locks for damaged and missing hooks.</p> | Hooks are missing or damaged. |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

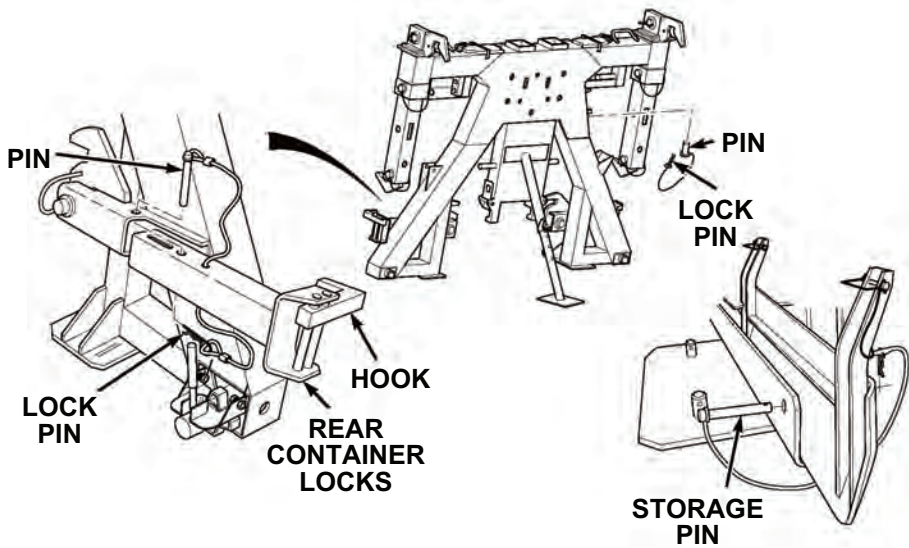


Figure 12.

2. Check for missing or damaged pins and lockpins.

Pins or lockpins are missing or damaged.

NOTE

If hooks are missing or removed to replace lost pins, hook on opposite side must

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 25 | After | Hooks | <p>also be removed to maintain balance.</p> <p>1. Check standard hooks, 6 ft. hooks, half-height hooks, and recovery hooks for missing or damaged pins and snapper pins.</p> | Hooks or pins missing or damaged. |

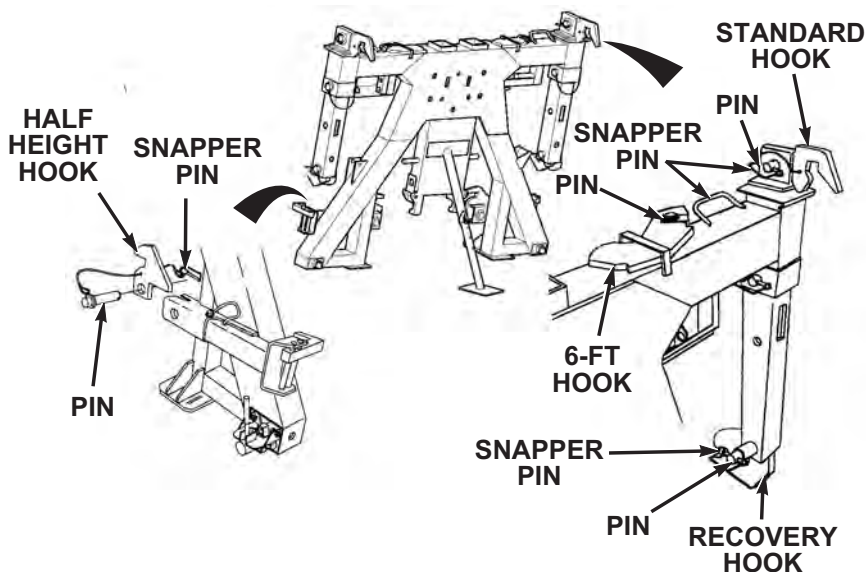


Figure 13.

| | | | |
|--|--|--|-----------------------------------|
| | | <p>2. If top hook pin or snapper pin is damaged or missing, remove pin and snapper pin from 6 ft. hook. Secure top hook with pin and snapper pin, then secure 6 ft. hook in truck.</p> | Hooks or pins missing or damaged. |
|--|--|--|-----------------------------------|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| | | | 3. If recovery hook pin, or snapper pin is damaged or missing, remove pin and snapper pin from lower end of rail transport strut in stowed location. Pin from slide arm could also be used. | Hooks or pins missing or damaged. |

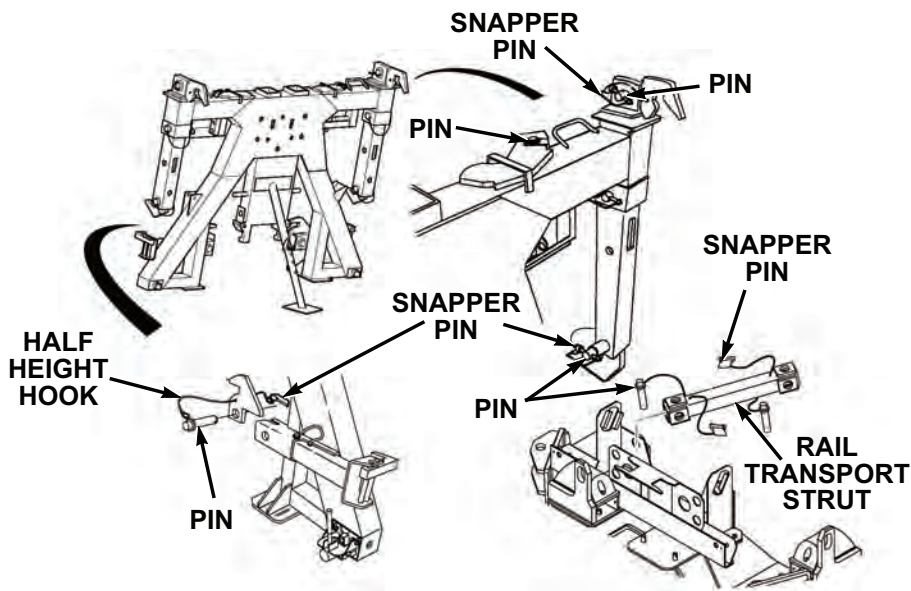


Figure 14.

| | | | | |
|----|-------|---------------|---|---------------------------------------|
| 26 | After | Bail Bar Lock | Check bail bar lock for missing or damaged pin and lockpin or deformation greater than 3/16 in. (4.76 mm), except handle. | Pin or lockpin is missing or damaged. |
|----|-------|---------------|---|---------------------------------------|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

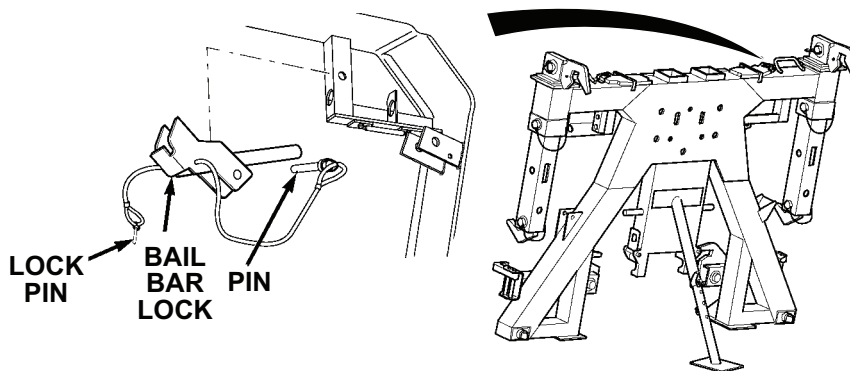


Figure 15.

NOTE

If slide arm, or snapper pin is damaged or missing, rail transport strut pin, and snapper pin can be used.

| | | | | |
|----|-------|-----------|--|--|
| 27 | After | Slide Arm | <ol style="list-style-type: none"> <li data-bbox="451 1223 875 1392">1. If truck is equipped with Container Handling Unit (CHU), make sure slide arm has free movement. | Slide arm is binding or does not have free movement. |
|----|-------|-----------|--|--|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

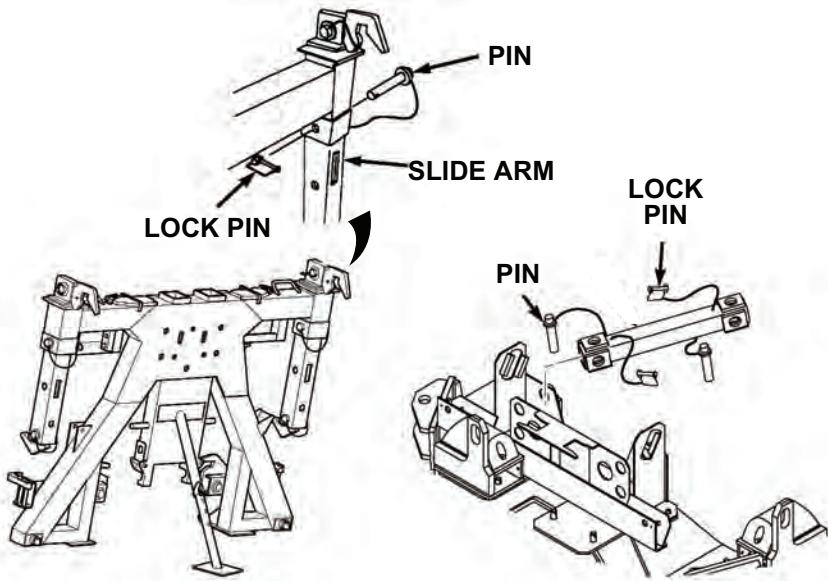


Figure 16.

| | | | | |
|----|-------|----------------------|---|---|
| 28 | After | Rail Container Locks | <p>2. Check for missing or damaged pins and lockpins.</p> <p>Check rail container locks for damage and free rotation.</p> | <p>Pin or lock-pin is missing or damaged.</p> <p>Rail container locks are damaged or do not have free rotation.</p> |
|----|-------|----------------------|---|---|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

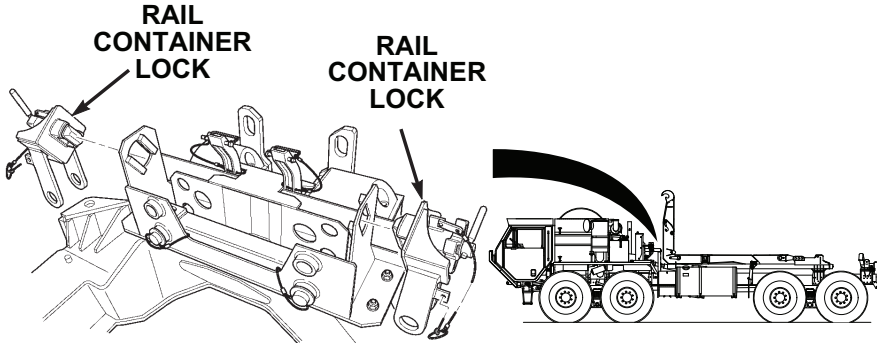


Figure 17.

| | | | | |
|----|-------|------------------------------------|---|--|
| 29 | After | Load Handling System (LHS) Rollers | Check LHS rollers for damage and binding. | LHS rollers missing, broken, binding, or inoperable. |
|----|-------|------------------------------------|---|--|

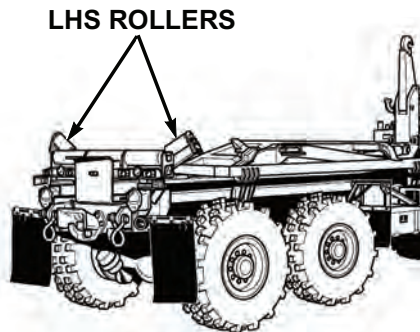


Figure 18.

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|---|--|---|
| 30 | After | Rear Sliders, Pivot Lockpin, and Container Lock Pivot Pin | <ol style="list-style-type: none"> <li data-bbox="543 469 982 589">1. If truck is equipped with Container Handling Unit (CHU), make sure rear sliders have free rotation. | Rear sliders are missing, damaged, binding, or unserviceable. |

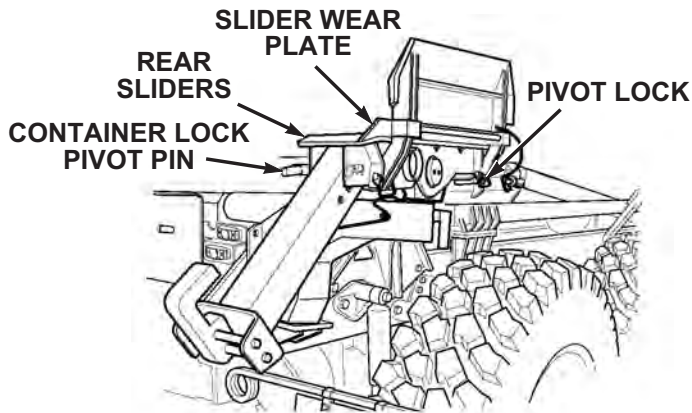


Figure 19.

| | | | |
|--|--|--|--|
| | | <ol style="list-style-type: none"> <li data-bbox="543 1317 982 1470">2. Check slider wear plate for any one gouge deeper than 1/4 in. (6.35 mm) or more than 80% of heat treat (black coating) is worn through to bare metal. <li data-bbox="543 1499 982 1587">3. Check pivot lock for missing or damaged parts and proper operation. | <p data-bbox="1030 1317 1165 1437">Slider wear plate is excessively worn.</p> <p data-bbox="1030 1499 1178 1619">Pivot lock does not operate properly or has</p> |
|--|--|--|--|

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|---|
| 31 | After | Container Guides | <p>4. Check container lock pivot pins for missing or damaged parts and proper operation.</p> <p>Check container guides for missing or damaged lockpins.</p> | <p>missing or damaged parts.</p> <p>Container lock does not operate properly or has missing or damaged parts.</p> <p>Container guide lockpins are missing or damaged.</p> |

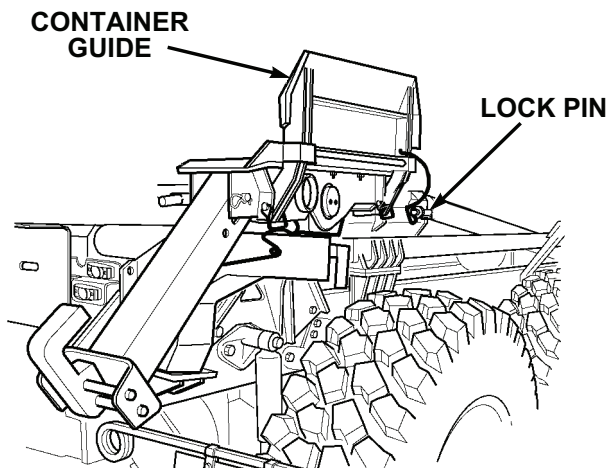


Figure 20.

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|---|
| 32 | After | Long and Short Strut | <p style="text-align: center;">NOTE</p> <p>If pin or lockpin is damaged or missing, temporary replacements may be removed from guide stowage location (in container mode). In flatrack mode, no pin is needed since properly stowed slider will hold long strut in stowed position.</p> <p>1. If truck is equipped with Container Handling Unit (CHU), ensure long strut and short strut have free rotation.</p> | Long strut or short strut are damaged or do not have free rotation. |

Table 1. PMCS - AFTER - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

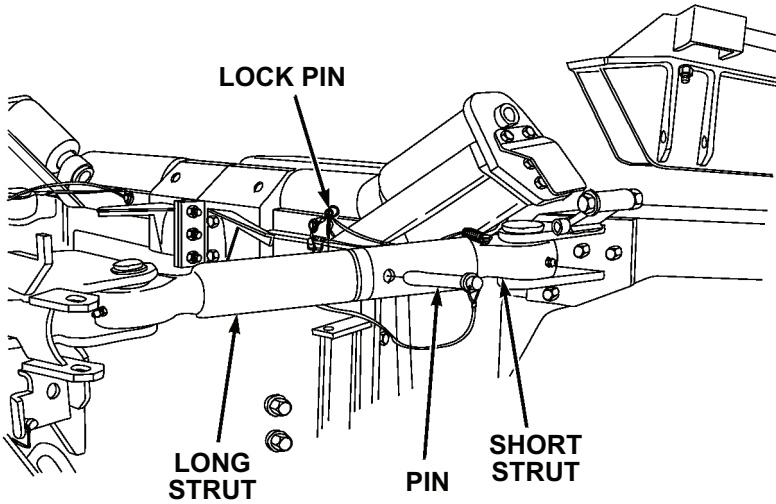


Figure 21.

| | | | | |
|--|--|--|---|---|
| | | | <p>2. Check for missing or damaged pins and lockpins.</p> | <p>Pins or lockpins are damaged or missing.</p> |
|--|--|--|---|---|

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
WEEKLY - PREVENTIVE MAINTENANCE**

INITIAL SETUP:

Tools and Special Tools

Gloves, Leather (WP 0175, Table 2)

Table 1. PMCS - WEEKLY

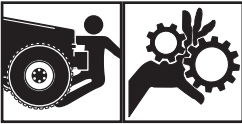

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| | | | <p style="text-align: center;">WARNING</p>  <p>Do not start engine or move vehicle when personnel are under vehicle or working on brake lines. Failure to comply may result in injury or death to personnel.</p> <p style="text-align: center;">WARNING</p>  <p>Ensure engine is OFF and eye protection is worn when checking for leaks. Failure to comply may result in injury or death to personnel.</p> | |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| | | | <p style="text-align: center;">NOTE</p> <p>Perform Operator's Before, After, and Weekly PMCS checks if:</p> <ul style="list-style-type: none"> • You are the assigned driver but have not operated the vehicle since the last weekly inspection. • You are operating the vehicle for the first time. <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Lubrication intervals are for normal operating conditions. Intervals may be shortened as required for severe operating conditions. • Clean all lubrication points with cleaning compound, solvent and allow to dry prior to servicing. • When using a grease gun, apply lubricant to the fitting until clean lubricant squeezes out of the part being lubricated. • Always refer to lubrication instructions (WP 0163) to ensure equipment has correct lubricants appropriate to operating environment (expected continuous | |

Table 1. PMCS - WEEKLY - Continued


| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|--|
| | | | <p>temperatures). If not, remove/drain and reapply/refill equipment with appropriate lubricants for operating environment as prescribed in lubrication instructions. (WP 0163)</p> <p style="text-align: center;">WARNING</p> <div style="text-align: center;">  </div> <p>Do not operate a vehicle with a tire in an over-inflated or under-inflated condition, or with a questionable defect. Failure to comply may result in injury or death to personnel and damage to equipment.</p> | |
| 1 | Weekly | Driver Side Tires | Check tires for correct air pressure. | |
| 2 | Weekly | Propeller Shafts and U-Joints | <ol style="list-style-type: none"> 1. Check propeller shafts and U-joints for excessive movement, obvious damage, and loose, missing or broken nuts and screws. | <p>Propeller shaft or U-Joint has excessive movement, obvious damage, or one or more nuts or screws are loose, miss-</p> |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | ing, or damaged. |

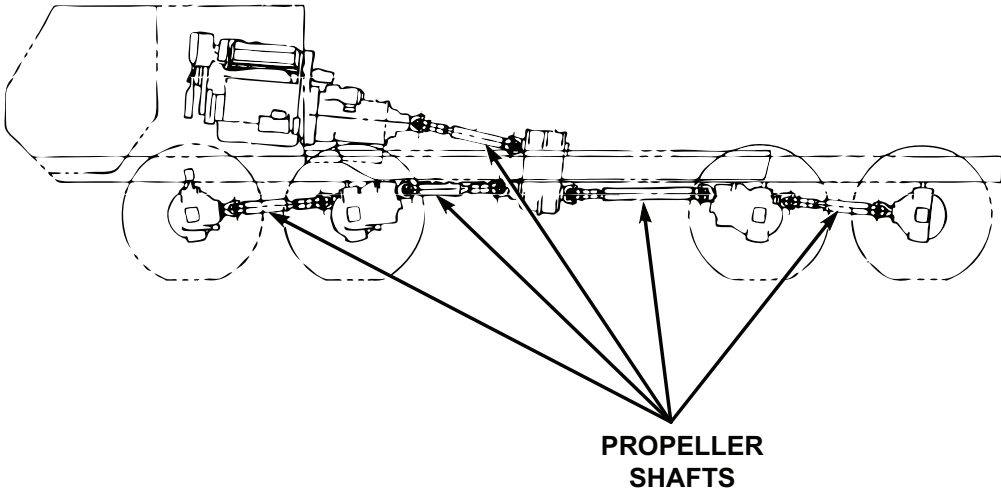


Figure 1.

NOTE

- When vehicle is operating under severe conditions, lubricate propeller shafts and universal joints every 50 hours of vehicle operation.
 - Complete Step 2 only if vehicle is operating under severe conditions.
2. Lubricate all propeller shafts, transmission to transfer case

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|-----------------|-----------------|---------------------------------------|--|---|
| 3 | Weekly | Axle Breathers | <p>propeller shaft, and U-joints with GAA (WP 0163) as required (refer to operator's semiannual PMCS table (item no. 2) for procedures. (WP 0161)</p> <p>Check four axle breathers for damage and free movement of vent caps on breather body.</p> | <p>Any axle breather caps are damaged or vent caps do not move freely on breather body.</p> |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

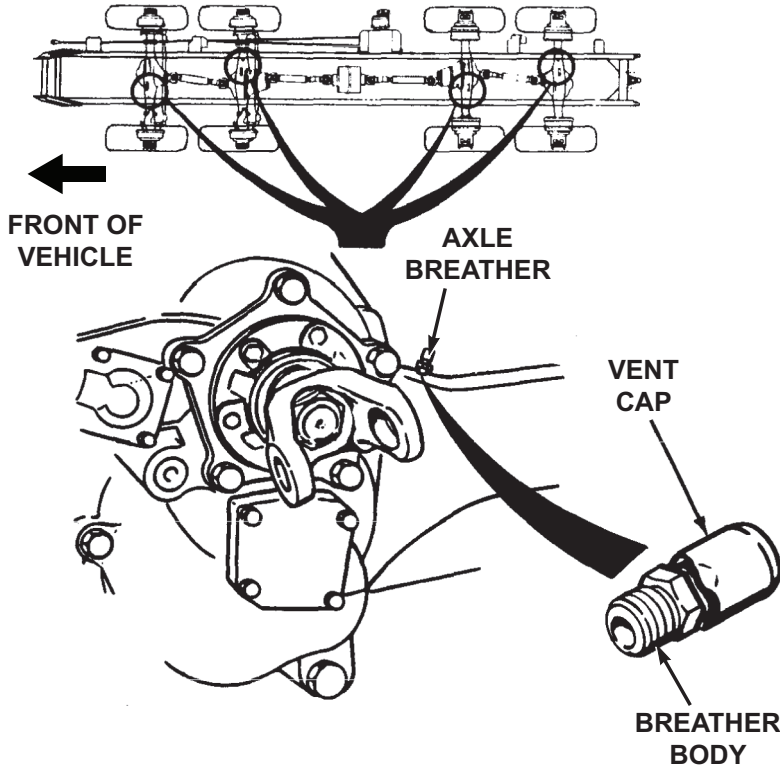


Figure 2.

| | | | | |
|---|--------|-------------------------------|--|--|
| 4 | Weekly | Drive Belts, Fan, and Pulleys | <ol style="list-style-type: none"> 1. Check drive belts for cracking, fraying, and breaks. Check for tightness. Play should be about 1/2 in. (13 mm). | Any drive belt is broken, cracked to the belt fiber, has more than one crack |
|---|--------|-------------------------------|--|--|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|--|
| | | | | (1/8 in. in depth or 50% of belt thickness), has frays more than 2 in. long or excessive play. |

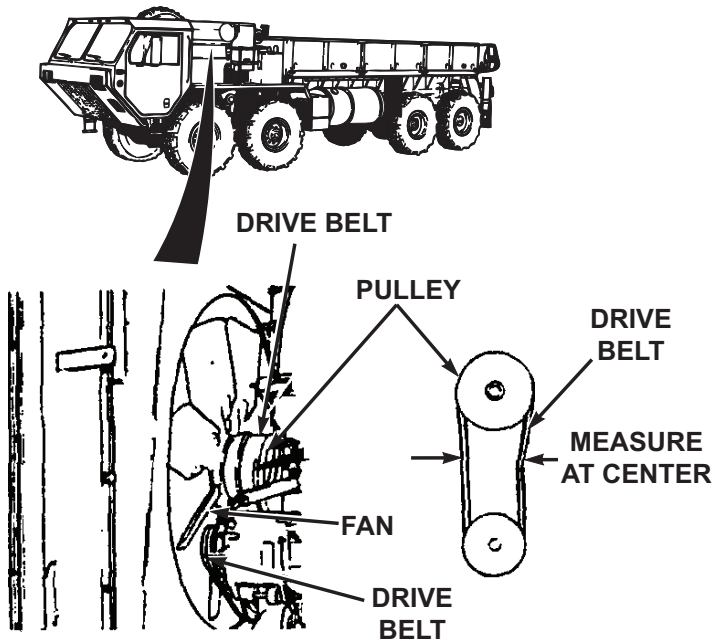


Figure 3.

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| 5 | Weekly | Exhaust System | <p>2. Check condition of fan for broken or cracked blades.</p> <p>3. Check for bent or damaged pulley.</p> <p style="text-align: center;">NOTE</p> <p>Operation of vehicle with any exhaust leaks may violate AR 385-55. (WP 0173)</p> <p>Check exhaust pipe, muffler, heatshield, tailpipe, raincap, clamps, and mounting for obvious damage, looseness, exhaust leak, and carbon buildup.</p> | <p>Fan damaged or un-serviceable.</p> <p>Pulley damaged or un-serviceable.</p> <p>Exhaust pipe between turbocharger and exhaust manifold leaks. Any exhaust pipe missing or damaged.</p> |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

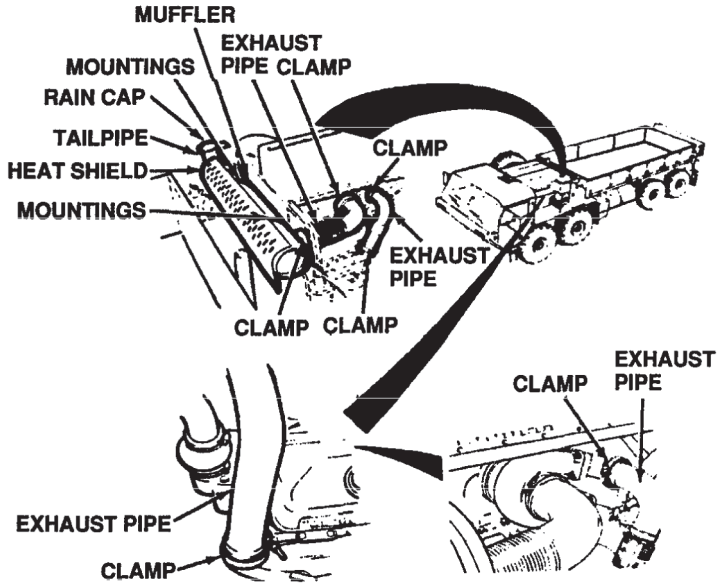


Figure 4.

| | | | | |
|---|--------|--|--|--|
| 6 | Weekly | Air Intake System/ Ether Starting Aid | 1. Squeeze air cleaner dust cap to remove excess dirt from canister. | |
|---|--------|--|--|--|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | |

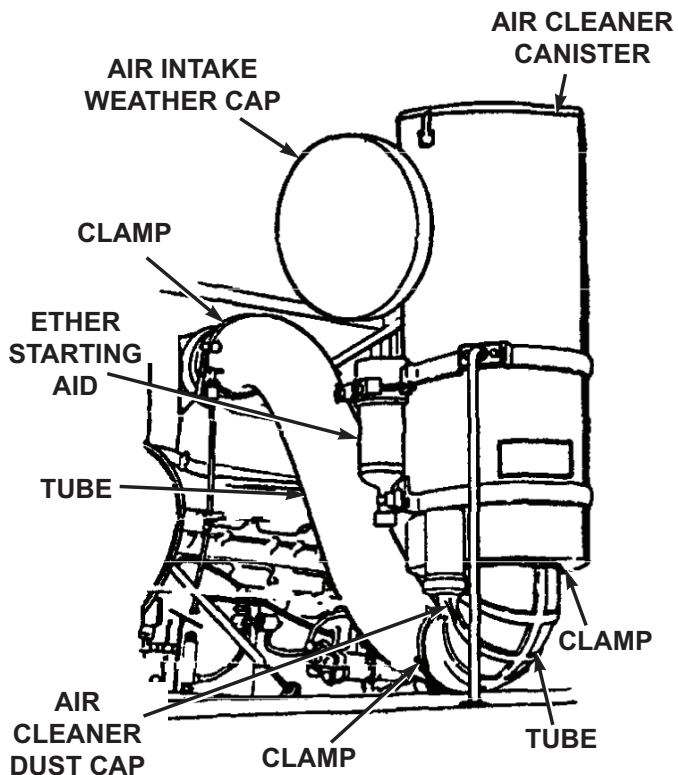


Figure 5.

2. Check that air intake weather cap is secure on air cleaner canister.

NOTE

Ether starting aid cartridges will be removed and solenoid

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|---|
| 7 | Weekly | Fuel Tank | <p>valve will be capped in tropical environment.</p> <p>3. Check ether starting aid for damage and missing hardware.</p> <p>4. Check air intake system for loose or damaged clamps and damage to tube.</p> <p>Check fuel tank, fuel hoses, fuel tank connections, and fuel tank socket head pipe plug for leaks and/or damage.</p> | <p>Air intake system has missing or inoperable clamps, or damage to tube.</p> <p>Any fuel leak.</p> |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

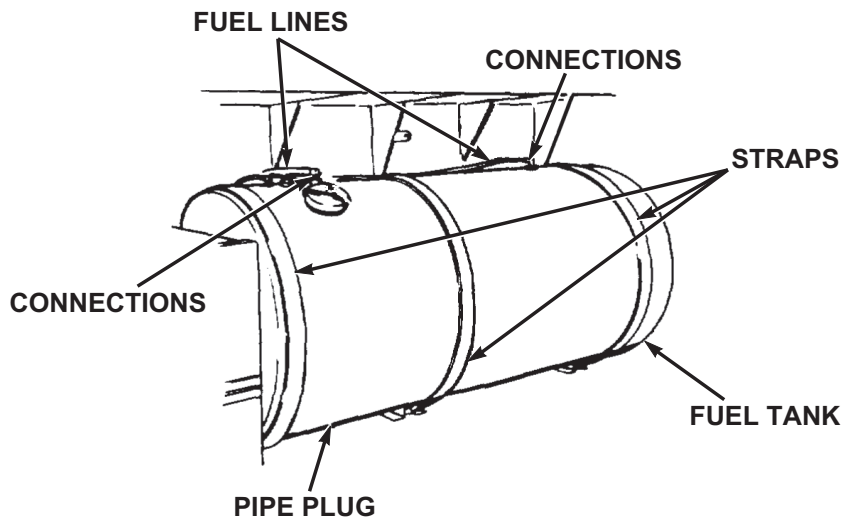


Figure 6.

| | | | | |
|---|--------|--------------------|---|--|
| 8 | Weekly | Fuel Tank Strainer | Check fuel tank strainer for clogs or damage. If strainer is clogged, clean strainer. | |
|---|--------|--------------------|---|--|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

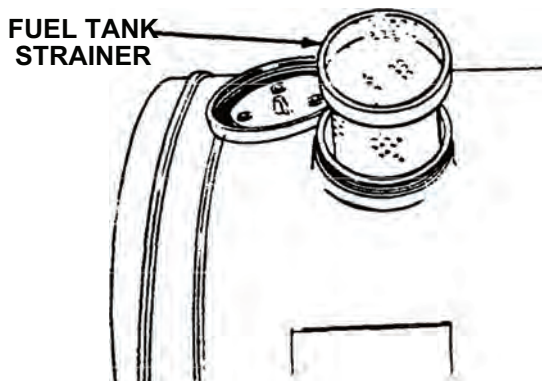


Figure 7.

| | | | | |
|---|--------|----------------|---|---|
| 9 | Weekly | Hydraulic Pump | Check hydraulic pumps for loose screws, leaks, and damage. Check for loose hose fittings. | Class III leak present or any mounting screw is loose or missing. |
|---|--------|----------------|---|---|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

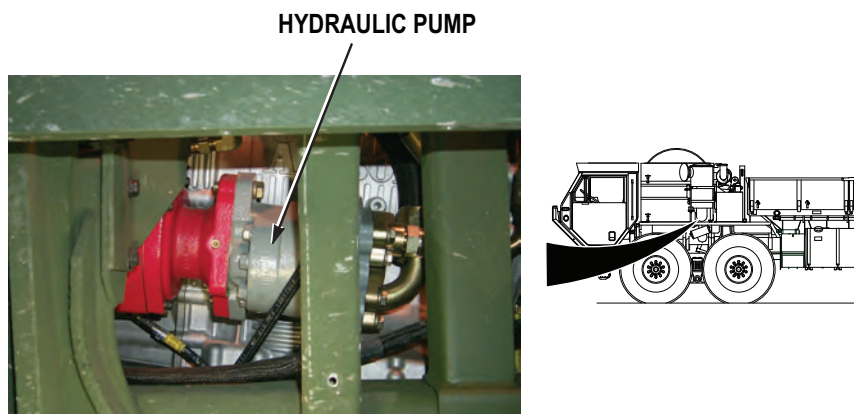


Figure 8.

| | | | | |
|----|--------|-----------------|---|---|
| 10 | Weekly | Hydraulic Hoses | Check all hydraulic hose routing for obvious damage to hydraulic hoses, chaffing, and leaks. | Class III leak present. Chaffing or obvious damage to hydraulic hose present. |
| 11 | Weekly | Stowage Boxes | <ol style="list-style-type: none"> 1. Check all stowage boxes/ compartments for missing hardware and other obvious damage. 2. Check inside all stowage boxes/ compartments for torn or damaged seals, water in bottom | |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|-------------------------------------|---|---|
| 12 | Weekly | Rear Spring/ Parking Brake Chambers | <p>of stowage box/compartments, or other obvious damage.</p> <p>Check rear spring/parking brake chambers to ensure dust covers are in place and secure.</p> | |
| 13 | Weekly | Towing Shackles | <p>Check towing shackles for serviceability.</p> <p style="text-align: center;">NOTE</p> <p>Vehicle may be equipped with either a standard pintle hook, or self-guided coupler.</p> | |
| 14 | Weekly | Pintle Hook/ Self-Guided Coupler | <ol style="list-style-type: none"> 1. If vehicle is equipped with a standard pintle hook, perform the following: <ol style="list-style-type: none"> a. Check pintle hook for looseness and damaged locking mechanism of locking pin. | <p>Pintle hook loose or locking mechanism damaged/ unserviceable.</p> |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

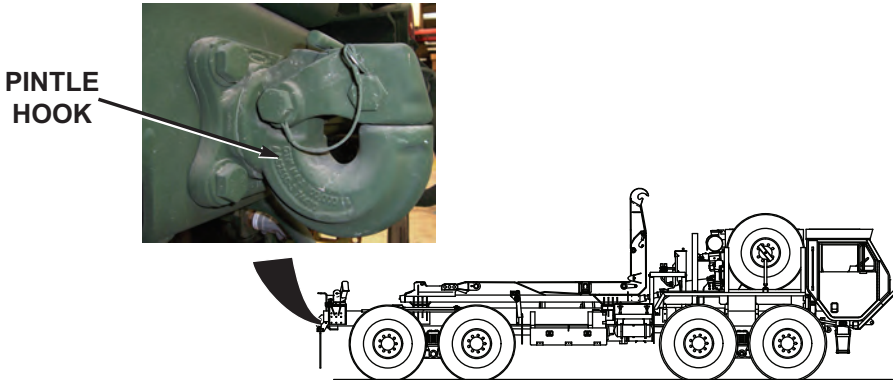


Figure 9.

| | | | |
|--|--|--|--|
| | | <p>b. Clean pintle hook and coat with GAA. (WP 0163, Table 8)</p> <p>2. If vehicle is equipped with self-guided coupler, perform the following:</p> <p>a. Check self-guided coupler for obvious damage and presence of indicator lock.</p> | <p>Self-guided coupler is damaged or loose. Indicator lock is missing.</p> |
|--|--|--|--|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

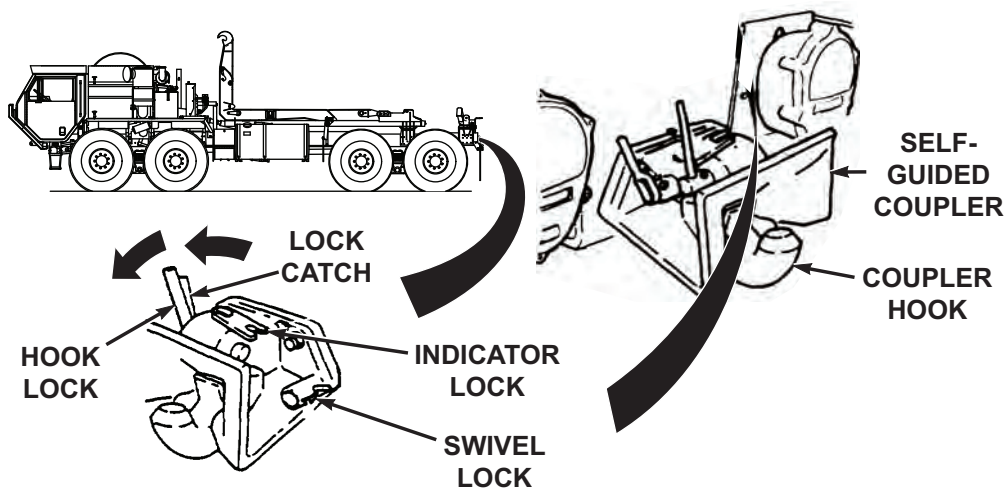


Figure 10.

| | | | |
|--|--|--|--|
| | | <ul style="list-style-type: none"> b. Disengage swivel lock, ensure self-guided coupler rotates freely. c. Engage swivel lock. d. Open indicator lock away from hook lock. e. Pull out on hook lock catch and pull out on hook lock to release coupler hook. | <p>Self-guided coupler does not rotate freely.</p> |
|--|--|--|--|

Table 1. PMCS - WEEKLY - Continued


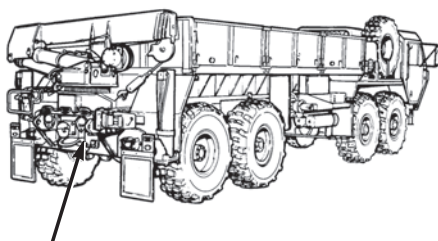
| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 15 | Weekly | Rear Lifting Shackles | <p style="text-align: center;">WARNING</p>  <p>Keep fingers clear of hook. Failure to comply may result in injury or death to personnel and/or damage to equipment.</p> <ul style="list-style-type: none"> f. Push up on coupler hook. g. Close indicator lock. <p>Check rear lifting shackles for serviceability.</p> | |
| 16 | Weekly | Inter-vehicle Connector | <p>Check inter-vehicle connector seal and cable for damage.</p> | |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | |



**INTER-VEHICLE
ELECTRICAL
CONNECTOR**

Figure 11.

WARNING



Do not operate a vehicle with a tire in an over-inflated or under-inflated condition, or with a questionable defect. Failure to comply may result in injury or death to personnel and damage to equipment.

NOTE

Inspection of passenger side tires includes spare tire.

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|--|
| 17 | Weekly | Passenger Side Tires | Check tires for correct air pressure. <p style="text-align: center;">NOTE</p> Operation of vehicle with damaged/malfunctioning air compressor may violate AR 385-55. (WP 0173) | |
| 18 | Weekly | Air Compressor | Check air compressor for loose screws, damaged mounting flange and air hoses, and loose fittings/connections. | Screws missing, mounting flange broken, air hoses damaged or fittings/connections loose. |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|



Figure 12.

| | | | | |
|----|--------|-----------------------|--|----------------|
| 19 | Weekly | Secondary Fuel Filter | Check secondary fuel filter for leaks or damage. | Any fuel leak. |
|----|--------|-----------------------|--|----------------|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

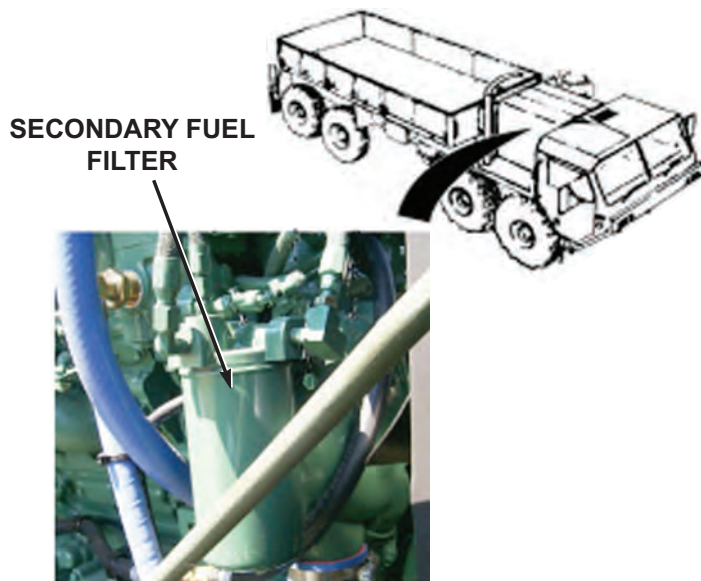


Figure 13.

| | | | | |
|----|--------|-----------------------|---|-----------------------------|
| 20 | Weekly | Turbocharger Oil Line | Check turbocharger oil line and fittings from rear of engine for signs of leaks and damage. | Any Class III leak present. |
|----|--------|-----------------------|---|-----------------------------|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

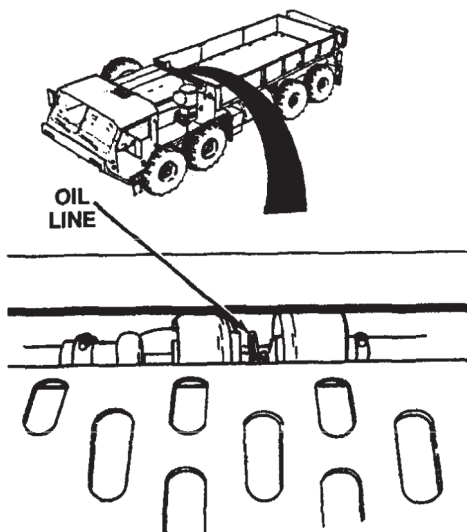


Figure 14.

WARNING



Wear proper eye and skin protection when working around batteries. Do not smoke, have open flames, or

Table 1. PMCS - WEEKLY - Continued

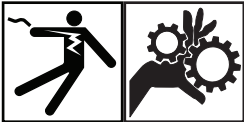
| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 21 | Weekly | Batteries | <p>make sparks around batteries, especially if caps are off. Batteries can explode. Failure to comply may result in injury or death to personnel.</p> <p style="text-align: center;">WARNING</p> <div style="text-align: center;">  </div> <p>Remove all jewelry such as rings, ID tags, bracelets, etc. prior to working on or around vehicle. Jewelry and tools can catch on equipment, contact positive electrical circuits, and cause a direct short, severe burns, or electrical shock. Failure to comply may result in injury or death to personnel.</p> <p>1. Check battery box for damage.</p> | Cracks or holes in battery box. |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

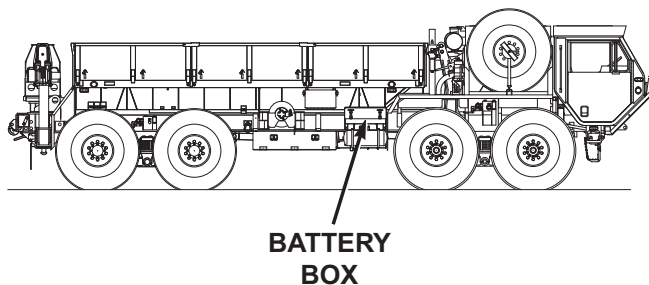


Figure 15.

| | | | | |
|----|--------|------------------------------|--|--|
| 22 | Weekly | Spare Tire Davit And Carrier | <ol style="list-style-type: none"> 2. Check battery cables for presence, frays, splits, and looseness. 3. Check for loose, missing, or damaged batteries and corroded or burnt battery terminals. <p>Check spare tire davit and carrier for damage, missing parts.</p> | <p>Battery cables missing, frayed, split, or loose.</p> <p>One or more batteries missing, cracked, or unserviceable. Any battery terminal corroded or burnt. Any hold down not secure.</p> |
|----|--------|------------------------------|--|--|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

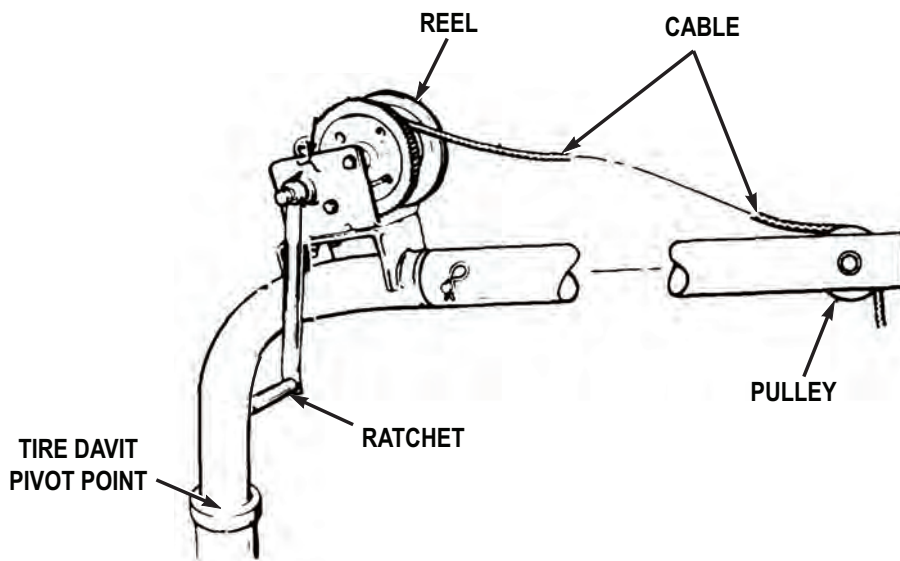


Figure 16.

| | | | | |
|----|--------|---------------------|--|--|
| 23 | Weekly | Spare Tire Retainer | Check spare tire retainer correctly seated and locking handle tight. | |
|----|--------|---------------------|--|--|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

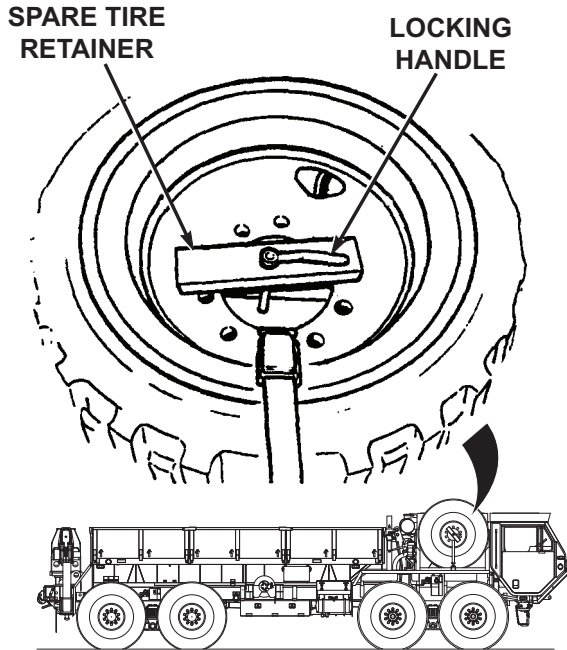


Figure 17.

| | | | | |
|----|--------|-----------|---|--|
| 24 | Weekly | Air Dryer | Check air dryer for loose screws and connections. | |
|----|--------|-----------|---|--|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

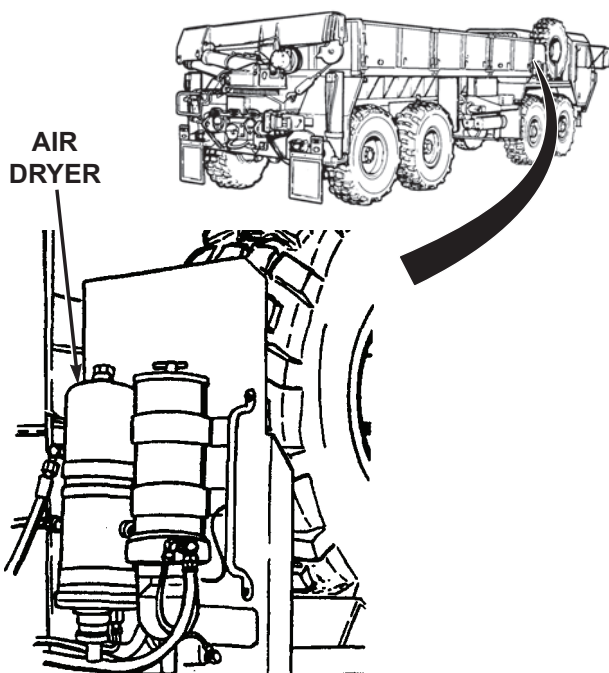


Figure 18.

NOTE

Pressurize air system prior to performing this check.

| | | | | |
|----|--------|---------------------|--|--|
| 25 | Weekly | Air Lines and Hoses | Check routing, for obvious damage to air lines and hoses. Check for leaks. | Any leaks or damage to air lines, hoses, or fit- |
|----|--------|---------------------|--|--|

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| 26 | Weekly | Doors, Handles, and Windows | <p style="text-align: center;">NOTE</p> <p>Operation of vehicle with damaged doors or windows may violate AR 385-55. (WP 0173)</p> <p>Check condition and operation of door, handles, and windows. (WP 0018)</p> | things are found. |
| 27 | Weekly | Cab Temperature Controls | <p style="text-align: center;">NOTE</p> <p>Start Engine. (WP 0038) Engine must be running for remaining PMCS checks.</p> <p>1. Check cab temperature controls for proper for proper operation: (WP 0034)</p> | |

Table 1. PMCS - WEEKLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

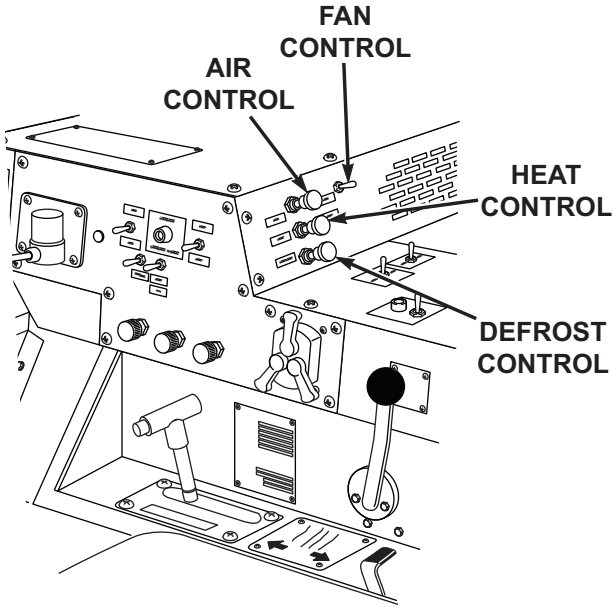


Figure 19.

| | | | | |
|--|--|--|---|--|
| | | | <ol style="list-style-type: none"> a. Check AIR control. b. Check HEAT control. c. Check DEFROST control. d. Check FAN control. | |
|--|--|--|---|--|

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
SEMIANNUAL - PREVENTIVE MAINTENANCE**

INITIAL SETUP:

Tools and Special Tools

Gloves, Leather (WP 0175, Table 2)

Table 1. PMCS- SEMIANNUAL

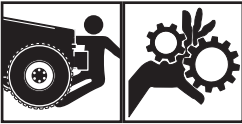

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| | | | <p style="text-align: center;">WARNING</p>  <p>Do not start engine or move vehicle when personnel are under vehicle or working on brake lines. Failure to comply may result in injury or death to personnel.</p> <p style="text-align: center;">WARNING</p>  <p>Ensure engine is OFF and eye protection is worn when checking for leaks. Failure to comply may result in injury or death to personnel.</p> | |

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|-------------|--------------------------------|---|--------------------------------------|
| 1 | Semian nual | Brake System | <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Lubrication intervals are for normal operating conditions. Intervals may be shortened as required for severe operating conditions. • Clean all lubrication points with cleaning compound, solvent and allow to dry prior to servicing. • When using a grease gun, apply lubricant to the fitting until clean lubricant squeezes out of the part being lubricated. • Always refer to lubrication instructions (WP 0163) to ensure equipment has correct lubricants appropriate to operating environment (expected continuous temperatures). If not, remove/drain and reapply/refill equipment with appropriate lubricants for operating environment as prescribed in lubrication instructions. (WP 0163) <p>Lubricate axles No. 1, No. 2, No. 3, and No. 4 brake camshafts and slack</p> | Fitting will not purge old lubricant |

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| | | | adjusters (four fittings per axle) with GAA. (WP 0163, Table 8) | out of component. |

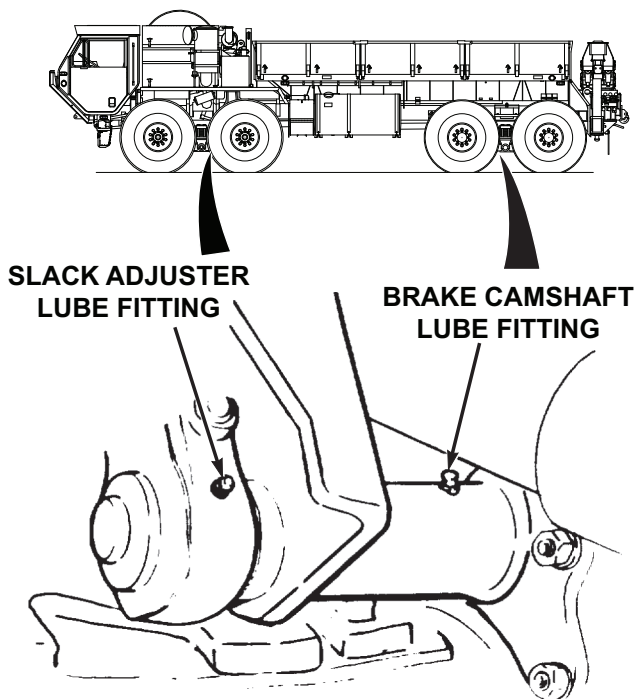


Figure 1.

NOTE

- When vehicle is operating under severe conditions, lubricate propeller shafts and universal joints every 50 hours of vehicle operation.

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| | | | <ul style="list-style-type: none"> • Use the proper lubricant to purge all four bearing seals of each universal joint. This flushes abrasive contaminants from each bearing and assures all four bearings are filled properly. Pop the seals, these seals are made to be popped. • If any seals fail to purge, move propeller shaft from side-to-side while applying gun pressure. This allows greater clearance on thrust end of bearing that is not purging. If seals still do not purge, rock vehicle by releasing the parking brake, start engine, put transmission in D (drive) or R (reverse), and allow vehicle to roll. This removes the windup in the drive line and allows for a greater clearance on the thrust end of the universal joint. • Because of the design of the universal joint seal, there will occasionally be one or more bearing seals of a joint that may not purge. If this occurs, notify field level maintenance. | |

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|-------------|--------------------------------|---|--|
| 2 | Semian nual | Propeller Shafts and U-Joints | <ul style="list-style-type: none"> • Universal joint may have one or two grease fittings. If there are two grease fittings, either fitting can be greased. It is not necessary to grease both fittings. <ol style="list-style-type: none"> 1. Lubricate all axle propeller shafts, transmission to transfer case propeller shaft, and U-joints with GAA: (WP 0163, Table 8) | Fitting will not purge old lubricant out of component. |

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

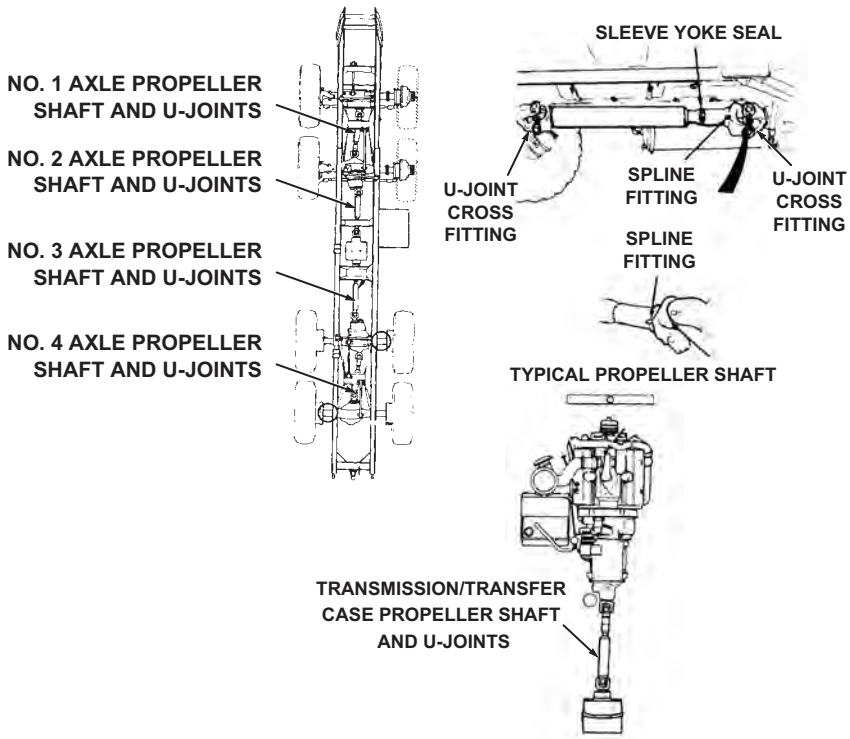


Figure 2.

| | | | |
|--|--|---|---|
| | | <p>a. Complete the following when lubricating the spline end of the propeller shafts:</p> <p>(1) Apply GAA (WP 0163, Table 8) to spline fitting</p> | <p>Fitting will not purge old lubricant out of component.</p> |
|--|--|---|---|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|-----------------|-----------------|---------------------------------------|--|--|
| 3 | Semian nual | Steering System | <p>until lubricant appears at pressure relief hole.</p> <p>(2) Cover pressure relief hole with finger and continue adding grease until it appears at sleeve yoke seal.</p> <p>1. Lubricate intergear link with GAA. (WP 0163, Table 8)</p> | Fitting will not purge old lubricant out of component. |

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

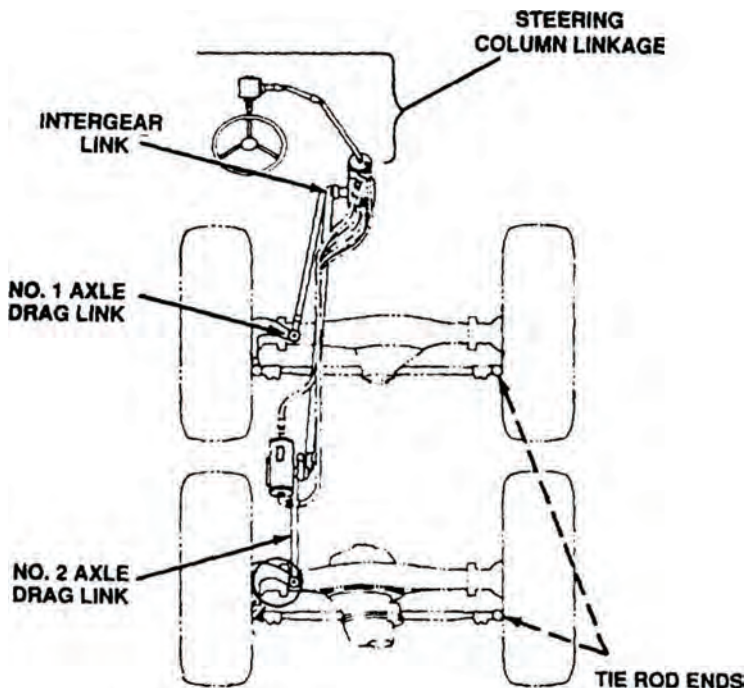


Figure 3.

| | | | |
|--|--|--|---|
| | | <ol style="list-style-type: none"> 2. Lubricate No. 1 axle drag link with GAA. (WP 0163, Table 8) 3. Lubricate No. 2 axle drag link with GAA. (WP 0163, Table 8) | <p>Fitting will not purge old lubricant out of component.</p> <p>Fitting will not purge old lubricant</p> |
|--|--|--|---|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|--|
| | | | <p>4. Lubricate tie rod ends with GAA. (WP 0163, Table 8)</p> <p>5. Lubricate steering linkage U-joints and shafts with GAA. (WP 0163)</p> <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • The top trunnion bearing should be given 10 to 12 strokes with a grease gun through existing fitting. • The plug below the bottom should temporarily be removed and a grease fitting installed. The lower trunnion bearing should be lubricated with 10 to 12 strokes from a grease gun. The grease fitting should then be removed and the plug reinstalled. <p>6. Lubricate No. 1 and No. 2 axle trunnion bearings with GAA. (WP 0163, Table 8)</p> | <p>out of component.</p> <p>Fitting will not purge old lubricant out of component.</p> <p>Fitting will not purge old lubricant out of component.</p> |

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

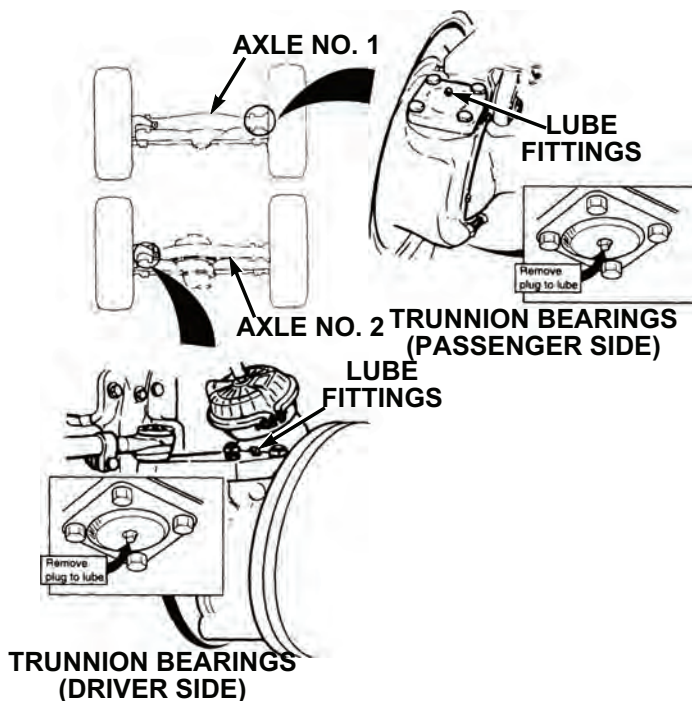


Figure 4.

| | | | | |
|---|-----------|---------------|---|--|
| 4 | Semianual | Spring Hanger | 1. Lubricate spring hanger pivot points (one fitting per spring) with GAA. (WP 0163, Table 8) | Fitting will not purge old lubricant out of component. |
|---|-----------|---------------|---|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

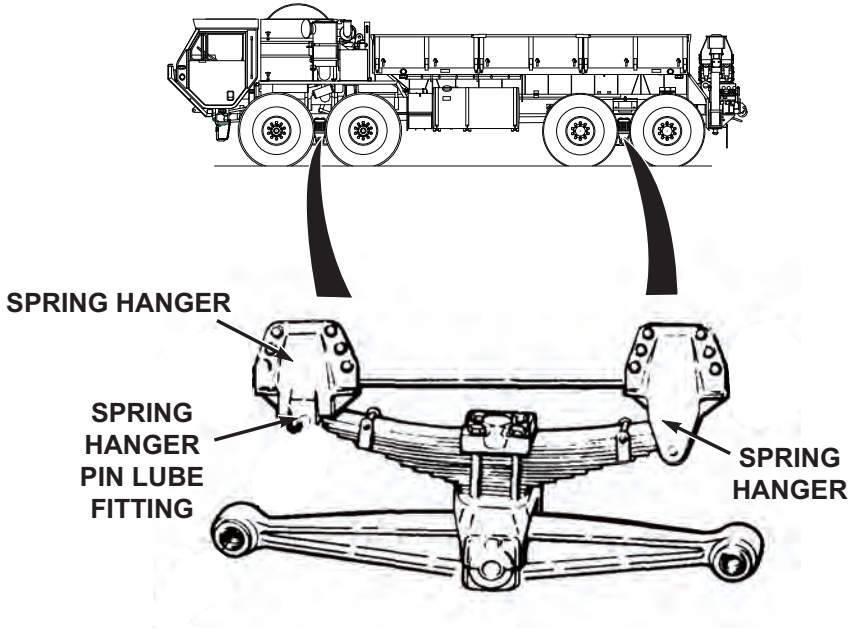


Figure 5.

| | | |
|--|--|--|
| | | <ol style="list-style-type: none"> 2. If spring hanger pin does not accept grease, perform the following: <ol style="list-style-type: none"> a. Relieve load on spring hanger pin by jacking up vehicle at frame rails, as close to spring hanger pin as possible. b. Lubricate spring hanger pin pivot. |
|--|--|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|-------------|--------------------------------|---|------------------------------------|
| 5 | Semian nual | Battery Electrical System | <p>c. If springer hanger pin still fails to take grease, notify field level maintenance to remove spring hanger pin and replace as necessary.</p> <p style="text-align: center;">NOTE</p> <p>Vehicle may be equipped with either a slave receptacle in- corporated in bottom rear of battery box, or separate unit on driver side front fender.</p> <p>Coat slave receptacle with corrosion preventive compound.</p> | |

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

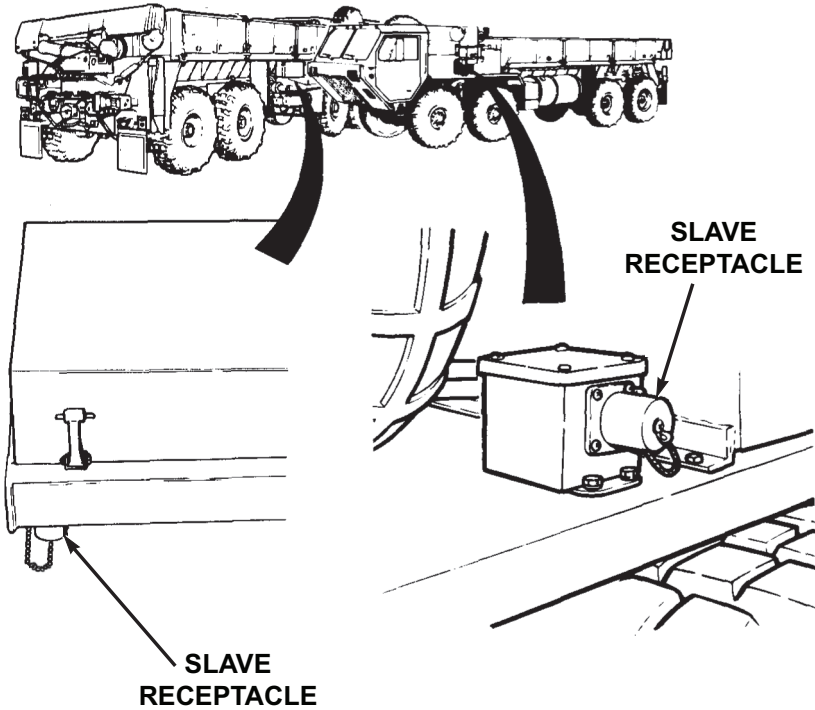


Figure 6.

| | | | | |
|---|-----------|-------------------|--|--|
| 6 | Semianual | Mirror Assemblies | Lubricate mirror assembly swivel joints with GAA. (WP 0163, Table 8) | |
|---|-----------|-------------------|--|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

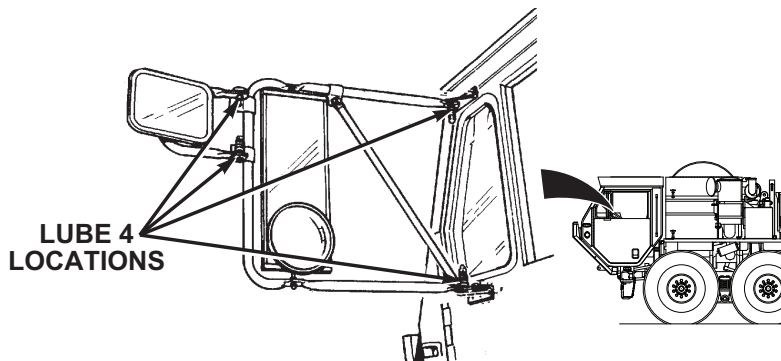


Figure 7.

NOTE

Vehicle may be equipped with either a standard pintle hook, or self-guided coupler.

| | | | | |
|---|-------------|----------------------------------|---|--|
| 7 | Semian nual | Pintle Hook/ Self-Guided Coupler | <ol style="list-style-type: none"> 1. If vehicle is equipped with a standard pintle hook, perform the following: | |
|---|-------------|----------------------------------|---|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | |



Figure 8.

NOTE

Pintle hook plate lubrication fitting can be on any side.

- a. Lubricate pintle hook (3 fittings) with GAA. (WP 0163, Table 8)
2. If vehicle is equipped with self-guided coupler, perform the following:

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

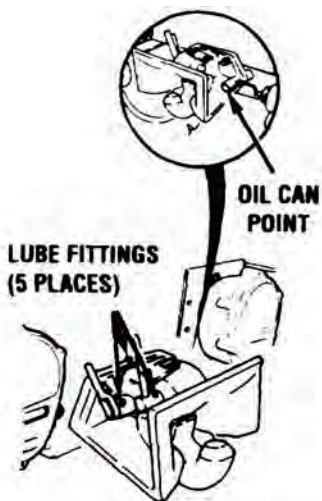


Figure 9.

| | | | | |
|---|-----------|----------------------------|---|--|
| 8 | Semianual | Load Handling System (LHS) | <ol style="list-style-type: none"> a. Lubricate self-guided coupler (5 fittings) with GAA. (WP 0163, Table 8) b. Lubricate swivel lock with OE/HDO. (WP 0163, Table 7) <ol style="list-style-type: none"> 1. With the aid of an assistant supporting the hook arm, remove and lubricate LHS hook arm pin with anti-seize compound. | |
|---|-----------|----------------------------|---|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

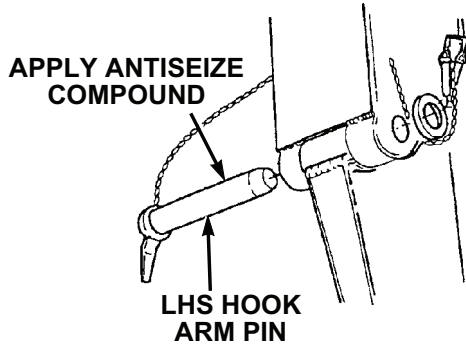


Figure 10.

2. Lubricate rail strut ISO locks with OE/HDO. (WP 0163, Table 7)

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

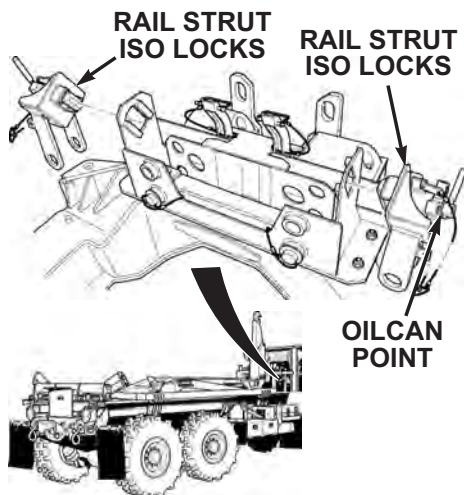


Figure 11.

- | | | | |
|--|--|--|--|
| | | <ol style="list-style-type: none"> <li data-bbox="442 1093 825 1190">3. Lubricate lift hook with light coating of GAA. (WP 0163, Table 8) | |
|--|--|--|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

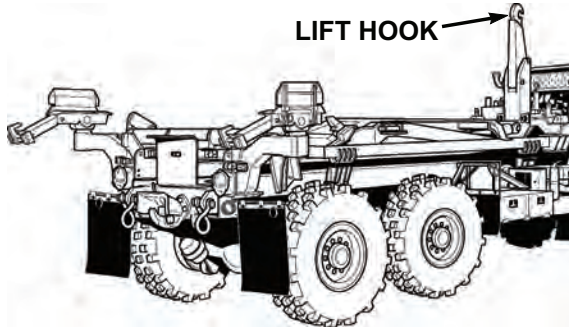


Figure 12.

| | | | |
|--|--|--|---|
| | | <p>4. Lubricate two front hook arm cylinder pivot pins (one fitting per cylinder) with GAA. (WP 0163, Table 8)</p> | <p>Fitting will not purge old lubricant out of component.</p> |
|--|--|--|---|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

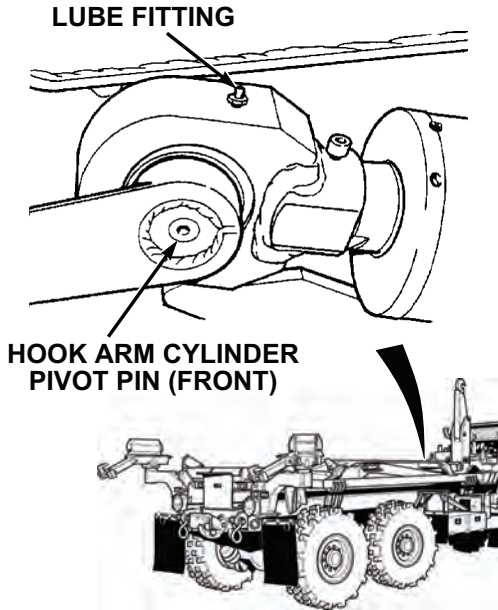


Figure 13.

- | | | | |
|--|--|--|---|
| | | <p>5. Lubricate two front main cylinder pivot pins (one fitting per cylinder) with GAA. (WP 0163, Table 8)</p> | <p>Fitting will not purge old lubricant out of component.</p> |
|--|--|--|---|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

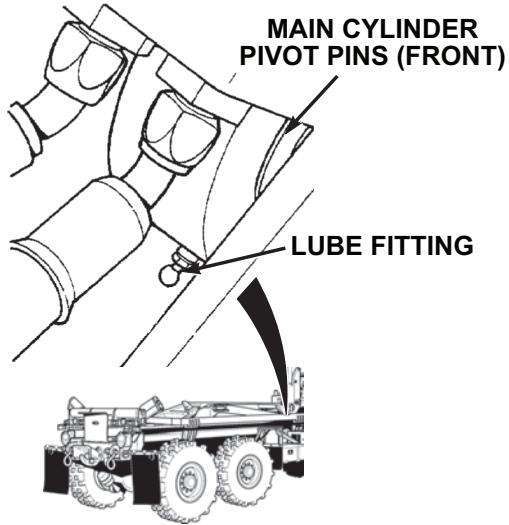


Figure 14.

| | | | |
|--|--|---|---|
| | | <p>6. Lubricate two rear hook arm cylinder pivot pins (one fitting per cylinder) with GAA. (WP 0163, Table 8)</p> | <p>Fitting will not purge old lubricant out of component.</p> |
|--|--|---|---|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

**HOOK ARM
CYLINDER PIVOT
PIN (REAR)**

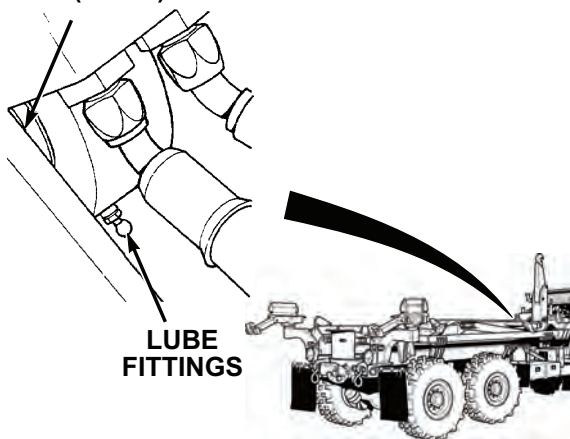


Figure 15.

- Lubricate two rear hook arm pivot pins (one fitting per pin) with GAA. (WP 0163, Table 8)

Fitting will not purge old lubricant out of component.

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

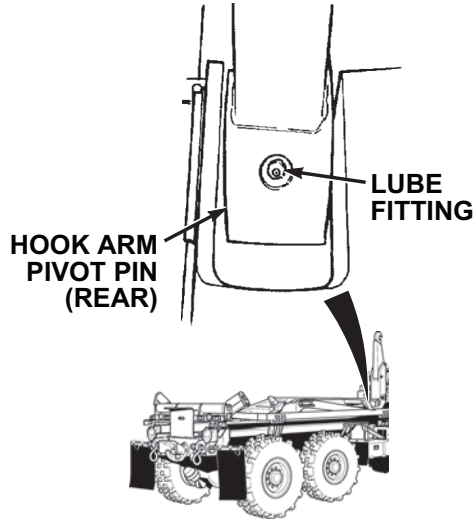


Figure 16.

- | | | | |
|--|--|--|---|
| | | <p>8. Lubricate two rear main cylinder pivot pins (one fitting per pin) with GAA. (WP 0163, Table 8)</p> | <p>Fitting will not purge old lubricant out of component.</p> |
|--|--|--|---|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | |

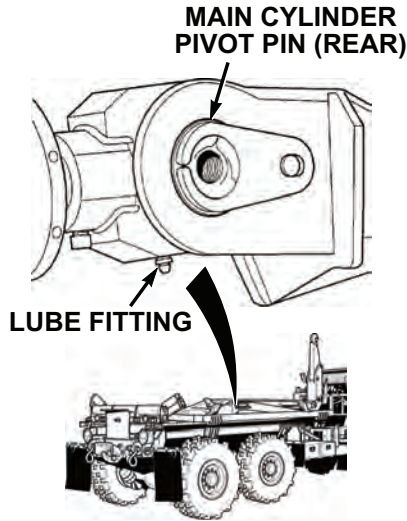


Figure 17.

- Lubricate two rear main frame pivot pins (one fitting per pin) with GAA. (WP 0163, Table 8)

Fitting will not purge old lubricant out of component.

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

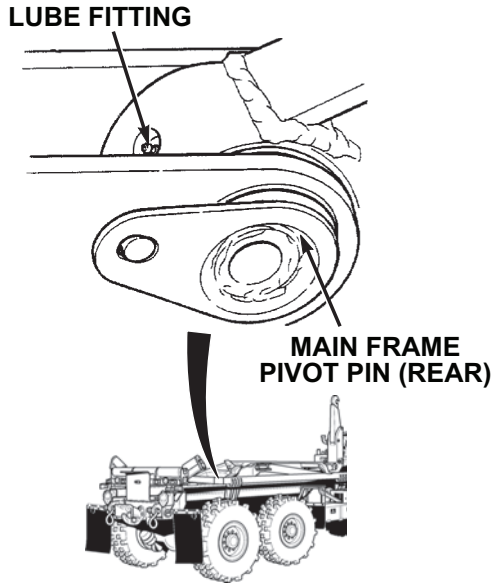


Figure 18.

| | | | |
|--|--|--|---|
| | | <p>10. Lubricate horizontal rollers (four fittings) with GAA. (WP 0163, Table 8)</p> | <p>Fitting will not purge old lubricant out of component.</p> |
|--|--|--|---|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

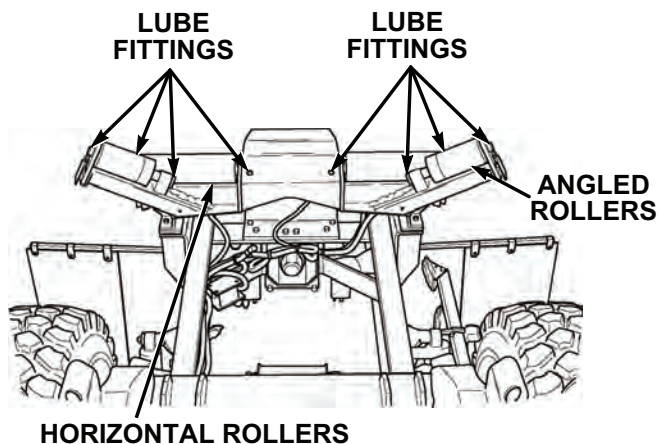


Figure 19.

| | | | | |
|---|-----------|--|--|--|
| 9 | Semianual | Load Handling System (LHS) - Equipped With Container Handling Unit (CHU) | <ol style="list-style-type: none"> 11. Lubricate angled rollers (four fittings) with GAA. (WP 0163, Table 8) 1. Lubricate flip locks with OE/HDO. (WP 0163, Table 7) | Fitting will not purge old lubricant out of component. |
|---|-----------|--|--|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

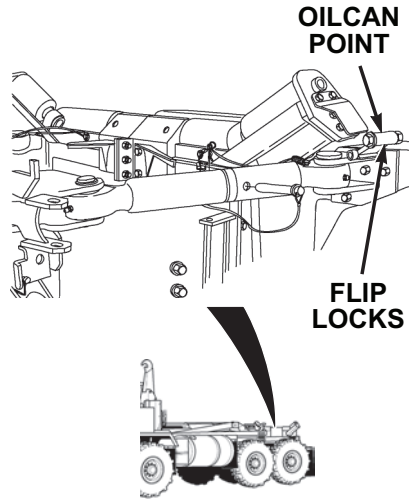


Figure 20.

2. Lubricate slider arms (four fittings) with GAA. (WP 0163, Table 8)

Fitting will not purge old lubricant out of component.

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

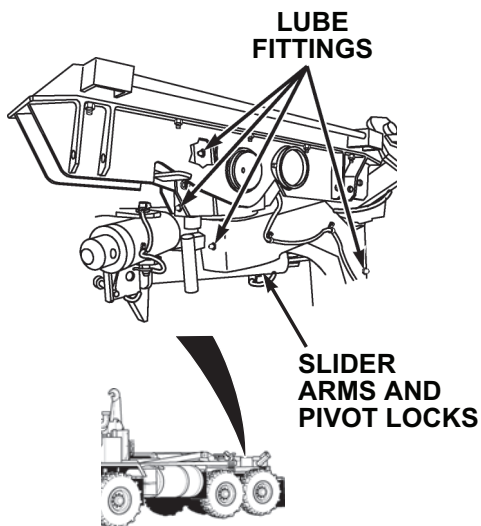


Figure 21.

| | | | |
|--|--|--|---|
| | | <ol style="list-style-type: none"> 3. Lubricate slider pivot locks (two fittings) with GAA. (WP 0163, Table 8) 4. Lubricate rear container locks with OE/HDO. (WP 0163, Table 7) | <p>Fitting will not purge old lubricant out of component.</p> |
|--|--|--|---|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

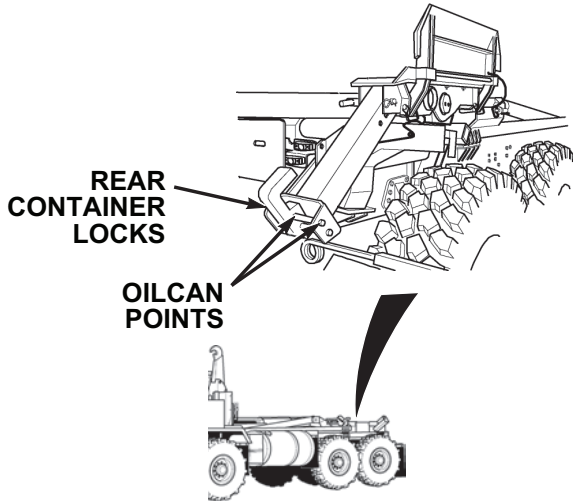


Figure 22.

5. Lubricate long and short strut assemblies (two fittings) with GAA. (WP 0163, Table 8)

Fitting will not purge old lubricant out of component.

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

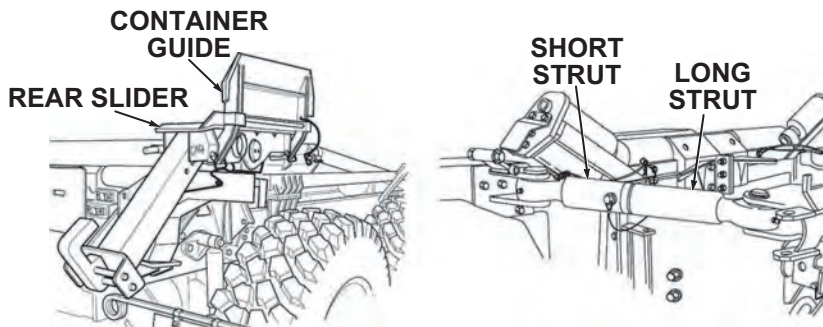


Figure 23.

| | | |
|--|--|--|
| | | <p>6. Lubricate slider wear pad and slider wear rail with coating of GAA. (WP 0163, Table 8)</p> |
|--|--|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

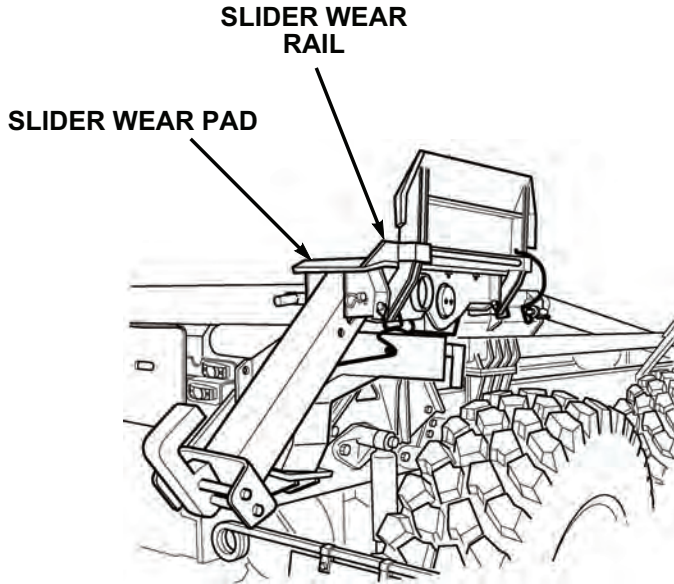


Figure 24.

| | | | |
|--|--|---|---|
| | | <p>7. Lubricate slider pins (two fittings) with GAA. (WP 0163, Table 8)</p> | <p>Fitting will not purge old lubricant out of component.</p> |
|--|--|---|---|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

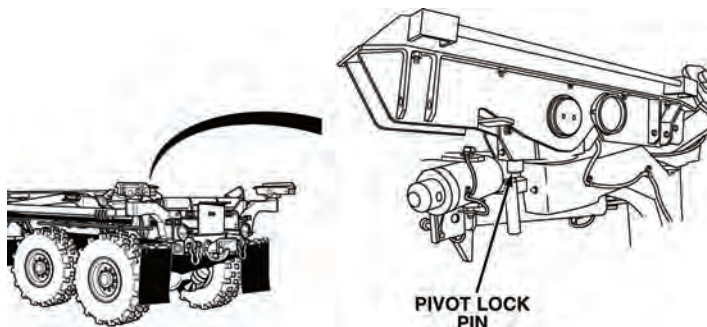


Figure 25.

8. Lubricate container lock pivot pins (two fittings) with GAA. (WP 0163, Table 8)

Fitting will not purge old lubricant out of component.

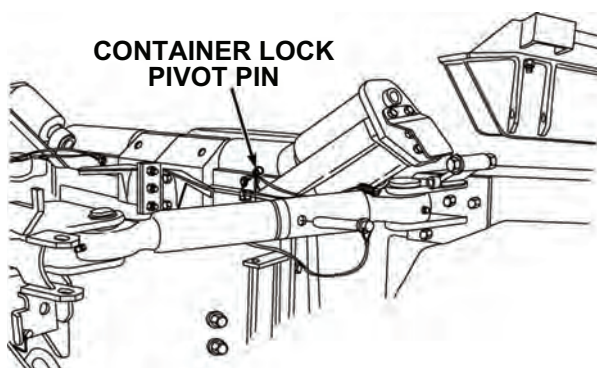


Figure 26.

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|-------------|---|--|------------------------------------|
| 10 | Semian nual | Container Handling Unit (CHU) - If Equipped With Front Lift Adapter (FLA) | 1. Lubricate front lift adapter locking plates with OE/HDO. (WP 0163, Table 7) | |

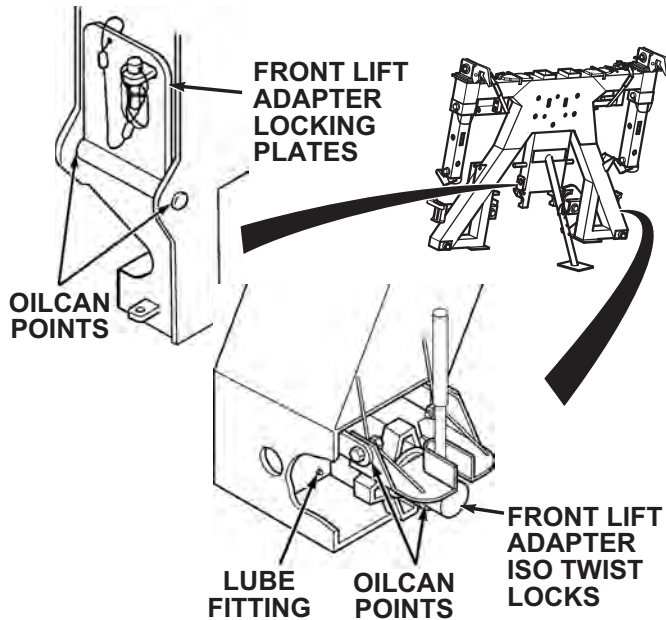


Figure 27.

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|-----------|--------------------------------|--|--|
| 11 | Semianual | Front Lift Adapter (FLA) | 2. Lubricate front lift adapter ISO twist locks (two fittings) with GAA. (WP 0163, Table 8) Lubricate Front Lift Adapter (FLA) hook bar with coating of GAA. (WP 0163, Table 8) | Fitting will not purge old lubricant out of component. |

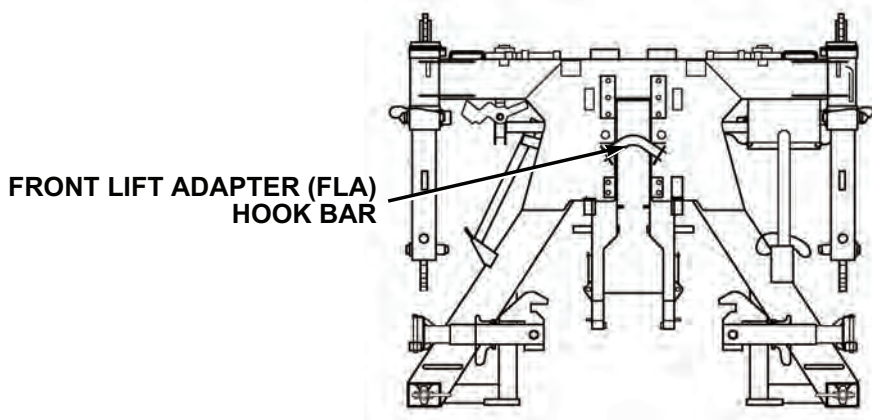


Figure 28.

| | | | | |
|----|-----------|---------------------|--|--------------------------------------|
| 12 | Semianual | Self-Recovery Winch | 1. Unreel, (WP 0099) clean, and lubricate cable with OE/HDO. (WP 0163, Table 6) 2. Lubricate front and rear cable tensioner rollers (three fittings per tensioner) with GAA. (WP 0163, Table 8) | Fitting will not purge old lubricant |
|----|-----------|---------------------|--|--------------------------------------|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | out of component. |

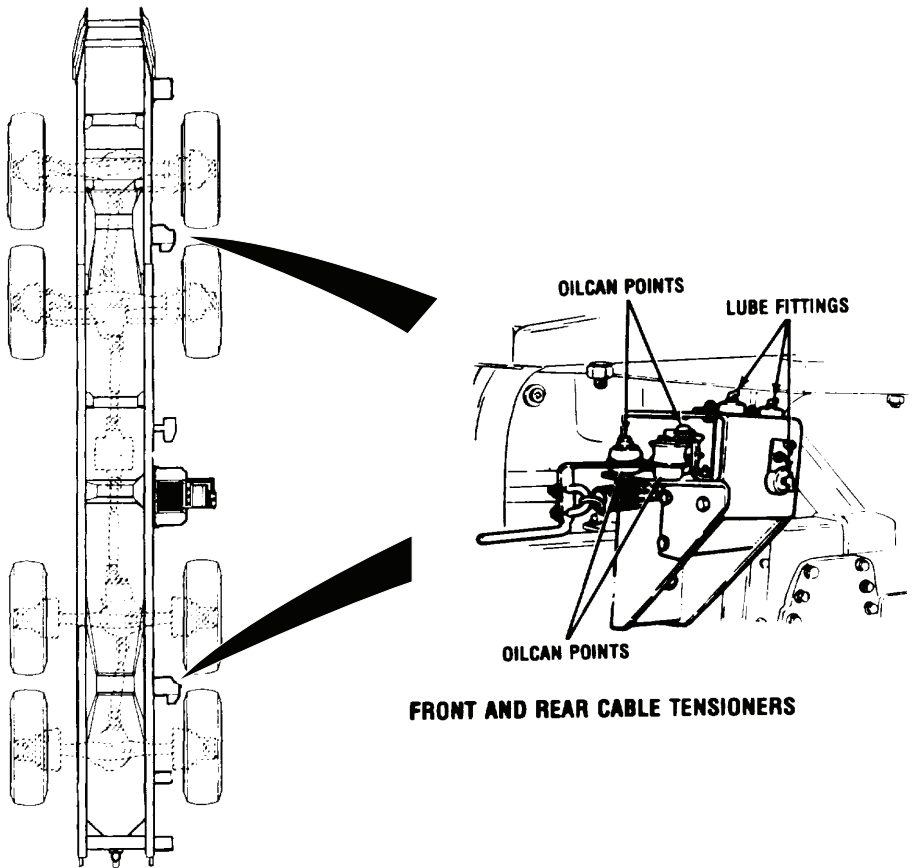


Figure 29.

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|--|
| | | | 3. Lubricate pivot points and pressure rollers with OE/HDO. (WP 0163, Table 7) 4. Lubricate rear cable guide roller (four fittings) with GAA. (WP 0163, Table 8) | Fitting will not purge old lubricant out of component. |

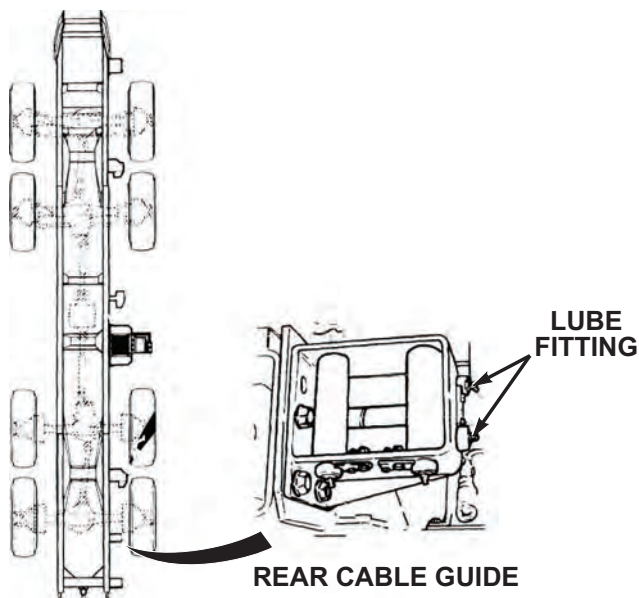


Figure 30.

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|--|
| | | | 5. Lubricate front cable guide (four fittings) with GAA. (WP 0163, Table 8) | Fitting will not purge old lubricant out of component. |

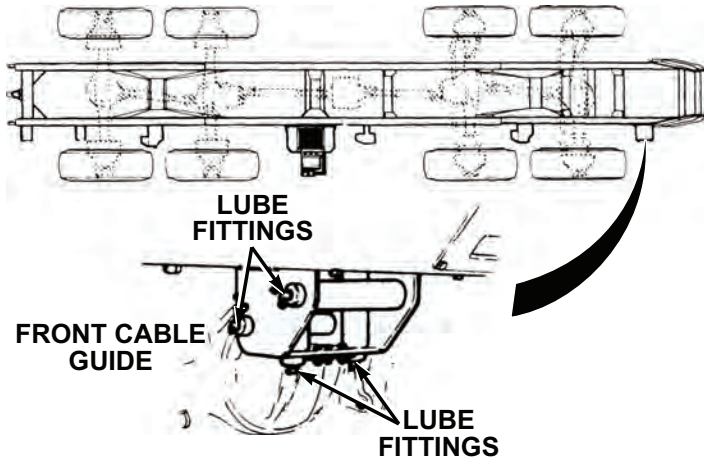


Figure 31.

| | | | | |
|----|-------------|------------------|---|--|
| 13 | Semian nual | Spare Tire Davit | 1. Lubricate tire davit pivot point with light coating of GAA. (WP 0163, Table 8) | |
|----|-------------|------------------|---|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

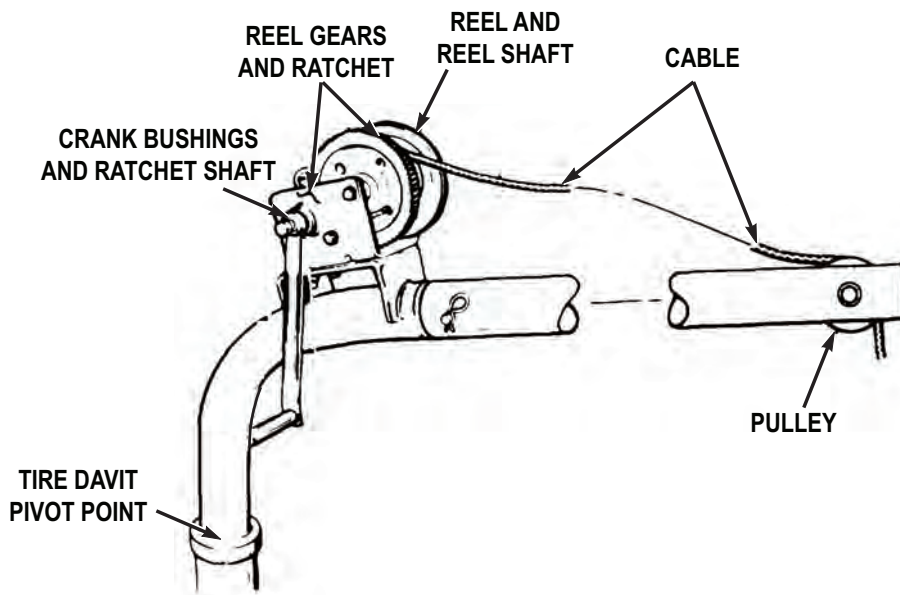


Figure 32.

| | | |
|--|--|--|
| | | <ol style="list-style-type: none"> 2. Lubricate reel gears and ratchet with light coating of GAA. (WP 0163, Table 8) 3. Lubricate crank bushings and ratchet shaft with OE/HDO. (WP 0163, Table 7) 4. Lubricate reel and reel shaft with OE/HDO. (WP 0163, Table 7) 5. Lubricate cable with OE/HDO. (WP 0163, Table 7) |
|--|--|--|

Table 1. PMCS- SEMIANNUAL - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|------------------------------------|
| | | | 6. Lubricate pulley with OE/HDO. (WP 0163, Table 7) | |

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
MONTHLY - PREVENTIVE MAINTENANCE**

INITIAL SETUP:

Tools and Special Tools

Gloves, Leather (WP 0175, Table 2)

Table 1. PMCS - MONTHLY

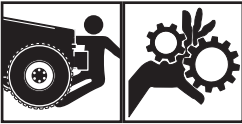

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| | | | <p align="center">WARNING</p>  <p>Do not start engine or move vehicle when personnel are under vehicle or working on brake lines. Failure to comply may result in injury or death to personnel.</p> <p align="center">WARNING</p>  <p>Ensure engine is OFF and eye protection is worn when checking for leaks. Failure to comply may result in injury or death to personnel.</p> | |

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| 1 | Monthly | Damage And | <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Lubrication intervals are for normal operating conditions. Intervals may be shortened as required for severe operating conditions. • Clean all lubrication points with cleaning compound, solvent and allow to dry prior to servicing. • When using a grease gun, apply lubricant to the fitting until clean lubricant squeezes out of the part being lubricated. • Always refer to lubrication instructions (WP 0163) to ensure equipment has correct lubricants appropriate to operating environment (expected continuous temperatures). If not, remove/drain and reapply/refill equipment with appropriate lubricants for operating environment as prescribed in lubrication instructions. (WP 0163) <p>Check entire vehicle for obvious damage and/or corrosion.</p> | Any broken, cracked, bent frame |

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--|---|--|
| 2 | Monthly | Corrosion Check Lubricate Oilcan Points | <ol style="list-style-type: none"> 1. Lubricate cabin door latching mechanisms and hinges with OE/HDO. (WP 0163) 2. Lubricate all side panel and engine cover hinges, locks, and latches with OE/HDO. (WP 0163) <p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> • Vehicle may be equipped with either a standard pintle hook, or self-guided coupler. • If vehicle is equipped with pintle hook, skip this step. <ol style="list-style-type: none"> 3. Lubricate self-guided coupler swivel lock with OE/HDO. (WP 0163, Table 7) <p style="text-align: center;">NOTE</p> <p>Steady illumination of the arctic engine heater indicator light indicates proper operation.</p> | rails, cross-members, or screws are found. |
| 3 | Monthly | Arctic Engine Heater | <ol style="list-style-type: none"> 1. Position arctic engine heater ON/OFF switch to ON position, indicator light will illuminate. | |

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | |

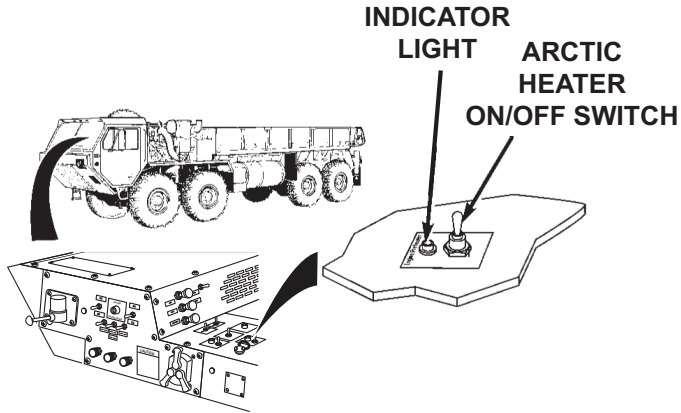


Figure 1.

| | | | |
|--|--|--|----------------------------|
| | | <p>2. Visually check all fuel lines for leaks, cuts, loose clamps, and other obvious damage.</p> | <p>Any Class III leak.</p> |
|--|--|--|----------------------------|

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

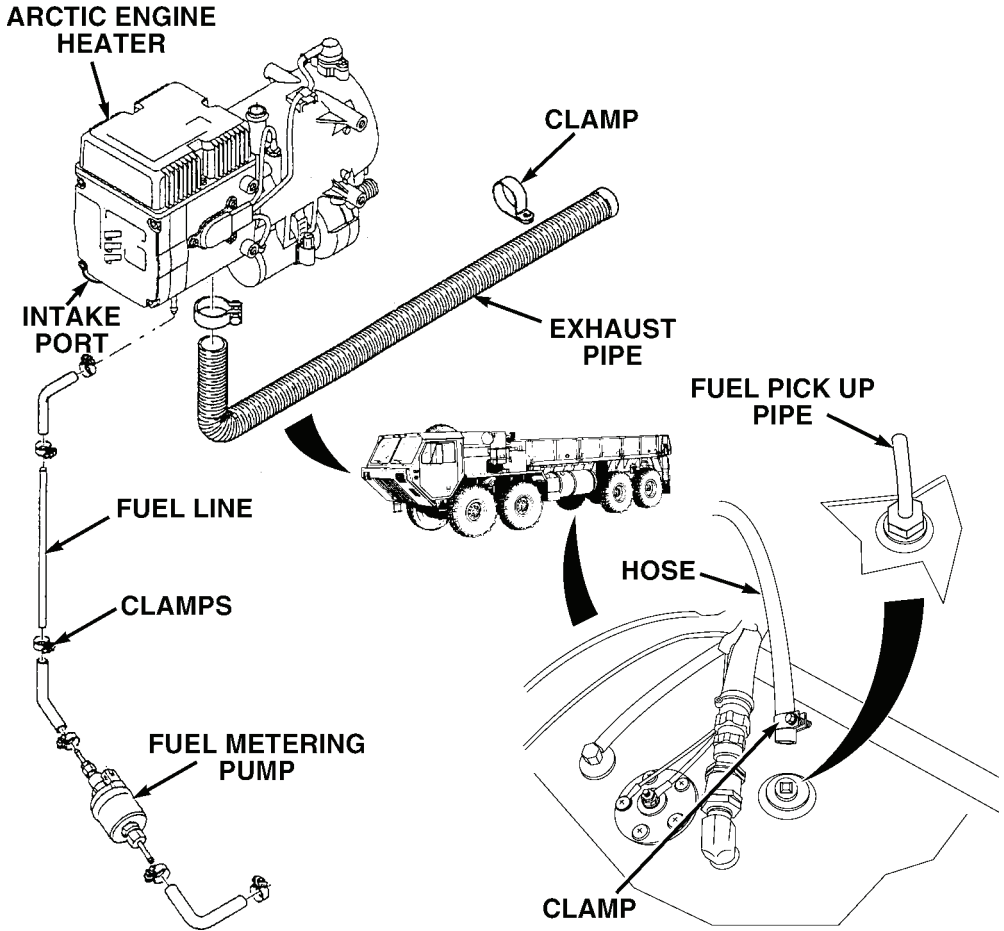


Figure 2.

3. Visually check intake port and exhaust pipe for blockage.

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|--|------------------------------------|
| | | | 4. Check water pump for unusual noise. | |

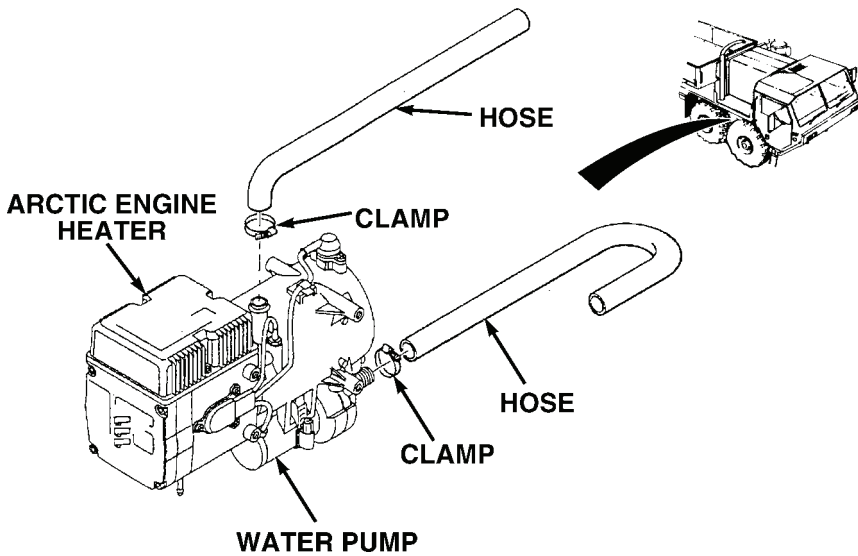


Figure 3.

| | | | | |
|--|--|--|---|---------------------|
| | | | 5. Check coolant hoses at arctic engine heater for leaks, cuts, loose hose clamps, and other obvious damage. | Any Class III leak. |
| | | | 6. Check coolant hoses and fittings at passenger side of engine for leaks, cuts, loose hose clamps, and other obvious damage. | Any Class III leak. |

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

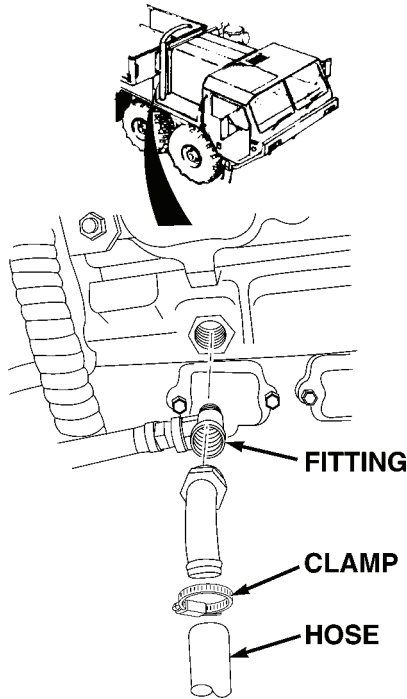


Figure 4.

- | | | | |
|--|--|--|----------------------------|
| | | <p>7. Check coolant hoses and fittings at passenger side of engine for leaks, cuts, loose hose clamps, and other obvious damage.</p> | <p>Any Class III leak.</p> |
|--|--|--|----------------------------|

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
| | | | | |

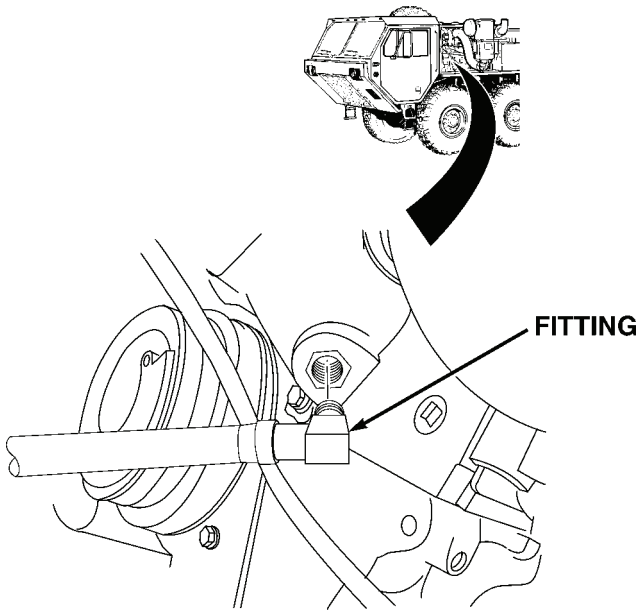


Figure 5.

- | | | | |
|--|--|--|---|
| | | | <p>8. Run arctic engine heater for a minimum of 15 minutes at least once a month.</p> |
|--|--|--|---|

Table 1. PMCS - MONTHLY - Continued


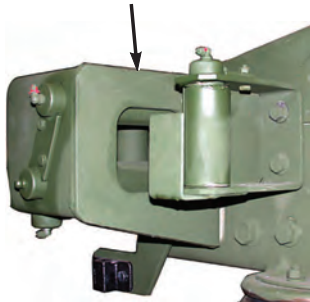
| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|--|
| 4 | Monthly | Self-Recovery Winch (SRW) | <p style="text-align: center;">WARNING</p> <div style="text-align: center;">  </div> <ul style="list-style-type: none"> • Always wear protective gloves when handling winch cable. Never let cable run through hands. Frayed cables can cut severely. Failure to comply may result in injury or death to personnel. • Never operate winch with less than five wraps of cable on winch drum. Failure to comply may result in injury or death to personnel. <ol style="list-style-type: none"> 1. Check winch cable for kinks, frays, and breaks. 2. Check self-recovery winch (SRW) lever (WP 0020) for proper operation in both directions. | Self-recovery winch (SRW) lever does not function. |

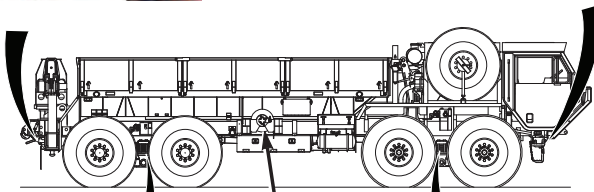
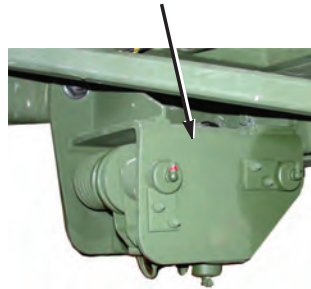
Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

REAR CABLE GUIDE



FRONT CABLE GUIDE



REAR TENSIONER



SELF-RECOVERY WINCH

FRONT TENSIONER



Figure 6.

3. Inspect front cable guide for any loose or missing parts and any obvious damage.

Front cable guide has loose/missing parts or

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|------------------------------------|---|---|
| 5 | Monthly | Gas Particulate Filter Unit (GPFU) | <p>4. Inspect front tensioner for loose or missing parts and any obvious damage.</p> <p>5. Inspect rear tensioner for loose or missing parts and any other obvious damage.</p> <p>6. Inspect rear cable guide for loose or missing parts and any obvious damage.</p> <p style="text-align: center;">NOTE</p> <p>Gas particulate filter unit must be in operation (WP 0072) to perform the following checks.</p> <p>1. Check heater for unusual loud noise or improper operation.</p> | <p>is unserviceable.</p> <p>Front tensioner has loose/missing parts or is unserviceable.</p> <p>Rear tensioner has loose/missing parts or is unserviceable.</p> <p>Rear cable guide has loose/missing parts or is unserviceable.</p> <p>Heater does not operate/operates abnormally and GPFU is required for mission.</p> |

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|-----------|------------------------------------|
|----------|----------|--------------------------------|-----------|------------------------------------|

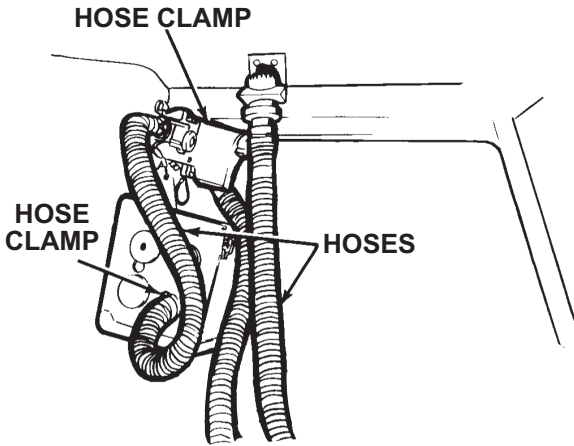


Figure 7.

| | | | |
|--|--|---|--|
| | | <ol style="list-style-type: none"> 2. Disconnect two air duct breakaway sockets from mount and feel for airflow. 3. Turn heater control knob clockwise to make sure indicator light illuminates. 4. Check hoses for cuts, tears, and other obvious damage. | <p>No airflow or not enough air-flow and GPFU is required for mission.</p> <p>Heater is in-operative and GPFU is required for mission.</p> <p>Hoses cut, torn, or damaged and GPFU</p> |
|--|--|---|--|

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|--------------------------------|---|---|
| 6 | Monthly | Rifle Stowage Mount | <ol style="list-style-type: none"> 1. Check that mounting screws on top mount and lower mount are not broken or missing. 5. Make sure hose clamps are secure. | <p>is required for mission.</p> <p>Clamps loose and GPFU is required for mission.</p> |

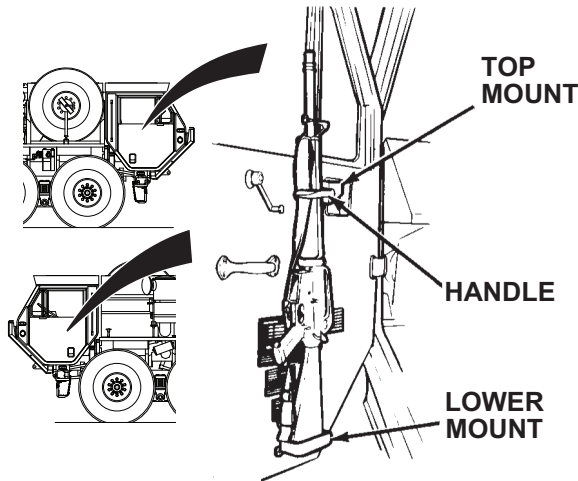


Figure 8.

| | | |
|--|--|---|
| | | <ol style="list-style-type: none"> 2. Check handle for excessive looseness or binding. |
|--|--|---|

Table 1. PMCS - MONTHLY - Continued

| Item No. | Interval | Item to be Checked or Serviced | Procedure | Equipment Not Ready/ Available If: |
|----------|----------|---|--|------------------------------------|
| 7 | Monthly | Machine Gun Operator's Platform Support | Check machine gun operator's platform support for loose, broken, or missing mounting screws. | |
| 8 | Monthly | Machine Gun Operator's Platform | Check machine gun operator's platform for cracks, loose or broken leg, missing or broken tie down strap. | |
| 9 | Monthly | Ring Mount | Check machine gun mounts for loose, broken, or missing mounting screws. | |
| 10 | Monthly | M-13 Decontamination Unit | Refer to TM 3-4230-214-12&P (WP 0173) for M-13 Decontamination Unit PMCS. | |
| 11 | Monthly | M-8 Chemical Alarm | Refer to TM 3-6665-225-12 (WP 0173) for M-8 Chemical Alarm PMCS. | |
| 12 | Monthly | Radio | Refer to TM 11-5820-498-12 (WP 0173) for radio PMCS. | |

END OF WORK PACKAGE

CHAPTER 5
MAINTENANCE
INSTRUCTIONS

OPERATOR MAINTENANCE LUBRICATION INSTRUCTIONS

INITIAL SETUP:

Not Applicable

WARNING



Adhesives, solvents, and sealing compounds can burn easily, can give off harmful vapors, and are harmful to skin and clothing. Keep away from open fire and use in well-ventilated area. If adhesive, solvent, or sealing compound gets on skin or clothing, wash immediately with soap and water. Failure to comply may result in injury or death to personnel.

NOTE

- The lowest level of maintenance authorized to lubricate a specific point is indicated by where that lubrication point falls within the PMCS tables. Operator/crew are only authorized to lubricate those points within the operator PMCS tables. Field level maintenance personnel are authorized to lubricate all points regardless of which tables (operator or field level) those lubrication points are listed.
- Refer to PMCS tables for specific lubrication points and localized views.
- Lubrication intervals are for normal operating conditions. Intervals may be shortened as required for severe operating conditions.
- Clean all lubrication points with cleaning compound, solvent and allow to dry prior to servicing.
- When using a grease gun, apply lubricant to the fitting until clean lubricant squeezes out of the part being lubricated.
- After a thorough high pressure washing, lubricate all grease fittings and oil can points outside and underneath vehicle.

- If vehicle fords water obstacle, service all lubrication points below fording depth and check submerged gearboxes for presence of water.
- Ensure equipment has correct lubricants appropriate to operating environment (expected continuous temperatures). If not, remove/drain and reapply/refill equipment with appropriate lubricants for operating environment as prescribed in these lubrication instructions.

Table 1. Engine Lubrication.

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Desert Conditions | Interval |
|------------------------------------|------------------|--|--|--|-------------------------------|-------------------|
| Engine Oil (with filter change) | 30 qt. (28.38 L) | OE/ HDO-15W/40 MIL-PRF-2104 | OE/ HDO-15W/40 MIL-PRF-2104 or OEA MIL-PRF-46167 (Notes 1, 2, and 3) | OE/ HDO-15W/40 MIL-PRF-2104 or OEA MIL-PRF-46167 (Notes 1, 2, and 3) | OE/ HDO-40 MIL-PRF-2104 | A-Annual (1 year) |
| Engine Oil (without filter change) | 28 qt. (26.49 L) | OE/ HDO-15W/40 MIL-PRF-2104 | OE/ HDO-15W/40 MIL-PRF-2104 or OEA MIL-PRF-46167 (Notes 1, 2, and 3) | OE/ HDO-15W/40 MIL-PRF-2104 or OEA MIL-PRF-46167 (Notes 1, 2, and 3) | OE/ HDO-40 MIL-PRF-2104 | A-Annual (1 year) |

Table 1. Engine Lubrication. - Continued

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Desert Conditions | Interval |
|---|------------|--|--|--|-------------------|----------|
| <p>NOTE</p> <ol style="list-style-type: none"> 1. After changing to OEA, drain one pint (0.5 L) of oil from the oil sampling valve. 2. OEA must be used when temperatures are consistently below 0°F (-18°C). 3. OE/HDO-15W/40 must be used when temperatures are consistently above 0°F (-18°C). | | | | | | |

Table 2. Transmission and Transfer Case Lubrication.

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|------------------|------------------|--|---|---|-------------------|
| Transmission Oil | 31 qt. (29.33 L) | OE/HDO-15W/40 MIL-PRF-2104 | OE/HDO-15W/40 MIL-PRF-2104 (Note 2) | OE/HDO-15W/40 MIL-PRF-2104 (Note 2) | A-Annual (1 year) |
| Transfer Case | 5 qt. (4.73 L) | OE/HDO-40 MIL-PRF-2104 | OE/HDO-40 MIL-PRF-2104 or OEA MIL-PRF-46167 (Notes 1 and 2) | OE/HDO-40 MIL-PRF-2104 or OEA MIL-PRF-46167 (Notes 1 and 2) | A-Annual (1 year) |

Table 2. Transmission and Transfer Case Lubrication. - Continued

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|---|-------------|--|--|--|----------------------|
| All Other Transmission and Transfer Case Lubrication Points | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 2) | GAA MIL-PRF-10924 (Note 2) | As Required (Note 3) |

NOTE

1. OE/HDO-40 must be used when temperatures are consistently above 0°F (-18°C).
2. Refer to FM 9-207 (WP 0173) for arctic operation.
3. Refer to PMCS tables for specific lubrication intervals.

Table 3. Axle Lubrication.

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|--------|--------------------|--|---|--|-------------------------------|
| Axle 1 | 17.5 qt. (16.56 L) | GO-85W/140 MIL-PRF-2105 | GO-85W/140 MIL-PRF-2105 or GO-80W/90 MIL-PRF-2105 (Notes 1 and 3) | GO-80W/90 MIL-PRF-2105 or GO-75 MIL-PRF-2105 (Notes 2 and 3) | B-Biennial (2 Years) (Note 4) |

Table 3. Axle Lubrication. - Continued

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|-------------------------------|-----------------------|--|--|---|-------------------------------------|
| Axle 2 (and Power Divider) | 21.5 qt. (20.34 L) | GO-85W/ 140 MIL- PRF-2105 | GO-85W/ 140 MIL- PRF-2105 or GO-80W/90 MIL- PRF-2105 (Notes 1 and 3) | GO-80W/90 MIL- PRF-2105 or GO-75 MIL- PRF-2105 (Notes 2 and 3) | B-Biennial (2 Years) (Note 4) |
| Axle 3 (and Power Divider) | 21 qt. (19.87 L) | GO-85W/ 140 MIL- PRF-2105 | GO-85W/ 140 MIL- PRF-2105 or GO-80W/90 MIL- PRF-2105 (Notes 1 and 3) | GO-80W/90 MIL- PRF-2105 or GO-75 MIL- PRF-2105 (Notes 2 and 3) | B-Biennial (2 Years) (Note 4) |
| Axle 4 | 16.5 qt. (15.61 L) | GO-85W/ 140 MIL- PRF-2105 | GO-85W/ 140 MIL- PRF-2105 or GO-80W/90 MIL- PRF-2105 (Notes 1 and 3) | GO-80W/90 MIL- PRF-2105 or GO-75 MIL- PRF-2105 (Notes 2 and 3) | B-Biennial (2 Years) (Note 4) |
| Oil Lubed Wheel Bearings | N/A | GO-85W/ 140 MIL- PRF-2105 | GO-85W/ 140 MIL- PRF-2105 | GO-80W/90 MIL- PRF-2105 or | B-Biennial (2 Years) |

Table 3. Axle Lubrication. - Continued

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|-----------------------------------|-------------|--|--|--|-------------------------|
| | | | or GO-80W/90 MIL- PRF-2105 (Notes 1 and 3) | GO-75 MIL- PRF-2105 (Notes 2 and 3) | |
| All Other Axle Lubrication Points | As Required | GAA MIL- PRF-10924 | GAA MIL- PRF-10924 (Note 3) | GAA MIL- PRF-10924 (Note 3) | As Required (Note 5) |

NOTE

1. GO-85W/140 must be used when temperatures are consistently above 30°F (-1°C).
2. GO-85W/90 must be used when temperatures are consistently above -15°F (-26°C).
3. Refer to FM 9-207 (WP 0173) for arctic operation.
4. An initial lubrication change on new or rebuilt axles should occur between 500 mi. (805 km) and 1,000 miles (1 609 km). Refer to Field Level Annual PMCS for more information.
5. Refer to PMCS tables for specific lubrication intervals.

Table 4. Hydraulic Reservoir Servicing.

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|---------------------|-----------------------|--|--|--|----------------------|
| Hydraulic Reservoir | 120 qt. (113.52 L) | OE/HDO-10 MIL- PRF-2104 | OE/HDO-10 MIL- PRF-2104 | OEA MIL- PRF-46167 | A-Annual (1 year) |

Table 4. Hydraulic Reservoir Servicing. - Continued

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|--|------------|---|--|--|----------|
| | | or OE/HDO-30 MIL- PRF-2104 (Note 1) | (Note 2) | (Notes 2 and 3) | |
| <p>NOTE</p> <ol style="list-style-type: none"> 1. OE/HDO-30 must be used only when temperatures are consistently above 60°F (16°C). 2. Refer to FM 9-207 (WP 0173) for arctic operation. 3. OEA must be used when temperatures are consistently below 0°F (-18°C). | | | | | |

Table 5. Radiator Servicing.

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|-------------------------------------|------------------|--|--|---|----------------------------|
| Antifreeze (CID A-A-52624) (Note 1) | 80 qt. (75.68 L) | 80 qt. (75.68 L) 50% Ethylene Glycol Type IC (Recycled) (Notes 1 and 2) | 80 qt. (75.68 L) 50% Ethylene Glycol Type IC (Recycled) (Notes 1 and 2) | 80 qt. (75.68 L) 60% Ethylene Glycol Arctic Type IB (Recycled) (Notes 1, 2, and 3) | A-Annual (1 year) (Note 4) |

Table 5. Radiator Servicing. - Continued

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|-------------------------------------|------------------|---|---|---|----------------------------|
| Antifreeze (CID A-A-52624) (Note 1) | 80 qt. (75.68 L) | 40 qt. (37.84 L) 100% Ethylene Glycol Type IA (Recycled) plus 40 qt. (37.84 L) water (Notes 1 and 5) | 40 qt. (37.84 L) 100% Ethylene Glycol Type IA (Recycled) plus 40 qt. (37.84 L) water (Notes 1 and 5) | 48 qt. (45.41 L) 100% Ethylene Glycol Type IA (Recycled) plus 32 qt. (30.27 L) water (Notes 1, 3, and 6) | A-Annual (1 year) (Note 4) |
| Antifreeze (CID A-A-52624) (Note 1) | 80 qt. (75.68 L) | 40 qt. (37.84 L) 100% Propylene Glycol Type IIA (virgin) plus 40 qt. (37.84 L) water (Notes 1 and 7) | 40 qt. (37.84 L) 100% Propylene Glycol Type IIA (virgin) plus 40 qt. (37.84 L) water (Notes 1 and 7) | 48 qt. (45.41 L) 100% Propylene Glycol Type IIA (virgin) plus 32 qt. (30.27 L) water (Notes 1, 3, and 8) | A-Annual (1 year) (Note 4) |
| Corrosion Inhibitor (Note 1) | 2.4 qt. (2.27 L) | (Note 1) | (Note 1) | (Notes 1 and 3) | As Required |

NOTE

1. Refer to TB 750-651 (WP 0173) for more information on antifreeze and additives used in the HEMTT series vehicle engine cooling system, and TM 750-254 (WP 0173) for detailed instructions for draining, cleaning, and flushing cooling systems of tactical vehicles.

Table 5. Radiator Servicing. - Continued

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|---|------------|--|--|--|----------|
| <ol style="list-style-type: none"> 2. Type 1C (normal) and Type 1B (arctic) antifreeze is premixed, and DOES NOT REQUIRE the addition of water. Never add water or inhibitor to Type 1B antifreeze. 3. Refer to FM 9-207 (WP 0173) for arctic operation. 4. Engine coolant contaminant level is checked annually. Engine coolant does not need to be changed until it fails check. 5. A mixture of 50% Ethylene Glycol (EG) antifreeze to 50% water will provide freeze protection down to -34°F (-37°C). 6. A mixture of 50% Propylene Glycol (PG) antifreeze to 50% water will provide freeze protection down to -27°F (-33°C). 7. A mixture of 60% Ethylene Glycol (EG) antifreeze to 40% water will provide freeze protection down to -62°F (-52°C). 8. A mixture of 60% Propylene Glycol (PG) antifreeze to 40% water will provide freeze protection down to -56°F (-49°C). | | | | | |

Table 6. Self-Recovery Winch Lubrication.

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|--------------------------------------|----------------|--|---|--|------------------------|
| Self-Recovery Winch Gearbox (Note 1) | 2 qt. (1.89 L) | GO-85W/140 MIL-PRF-2105 | GO-75 MIL-PRF-2105 or GO-80W/90 MIL-PRF-2105 (Note 2) | GO-75 MIL-PRF-2105 (Note 2) | A-Annual (1 year) |
| Winch Cable | As Required | OE/HDO-30 MIL-PRF-2104 | OE/HDO-10 MIL-PRF-2104 | OEA MIL-PRF-46167 | S-Semiannual (WP 0161) |

Table 6. Self-Recovery Winch Lubrication. - Continued

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|--|-------------|--|--|--|----------------------|
| | | | (Note 1) | (Note 1) | (6 Months) |
| All Other Self-Recovery Winch Lubrication Points | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 2) | GAA MIL-PRF-10924 (Note 2) | As Required (Note 3) |
| <p>NOTE</p> <ol style="list-style-type: none"> 1. Pre-lubricated from manufacturer. 2. Refer to FM 9-207 (WP 0173) for arctic operation. 3. Refer to PMCS tables for specific lubrication intervals. | | | | | |

Table 7. Oil Can Point Lubrication.

| Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Intervals |
|---|--|--|--|----------------------|
| As Required | OE/HDO-30 MIL-PRF-2104 | OE/HDO-10 MIL-PRF-2104 (Note 1) | OEA MIL-PRF-46167 (Note 1) | As Required (Note 2) |
| <p>NOTE</p> <ol style="list-style-type: none"> 1. Refer to FM 9-207 (WP 0173) for arctic operation. 2. Refer to PMCS tables for specific oilcan lubrication intervals. | | | | |

Table 8. Miscellaneous Lubrication Points.

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|--------------------------------------|-------------------|---|---|---|--|
| Engine Throttle Lever | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 1) | GAA MIL-PRF-10924 (Note 1) | A-Annual (1 year) |
| Load Handling System | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 1) | GAA MIL-PRF-10924 (Note 1) | S-Semiannual (WP 0161) (6 Months) |
| Pintle Hook | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 1) | GAA MIL-PRF-10924 (Note 1) | W-Weekly (WP 0160) S-Semiannual (WP 0161) (6 Months) (service fittings) |
| Propeller Driver Shafts and U-Joints | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 1) | GAA MIL-PRF-10924 (Note 1) | S-Semiannual (WP 0161) (6 Months) (Note 2) |
| Self-Guided Coupler | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 1) | GAA MIL-PRF-10924 (Note 1) | W-Weekly (WP 0160) (coat with GAA) S-Semiannual (WP 0161) (6 Months) (service fittings) |

Table 8. Miscellaneous Lubrication Points. - Continued

| Item | Capacities | Expected Temperatures Above +15°F (-9°C) | Expected Temperatures +40 to -15°F (+4 to -26°C) | Expected Temperatures +40 to -50°F (+4 to -46°C) | Interval |
|--------------------|-------------|--|--|--|-----------------------------------|
| Spare Tire Davit | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 1) | GAA MIL-PRF-10924 (Note 1) | S-Semiannual (WP 0161) (6 Months) |
| Spring Hanger Pins | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 1) | GAA MIL-PRF-10924 (Note 1) | S-Semiannual (WP 0161) (6 Months) |
| Steering System | As Required | GAA MIL-PRF-10924 | GAA MIL-PRF-10924 (Note 1) | GAA MIL-PRF-10924 (Note 1) | S-Semiannual (WP 0161) (6 Months) |

Table 9. Vehicle Cleaning.

| Item | Capacities | Expected Temperature | Intervals |
|-------------------------------------|-------------|------------------------------|-------------|
| Cleaning Compound, Solvent (Note 1) | As Required | SD All Temperatures (Note 2) | As Required |

NOTE

1. After a thorough high pressure washing, lubricate all grease fittings and oil can points outside and underneath vehicle.
2. Refer to FM 9-207 (WP 0173) for arctic operation.

END OF WORK PACKAGE

OPERATOR MAINTENANCE CLOSE/OPEN HEATER VALVES

INITIAL SETUP:

Equipment Condition

Engine OFF. (WP 0051)

Equipment Condition - Continued

Wheels chocked. (WP 0090)

Open passenger side engine cover.
(WP 0172)

CLOSE HEATER VALVES

NOTE

- Closing two heater valves will improve efficiency of air conditioning kit.
- Closing two heater valves will disable cabin heat.
- Two heater valve knobs are located on front passenger side of engine, the bottom valve is located approximately 18 in. (46 cm) below the top valve.

1. Turn two heater valve knobs (1) counterclockwise to close.

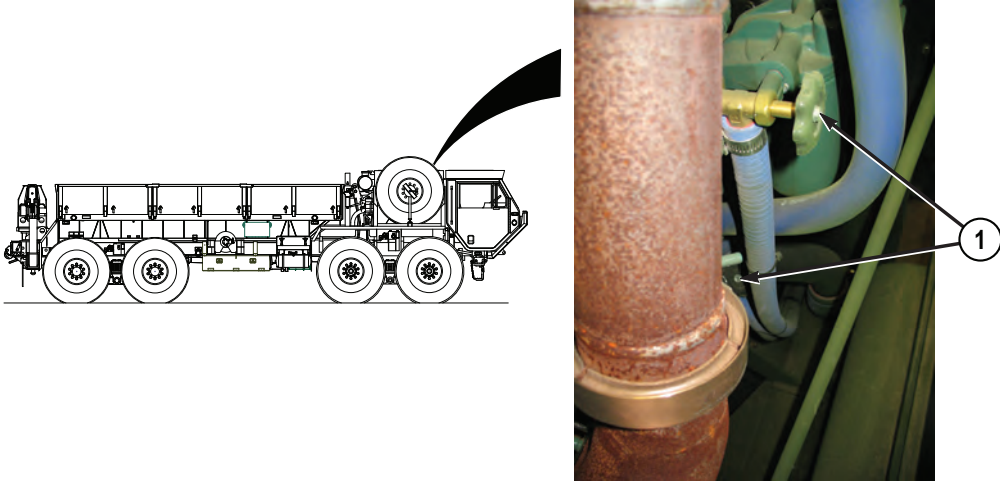
CLOSE HEATER VALVES - Continued

Figure 1.

END OF TASK**OPEN HEATER VALVES****NOTE**

- Opening two heater valves will diminish efficiency of air conditioning kit.
- Opening two heater valves will enable cabin heat.
- Two heater valve knobs are located on front passenger side of engine, the bottom valve is located approximately 18 in. (46 cm) below the top valve.

1. Turn two heater valve knobs (1) clockwise to close.

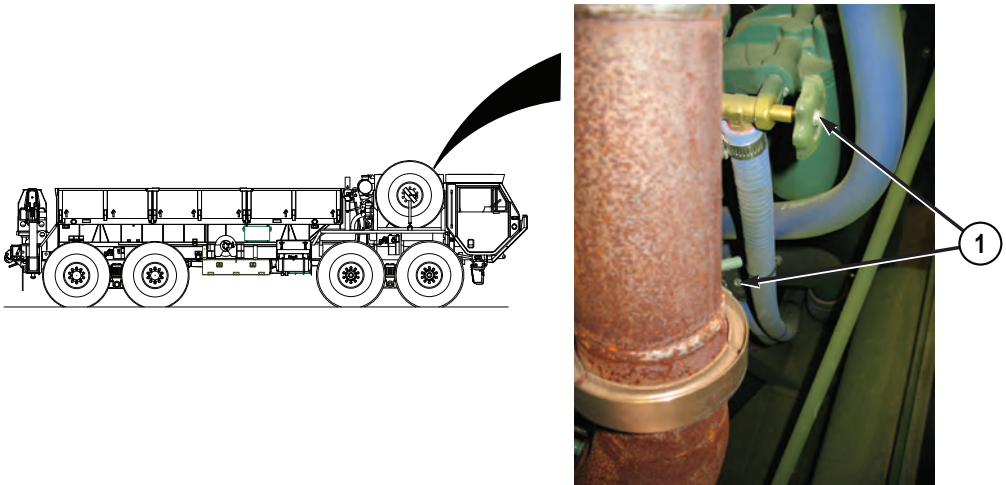
OPEN HEATER VALVES - Continued

Figure 2.

END OF TASK**FOLLOW-ON MAINTENANCE**

1. Close passenger side engine cover. (WP 0172)
2. Remove wheel chocks.

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
PRE/POST TOWING PROCEDURE (FRONT LIFT ONLY)**

INITIAL SETUP:**Tools and Special Tools**

Chain, 8 ft. (supplied by wrecker)
Chain, 7 ft. (supplied by wrecker)
(WP 0174, Table 3, Item 7)

Equipment Condition

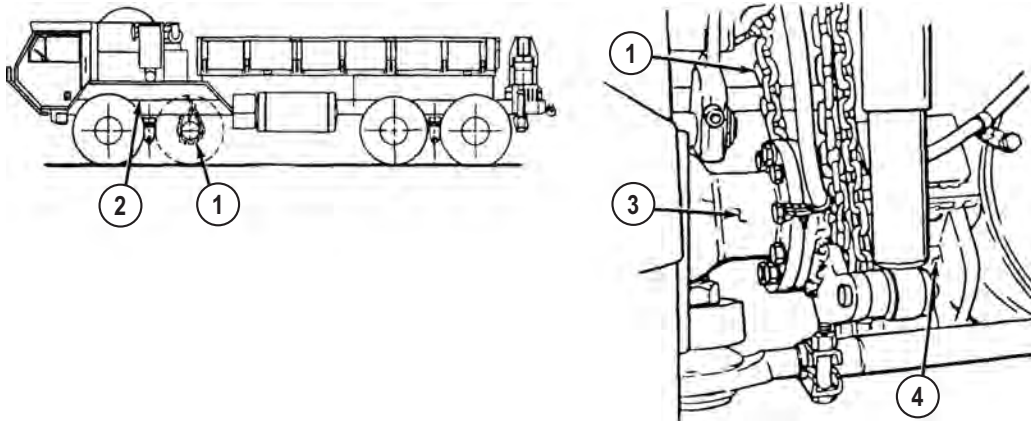
Engine OFF. (WP 0051)

PREPARE VEHICLE FOR TOWING**CAUTION**

When installing axle restraint chains, route chains so hoses or lines are not between frame and chain or axle and chain. Failure to comply may result in damage to equipment.

NOTE

- This procedure is applicable to preparation for towing a HEMTT series vehicle from the front ONLY (refer to tow HEMTT-front lift for further information).
 - If disabled vehicle is either a BASE or A2 model HEMTT series vehicle (refer to data plate on inside of driver side door), complete Step (1).
 - If disabled vehicle is an A4 model HEMTT series vehicle (refer to data plate on inside of driver side door), skip to Step (2).
1. Perform the following on disabled vehicle:
 - a. Remove propeller shaft between transfer case and No. 3 axle.
 - b. Install axle restraint chains (1):

PREPARE VEHICLE FOR TOWING - Continued*Figure 1.***NOTE**

- Axle restraint chains are installed the same way, driver side shown.
- No. 2 axle should be restrained with chains on both sides of vehicle.

- (1) Route axle restraint chain (1) over frame rail (2) and around axle (3) beside walking beam (4).
- (2) Hook axle restraint chain (1) back into itself.
- (3) Repeat Steps (1) and (2) for opposite side of No. 2 axle (3).

CAUTION

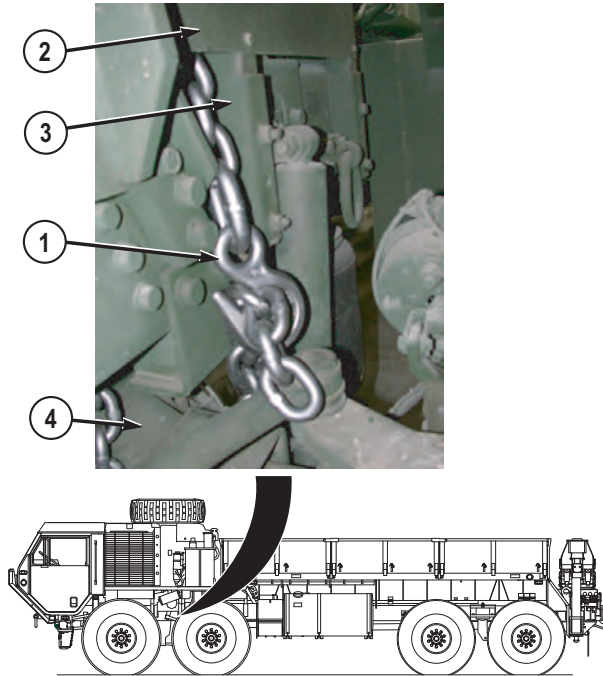
When installing axle restraint chains, route chain around frame rail and axle only. Do not wrap chain around lateral torque rod, shock absorber, shift cables, etc. as they could be crushed. Route chains so hoses or lines are not between frame and chain or axle and chain. Failure to comply may result in damage to equipment.

NOTE

- This procedure is applicable to preparation for towing a HEMTT series vehicle from the front ONLY (refer to tow HEMTT-front lift for further information).
- If disabled vehicle is an A4 model HEMTT series vehicle (refer to data plate on inside of driver side door), complete Step (2).

PREPARE VEHICLE FOR TOWING - Continued

2. Perform the following on disabled vehicle:
 - a. Remove propeller shaft between transfer case and No. 3 axle.
 - b. Install axle restraint chains (1):

*Figure 2.***NOTE**

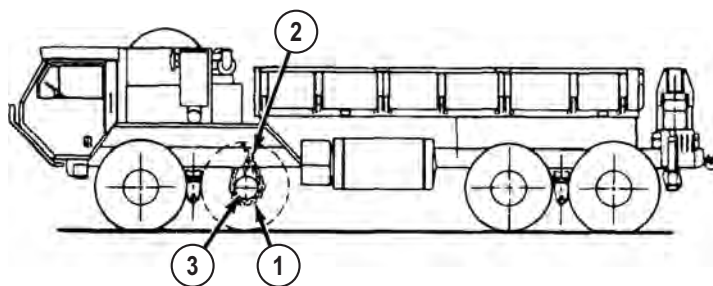
- Axle restraint chains are installed the same way, driver side shown.
 - No. 2 axle should be restrained with chains on both sides of vehicle.
- (1) Route axle restraint chain (1) under engine shroud (2), over frame rail (3), and around axle (4).
 - (2) Hook axle restraint chain (1) back into itself as shown.
 - (3) Repeat Steps (1) and (2) for opposite side of No. 2 axle (3).

END OF TASK

POST TOWING PROCEDURE**NOTE**

- This post towing procedure is applicable to a HEMTT series vehicle that has been towed from the front ONLY (refer to tow HEMTT-front lift for further information).
- If disabled vehicle is either a BASE or A2 model HEMTT series vehicle (refer to data plate on inside of driver side door), complete Step (1).
- If disabled vehicle is an A4 model HEMTT series vehicle (refer to data plate on inside of driver side door), skip to Step (2).

1. Perform the following to disabled vehicle:
 - a. Remove two axle restraint chains (1) from around frame rails (2) and No. 2 axle (3).

*Figure 3.*

- b. Return two axle restraint chains (1) to wrecker stowage.
- c. Install propeller shaft between transfer case and No. 3 axle.

NOTE

- This post towing procedure is applicable to a HEMTT series vehicle that has been towed from the front ONLY (refer to tow HEMTT-front lift for further information).
- If disabled vehicle is an A4 model HEMTT series vehicle (refer to data plate on inside of driver side door), complete Step (2).

2. Perform the following to disabled vehicle:
 - a. Remove two axle restraint chains (1) from under engine shroud (2), around frame rail (3), and No. 2 axle (4).

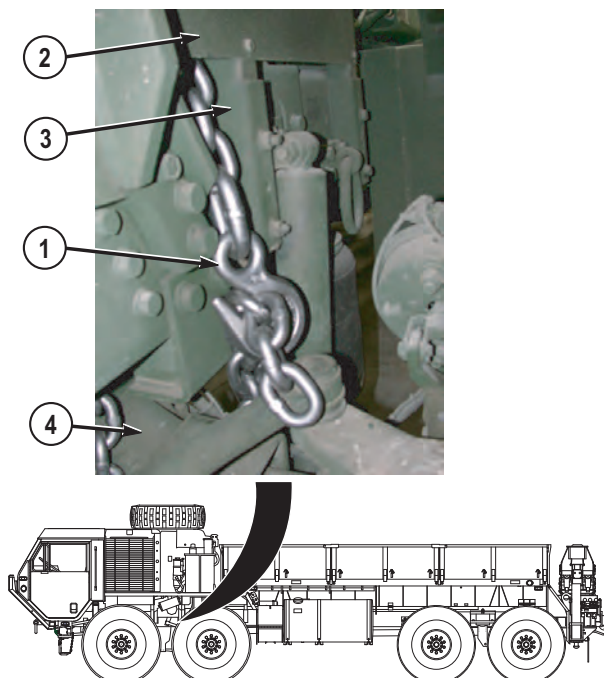
POST TOWING PROCEDURE - Continued

Figure 4.

- b. Return two axle restraint chains (1) to wrecker stowage.
- c. Install propeller shaft between transfer case and No. 3 axle.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE CLEAN VEHICLE

INITIAL SETUP:

Materials/Parts

Rag, Wiping (WP 0176, Table 1,
Item 50)

Equipment Condition

Engine OFF. (WP 0051)
Wheels chocked. (WP 0090)

CLEAN EXTERIOR

CAUTION

Do not wipe dirt off vehicle when vehicle is dry. Dirt, stones, or debris may scratch and damage vehicle.

NOTE

After a thorough high pressure washing, lubricate all grease fittings and oil can points outside and underneath vehicle (refer to lubrication instructions (WP 0163) for more information).

1. Wash vehicle often with cool or warm water. Do not use strong detergent or abrasives.

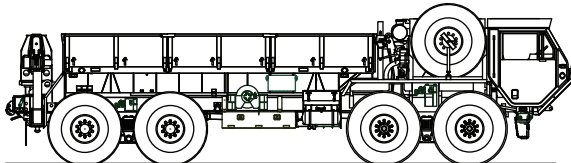


Figure 1.

2. While cleaning vehicle, look closely for rust, corrosion, bare metal, or other damage. Report any damage to Field Level Maintenance.

END OF TASK

CLEAN INTERIOR

1. Remove loose dirt and dust from cab interior components (1).
2. Clean seat cushions (2) and seatbelts (3) with warm soapy water. Do not use abrasives or solvents.

CLEAN INTERIOR - Continued

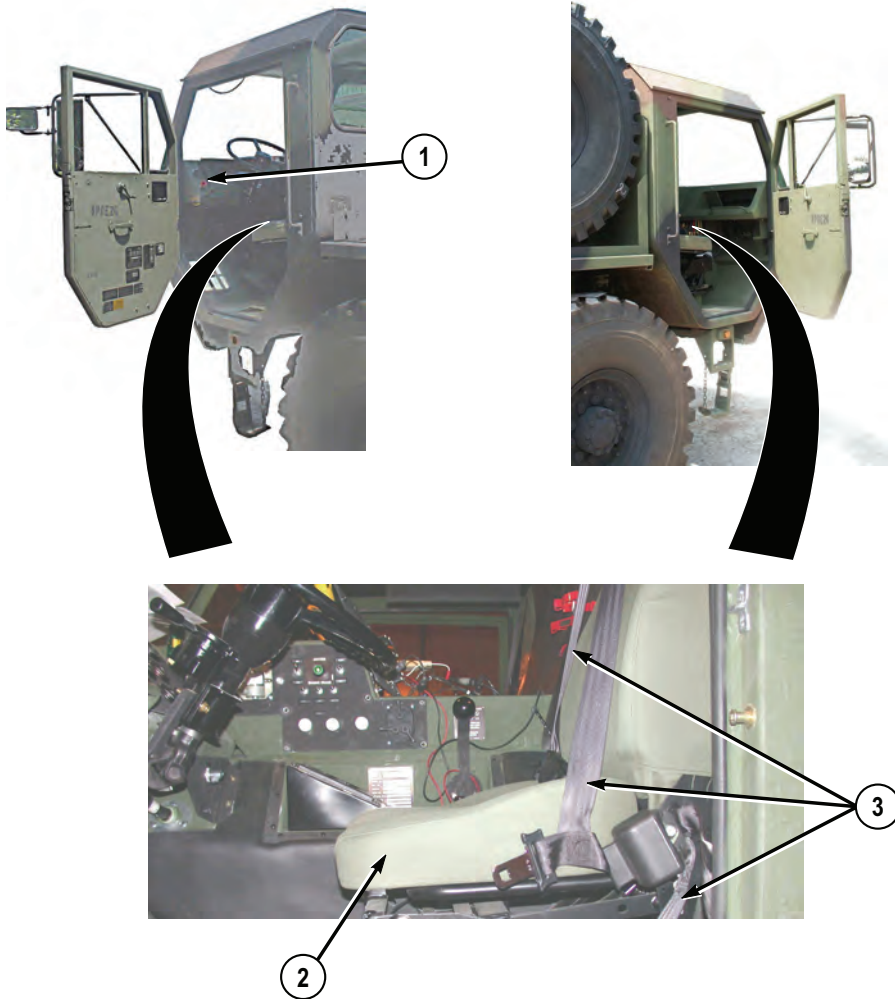


Figure 2.

- 3. Wipe seat cushions (2) and seatbelts (3) dry.

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE CHANGE WHEEL AND TIRE ASSEMBLY

INITIAL SETUP:

Tools and Special Tools

Chocks, Wheel (2) (WP 0174, Table 3, Item 9)
Extension, Handle (WP 0174, Table 3, Item 16)
Handle, Wrench (WP 0174, Table 3, Item 18)
Jack, 12-ton, With Handle (WP 0174, Table 3, Item 23)
Jack, Base Plate (WP 0174, Table 3, Item 25)

Tools and Special Tools - Continued

Warning Device Set, Triangular (WP 0174, Table 3, Item 29)
Wrench, Wheel Lugnut (WP 0174, Table 3, Item 40)
Wrench, Adjustable (WP 0174, Table 3, Item 38)

Personnel Required

Operator and Assistant - - - (2)

PREPARE VEHICLE

1. Shut off engine. (WP 0051)

WARNING



Park vehicle in safe area, out of traffic, where there is no danger to personnel changing tire assembly. Park vehicle on hard level ground. Failure to comply may result in injury or death to personnel.

2. Turn on emergency flashers. (WP 0089)
3. Set up emergency marker kit, as necessary. (WP 0112)

END OF TASK

SET UP TIRE DAVIT WINCH

1. Remove hoist arm (1) from mounting bracket (2).

SET UP TIRE DAVIT WINCH - Continued

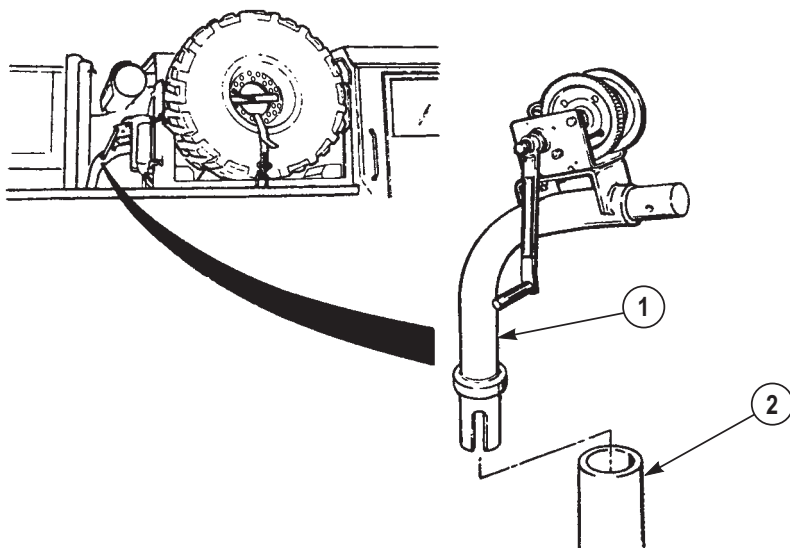
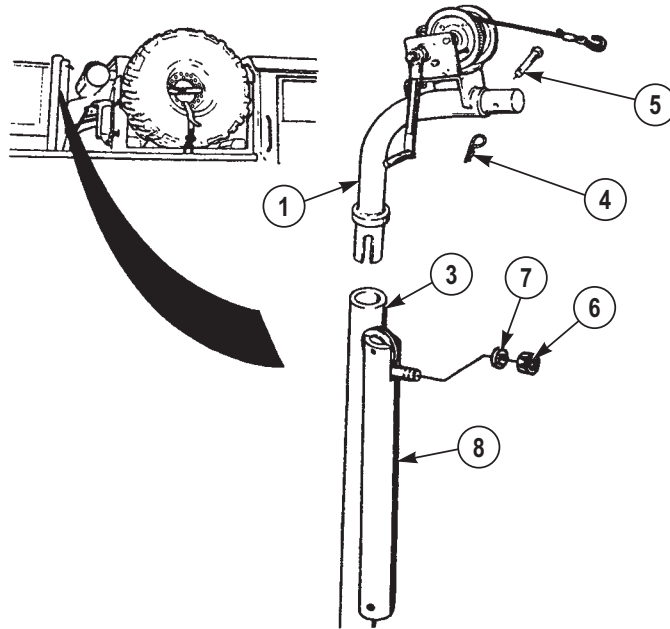


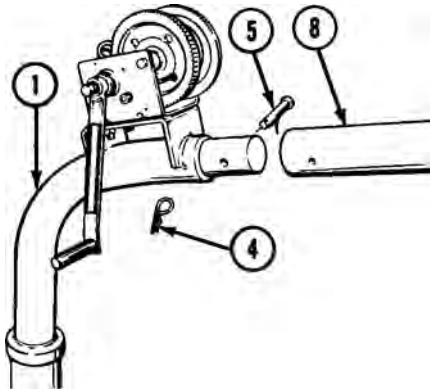
Figure 1.

2. Install hoist arm (1) in mount (3).

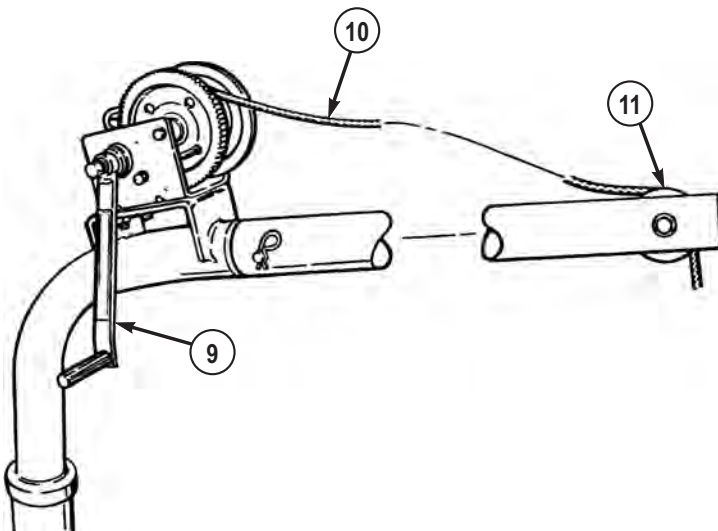
SET UP TIRE DAVIT WINCH - Continued

*Figure 2.*

3. Remove and keep safety pin (4) and pin (5) from hoist arm (1).
4. Remove nut (6), washer, and extension (8) from mount (3).
5. Install extension (8) in hoist arm (1).

SET UP TIRE DAVIT WINCH - Continued*Figure 3.*

6. Line up holes in extension (8) and hoist arm (1).
7. Install pin (5) and safety pin (4).
8. Turn hand crank (9) CCW and route cable (10) over end of pulley (11).

*Figure 4.***END OF TASK**

REMOVE SPARE WHEEL AND TIRE ASSEMBLY

1. Remove two wheel chocks (1) from under spare wheel and tire assembly (2).

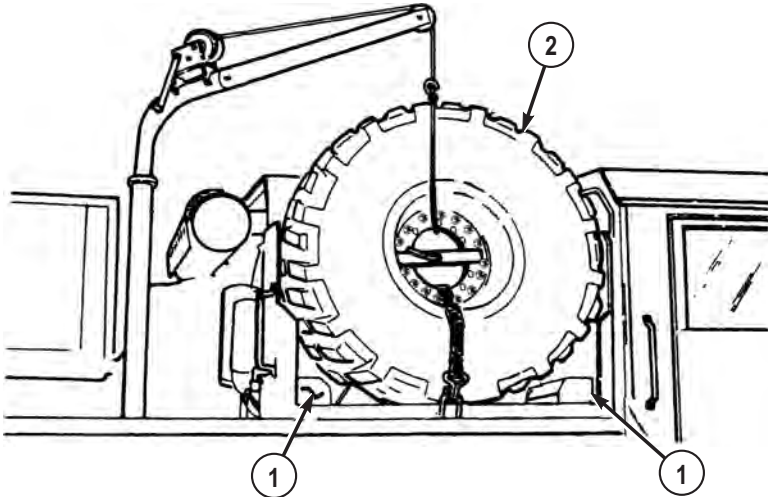


Figure 5.

2. Install two wheel chocks (WP 0090) (1) on wheel and tire assembly (3) that is across from flat wheel and tire assembly (4).

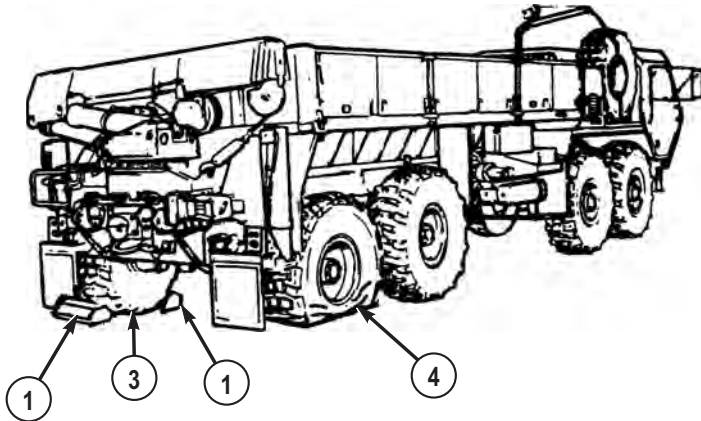
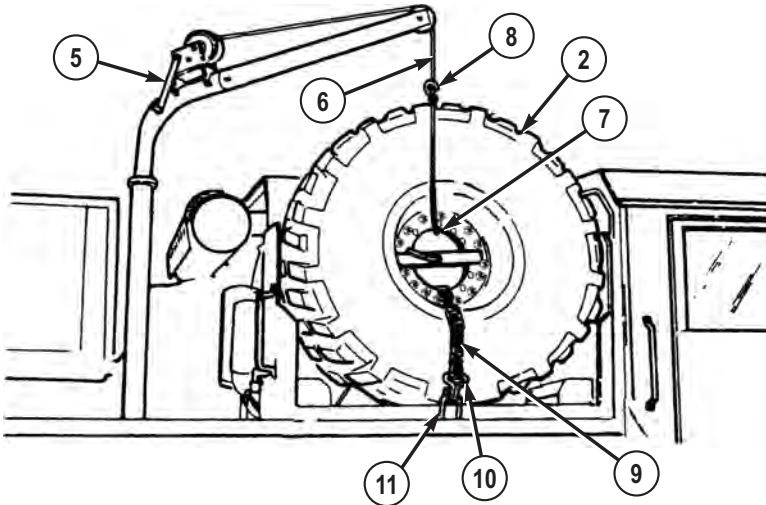
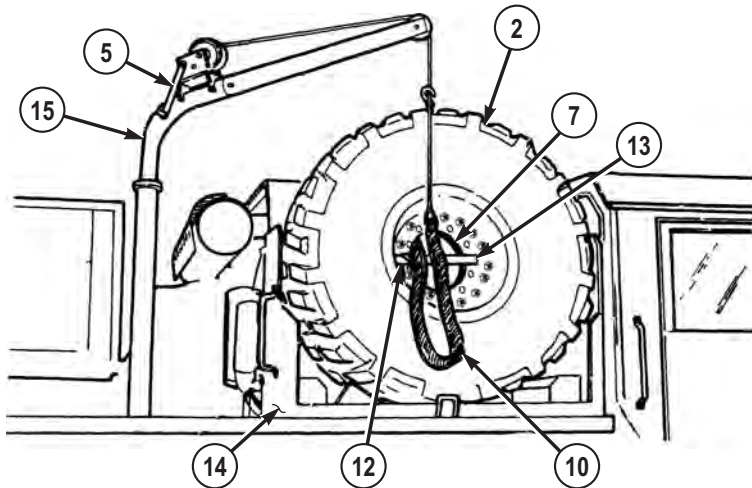


Figure 6.

3. Turn hand crank (5) counterclockwise to let out enough cable (6) to push through hole in wheel (7) and wrap around spare wheel and tire assembly (2).

REMOVE SPARE WHEEL AND TIRE ASSEMBLY - Continued*Figure 7.*

4. Wrap cable (6) through hole in wheel (7) and around spare wheel and tire assembly (2), and secure with hook (8).
5. Turn hand crank (5) clockwise to put light tension on cable (6).
6. Release clamp (9), and disconnect tie down strap (10) from bracket (11) on both sides of spare wheel and tire assembly (2).
7. Hook tie down strap (10) on hole in wheel (7) on both sides of spare wheel and tire assembly (2).

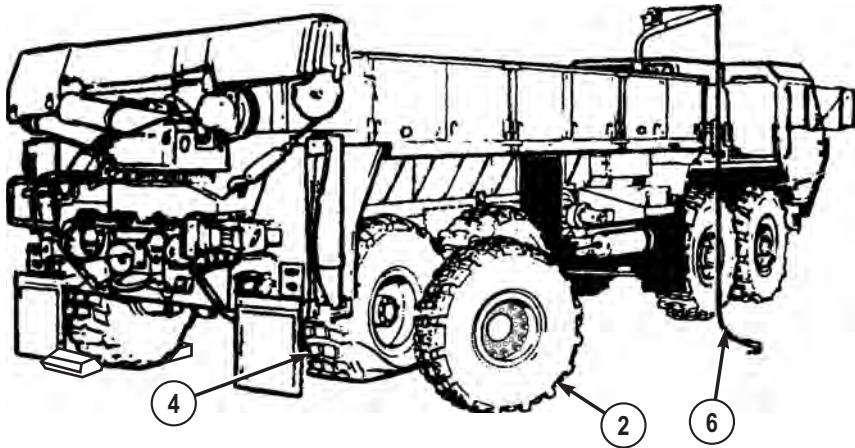
REMOVE SPARE WHEEL AND TIRE ASSEMBLY - Continued*Figure 8.*

8. Turn lever (12) counterclockwise.
9. Remove lever (12) and holddown plate (13). Set aside lever (12) and holddown plate (13) for later use.

NOTE

Stand on passenger side front fender to operate tire davit winch while other assistant stands on ground near second axle to guide wheel and tire assembly down.

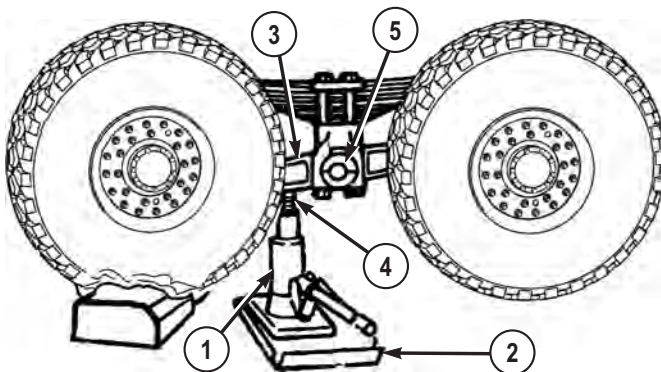
10. Turn hand crank (5) clockwise to lift spare wheel and tire assembly (2) just above carrier (14).
11. Swing hoist arm (15) so spare wheel and tire assembly (2) is clear of vehicle, while assistant pulls on tie down strap (10) to guide spare wheel and tire assembly out of carrier (14).
12. Turn hand crank (5) counterclockwise to lower spare wheel and tire assembly (2) to ground, while assistant holds spare wheel and tire assembly (2) steady with tie down strap (10).
13. Remove tie down strap (10).
14. Push spare wheel and tire assembly (2) against vehicle.

REMOVE SPARE WHEEL AND TIRE ASSEMBLY - Continued*Figure 9.*

15. Remove cable (6) from spare wheel and tire assembly (2), and roll spare wheel and tire assembly (2) next to axle of flat wheel and tire assembly (4).
16. Check spare wheel and tire assembly (2) air pressure and service as required. (WP 0170)

END OF TASK**REMOVE WHEEL AND TIRE ASSEMBLY**

1. Remove jack (1) and jack base plate (2) from stowage.

*Figure 10.*

REMOVE WHEEL AND TIRE ASSEMBLY - Continued**NOTE**

It may be necessary to place wheel chock under flat wheel and tire assembly to get jack and jack base plate under equalizing beam.

2. Position jack (1) and jack base plate (2) under equalizing beam (3).
3. Unscrew jack ram (4) until it touches equalizing beam (3) approximately 4 to 5 in. (102 to 127 mm) from beam center pivot point (5).

NOTE

Studs and lugnuts on driver side of vehicle have left-hand threads. Rotate lugnuts clockwise to loosen, counterclockwise to tighten. Studs and lugnuts on passenger side of vehicle have right-hand threads. Rotate lugnuts counterclockwise to loosen, clockwise to tighten.

4. Loosen 10 lugnuts (6) until they turn easily.

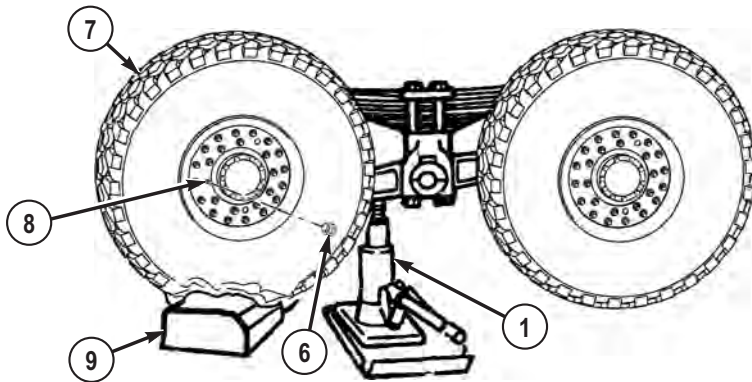


Figure 11.

NOTE

If chock was used to help position jack, wheel and tire assembly does not have to be clear of chock.

5. Raise jack (1) until flat wheel and tire assembly (7) can be removed.
6. Remove 10 lugnuts (6) from studs (8) and set lugnuts (6) aside.

NOTE

If wheel chock was not used to position jack, skip to Step (8).

7. Remove wheel chock (9) and return it to vehicle stowage.

INSTALL WHEEL AND TIRE ASSEMBLY - Continued

2. Make sure deep side of spare wheel and tire assembly wheel dish (3) is in same position as flat/shredded wheel and tire assembly wheel dish when flat/shredded wheel and tire assembly was removed.

NOTE

- Tire valve stem extension must be removed to reposition wheel and tire assembly valve stem extension.
 - It may be necessary to reposition valve stem to accomplish installation of valve stem extension.
3. Make sure wheel and tire assembly valve stem (4) is pointing out, away from vehicle.

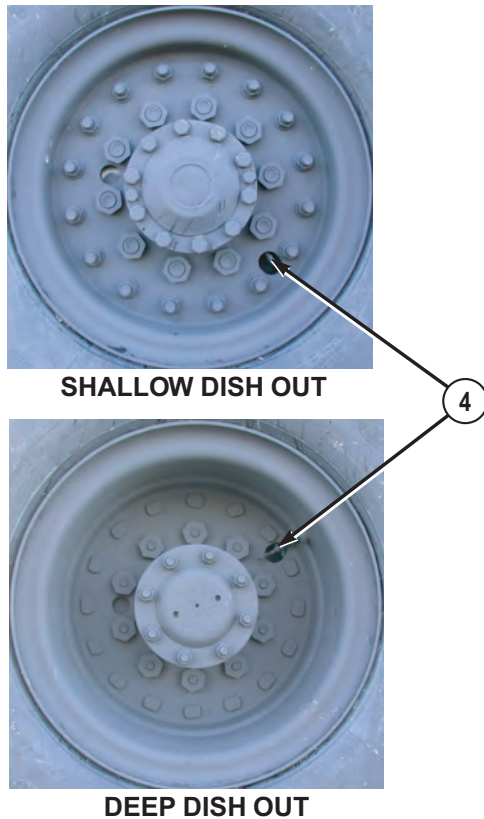
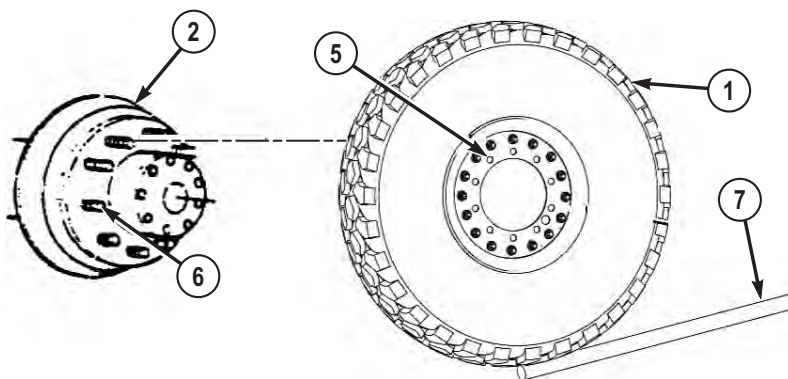


Figure 13.

4. Line up holes in rim (5) of wheel and tire assembly (1) with studs (6) on axle (2).

INSTALL WHEEL AND TIRE ASSEMBLY - Continued*Figure 14.***WARNING**

Wheel/tire assembly weighs 540 lbs (245 kg). Do not attempt to lift or move wheel/tire assembly without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

5. Lean top of wheel and tire assembly (1) against studs (6) and axle (2).

NOTE

Install a lugnut on top stud, and hand-tighten to hold wheel and tire assembly in place.

6. Using handle extension (7), slide spare wheel and tire assembly onto studs (6) while assistant raises vehicle with jack. Bottom of wheel and tire assembly (1) should swing toward axle (2).
7. Assistant lowers vehicle until wheel and tire assembly (1) just touches ground.
8. Repeat Steps (5) through (7) until wheel and tire assembly (1) is seated on axle (2) and studs (6).

NOTE

- Studs and lugnuts on driver side of vehicle have left-hand threads. Rotate lugnuts counterclockwise to tighten.

INSTALL WHEEL AND TIRE ASSEMBLY - Continued

- Studs and lugnuts on passenger side of vehicle have right-hand threads. Rotate lugnuts clockwise to tighten.

9. Install and tighten 10 lugnuts (8) in order shown using wheel lugnut wrench.

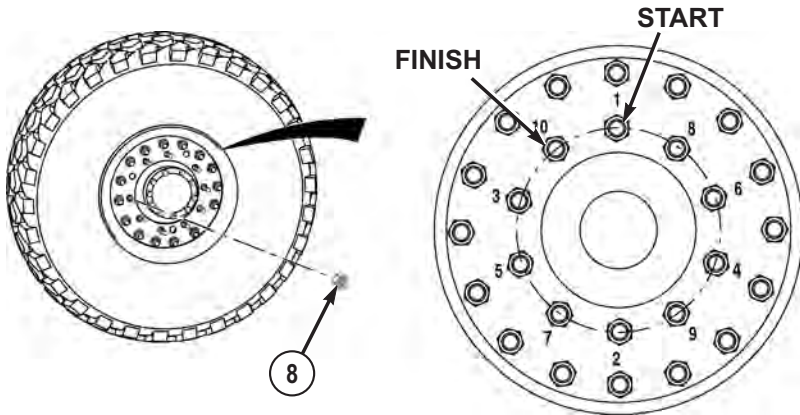


Figure 15.

10. Assistant lowers jack (9) until vehicle weight is fully supported by suspension system.
11. Remove jack (9) and jack base plate (10) from under vehicle.

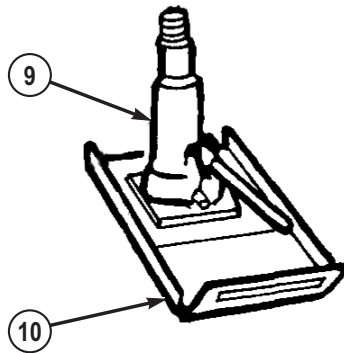
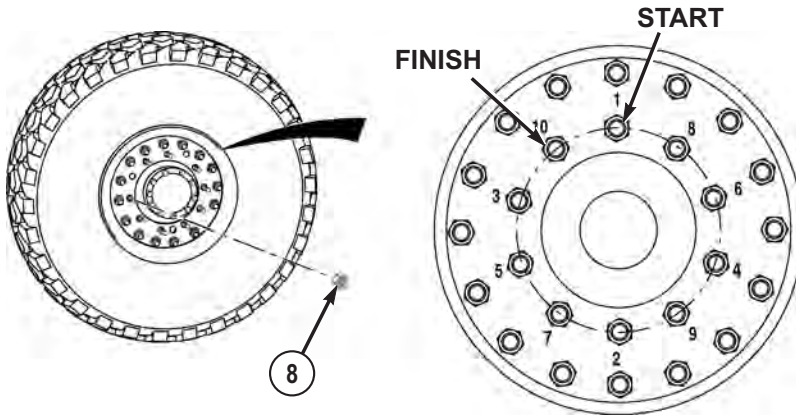


Figure 16.

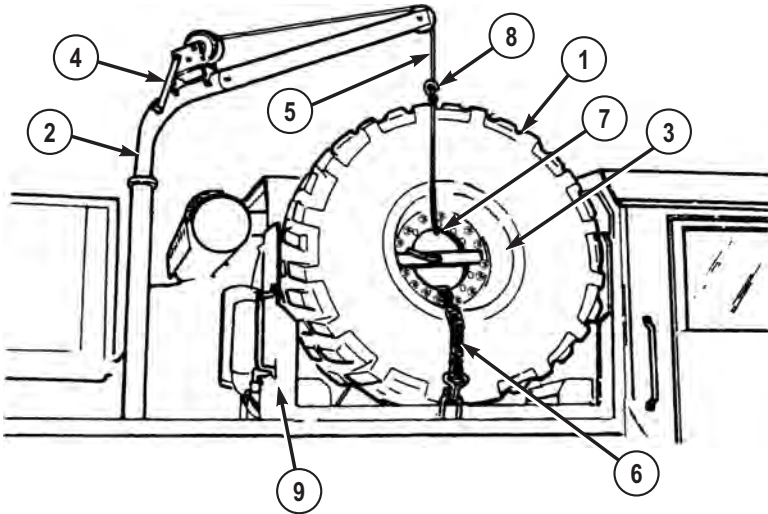
12. Tighten 10 lugnuts (8) in order shown until they no longer tighten.

INSTALL WHEEL AND TIRE ASSEMBLY - Continued*Figure 17.*

13. Return all tools and equipment to proper storage boxes.
14. Return vehicle to field level maintenance and have lugnuts (8) tightened to torque requirements as soon as possible.

END OF TASK**STOW FLAT WHEEL AND TIRE ASSEMBLY**

1. Roll flat wheel and tire assembly (1) under hoist arm (2) so deep side of wheel dish (3) is facing out and away from vehicle.

STOW FLAT WHEEL AND TIRE ASSEMBLY - Continued*Figure 18.***NOTE**

Assistant stands on passenger side front fender to operate tire davit winch while other assistant stands on ground near second axle to guide wheel and tire assembly into carrier.

2. Turn hand crank (4) counterclockwise to let out cable (5).
3. Pull tie down strap (6) through hole in wheel (7), and hook ends to hole on both sides of wheel.
4. Hook ends of tie down strap (6) to both sides of hole in wheel (7).
5. Pull cable (5) through hole in wheel (7) and secure hook (8) back into cable as shown.

WARNING

Inner wheel weighs 105 lbs (48 kg). Do not attempt to lift or move inner wheel without the aid of an assistant and a lifting device. Failure to comply may result in injury or death to personnel.

STOW FLAT WHEEL AND TIRE ASSEMBLY - Continued

6. Turn hand crank (4) clockwise to raise flat wheel and tire assembly (1) just above carrier (9) while assistant holds tie down strap (6) to steady wheel and tire assembly (1).
7. Swing hoist arm (2) so flat wheel and tire assembly (1) is over carrier (9) while assistant guides wheel and tire assembly with tie down strap (6).
8. Turn hand crank (4) counterclockwise to lower flat wheel and tire assembly (1) into carrier (9).
9. Remove tie down strap (6).
10. Hold flat wheel and tire assembly (1) steady, while assistant installs holddown plate (10).

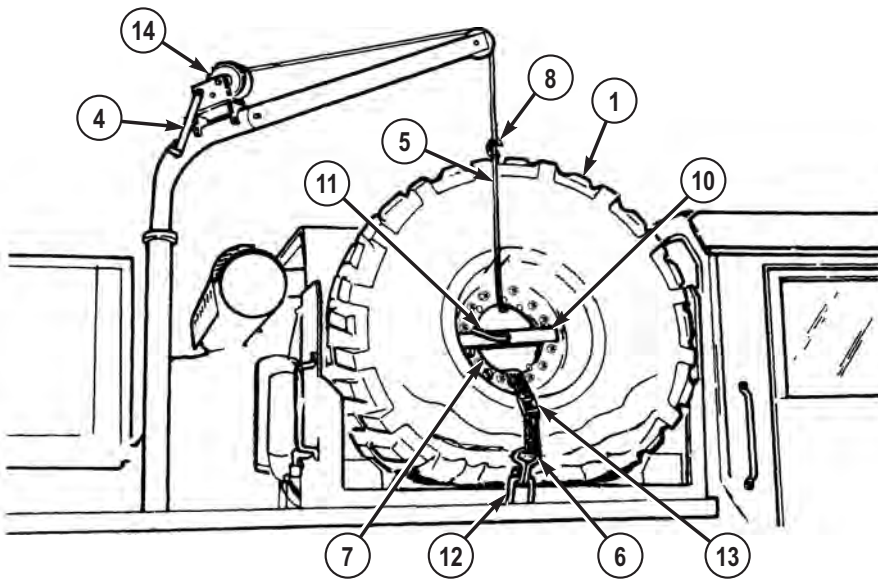


Figure 19.

11. Install lever (11) and turn clockwise to tighten.
12. Slide tie down strap (6) through hole in wheel (7).
13. Connect tie down strap (6) to outside holddown bracket (12), while assistant connects tie down strap to inside holddown bracket.
14. Pull latch (13) down and lock to secure flat wheel and tire assembly (1).
15. Turn hand crank (4) counterclockwise to loosen cable (5).
16. Remove hook (8) and cable (5) from wheel and tire assembly (1).

STOW FLAT WHEEL AND TIRE ASSEMBLY - Continued

17. Turn hand crank (4) clockwise and wind cable (5) fully onto reel (14).

END OF TASK**STOW TIRE DAVIT WINCH**

1. Remove safety pin (1) and pin (2) from extension (3).

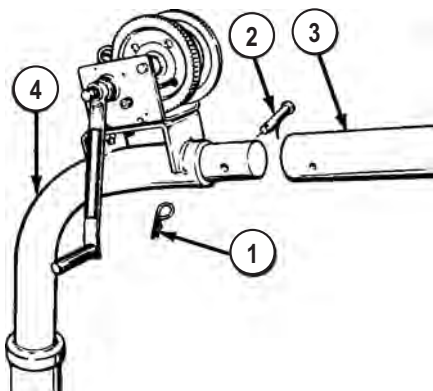
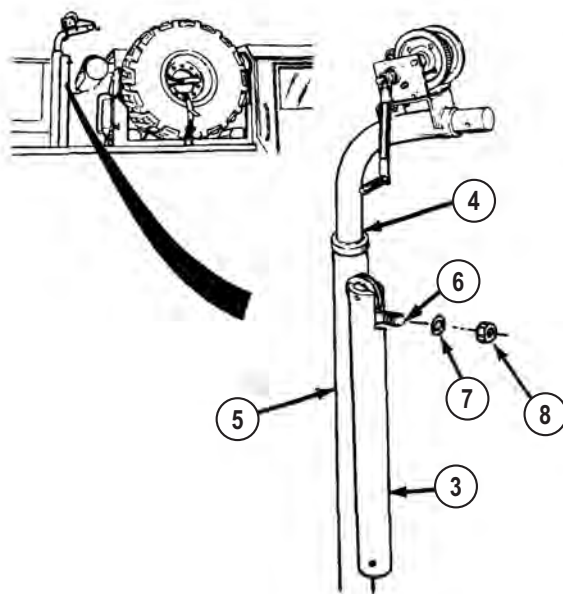


Figure 20.

2. Pull extension (3) from hoist arm (4).
3. Install extension (3) on mount (5).

STOW TIRE DAVIT WINCH - Continued

*Figure 21.*

4. Slide top of extension (3) over stud (6).
5. Secure extension (3) with washer (7) and nut (8).
6. Pull hoist arm (4) from mount (5).
7. Put hoist arm (4) into mounting bracket (9).

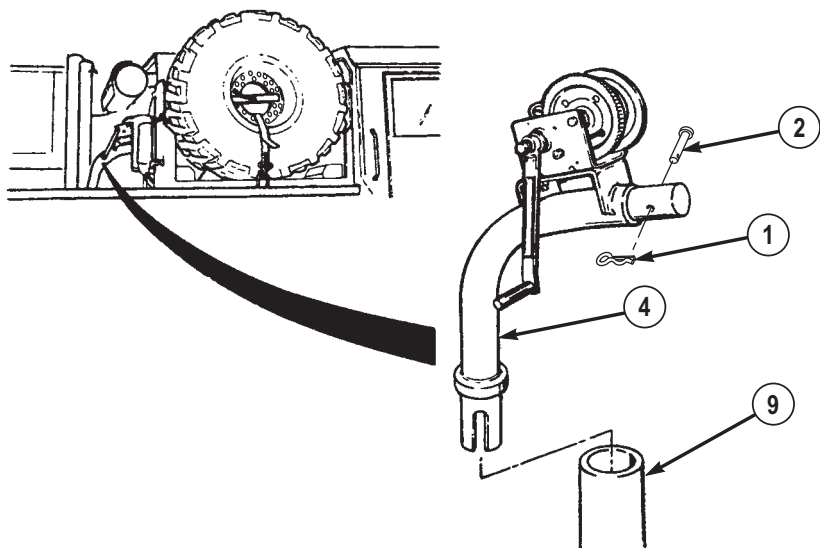
STOW TIRE DAVIT WINCH - Continued

Figure 22.

8. Install pin (10) through hoist arm (4).
9. Secure pin (10) with safety pin (11).
10. Pick up and stow emergency marker kit (as necessary).

END OF TASK

END OF WORK PACKAGE

OPERATOR MAINTENANCE CLEAN FUEL TANK STRAINER

INITIAL SETUP:

Materials/Parts

Rag, Wiping (WP 0176, Table 1,
Item 50)

Equipment Condition

Engine OFF. (WP 0051)
Wheels chocked. (WP 0090)

REMOVE/CLEAN FUEL TANK STRAINER

WARNING



Fuel is very flammable and can explode easily. Keep fuel away from open fire and keep fire extinguisher within easy reach when working with fuel. Do not work on fuel system when engine is hot. Fuel can be ignited when engine is hot. When working with fuel, post signs that read **NO SMOKING WITHIN 50 FEET OF VEHICLE**. Failure to comply may result in injury or death to personnel.

1. Wipe off dirt from fuel filler cap (1).

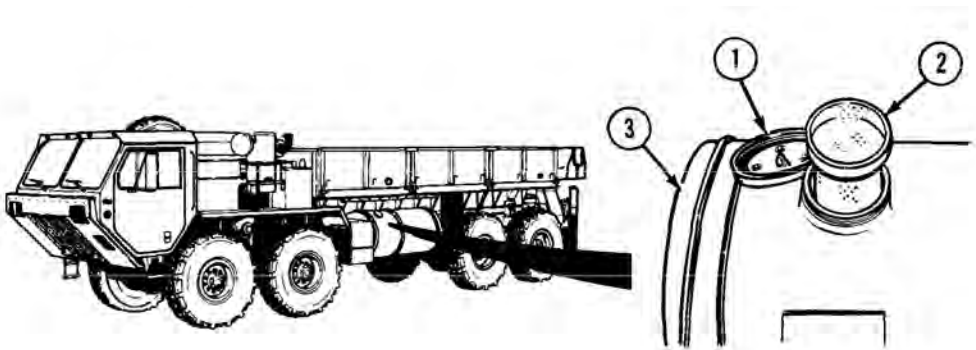


Figure 1.

2. Remove fuel filler cap (1).
3. Pull strainer (2) out of fuel tank (3).

REMOVE/CLEAN FUEL TANK STRAINER - Continued

4. Clean strainer (2) with clean dry rag.

END OF TASK**INSTALL FUEL TANK STRAINER**

1. Put strainer (2) in fuel tank (3).

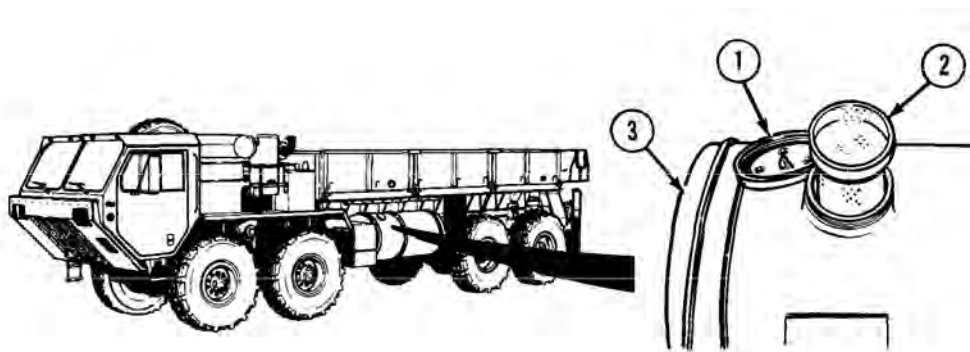


Figure 2.

2. Install and tighten fuel filler cap (1).

END OF TASK**FOLLOW-ON MAINTENANCE**

1. Remove wheel chocks.

END OF WORK PACKAGE

OPERATOR MAINTENANCE SERVICE AIR CLEANER ELEMENT

INITIAL SETUP:

Tools and Special Tools

Ladder (WP 0174, Table 2, Item 1)

Equipment Condition

Engine OFF. (WP 0051)

Wheels chocked. (WP 0090)

Materials/Parts

Rag, Wiping (WP 0176, Table 1, Item 50)

REMOVE AIR CLEANER ELEMENT

1. Lift up three levers (1).

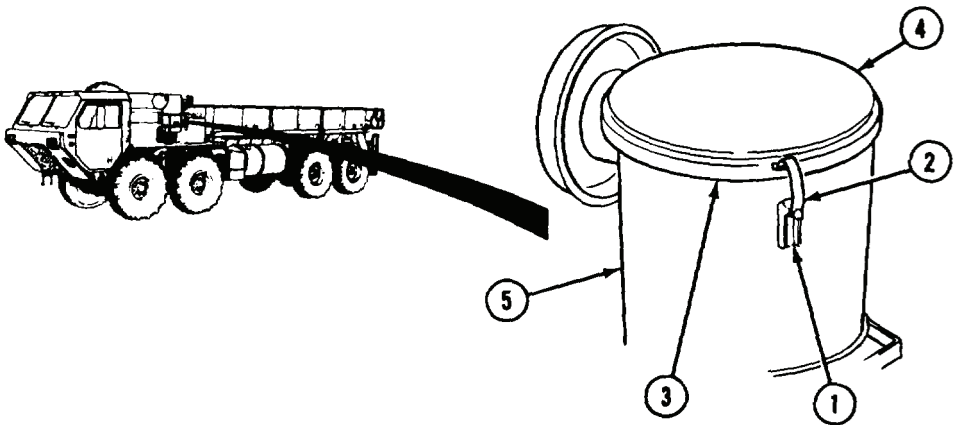
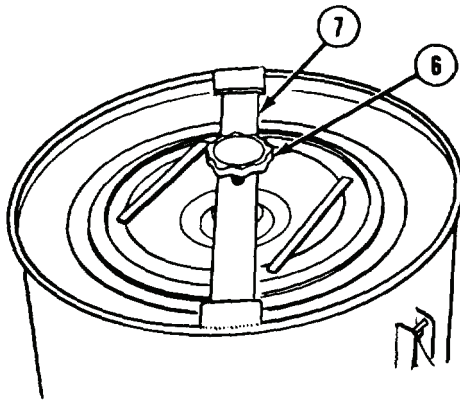


Figure 1.

2. Unhook three latches (2) from cover groove (3).
3. Remove cover (4) from canister (5).
4. Unscrew knob (6) until retaining bar (7) is loose.

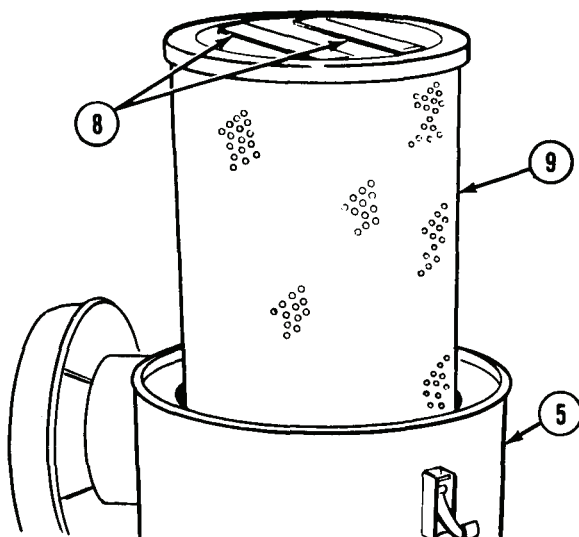
REMOVE AIR CLEANER ELEMENT - Continued*Figure 2.*

5. Remove knob (6) and retaining bar (7).

CAUTION

Do not remove secondary filter element. Dirt and debris can fall into canister and cause damage to engine.

6. Take hold of handles (8) and remove primary element (9) from canister (5).

REMOVE AIR CLEANER ELEMENT - Continued*Figure 3.***END OF TASK****CLEAN AIR CLEANER ELEMENT****NOTE**

Notify field level maintenance if primary filter element is damaged or cannot be cleaned by tapping.

1. Tap side of primary element (9) lightly against hand.

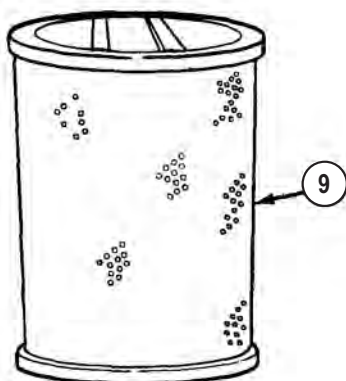
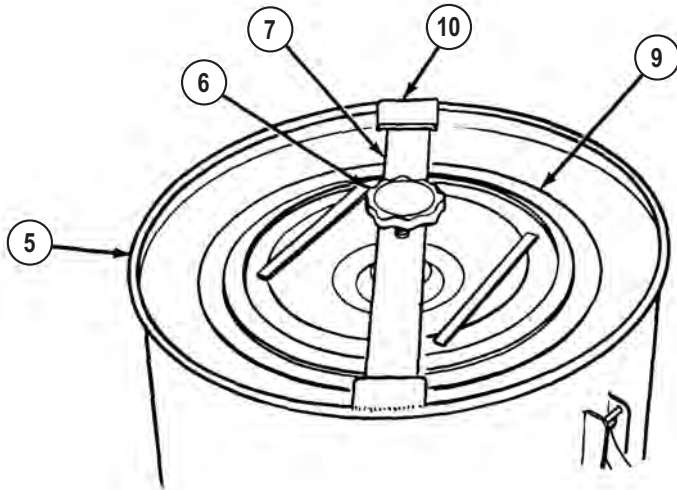
CLEAN AIR CLEANER ELEMENT - Continued

Figure 4.

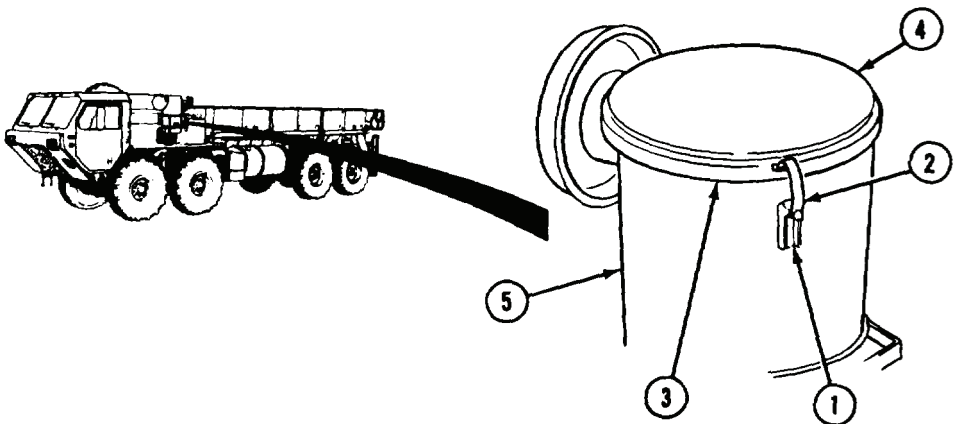
2. Dump out dirt and dust from primary element (9).
3. Wipe primary element (9) with clean rag.

END OF TASK**INSTALL AIR CLEANER ELEMENT**

1. Install primary element (9) in air cleaner canister (5).

INSTALL AIR CLEANER ELEMENT - Continued*Figure 5.*

2. Position knob (6) and retaining bar (7) over primary element (9). Make sure ends of retaining bar are in tabs (10).
3. Tighten knob (6) to secure primary element (9).
4. Put cover (4) on top of air cleaner canister (5).

*Figure 6.*

INSTALL AIR CLEANER ELEMENT - Continued

5. Put three latches (2) in cover groove (3).
6. Push three levers (1) down to secure cover (4).
7. Start engine. (WP 0038)
8. Push button (11) to reset air cleaner restriction indicator (12). If indicator window (13) shows VACUUM INCHES H₂O below 20, continue with vehicle operation but notify Field Level Maintenance as soon as possible. If indicator window shows VACUUM INCHES H₂O above 20, notify Field Level Maintenance.

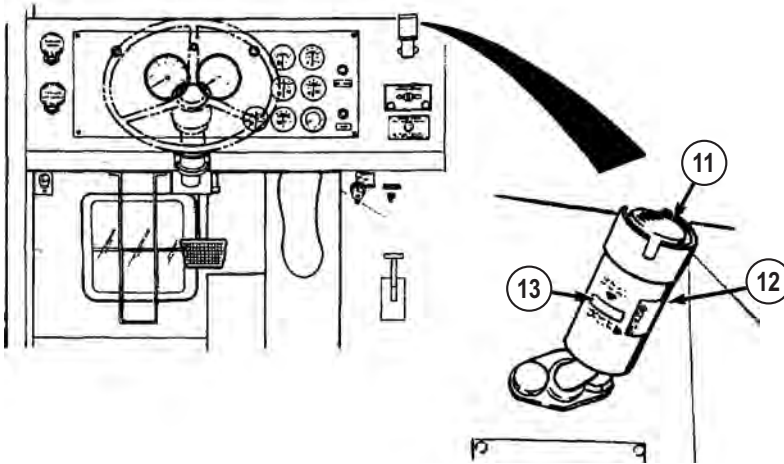


Figure 7.

9. Shut OFF engine. (WP 0051)

END OF TASK**FOLLOW-ON MAINTENANCE**

1. Remove wheel chocks.

END OF WORK PACKAGE

OPERATOR MAINTENANCE SERVICE TIRES

INITIAL SETUP:

Tools and Special Tools

Gauge, Tire Pressure (WP 0174,
Table 3, Item 15)

Tools and Special Tools - Continued

Gauge, Tire Pressure (WP 0174,
Table 3, Item 22)
Hose: Air, Pneumatic (WP 0174,
Table 3, Item 19)

Equipment Condition

Engine OFF. (WP 0051)
Wheels chocked. (WP 0090)

CHECK TIRE PRESSURE

WARNING



Failure to comply with these procedures may result in faulty positioning of the tire and/or rim parts and cause the assembly to burst with explosive force. Never mount or use damaged tires or rims. Failure to comply may result in injury or death to personnel.

NOTE

There are two types of air pressure gauges. One is a separate handheld gauge. The other is a combined pressure gauge/inflation hose.

Both may be used to check air pressure in tire.

ALWAYS use combined pressure gauge/inflation hose to inflate tire.

1. Check tire air pressure with tire pressure gauge.
2. Ensure tires have correct air pressure for road conditions and driving speed .

END OF TASK

INFLATE TIRE

1. Remove air hose (1) from stowage and connect air hose (1) to quick disconnect coupling (2) by pushing back sleeve (3).

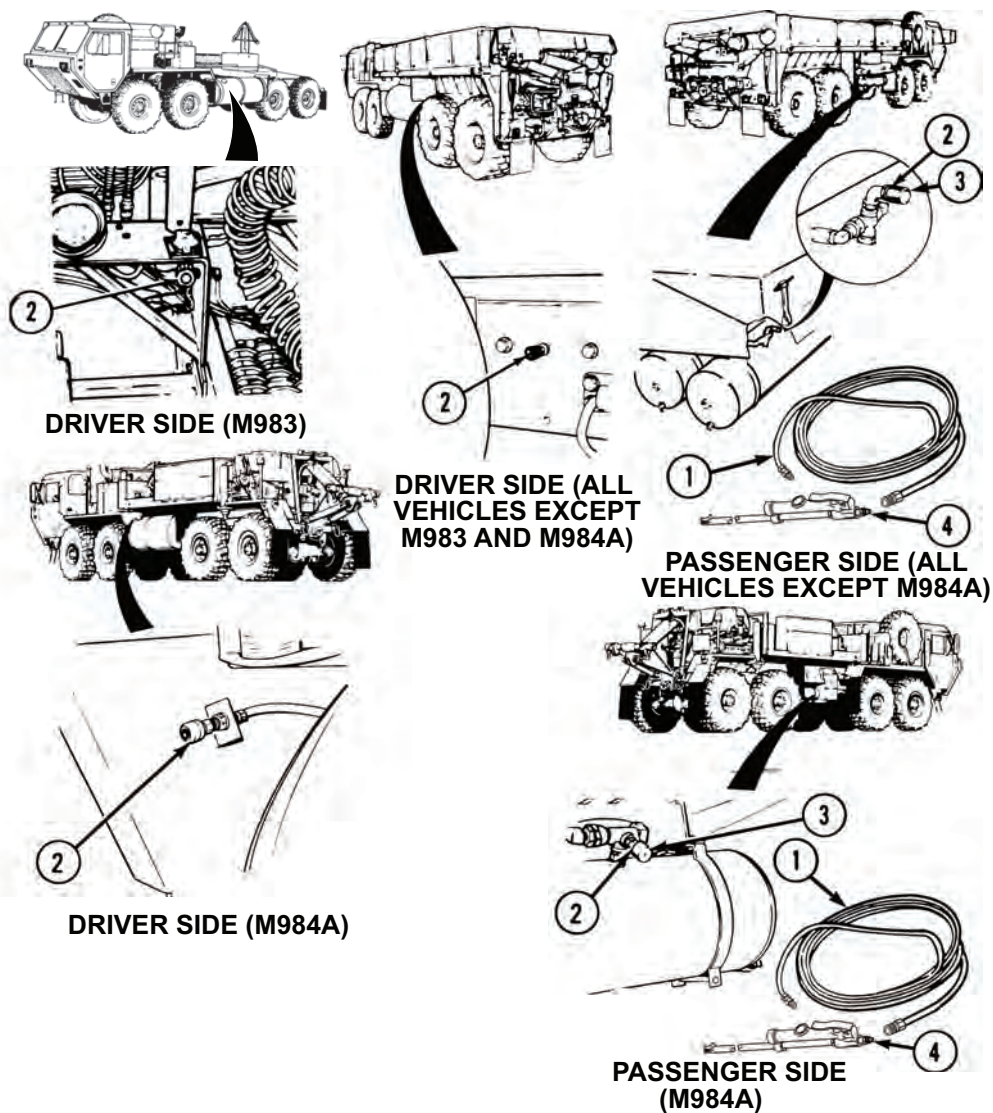


Figure 1.

2. Connect combined pressure gauge/inflation hose (4) to air hose (1).
3. Start engine. (WP 0038)

INFLATE TIRE - Continued

4. Remove valve stem cap (5) from valve stem (6).

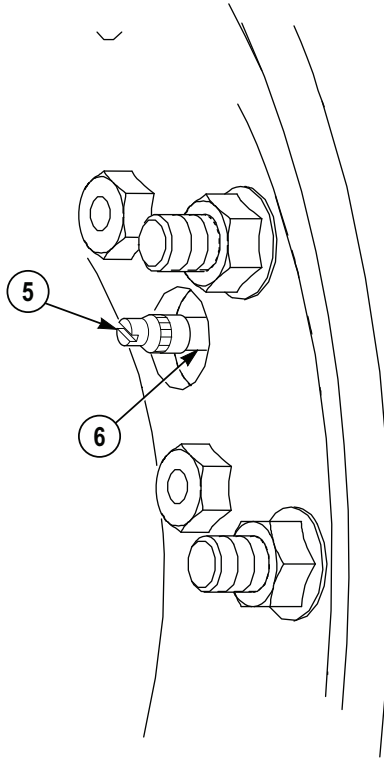


Figure 2.

WARNING

Prior to inflating or deflating tire, stand clear of trajectory area. Failure to comply may result in injury or death to personnel.

NOTE

- Trajectory area as shown applies to all wheel/tire assemblies.
- Air chuck must clamp securely with no leaks or air pressure gauge readings will be inaccurate.

INFLATE TIRE - Continued

- There are two types of air pressure gauges. One is a separate handheld gauge used on vehicle serial number 51130 and below. The other is a combined pressure gauge/inflation hose.
 - Both may be used to check air pressure in tire.
 - ALWAYS use combined pressure gauge/inflation hose to inflate tire.
5. Push latch handle (7) inward, while pushing air chuck (8) onto valve stem (6). Release latch handle (7) and immediately step out of the trajectory area and read tire air pressure gauge.

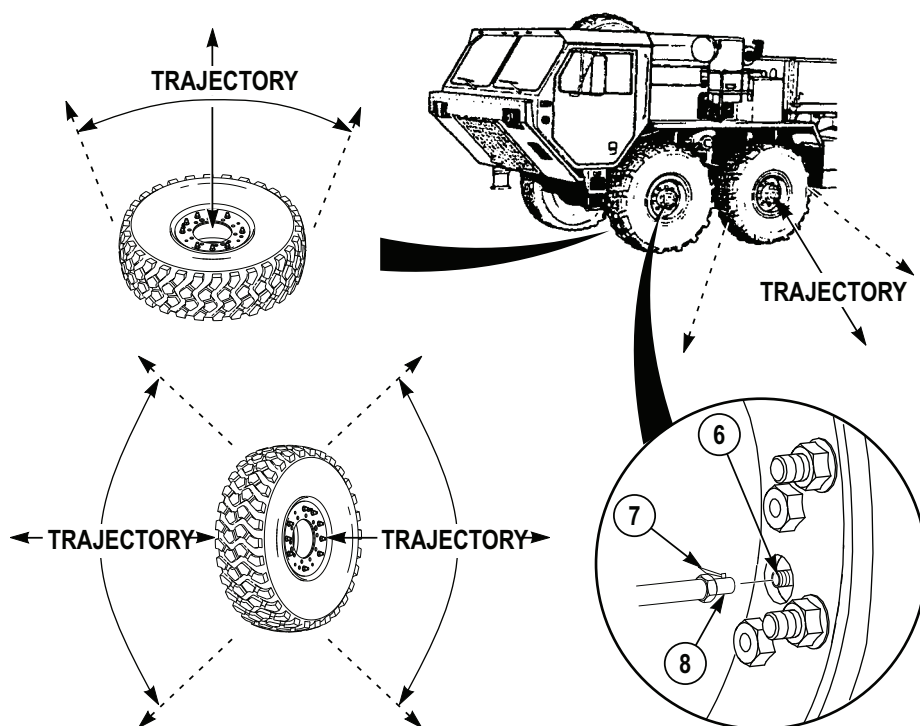


Figure 3.

INFLATE TIRE - Continued

WARNING



Prior to inflating or deflating tire, stand clear of trajectory area. Failure to comply may result in injury or death to personnel.

NOTE

Trajectory area as shown applies to all wheel/tire assemblies.

6. Inflate or deflate until proper pressure is attained. Press latch handle (7) and pull air chuck (8) from valve stem (6). Install valve stem cap (5).

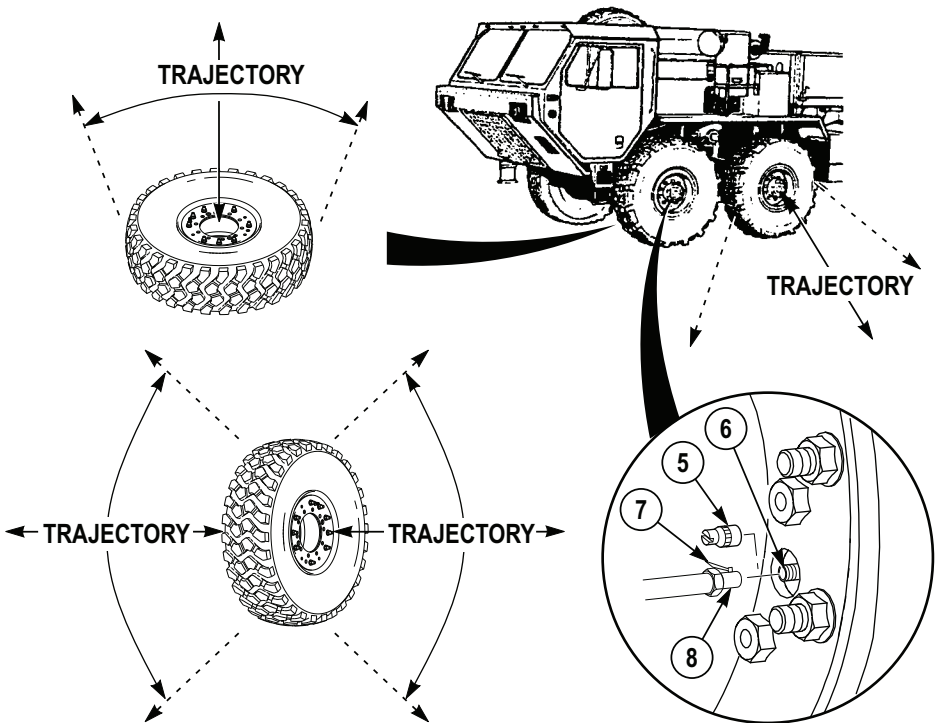


Figure 4.

7. Shut OFF engine. (WP 0051)

INFLATE TIRE - Continued**WARNING**

Hold end of air line when disconnecting from quick-disconnect coupling.
Air line is under pressure and can be ejected at a high rate of speed.
Failure to comply may result in injury or death to personnel.

8. Remove combined pressure gauge/inflation hose (4) from air hose (1).

INFLATE TIRE - Continued

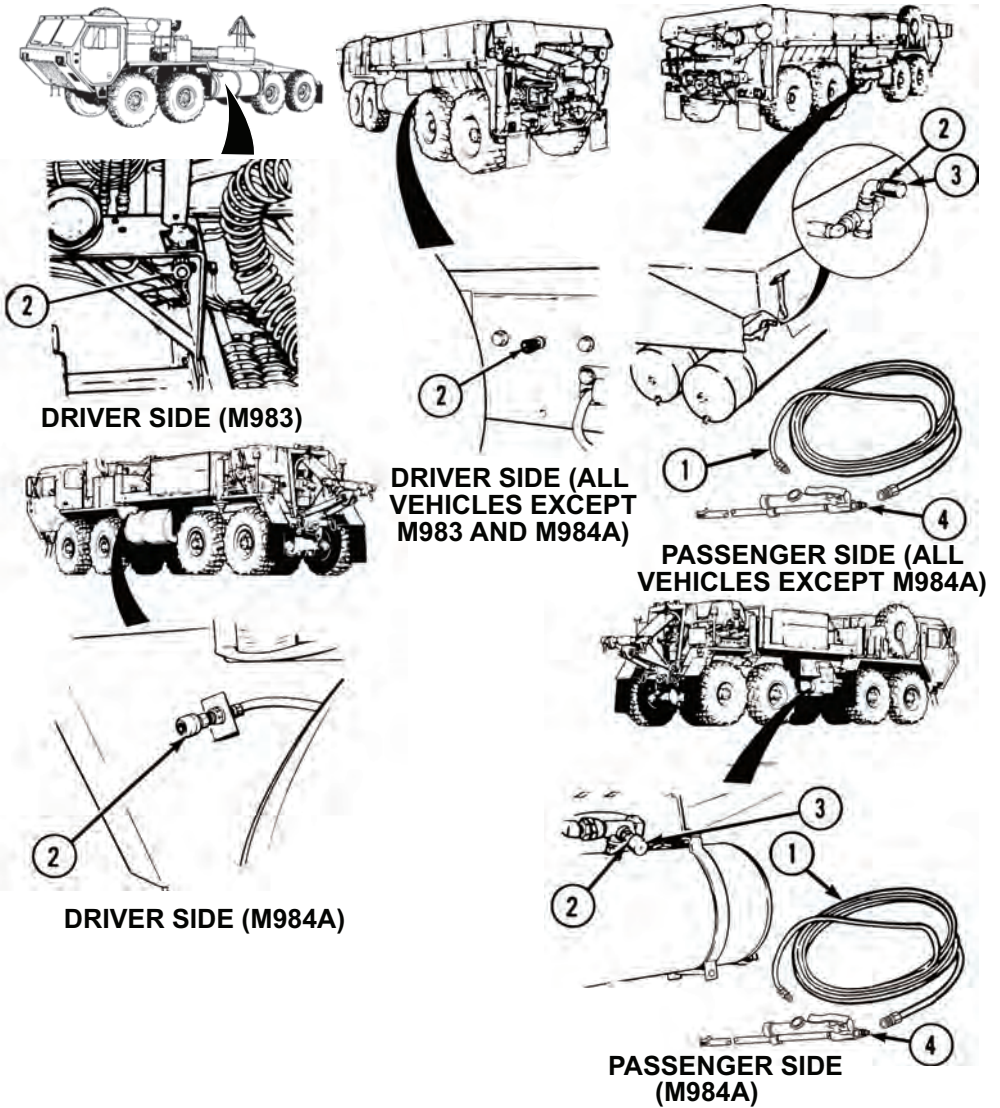


Figure 5.

9. Hold end of air hose (1) and push sleeve (3) back and remove air hose (1) from quick-disconnect coupling (2).
10. Stow air hose (1) and combined pressure gauge/inflation hose (4).

END OF TASK

FOLLOW-ON MAINTENANCE

1. Remove wheel chocks. (WP 0090)

END OF WORK PACKAGE

OPERATOR MAINTENANCE OPEN/CLOSE BATTERY BOX

INITIAL SETUP:

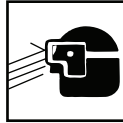
Equipment Condition

Engine OFF. (WP 0051)

Wheels chocked. (WP 0090)

OPEN BATTERY BOX

WARNING



Wear proper eye protection when working around batteries. Failure to comply may result in injury or death to personnel.

WARNING



Batteries produce explosive gases. Do not smoke or use open flame near batteries. Do not allow hot, sparking, or glowing objects near batteries. If batteries are giving off gases, presence of a heat, flame, or spark may cause fire and/or explosion. Failure to comply may result in injury or death to personnel.

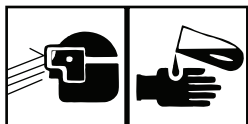
WARNING



Use extreme care not to short out battery terminals. Remove all jewelry such as rings, ID tags, bracelets, etc. prior to working on or around vehicle. Jewelry and tools can catch on equipment, contact positive

OPEN BATTERY BOX - Continued

electrical circuits, and cause a direct short, severe burns, or electrical shock. Failure to comply may result in injury or death to personnel.

WARNING

LEAD-ACID BATTERIES - Avoid battery electrolyte contact with skin, eyes, or clothing. If battery electrolyte spills, take immediate action to stop burning effects:

- External - If battery electrolyte contacts skin, immediately flush effected area with cold running water to remove all acid. Failure to comply may result in injury or death to personnel.
 - Eyes - If battery electrolyte contacts eyes, immediately flush eyes with cold water for 15 minutes and seek immediate medical attention. **IMPORTANT** - If only one eye is affected, ensure the affected eye is always (during both flushing and transport) kept lower (the lower the better) than unaffected eye. This will help keep affected eye from draining into (and contaminating) the unaffected eye. Failure to comply may result in injury or death to personnel.
 - Internal - If battery electrolyte is ingested (swallowed), drink large amounts of water or milk. Follow with milk of magnesia, a beaten egg, or vegetable oil and seek immediate medical attention. Failure to comply may result in injury or death to personnel.
 - Clothing or vehicle - Immediately flush area with cold water and neutralize battery electrolyte with baking soda or household ammonia solution. Failure to comply may result in injury or death to personnel.
1. Disconnect two rubber hooks (1).

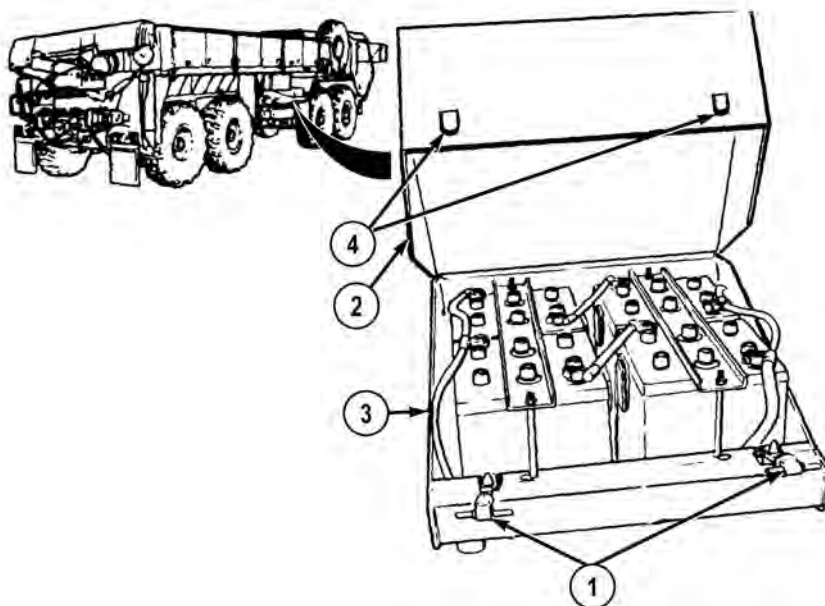
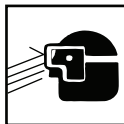
OPEN BATTERY BOX - Continued

Figure 1.

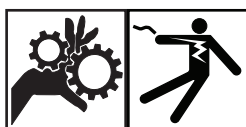
2. Slide cover (2) up and out.
3. Hold cover (2) in place or remove cover.

END OF TASK**CLOSE BATTERY BOX****WARNING**

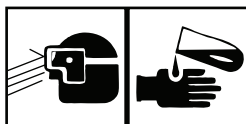
Wear proper eye protection when working around batteries. Failure to comply may result in injury or death to personnel.

CLOSE BATTERY BOX - Continued**WARNING**

Batteries produce explosive gases. Do not smoke or use open flame near batteries. Do not allow hot, sparking, or glowing objects near batteries. If batteries are giving off gases, presence of a heat, flame, or spark may cause fire and/or explosion. Failure to comply may result in injury or death to personnel.

WARNING

Use extreme care not to short out battery terminals. Remove all jewelry such as rings, ID tags, bracelets, etc. prior to working on or around vehicle. Jewelry and tools can catch on equipment, contact positive electrical circuits, and cause a direct short, severe burns, or electrical shock. Failure to comply may result in injury or death to personnel.

WARNING

LEAD-ACID BATTERIES - Avoid battery electrolyte contact with skin, eyes, or clothing. If battery electrolyte spills, take immediate action to stop burning effects:

- External - If battery electrolyte contacts skin, immediately flush effected area with cold running water to remove all acid. Failure to comply may result in injury or death to personnel.
- Eyes - If battery electrolyte contacts eyes, immediately flush eyes with cold water for 15 minutes and seek immediate medical attention. **IMPORTANT** - If only one eye is affected, ensure the affected eye is always (during both flushing and transport) kept lower (the lower the better) than unaffected eye. This will help keep affected eye from

CLOSE BATTERY BOX - Continued

draining into (and contaminating) the unaffected eye. Failure to comply may result in injury or death to personnel.

- Internal - If battery electrolyte is ingested (swallowed), drink large amounts of water or milk. Follow with milk of magnesia, a beaten egg, or vegetable oil and seek immediate medical attention. Failure to comply may result in injury or death to personnel.
- Clothing or vehicle - Immediately flush area with cold water and neutralize battery electrolyte with baking soda or household ammonia solution. Failure to comply may result in injury or death to personnel.

1. Slide cover (2) on battery box (3).

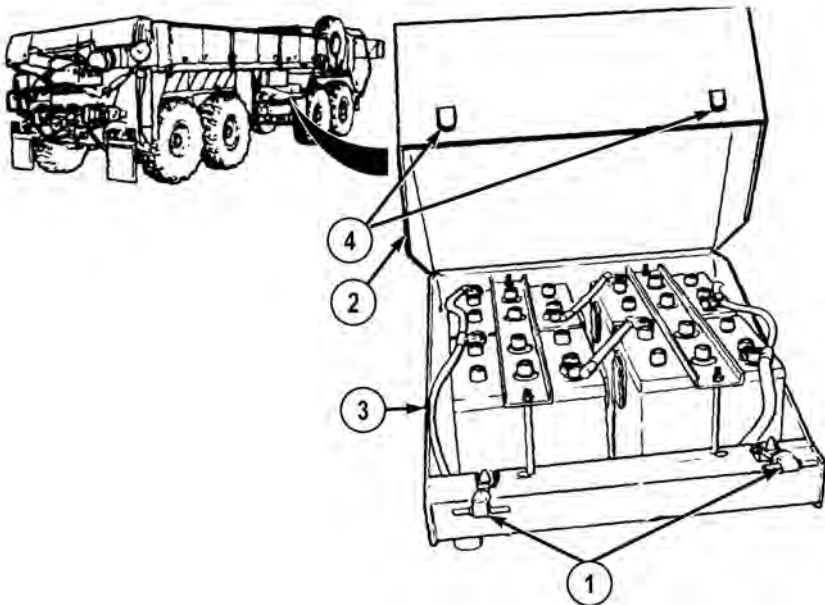


Figure 2.

2. Align rubber hooks (1) and brackets (4).
3. Connect rubber hooks (1).

END OF TASK

FOLLOW-ON MAINTENANCE

1. Remove wheel chocks. (WP 0090)

END OF WORK PACKAGE

**OPERATOR MAINTENANCE
OPEN/CLOSE ENGINE COVERS AND ENGINE SIDE PANEL REMOVAL/
INSTALLATION**

INITIAL SETUP:**Equipment Condition**

Engine OFF. (WP 0051)

Equipment Condition - ContinuedWheels chocked. (WP 0090)
Spare tire removed (if removing
passenger side engine panel).
(WP 0167)

OPEN ENGINE COVERS

1. Pull top rubber hooks (1) up and out.

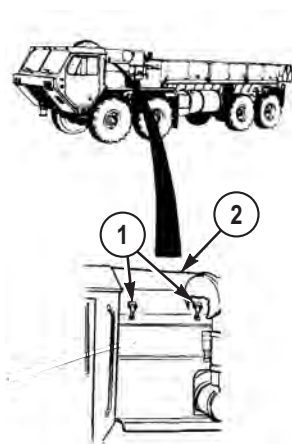


Figure 1.

2. Lift hood (2) slowly until hood (2) lies on top of engine compartment.

END OF TASK

ENGINE SIDE PANELS REMOVAL**NOTE**

- Driver side and passenger side engine side panels are removed the same way, except where noted.
- Passenger side engine side panel removal shown.

1. Pull bottom rubber hook (3) up and out.

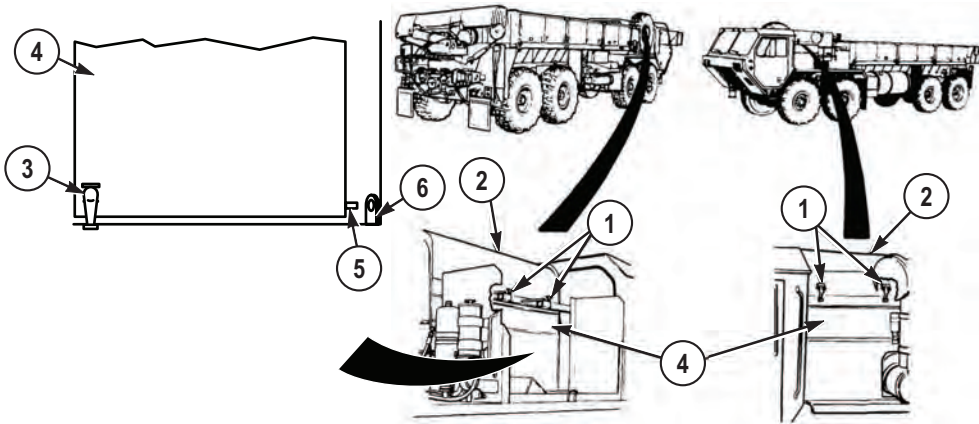


Figure 2.

2. Slide engine side panel (4) toward rear of vehicle so stud (5) clears mount (6).
3. Lift and remove engine side panel (4) from vehicle.

END OF TASK**ENGINE SIDE PANELS INSTALLATION**

1. Lift and install engine side panel (4) on vehicle.

ENGINE SIDE PANELS INSTALLATION - Continued

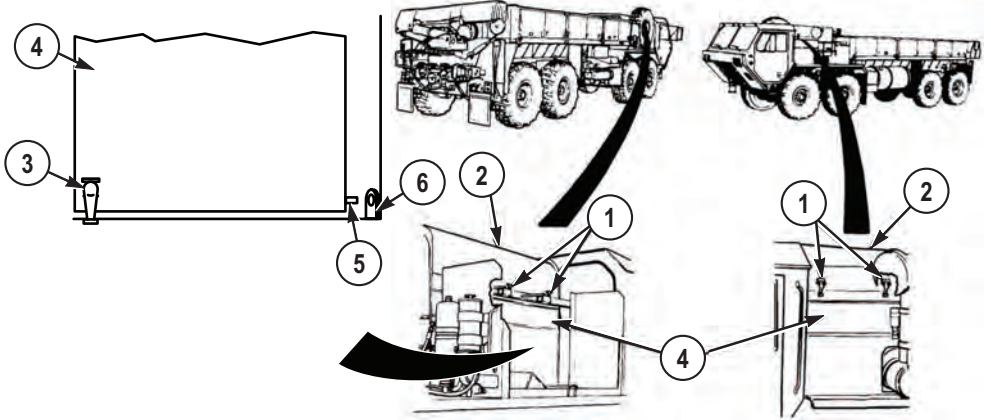


Figure 3.

2. Slide engine side panel (4) toward front of vehicle so stud (5) inserts into mount (6).
3. Pull bottom rubber hook (3) up and connect to engine side panel (4).

END OF TASK

CLOSE ENGINE COVERS

1. Pull hood (2) forward.

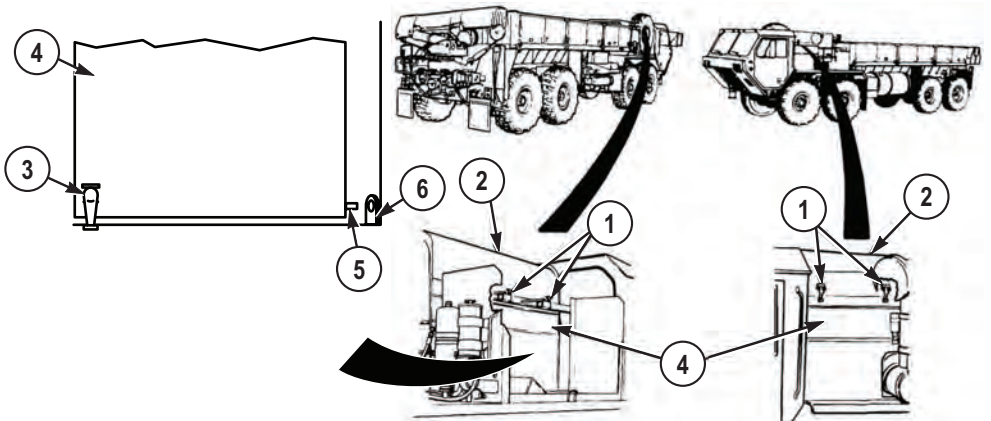


Figure 4.

CLOSE ENGINE COVERS - Continued

2. Push in engine side panel (4) and lower hood (2).
3. Pull top rubber hooks (1) up and connect to hood (2).

END OF TASK**FOLLOW-ON MAINTENANCE**

1. Stow spare tire (if removed). (WP 0167)
2. Remove wheel chocks. (WP 0090)

END OF WORK PACKAGE

CHAPTER 6

SUPPORTING
INFORMATION

FIELD MAINTENANCE REFERENCES

SCOPE

This work package lists all pamphlets, forms, field manuals, technical manuals, and other publications referenced in this manual. Also, those publications that should be consulted for additional information about vehicle operations are listed.

DEPARTMENT OF ARMY PAMPHLETS

The following indexes should be consulted frequently for latest changes or revisions and for new publications relating to material covered in this technical manual.

| | |
|----------------|---|
| DA PAM 25-30 | Consolidated Index of Army Publications and Blank Forms |
| DA PAM 25-33 | User's Guide for Army Publications and Forms |
| DA PAM 710-2-1 | Using Unit Supply System (Manual Procedures) |
| DA PAM 750-8 | The Army Maintenance Management System (TAMMS) Users Manual |

FORMS

| | |
|----------------|---|
| DA FORM 2028 | Recommended Changes to Publications and Blank Forms |
| DA FORM 2062 | Hand Receipt |
| DA FORM 2401 | Organization Control Record for Equipment |
| DA FORM 2402 | Maintenance Tag |
| DA FORM 2404 | Equipment Inspection and Maintenance Worksheet |
| DA FORM 2407 | Maintenance Request |
| DA FORM 2407-1 | Maintenance Request Continuation Sheet |
| DA FORM 2408 | Equipment Log Assembly (Records) |
| DA FORM 2408-9 | Equipment Control Record |
| DA FORM 5988-E | Equipment Inspection Maintenance Worksheet (EGA) |
| DD FORM 250 | Material Inspection and Receiving Report |
| DD FORM 314 | Preventive Maintenance Schedule and Record |
| DD FORM 1149 | Requisition and Invoice/Shipping Document |
| DD FORM 1348-1 | DOD Single Line Item Release/Receipt Document |

FORMS - Continued

| | |
|--------------------|---|
| DD FORM 1397 | Processing and Deprocessing Record for Shipment, Storage, and Issue of Vehicles and Spare Engines |
| DD FORM 2282 | Reinspection Decal Convention for Safe Containers |
| OPTIONAL FORM 346 | U.S. Government Motor Vehicle Operator Identification Card |
| STANDARD FORM 91 | Motor Vehicle Accident Report |
| STANDARD FORM 364 | Report of Discrepancy (ROD) |
| STANDARD FORM 368 | Product Quality Deficiency Report |
| STANDARD FORM 4895 | Equipment Preservation Data Sheet (EPDS) |

FIELD MANUALS

| | |
|-------------|--|
| FM 3-6 | Field Behavior of NBC Agents (Including Smoke and Incendiaries) |
| FM 3-11.3 | Multiservice Tactics, Techniques, and Procedures For Chemical, Biological, Radiological, and Nuclear Decontamination Avoidance {MCWP 3-37.2A, NTTP 3-11.25, AFTTP(I) 3-2.56} |
| FM 3-11.4 | Multiservice Tactics, Techniques, and Procedures For Nuclear, Biological, and Chemical (NBC) Protection {MCWP 3-37.2; NTTP 3-11.27; AFTTP (I) 3-2.46} (This Item is included on EM 0205) |
| FM 3-11.5 | Multiservice Tactics, Techniques, and Procedures For Chemical, Biological, Radiological, and Nuclear Decontamination {MCWP 3-37.3; NTTP 3-11.26; AFTTP(I) 3-2.60} |
| FM 4-25.11 | First Aid |
| FM 4-30.31 | Recovery and Battle Damage Assessment and Repair |
| FM 5-100-15 | Corps Engineer Operations |
| FM 5-125 | Rigging Techniques, Procedures, and Applications |
| FM 9-207 | Operation and Maintenance of Ordnance Materiel in Cold Weather |
| FM 10-16 | General Fabric Repair |
| FM 10-67-1 | Concepts and Equipment of Petroleum Operations |
| FM 20-3 | Camouflage, Concealment, and Decoys |
| FM 21-10 | Field Hygiene and Sanitation |
| FM 21-305 | Manual for the Wheeled Vehicle Driver |
| FM 31-70 | Basic Cold Weather Manual |

FIELD MANUALS - Continued

| | |
|----------|---|
| FM 31-71 | Northern Operations |
| FM 55-21 | Railway Operating and Safety Rules |
| FM 55-30 | Army Motor Transport Units and Operations |
| FM 90-3 | Desert Operations |
| FM 90-13 | River Crossing Operations |

TECHNICAL BULLETINS

| | |
|----------------------|--|
| TB ORD 1030 | Manufacture of Data Plates |
| TB 5-5420-234-15 | Warranty Program for Common Bridge Transporter (CBT) |
| TB 9-2300-281-35 | Standards for Oversea Shipment or Domestic Issue of Special Purpose Vehicles, Combat, Tactical, Construction, and Selected Industrial and Troop Support US Army Tank-Automotive Materiel Readiness Command Managed Items |
| TB 9-2300-422-20 | Security of Tactical Wheeled Vehicles |
| TB 43-0001-62-SERIES | Equipment Improvement Report and Maintenance Digest for Tank, Automotive, and Armament Equipment |
| TB 43-0142 | Safety Inspection and Testing of Lifting Devices |
| TB 43-0209 | Color, Marking and Camouflage Painting of Military Vehicles, Construction Equipment, and Materials Handling Equipment |
| TB 43-0212 | Purging, Cleaning, and Coating Interior Ferrous and Terne Sheet Vehicle Fuel Tanks |
| TB 43-0216 | Safety and Hazard Warnings for Operation and Maintenance of TACOM Equipment |
| TB 750-651 | Use of Antifreeze Solutions, Antifreeze Extender, Cleaning Compounds and Test Kit in Engine Cooling Systems |
| TB 9-289 | Reconditioning of Type I and Type II Reusable Metal Containers |

TECHNICAL MANUALS

| | |
|--------------------|--|
| TM 3-4230-214-12&P | Operator's and Unit Maintenance Manual Including Repair Parts and Special Tools List for Decontamination Apparatus |
| TM 3-4240-280-10 | Operator's Manual for Mask, Chemical-Biological: Aircraft, ABC-M24 and Accessories and Mask, Chemical-Biological, Tank, M25A1 and Accessories (Reprinted W/Basic Incl C1-2) (This item is included on EM 0045) |
| TM 3-6665-225-12 | Operator's and Organizational Maintenance Manual: for Alarm Chemical |
| TM 5-1940-277-10 | Operator's Manual for Boat, Bridge Erection, Twin Jet, Aluminum Hull, Models USCSBMK 1 (NSN 1940-01-105-5728) and USCSBMK 2 (1940-01-218-9165) |

TECHNICAL MANUALS - Continued

| | |
|--------------------|--|
| TM 5-2090-202-12&P | Operator's and Unit Maintenance Manual (Including Repair Parts and Special Tools List) for Cradle, Bridge Erection Boat, Twin Jet, Aluminum Hull (NSN 2090-01-106-9789) |
| TM 5-5420-208-12&P | Operator and Unit Maintenance Manual Including Repair Parts and Special Tools List for Cargo Pallet, Ribbon Bridge Transporter (NSN 5420-01-006-7436) |
| TM 5-5420-209-12 | Operator's and Unit Maintenance Manual for Improved Float Bridge (Ribbon Bridge) |
| TM 5-5420-277-14&P | Operator's, Unit, Direct Support, and General Support Maintenance Manual (Including Repair Parts and Special Tools List) for Cradle, Boat, Improved, M14, (NSN 3990-01-442-1914) |
| TM 9-214 | Inspection, Care and Maintenance of Antifriction Bearings |
| TM 9-243 | Use and Care of Hand Tools and Measuring Tools |
| TM 9-1005-245-13&P | Operator's, Unit, and Direct Support Maintenance Manual with Repair Parts and Special Tools List (RPSTL) for Machine Gun Mounts and Combinations for Tactical/Armored Vehicles |
| TM 9-1440-600-10 | Operator's Manual, Launching Station, M901 Guided Missile, Semitrailer Mount |
| TM 9-2320-279-10HR | Hand Receipt Covering Contents Of Components Of End Item (COEI), Basic Issue Items (BII), And Additional Authorization List (AAL) for M977 Series, 8x8 Heavy Expanded Mobility Tactical Trucks |
| TM 9-2330-357-14&P | Operator's, Organizational, Direct Support, and General Support Maintenance Manual (Including Repair Parts and Special Tools Lists) For Semitrailer, Flatbed, Radar Set and Launching Station M860A1 (NSN 2330-01-117-3280) (This Item Is Included On EM 0049) |
| TM 9-2330-385-14 | Operator's, Unit, Direct Support and General Support Maintenance Manual for Palletized Load System Trailer (PLST) Model M1076 (NSN 2330-01-303-5197) |
| TM 9-2330-385-24P | Unit, Direct Support and General Support Maintenance Repair Parts and Special Tools List for Trailer, Palletized Load System (PLST) Model M1076 (NSN 2330-01-303-5197) |
| TM 9-2320-279-20 | Maintenance Instructions for Organizational Maintenance, M977 Series, 8x8 Heavy Expanded Mobility Tactical Trucks |
| TM 9-2320-279-34 | Maintenance Instructions, Direct Support and General Support for M977 Series, 8x8 Heavy Expanded Mobility Tactical Trucks |
| TM 9-2610-200-14 | Operator's, Unit, Direct Support, and General Support Maintenance Manual for Care, Maintenance, Repair, and Inspection of Pneumatic Tires and Inner Tubes |
| TM 9-3990-206-14&P | Operator's Unit, Direct Support and General Support Maintenance Manual (Including Repair Parts and Special Tools List) for Palletized Load System (PLS) Flatrack Model M1077/ M1077A1 |

TECHNICAL MANUALS - Continued

| | |
|--------------------|---|
| TM 9-3990-260-14&P | Operator's, Unit, Direct Support and General Support Maintenance Manual (Including Repair Parts and Special Tools List) For Container Roll-In/Out Platform (CROP) Model M3 (NSN 3990-01-442-2751); Container Roll-In/Out Platform (CROP) Model M3A1 (3990-01-450-5671) (This Item is Included on EM 0038 and EM 0052) |
| TM 9-2330-366-14&P | Operator's, Organizational, Direct Support, and General Support Maintenance Including Repair Parts and Special Tools Lists For Semitrailer, Lowbed, 12-Ton, XM974 (NSN 2330-01-116-0288) |
| TM 9-4910-571-12&P | Operator's and Organizational Maintenance Manual (Including Repair Parts and Special Tools List) for Simplified Test Equipment for Internal Combustion Engines (STE/ICE-R) |
| TM 9-4910-783-13&P | Operator's, Unit, and Direct Support Maintenance Manual (Including Repair Parts and Special Tools List) for Standard Automotive Test Set (SATS) |
| TM 9-4940-468-13 | Operator's, Unit, and Direct Support Maintenance Manual for Tool Outfit, Hydraulic Systems Test and Repair Unit (HSTRU) |
| TM 9-4940-568-10 | Operator's Maintenance Manual for Forward Repair System (FRS) |
| TM 9-6115-465-24P | Unit, Direct Support and General Support Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools List) for Generator Set, Diesel Engine-Driven, Tactical |
| TM 9-6140-200-14 | Operator's, Unit, Direct Support and General Support Maintenance Manual for Lead-Acid Storage Batteries |
| TM 9-8000 | Principles of Automotive Vehicles |
| TM 11-5820-498-12 | Operator's and Organizational Maintenance Manual: Radio Sets |
| TM 11-5820-498-35 | Direct Support, General Support, and Depot Maintenance Manual for Radio Sets |
| TM 38-250 | Preparing Hazardous Materials for Military Air Shipments |
| TM 43-0139 | Painting Instructions for Army Materiel |
| TM 55-2200-001-12 | Transportability Guidance for Application of Blocking, Bracing and Tie Down Materials for Rail Transport |
| TM 55-2320-279-14 | Transportability Guidance Heavy Expanded Mobility Tactical Truck (HEMTT) |
| TM 750-244-3 | Procedures for Destruction of Equipment to Prevent Enemy Use (Mobility Equipment Command) |
| TM 750-244-6 | Procedures for Destruction of Tank Automotive Equipment to Prevent Enemy Use (U.S. Army Tank-Automotive Command) |
| TM 750-254 | Cooling Systems: Tactical Vehicles |

TECHNICAL MANUALS - Continued

| | |
|--------------------|--|
| TM 5-2330-378-14&P | Operator's, Unit, Direct Support, and General Support Maintenance Manual (Including Repair Parts and Special Tools List) for Semitrailer, Lowbed: 40-Ton Construction Equipment Transporter, M870 (CCE) (CMI/Load King Model 403LF), and M870A1 |
| TM 5-2330-325-14&P | Operator's, Unit, and Direct Support Maintenance Manual with Repair Parts and Special Tools List (RPSTL) for Trailer, Medium Heavy Equipment Transporter (MHET), 40-Ton, M870A3 |
| TM 9-2330-213-14&P | Operator's, Unit, Direct Support, and General Support Maintenance Manual (Including Repair Parts and Special Tools Lists) For Trailer, Chassis: 1-1/2-Ton, 2-Wheel M103A1 (NSN 2330-00-835-8629) M103A3 (NSN 2330-00-141-8052) Trailer, Cargo: 1-1/2-Ton, 2-Wheel M105A1 (NSN 2330-00-835-8631) M105A2 (NSN 2330-00-141-8050) M105A2C (NSN 2330-00-542-5689) Trailer, Tank, Water: 1-1/2-Ton, 2-Wheel, 400-Gallon M107A1 (NSN 2330-00-835-8633) M107A2 (NSN 2330-00-141-8049) M107A2C (NSN 2330-00-542-5688) Trailer, Van, Shop: Folding Sides, 1-1/2-Ton, 2-Wheel M448 (NSN 2330-00-631-5692) |
| TM 9-2330-231-14&P | Technical Manual Operator's, Organizational, Direct Support, And General Support Maintenance (Including Repair Parts and Special Tools List) Trailer, Ammunition: 1 1/2-Ton, 2-Wheel, M332 (NSN 2330-00-200-1785) |
| TM 9-2330-368-14&P | Operators, Organizational, Including Repair Parts and Special Tools List For Trailer, Ammunition, Heavy Expanded Mobility, 11-Ton, M989 (NSN 2330-01-109-4258) |

MISCELLANEOUS PUBLICATIONS

| | |
|------------|--|
| AR 70-1 | Army Acquisition Policy |
| AR 200-1 | Environmental Protection and Enhancement |
| AR 385-55 | Prevention of Motor Vehicle Accidents |
| AR 700-138 | Army Logistics Readiness and Sustainability |
| AR 700-139 | Army Warranty Program |
| AR 702-7 | Product Quality Deficiency Report Program |
| AR 750-1 | Army Materiel Maintenance Policy |
| AR 750-10 | Army Modification Program |
| CTA 8-100 | Army Medical Department Expendable/Durable Items |
| CTA 50-970 | Expendable/Durable Items (Except Medical, Class V, Repair Parts, and Heraldic Items) |

MISCELLANEOUS PUBLICATIONS - Continued

| | |
|--------------|--|
| GPM 94-02 | Maintenance Advisory for Purging all Fuel Tankers using a Biodegradable Purging Solution |
| SB 725-92-1 | US Army Missile Command Nonexpendable Reusable Shipping and Storage Containers |
| TC 9-237 | Welding Theory and Application |
| TC 9-510 | Metal Body Repair and Related Operations |
| TO 00-25-234 | General Shop Practice Requirements for Repair, Maintenance, and Test of Electronic Equipment |

END OF WORK PACKAGE

OPERATOR MAINTENANCE COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS

INTRODUCTION

Scope

This work package lists COEI and BII for the HEMTT series vehicles to help you inventory items required for safe and efficient operation.

General

The Components of End Item and Basic Issue Items Lists are divided into the following lists:

Components of End Item (COEI) This listing is for informational purposes only and is not authority for requisition replacements. These items are part of the HEMTT series vehicle. As part of the end item, these items must be with the end item whenever it is issued or transferred between property accounts. Items of COEI are removed and separately packaged for transportation or shipment only when necessary. Illustrations are furnished to help you find and identify the items.

Basic Issue Items (BII) These are the minimum essential items required to place the HEMTT series vehicle in operation, to operate it, and to perform emergency repairs. Although shipped separately packaged, BII must be with the vehicle during operation and when it is transferred between property accounts. Listing these items is your authority to request/requisition them for replacement based on your authorization of the end item by the TOE/MTOE. Illustrations are furnished to help you find and identify the items.

Explanation of Entries in the COEI List and BII List

The following provides an explanation of columns found in the tabular listings:

Item Number. Gives you the reference number of the item listed.

National Stock Number (NSN) and Illustration. Identifies the stock number of the item to be used for requisitioning purposes and provides an illustration of the item.

Description, Part Number/(CAGEC). Identifies the Federal item name (in all capital letters) followed by a minimum description when needed. The stowage location of COEI and BII is also included in this entry. The last line below the description is the part number and the Commercial and Government Entity Code (CAGEC) (in parentheses).

Usable On Code. When applicable, gives you a code if the item you need is not the same for different models of equipment. These codes are identified below:

INTRODUCTION - Continued

Table 1. List of Usable On Codes

| Code | Used On |
|------|------------------------------|
| LHS | M1120 LHS with and w/o winch |

Column (5) - U/I Unit of Issue (U/I) U/I. Unit of Issue (U/I) indicates the physical measurement or count of the item as issued per the National Stock Number shown in column (2).

Column (6) - Qty. Indicates the quantity required.

COMPONENTS OF END ITEM

Table 2. Components of End Item


| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|------------------|---|--|-----------------------|------------|----------------|
| 1 | 5440-01-342-0700  | LADDER, STRAIGHT (Located on driver side frame rail, forward of rear tires) 2019940(45152) | LHS | EA | 1 |

Table 3. Basic Issue Items

| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|------------------|------------------------------------|---|-----------------------|------------|----------------|
|------------------|------------------------------------|---|-----------------------|------------|----------------|

Table 3. Basic Issue Items - Continued


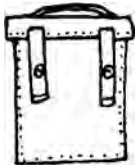


| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|---------------------|---|---|-----------------------------|------------|-------------------|
| 1 | 4730-01-338-2123  | ADAPTER, STRAIGHT, TUBE TO BOSSNOTE: Reference only - subassembly of HOSE ASSEMBLY, NONMETALLIC: SLAVE, NSN: 4720-01-493-6466, P/N: 3294652, CN: 45152 (refer for more information). 8-16 520120C(81343) | LHS | EA | 2 |
| 2 | 8105-01-353-2497  | BAG, TEXTILE: Pamphlet (Located in cabin in glove box forward of passenger/ crew seat) 1362710(45152) | LHS | EA | 1 |
| 3 | 7510-00-889-3494  | BINDER, LOOSE-LEAF (Located on passenger side of cab in glove box) 11677003(19207) | LHS | EA | 1 |
| 4 | 3940-01-163-2319  | BLOCK, TACKLE: 20 TON (Located in driver side tool box)Only applicable to vehicles equipped with self- recovery winch. 168400(75535) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued





| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|-------------------------|---|--|---------------------------------|----------------|-----------------------|
| 5 | 6150-01-180-6035  | CABLE ASSEMBLY, POWER, ELECTRICAL: Worklamp (Located in driver side tool box) 1419770U(45152) | LHS | EA | 1 |
| 6 | 6150-01-320-0719  | CABLE ASSEMBLY, SPECIAL PURPOSE, ELECTRICAL: Worklamp (Located in driver side tool box) 1771530W(45152) | LHS | EA | 1 |
| 7 | 4010-01-200-1506  | CHAIN ASSEMBLY, SINGLE LEG: 7 ft. Limp Home (Located in driver side tool box) 1452490(45152) | LHS | EA | 1 |
| 8 | 4010-01-249-0548  | CHAIN ASSEMBLY, SINGLE LEG: 14 ft. Utility (Located in driver side tool box) 00044-9973(96508) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued



| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|----------------------|--|---|---------------------------|----------------|--------------------|
| 9 | 2540-01-165-6136  | CHOCK, WHEEL-TRACK (Located in wheel chock stowage box [carries a maximum of two wheel chocks], vehicle mounted stowage boxes, and/or under spare tire) CS-2540-0067(16236) | LHS | EA | 4 |
| 10 | 4730-01-221-2080  | COUPLING, HALF, QUICK DISCONNECTNOTE: Reference only - subassembly of HOSE ASSEMBLY, NONMETALLIC: SLAVE, NSN: 4720-01-493-6466, P/N: 3294652, CN: 45152 (refer for more information). FD45-1169-16-16(01276) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued




| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|---------------------|---|--|-----------------------------|------------|-------------------|
| 11 | 4730-01-220-8297  | COUPLING, HALF, QUICK DISCONNECTNOTE: Reference only - subassembly of HOSE ASSEMBLY, NONMETALLIC: SLAVE, NSN: 4720-01-493-6466, P/N: 3294652, CN: 45152 (refer for more information). FD45-1168-16-16(012 76) | LHS | EA | 1 |
| 12 | 5130-01-400-0129  | EXTENSION, SOCKET WRENCH: Impact 3/4 in. Drive, 13 in. Long 07569(1CV05) | LHS | EA | 1 |
| 13 | 4210-01-133-9053  | EXTINGUISHER, FIRE: 2.7 lbs, 10 BC (Located in cabin to right of driver's seat) 429101(03670) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued

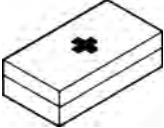


| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|----------------------|---|---|---------------------------|----------------|--------------------|
| 14 | 6545-00-922-1200  | FIRST AID KIT, GENERAL PURPOSE (Located in cabin in glove box forward of passenger/crew seat) SCC-6545-ILVOL2(64616) | LHS | EA | 1 |
| 15 | 4910-01-003-9599  | GAUGE, TIRE PRESSURE, SELF-CONTAINED (Located in cabin in glove box forward of passenger/crew seat) 61-J2-1506(94894) | LHS | EA | 2 |
| 16 | 5340-01-209-7841  | HANDLE, EXTENSION (for lug wrench) (Located in driver side tool box) 1347720(45152) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued

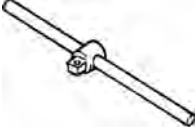


| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|-------------------------|---|--|---------------------------------|----------------|-----------------------|
| 17 | 5120-01-242-7218  | HANDLE, SOCKET WRENCH: Sliding "T" 1505380(45152) | LHS | EA | 1 |
| 18 | 5120-01-233-9508  | HANDLE, SOCKET WRENCH: Wheel Lugnut (Located in driver side toolbox) ORR301(66784) | LHS | EA | 1 |
| 19 | 4720-01-558-6415  | HOSE ASSEMBLY, NONMETALLIC: Air 50 ft. 2155210U(45152) | LHS | EA | 2 |

Table 3. Basic Issue Items - Continued



| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|----------------------|---|--|---------------------------|----------------|--------------------|
| 20 | 4720-01-493-6466  | HOSE ASSEMBLY, NONMETALLIC: Slave (Located in passenger side stowage box)NOTE: This item is entire (assembled) slave hose assembly which accompanies the vehicle. There are six individual subassemblies listed in the BII data which the soldier can order to repair the slave hose assembly, or the entire assembly can be ordered using this information. 3294652(45152) | LHS | EA | 1 |
| 21 | 4720-01-342-0595  | HOSE ASSEMBLY, NONMETALLIC: SlaveNOTE: Reference only - subassembly of HOSE ASSEMBLY, NONMETALLIC: SLAVE, NSN: 4720-01-493-6466, P/N: 3294652, CN: 45152 (refer for more information). 1793550(45152) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued





| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|-------------------------|---|--|---------------------------------|----------------|-----------------------|
| 22 | 4910-01-386-4300  | INFLATOR-GAUGE, PNEUMATIC TIRE (Located in cabin in glove box forward of passenger/crew seat) I-405M(63900) | LHS | EA | 2 |
| 23 | 5120-01-146-8096  | JACK, HYDRAULIC, HAND: 12 Ton with Handle (Located in driver side tool box) EBJ-12GC(26952) | LHS | EA | 1 |
| 24 | 5340-00-158-3805  | PADLOCK: Without Chain (for steering column) (Located in steering column lock bracket under dash) AA59487-2S(58536) | LHS | EA | 1 |
| 25 | 2540-01-165-5987  | PLATE, BASE, JACK (Located in driver side toolbox) 2540V0730(16236) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued




| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|---------------------|---|--|-----------------------------|------------|-------------------|
| 26 | 5120-01-480-0640  | PLIERS, SLIP JOINT: 10 in. Adjustable (Located in driver side toolbox - part of tool roll) 1350150(45152) | LHS | EA | 1 |
| 27 | 5340-01-223-9986  | PLUG, PROTECTIVE, DUST AND MOISTURE NOTE: Reference only - subassembly of HOSE ASSEMBLY, NONMETALLIC: SLAVE, NSN: 4720-01-493-6466, P/N: 3294652, CN: 45152 (refer for more information). FD45-1040-16(01276) | LHS | EA | 1 |
| 28 | 5340-01-260-6009  | PLUG, PROTECTIVE, DUST AND MOISTURE NOTE: Reference only - subassembly of HOSE ASSEMBLY, NONMETALLIC: SLAVE, NSN: 4720-01-493-6466, P/N: 3294652, CN: 45152 (refer for more information). FD45-1041-16(01276) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued





| (1) | (2) | (3) | (4) | (5) | (6) |
|-----------|---|--|----------------|-----|---------|
| Illus No. | National Stock Number (NSN) | Description, Part Number/(CAGEC) | Usable On Code | U/I | Qty Rqr |
| 29 | 9905-01-480-0644  | REFLECTOR SET, HIGHWAY WARNING, TRIANGULAR (Located in cabin mounted under glove box forward of passenger/crew seat) 6432GBX(45152) | LHS | SE | 1 |
| 30 | 5140-01-167-1541  | ROLL, TOOLS AND ACCESSORIES (Located in driver side storage box) 1350190(45152) | LHS | EA | 1 |
| 31 | 5120-01-398-8053  | SCREWDRIVER, CROSS TIP: Phillips No. 3 (Located in driver side toolbox - part of tool roll) SDFP56(96508) | LHS | EA | 1 |
| 32 | 5120-00-293-3309  | SCREWDRIVER, FLAT TIP: No. 6 (Located in driver side toolbox - part of tool roll) 66-110(03914) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued





| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|-------------------------|---|---|---------------------------------|----------------|-----------------------|
| 33 | 4030-00-377-1397  | SHACKLE: Anchor, Limp Home (Located in driver side toolbox) RR-C-271 TY4AGRBCL2SZ 1.000(81348) | LHS | EA | 1 |
| 34 | 4030-01-197-2334  | SHACKLE: Slings (Located on rear towing eyes) 1451750(45152) | LHS | EA | 2 |
| 35 | 4030-01-316-1552  | SHACKLE: Towing: (Located on front towing eyes) RR-C-271D TYIVAGRACL1 3/8 IN(81348) | LHS | EA | 2 |
| 36 | 5130-00-541-7839  | SOCKET, SOCKET WRENCH: 1-1/2 in. DDP486A(1DJ82) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued





| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|-------------------------|---|--|---------------------------------|----------------|-----------------------|
| 37 | 6220-01-326-2286  | SPOTLIGHT: Worklamp 1401182(78422) | LHS | EA | 1 |
| 38 | 5120-01-436-2924  | WRENCH, ADJUSTABLE: 8 in. (Located in driver side toolbox - part of tool roll) AC18(96508) | LHS | EA | 1 |
| 39 | 5120-00-264-3796  | WRENCH, ADJUSTABLE: 12 in. (Located in driver side toolbox - part of tool roll) 120405A(45152) | LHS | EA | 1 |

Table 3. Basic Issue Items - Continued

| (1) Illus No. | (2) National Stock Number (NSN) | (3) Description, Part Number/(CAGEC) | (4) Usable On Code | (5) U/I | (6) Qty Rqr |
|-------------------------|---|---|---------------------------------|----------------|-----------------------|
| 40 | 5120-01-070-8386  | WRENCH, SOCKET: Wheel Nut (Located in driver side tool box) 1048-TR(45152) | LHS | EA | 1 |

END OF WORK PACKAGE

OPERATOR MAINTENANCE ADDITIONAL AUTHORIZATION LIST (AAL)

Introduction

Scope

This work package lists additional authorization items that are needed to operate and maintain the HEMTT Series Vehicles.

General

This list identifies items that do not have to accompany the HEMTT Series Vehicles and that do not have to be turned in with it. These items are all authorized to you by CTA, MTOE, TDA, or JTA.

Explanation of Columns in the AAL

Column (1) - National Stock Number (NSN). Identifies the stock number of the item to be used for requisitioning purposes.

Column (2) - Description, Part Number/(CAGEC). Identifies the Federal item name (in all capital letters) followed by a minimum description when needed. The last line below the description is the part number and the Commercial and Government Entity Code (CAGEC) (in parentheses).

Column (3) - Usable On Code. When applicable, gives you a code if the item you need is not the same for different models of equipment.

Table 1. List of Usable On Codes

| Code | Used On |
|------|------------------------------|
| LHS | M1120 LHS with and w/o winch |

Column (4) - U/I. Unit of Issue (U/I) indicates the physical measurement or count of the item as issued per the National Stock Number.

Column (5) - Qty Recm. Indicates the quantity recommended.

Table 2. Additional Authorization List

| (1) National Stock Number (NSN) | (2) Description, Part Number/ (CAGEC) | (3) Usable On Code | (4) U/I | (5) Qty Recom |
|--|---|--------------------------|------------|---------------------|
| 5110-00-293-2 336 | AXE, SINGLE BIT 6150925(19207) | LHS | EA | 1 |
| 4910-00-347-9 703 | BAR ASSEMBLY, HOISTING 8690061(52793) | LHS | EA | 1 |
| 3940-01-247-3 682 | BEAM, HOISTING: DOUBLE AC200000364(28620) | LHS | EA | 1 |
| 3940-01-247-3 681 | BEAM, HOISTING: SINGLE AC200000354(28620) | LHS | EA | 1 |
| 2540-00-409-8 891 | BRACKET ASSEMBLY, TOOL: PIONEER MS53053-1(96906) | LHS | EA | 1 |
| 6150-01-022-6 004 | CABLE ASSEMBLY, POWER, ELECTRICAL: NATO 11682336-1(19207) | LHS | EA | 1 |
| 2540-01-152-7 813 | CHAIN, TIRE, EMERGENCY 2624-10-8(46156) | LHS | PR | 2 |
| 4230-01-220-3 221 | DECONTAMINATION KIT, INDIVIDUAL EQUIPMENT 5705588(19207) | LHS | EA | 1 |
| 4240-01-220-6 373 | GAS PARTICULATE KIT 3SK663(45152) | LHS | KT | 1 |
| 8415-00-634-4 658 | GLOVES, LEATHER 37G2940(90142) | LHS | PR | 2 |
| 5120-00-288-6 574 | HANDLE, MATTOCK-PICK 10501973(56161) | LHS | EA | 1 |

Table 2. Additional Authorization List - Continued

| (1) National Stock Number (NSN) | (2) Description, Part Number/ (CAGEC) | (3) Usable On Code | (4) U/I | (5) Qty Recom |
|--|--|--------------------------|------------|---------------------|
| 2990-01-509-1 954 | HEATER, COOLANT, ENGINE: ARCTIC 3460259(45152) | LHS | EA | 1 |
| 3940-01-247-3 681 | HOISTING BEAM, SINGLE AC200000354(28620) | LHS | EA | 1 |
| 4720-01-341-4 912 | HOSE ASSEMBLY 1759750U(45152) | LHS | EA | 1 |
| 4720-01-254-0 189 | HOSE ASSEMBLY, NONMETALLIC: INTER- VEHICULAR MS39325-9-140-8(96906) | LHS | EA | 2 |
| 5895-01-506-4 503 | INSTALLATION KIT, ELECTRONIC EQUIPMENT: C4ISR 3418900(45152) | LHS | EA | 1 |
| 1005-01-519-2 126 | INSTALLATION KIT: MOUNTING, MACHINE GUN 1301740UW/OR45152 | LHS | KT | 1 |
| 6665-01-220-3 220 | KIT, CHEMICAL ALARM 5705589(19207) | LHS | KT | 1 |
| 6220-01-250-5 190 | LIGHT, WARNING: BEACON 3145661(45152) | LHS | EA | 1 |
| 5120-00-243-2 395 | MATTOCK: PICK 11677022(19207) | LHS | EA | 1 |
| 5120-00-892-5 709 | MIRROR, INSPECTION UH1487(11676) | LHS | EA | 1 |

Table 2. Additional Authorization List - Continued

| (1) National Stock Number (NSN) | (2) Description, Part Number/ (CAGEC) | (3) Usable On Code | (4) U/I | (5) Qty Recom |
|--|---|--------------------------|------------|---------------------|
| 1005-01-266-1 233 | MOUNT, RIFLE: INSTALLATION 5705590(19207) | LHS | EA | 1 |
| 5120-00-197-9 473 | PUNCH, BLACKSMITH'S: 17 in. 647008(60903) | | EA | 1 |
| 4030-01-316-1 552 | SHACKLE: TOWING (used with tow bar, 10 ton) 1307540(45152) | LHS | EA | 2 |
| 5120-00-293-3 336 | SHOVEL: HAND 11655784(19207) | LHS | EA | 1 |
| 3940-01-083-9 313 | SLING, MULTIPLE LEG SW71M(91796) | LHS | EA | 1 |
| 3940-01-241-7 400 | SLING, MULTIPLE LEG AC200000332(28620) | LHS | EA | 1 |
| 3940-01-270-3 389 | SLING, MULTIPLE LEG: 16 FT. SAFETY CHAINtwo (2) 16 ft. safety chains should be used in conjunction with Tow Bar: 10 Ton NSN: 2540-00-378-2012, P/N: 8383802, C/C: 19207. 1482010(45152) | LHS | EA | 2 |
| 5130-01-400-0 164 | SOCKET, SOCKET WRENCH (3/4 in. drive, 1 3/4 in. hex, impact) J07528L(1CV05) | LHS | EA | 1 |
| 3990-01-204-3 009 | TIE DOWN, CARGO, VEHICLE MIL-PRF-71224-1(OHK26) | LHS | EA | 8 |

Table 2. Additional Authorization List - Continued

| (1) National Stock Number (NSN) | (2) Description, Part Number/ (CAGEC) | (3) Usable On Code | (4) U/I | (5) Qty Recom |
|--|--|--------------------------|------------|---------------------|
| 2540-00-378-2 012 | TOW BAR, MOTOR VEHICLE: 10 tonShould be used in conjunction with two (2) safety chains: 16 ft. NSN: 3940-01-270-3389, P/N: 1482010, C/C: 45152. 8383802(19207) | LHS | EA | 1 |
| 2540-01-408-1 538 | TOW BAR, MOTOR VEHICLE: TOW BAR ADAPTER KIT 2075150U(45152) | LHS | EA | 1 |
| 5130-01-428-3 751 | WRENCH, IMPACT, PNEUMATIC 1789100U(45152) | LHS | EA | 1 |

END OF WORK PACKAGE

OPERATOR MAINTENANCE EXPENDABLE AND DURABLE ITEMS LIST

Introduction

Scope

This work package lists expendable supplies and materials that are needed to operate and maintain the HEMTT Series Vehicles. This list is for information only and is not authority to requisition the listed items. These items are authorized to you by CTA 50-970, Expendable/Durable Items (Except Medical, Class V Repair Parts, and Heraldic Items), CTA 50-909, Field and Garrison Furnishings and Equipment or CTA 8-100, Army Medical Department Expendable/Durable Items.

Explanation of Entries in the Expendable/Durable Items List

Item No. This number is assigned to the entry in the list and is referenced in the narrative instructions to identify the item (e.g., Use brake fluid (Expendable/Durable Items List)).

Level. This column identifies the lowest level of maintenance that requires the listed item.

- C -- Operator/Crew
- O -- Unit/AMC
- F -- Direct Support/ASB
- H -- General Support
- D -- Depot

National Stock Number (NSN). This is the NSN assigned to the item which you can use to requisition it.

Item Name, Description, Part Number/(CAGEC). This column provides the other information you need to identify the item. The last line below the description is the part number and the Commercial and Government Entity Code (CAGEC) (in parentheses).

(U/I). Unit of Issue (U/I) code shows the physical measurement or count of an item, such as gallon, dozen, gross, etc.

Table 1. Expendable and Durable Items List

| (1) | (2) | (3) | (4) | (5) |
|----------|-------|-----------------------------|--|-----|
| Item No. | Level | National Stock Number (NSN) | Item Name, Description, Part Number/ (CAGEC) | U/I |
| | | | | |

Table 1. Expendable and Durable Items List - Continued

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number/ (CAGEC) | (5) U/I |
|-----------------|--------------|------------------------------------|--|------------|
| | | | Antifreeze, Arctic Type | |
| 1 | C | 6850-01-464-9096 | Antifreeze, Arctic Type 55-gal drum A-A-52624 (58536) | DR |
| | | | Antifreeze, Permanent, Glycol, Inhibited | |
| 2 | C | 6850-01-464-9125 | Antifreeze, Permanent, Glycol, Inhibited 1-gal container AA52624 (58536) | GL |
| 3 | C | 6850-00-464-9137 | Antifreeze, Permanent, Glycol, Inhibited 5-gal container MILA46153 (81349) | CO |
| 4 | C | 6850-01-464-9152 | Antifreeze, Permanent, Glycol, Inhibited 55-gal drum A-A-52624 TY I RECYCLED (58536) | DR |
| | | | Cleaner, Lubricant | |
| 5 | C | 9150-01-079-6124 | Cleaner, Lubricant A, 4 oz bottle w/ extender tube MIL-PRF-63460 (81349) | BT |
| | | | Cleaning Compound, Solvent | |
| 6 | C | 6850-01-474-2319 | Cleaning Compound, Solvent 1 gallon can MIL-PRF-680 Type II (81349) | GL |
| 7 | C | 6850-01-474-2317 | Cleaning Compound, Solvent 5 gallon can MIL-PRF-680 Type II (81349) | CO |

Table 1. Expendable and Durable Items List - Continued

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number/ (CAGEC) | (5) U/I |
|-----------------|--------------|------------------------------------|---|------------|
| 8 | C | 6850-01-474-2316 | Cleaning Compound, Solvent 55 gallon drum MIL-PRF-680 Type II (81349) | DR |
| 9 | C | 6850-01-474-2318 | Cleaning Compound, Solvent 1 gallon can MIL-PRF-680 Type III (81349) | GL |
| 10 | C | 6850-01-474-2320 | Cleaning Compound, Solvent 5 gallon can MIL-PRF-680 Type III (81349) | BX |
| 11 | C | 6850-01-474-2321 | Cleaning Compound, Solvent 55 gallon drum MIL-PRF-680 Type III (81349) | DR |
| | | | Compound, Cleaning Windshield | |
| 12 | C | 6850-00-926-2275 | Compound, Cleaning Windshield 1-pt can 0854-000 (0FTT5) | BX |
| | | | Fuel, DF-1, Winter | |
| 13 | C | 9140-01-413-7511 | Fuel, DF-1, Winter Bulk VV-F-800 (81348) | GL |
| 14 | C | 9140-00-286-5286 | Fuel, DF-1, Winter Bulk ASTM D 975 (81346) | GL |
| 15 | C | 9140-00-286-5287 | Fuel, DF-1, Winter 5-gal can ASTM D 975 (81346) | CN |
| 16 | C | 9140-00-286-5288 | Fuel, DF-1, Winter 55-gal drum, 16 gauge ASTM D 975 (81346) | DR |
| 17 | C | 9140-00-286-5289 | Fuel, DF-1, Winter 55-gal drum, 18 gauge ASTM D 975 (81346) | DR |

Table 1. Expendable and Durable Items List - Continued

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number/ (CAGEC) | (5) U/I |
|-----------------|--------------|------------------------------------|---|------------|
| | | | Fuel | |
| 18 | C | 9130-01-031-5 816 | Fuel, JP8 Bulk MILT83133 GR JP8 (81349) | GL |
| 19 | C | 9140-01-412-1 311 | Fuel, DF-2, Regular Bulk VV-F-800 (81348) | GL |
| 20 | C | 9140-00-286-5 294 | Fuel, DF-2, Regular Bulk ASTM D 975 (81346) | GL |
| 21 | C | 9140-00-286-5 295 | Fuel, DF-2, Regular 5-gal can ASTM D 975 (81346) | CN |
| 22 | C | 9140-00-286-5 296 | Fuel, DF-2, Regular 55-gal drum, 16 gauge ASTM D 975 (81346) | DR |
| 23 | C | 9140-00-286-5 297 | Fuel, DF-2, Regular 55-gal drum, 18 gauge ASTM D 975 (81346) | DR |
| | | | Grease, Automotive and Artillery GAA | |
| 24 | C | 9150-01-197-7 688 | Grease, Automotive and Artillery GAA 2-1/2 oz tube M-10924-A (81349) | TU |
| 25 | C | 9150-01-197-7 693 | Grease, Automotive and Artillery GAA 14- oz cartridge M-10924-B (81349) | CA |
| 26 | C | 9150-01-197-7 690 | Grease, Automotive and Artillery GAA 1-lb can M-10924-C (81349) | CN |

Table 1. Expendable and Durable Items List - Continued

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number/ (CAGEC) | (5) U/I |
|-----------------|--------------|------------------------------------|---|------------|
| 27 | C | 9150-01-197-7 689 | Grease, Automotive and Artillery GAA 5-lb can M-10924-D (81349) | CN |
| 28 | C | 9150-01-197-7 692 | Grease, Automotive and Artillery GAA 35-lb can M-10924-E (81349) | CN |
| | | | Oil, Lubricating Gear, GO 75 (MIL-L-2105) | |
| 29 | C | 9150-01-035-5 390 | Oil, Lubricating Gear, GO 75 (MIL-L-2105) 1-qt can M2105-1-75W (81349) | QT |
| 30 | C | 9150-01-035-5 391 | Oil, Lubricating Gear, GO 75 5-gal can MIL-PRF-2105 (81349) | CN |
| | | | Oil, Lubricating Gear, GO 80W/90 (MIL-L-2105C) | |
| 31 | C | 9150-01-035-5 393 | Oil, Lubricating Gear, GO 80W/90 (MIL-L-2105C) 5-gal can J2360 (81343) | CN |
| | | | Oil, Lubricating OEA Ice, Subzero | |
| 32 | C | 9150-00-403-2 372 | Oil, Lubricating OEA Ice, Subzero 1-qt can EMERY3908D (33358) | QT |
| 33 | C | 9150-00-402-2 372 | Oil, Lubricating OEA Ice, Subzero 5-gal can MIL-PRF-46167 (81349) | CN |

Table 1. Expendable and Durable Items List - Continued

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number/ (CAGEC) | (5) U/I |
|-----------------|--------------|------------------------------------|---|------------|
| 34 | C | 9150-00-491-7197 | Oil, Lubricating OEA Ice, Subzero 55-gal drum, 16 gauge MIL-PRF-46167 (81349) | DR |
| | | | Oil, Lubricating OE/HDO 10 | |
| 35 | C | 9150-01-518-9471 | Oil, Lubricating OE/HDO 10 1-qt can M2104-1-10W (81349) | QT |
| 36 | C | 9150-00-186-6668 | Oil, Lubricating OE/HDO 10 5-gal can M2104-3-10W (81349) | CN |
| 37 | C | 9150-00-191-2772 | Oil, Lubricating OE/HDO 10 55-gal drum, 18 gauge M2104-4-10W (98308) | DR |
| | | | Oil, Lubricating OE/HDO 30, (SAE 30) | |
| 38 | C | 9150-01-496-1962 | Oil, Lubricating OE/HDO 30, (SAE 30) Bulk M2104-2-30W (81349) | GL |
| 39 | C | 9150-00-186-6681 | Oil, Lubricating OE/HDO 30, (SAE 30) 1-qt can M2104-3-30W (81349) | QT |
| 40 | C | 9150-00-188-9858 | Oil, Lubricating OE/HDO 30, (SAE 30) 5-gal can MIL-PRF-2104 (81349) | CN |
| 41 | C | 9150-01-433-7978 | Oil, Lubricating OE/HDO 30, (SAE 30) 55-gal can M2104-4-30W (81349) | DR |
| 42 | C | 9150-01-433-7978 | Oil, Lubricating OE/HDO 30, (SAE 30) 55-gal drum, 18 gauge M2104-4-30W (81349) | DR |

Table 1. Expendable and Durable Items List - Continued

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number/ (CAGEC) | (5) U/I |
|-----------------|--------------|------------------------------------|---|------------|
| | | | Oil, Lubricating OE/HDO 50 | |
| 43 | C | 9150-00-188-9865 | Oil, Lubricating OE/HDO 50 5-gal drum BRAYC0423H (98308) | CN |
| | | | Oil, Lubricating Gear, GO 85W/140 | |
| 44 | C | 9150-01-035-5396 | Oil, Lubricating Gear, GO 85W/140 55-gallon drum J2360 (81343) | DR |
| 45 | C | 9150-01-035-5395 | Oil, Lubricating Gear, GO 85W/140 5-gallon can J2360 (81343) | CN |
| | | | Oil, Lubricating, Internal Combustion Engine, Tactical Service OE/HDO 15W/40 (MIL-L-2104) | |
| 46 | C | 9150-01-421-1432 | Oil, Lubricating, Internal Combustion Engine, Tactical Service OE/HDO 15W/40 (MIL-L-2104) 55-gal drum, 18 gauge M2104-5-15W40 (81349) | DR |
| 47 | C | 9150-01-518-9477 | Oil, Lubricating, Internal Combustion Engine, Tactical Service OE/HDO 15W/40 (MIL-L-2104) 1-quart can M2104-1-15W40 (81349) | QT |
| 48 | C | 9150-01-421-1427 | Oil, Lubricating, Internal Combustion Engine, Tactical Service OE/HDO 15W/40 (MIL-L-2104) 24-quart box MIL-PRF-2104 (81349) | QT |

Table 1. Expendable and Durable Items List - Continued

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number/ (CAGEC) | (5) U/I |
|-----------------|--------------|------------------------------------|---|------------|
| | | | Oil, Lubricating, OE/HDO 40 | |
| 49 | C | 9150-00-188-9862 | Oil, Lubricating, OE/HDO 40 55-gal drum MIL-PRF-2104 (81349) | DR |
| | | | Rag, Wiping | |
| 50 | C | 7920-00-205-1711 | Rag, Wiping 50-pound bale 7920-00-205-1711 (80244) | BE |
| | | | Rope | |
| 51 | C | 4020-00-968-1357 | Rope, Fibrous MIL-R-17343 (81349) | RL |
| | | | Oil, Lubricating, Preventative | |
| 52 | C | 9150-01-293-7696 | Oil, Lubricating, Preventative 5-gal drum MIL-L-21260C (81349) | CN |
| 53 | C | 9150-01-438-6079 | Oil, Lubricating, Preventative 55-gallon drum J2363 (81349) | DR |
| | | | Preventative, Rust MIL-C-16173 Texaco Type "L" | |
| 54 | C | 8030-00-062-5866 | Preventative, Rust MIL-C-16173 Texaco Type "L" 1-gallon can MIL-C-16173 (81349) | GL |
| 55 | C | 8030-00-231-2345 | Preventative, Rust MIL-C-16173 Texaco Type "L" 1-gallon can MIL-C-16173 (81349) | GL |

Table 1. Expendable and Durable Items List - Continued

| (1) Item No. | (2) Level | (3) National Stock Number (NSN) | (4) Item Name, Description, Part Number/ (CAGEC) | (5) U/I |
|-----------------|--------------|------------------------------------|---|------------|
| 56 | C | 8030-00-244-1293 | Preventative, Rust MIL-C-16173 Texaco Type "L" 5-gallon can MIL-PRF-16173 (81349) | CN |
| 57 | C | 8030-00-244-129 | Preventative, Rust MIL-C-16173 Texaco Type "L" 55-gallon drum; 18 gauge MIL-PRF-16173 (81349) | DR |
| 58 | C | 8030-00-837-6557 | Preventative, Rust MIL-C-16173 Texaco Type "L" 1-pint can 230-1313P1 (49956) | PT |
| 59 | C | 8030-00-231-2344 | Preventative, Rust MIL-C-16173 Texaco Type "L" 5-gallon can MIL-R-10036 (81349) | CN |

END OF WORK PACKAGE


| | | | | | | | |
|--|----------|------------|-----------|--|-----------|--|-------|
| RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 310-1; the proponent agency is the US Army Adjutant General Center. | | | | | | Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SCSM). | DATE |
| TO: (Forward to proponent of publication or form) (Include ZIP Code) | | | | | | FROM: (Activity and location) (Include ZIP Code) | |
| PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS | | | | | | | |
| PUBLICATION/FORM NUMBER | | | | | | DATE | TITLE |
| ITEM NO. | PAGE NO. | PARA-GRAPH | LINE NO.* | FIGURE NO. | TABLE NO. | RECOMMENDED CHANGES AND REASON <i>(Exact wording of recommended change must be given)</i> | |
| | | | | | | | |
| <i>* Reference to line numbers within the paragraph or subparagraph.</i> | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | SIGNATURE | |

| TO: <i>(Forward to proponent of publication or form) (Include ZIP Code)</i> | | | | FROM: <i>(Activity and location) (Include ZIP Code)</i> | | | DATE | |
|---|----------|----------|----------------------|--|------------|----------|-----------------------------------|--------------------|
| PART II - REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS | | | | | | | | |
| PUBLICATION/FORM NUMBER | | | | DATE | | TITLE | | |
| PAGE NO. | COLM NO. | LINE NO. | FEDERAL STOCK NUMBER | REFERENCE NO. | FIGURE NO. | ITEM NO. | TOTAL NO. OF MAJOR ITEMS SUPPOTED | RECOMMENDED ACTION |
| | | | | | | | | |
| PART III - REMARKS <i>(Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)</i> | | | | | | | | |
| | | | | | | | | |
| TYPED NAME, GRADE OR TITLE | | | | TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION | | | SIGNATURE | |

By Order of the Secretary of the Army:

GEORGE W. CASEY, JR.
General, United States Army
Chief of Staff

Official:



JOYCE E. MORROW
Administrative Assistant to the
Secretary of the Army
0817008

DISTRIBUTION: To be distributed in accordance with the initial distribution requirements for IDN: 380265, requirements for TM 9-2320-434-10.

THE METRIC SYSTEM AND EQUIVALENTS

LINEAR MEASURE

1 Centimeter = 10 Millimeters = 0.01 Meters = 0.3937 Inches
 1 Meter = 100 Centimeters = 1000 Millimeters = 39.37 Inches
 1 Kilometer = 1000 Meters = 0.621 Miles

SQUARE MEASURE

1 Sq Centimeter = 100 Sq Millimeters = 0.155 Sq Inches
 1 Sq Meter = 10,000 Sq Centimeters = 10.76 Sq Feet
 1 Sq Kilometer = 1,000,000 Sq Meters = 0.386 Sq Miles

WEIGHTS

1 Gram = 0.001 Kilograms = 1000 Milligrams = 0.035 Ounces
 1 Kilogram = 1000 Grams = 2.2 Lb
 1 Metric Ton = 1000 Kilograms = 1 Megagram = 1.1 Short Tons

CUBIC MEASURE

1 Cu Centimeter = 1000 Cu Millimeters = 0.06 Cu Inches
 1 Cu Meter = 1,000,000 Cu Centimeters = 35.31 Cu Feet

LIQUID MEASURE

1 Milliliter = 0.001 Liters = 0.0338 Fluid Ounces
 1 Liter = 1000 Milliliters = 33.82 Fluid Ounces

TEMPERATURE

$5/9 (°F - 32) = °C$
 212° Fahrenheit is equivalent to 100° Celsius
 90° Fahrenheit is equivalent to 32.2° Celsius
 32° Fahrenheit is equivalent to 0° Celsius
 $9/5 C° + 32 = F°$

APPROXIMATE CONVERSION FACTORS

| <u>TO CHANGE</u> | <u>TO</u> | <u>MULTIPLY BY</u> |
|------------------|----------------------|--------------------|
| Inches | Centimeters | 2.540 |
| Feet | Meters | 0.305 |
| Yards | Meters | 0.914 |
| Miles | Kilometers | 1.609 |
| Square Inches | Square Centimeters | 6.451 |
| Square Feet | Square Meters | 0.093 |
| Square Yards | Square Meters | 0.836 |
| Square Miles | Square Kilometers | 2.590 |
| Acres | Square Hectometers | 0.405 |
| Cubic Feet | Cubic Meters | 0.028 |
| Cubic Yards | Cubic Meters | 0.765 |
| Fluid Ounces | Milliliters | 29.573 |
| Pints | Liters | 0.473 |
| Quarts | Liters | 0.946 |
| Gallons | Liters | 3.785 |
| Ounces | Grams | 28.349 |
| Pounds | Kilograms | 0.454 |
| Short Tons | Metric Tons | 0.907 |
| Pound-Feet | Newton-Meters | 1.356 |
| Pounds/Sq Inch | Kilopascals | 6.895 |
| Miles per Gallon | Kilometers per Liter | 0.425 |
| Miles per Hour | Kilometers per Hour | 1.609 |

| <u>TO CHANGE</u> | <u>TO</u> | <u>MULTIPLY BY</u> |
|-------------------|--------------------|--------------------|
| Centimeters | Inches | 0.394 |
| Meters | Feet | 3.280 |
| Meters | Yards | 1.094 |
| Kilometers | Miles | 0.621 |
| Sq Centimeters | Square Inches | 0.155 |
| Square Meters | Square Feet | 10.764 |
| Square Meters | Square Yards | 1.196 |
| Square Kilometers | Square Miles | 0.386 |
| Sq Hectometers | Acres | 2.471 |
| Cubic Meters | Cubic Feet | 35.315 |
| Cubic Meters | Cubic Yards | 1.308 |
| Milliliters | Fluid Ounces | 0.034 |
| Liters | Pints | 2.113 |
| Liters | Quarts | 1.057 |
| Liters | Gallons | 0.264 |
| Grams | Ounces | 0.035 |
| Kilograms | Pounds | 2.205 |
| Metric Tons | Short Tons | 1.102 |
| Newton-Meters | Pound-Feet | 0.738 |
| Kilopascals | Pounds per Sq Inch | 0.145 |
| Km per Liter | Miles per Gallon | 2.354 |
| Km per Hour | Miles per Hour | 0.621 |

